



Speedelight on the go menu that stands out

Accessories & Consumables
To make our customers'
work-life easier and more
profitable

Make your work simple and your equipment last longer with original Accessories&Consumables. To guarantee the best performance and boosting the highest profitability.

SpeedDelight

The Electrolux Professional solution, engineered to our Customers' needs.

You can create your menu and improve how you manage your resources. Stand out from the competitor with an innovative solution, easy to install, operate and maintain. To have everything under control!



With only a few Accessories & Consumables you will guarantee the best result.



C41 Degreaser for SpeedDelight

Can be used at high temperatures

Code **0S2292**



Multi use baking paper

The non-stick properties assure excellent cooking results without additional greasing

Code **0S2225**



Brush

To clean the grill plate

Code **0D7015**



Scraper

To remove residue from the glass surface

Code **0S1606**



Spatula

To remove and plate cooked food

Code **0D4063**



Follow the cleaning path with Electrolux Professional

To find out more, visit us at www.electroluxprofessional.com/customer-care/

