

Important

Please ensure that the ED Controller is set to manage the venturi delivery system.

MAINMENU
EMERGENCY STOP
USER PRIME
USER MANUAL FLUSH
MANAGE RREPORTS
INSTALLER MENU
VIEW LOAD FACTOR

Step 1:

Enter the MAIN MENU and activate the INSTALLER MENU.

INSTALLER MENU
INSTALLER SERVICE
INITIAL SYSTEM SETUP
PROGRAM FORMULAS
DATA TRANSFER
SET UNITS OF MEASURE
ELECTROLUX SETUP

Step 2:

Enter INITIAL SYSTEM SETUP

SYSTEM SETUP
SET PRODUCT MAPS
SET ACCOUNT NAME
EDIT MACHINE NAME
EDIT COMPANY NAME
SET DISPENSER INTERFACE
SET CYCLE TIME

Step 3:

Enter SET DISPENSER INTERFACE

DISPENSER INTF
NON-FLUSH P.I.
ECLIPSE FLUSH P.I.
ORION 11 FLUSH P.I.
4-EDUCTOR FLUSH P.I.
6-EDUCTOR FLUSH P.I.

Step 4:

Set 4-EDUCTOR FLUSH P.I. OR 6-EDUCTOR FLUSH P.I.