 


Installation manual Washer-extractors

**WB6–50 Clean Room
Compass Pro**

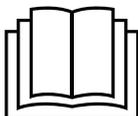

Electrolux
PROFESSIONAL

Contents

Contents

1	Safety precautions.....	5
1.1	Symbols.....	10
1.2	Personal protection equipment.....	11
1.3	Preliminary instructions.....	11
1.4	Data plate explanation.....	13
1.5	Warranty terms and exclusions.....	17
2	Environmental information.....	19
3	Locking and tagging procedure.....	20
4	Handling.....	21
4.1	Lifting with a fork-lift truck.....	21
4.2	Lifting with handlings straps.....	21
5	Packing-Weight.....	23
5.1	Packing.....	23
5.2	Weight.....	23
5.3	Machine with gas exchanger (gas heating).....	23
6	Technical characteristics.....	24
6.1	Technical data.....	24
6.2	Connections.....	25
6.3	Dimensions — WB6–50.....	27
7	Sound levels.....	28
8	Working place lighting.....	29
9	Supplies.....	29
10	Mechanical installation.....	29
10.1	Unpacking.....	29
10.2	Installation.....	30
10.3	Installing the shock absorber plates.....	30
10.4	Instructions for securing the machine on the ground.....	31
11	Remove of the transport locks fitted.....	33
12	Barrier partition.....	34
13	Drain connection.....	36
13.1	Drain connection at the left of the machine.....	37
13.2	Drain connection at the right of the machine.....	38
14	Bath inlet (water + detergents)Waters connections.....	40
14.1	Connection of external water supply.....	41
15	Liquid detergents connection.....	42
15.1	Connection scheme of liquid detergents.....	42
15.2	Electrical liquid detergents' connection.....	43
16	Indirect steam heating.....	44
17	Air vent connection.....	46
17.1	Air vent connection for clean room installation.....	47
18	Note about the A.C. power.....	49
19	Feeder cable sections.....	49
20	Electricity power supply.....	52
21	Compressed air connection.....	55
21.1	Compressed air standard ISO 8573–1.....	55
22	Connectivity of the barrier washer.....	57
22.1	Process to follow with a pre equipped washer machine.....	58
22.2	Connectivity of the barrier washer with after sales kit.....	59
22.2.1	Contents of the kit.....	59
22.2.2	Required tools.....	59
22.2.3	Procedure to follow to connect the barrier washer with after sales kit.....	60
23	Function checks.....	62
24	Explanation of washing symbols.....	64
24.1	Washing.....	64
24.2	Bleaching.....	64
24.3	Drying.....	65
24.4	Ironing.....	65
24.5	Dry or water cleaning.....	65

Contents

25 Conversion of measurement units.....	67
---	----

The manufacturer reserves the right to make changes to design and component specifications.

1 Safety precautions

This machine should be installed in conformance to the health and safety regulations, and only used in a sufficiently aerated area. Check the instructions before installing or using the machine.




CAUTION



Before any use, remove all the parts from the inner drum necessary to install the machine, please follow these steps

1. Connect compressed air.
2. Remove the panel from the electrical cabinet.
3. Press with a screwdriver on D3B (see picture below).
4. Open the loading door.
5. Open the inner drum doors with precautions, maintain the 2 doors.
6. Get the package and instructions.

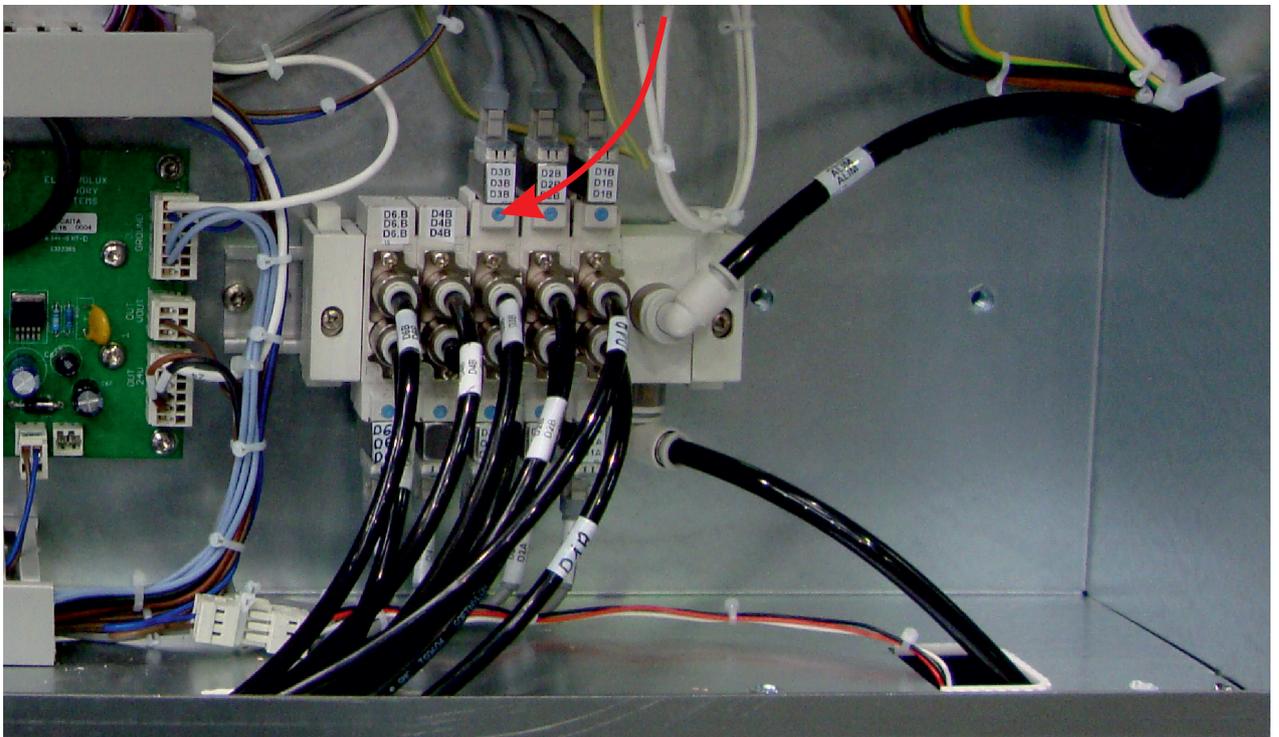



CAUTION



Before any use, it is compulsory to read the instruction handbook.

Users must have learnt how the machine operates.

This device must not be installed in places accessible to the public.

The machine is only intended for water-wash use.

Do not allow minors to use the machine.

Do not hose down the machine with water.

Only use detergent intended for water-wash of textiles Never use dry cleaning agents.

It is forbidden to wash textiles soaked with solvents.

The machine's door lock must under no circumstances be bypassed.

If the machine develops a fault, this must be reported to the person in charge as soon as possible. This is important both for your safety and that of others.

DO NOT MODIFY THIS APPLIANCE.

Servicing shall be carried out only by authorized personnel.

Only authorized spare parts shall be used.

When performing service or replacing parts, the power must be disconnected.

When the power is disconnected, the operator must see that the machine is disconnected (that the plug is removed and remains removed) from any point to which he has access. If this is not possible, due to the construction or installation of the machine, a disconnection with a locking system in the isolated position shall be provided.

In accordance with the wiring rules : mount a multi-pole switch prior to the machine to facilitate installation and service operations.

In order to prevent damage to the electronics (and other parts) that may occur as the result of condensation, the machine should be placed in room temperature for 24 hours before being used for the first time.

In case of a gas heated machine, do not assemble the machine on premises containing a dry cleaning machines or other similar machines.

Please wash only items offering appropriate distribution inside the drum. Do not wash items such as mattresses or shoes. Call our technical departments before washing nonstandard items. Noncompliance with these instructions may void the manufacturer's guarantee in case of abuse of the washer-extractor.



CAUTION




For the following countries : AT, BE, BG, HR, CY, CZ, DK, EE, FI, FR, DE, GR, HU, IS, IE, IT, LV, LT, LU, MT, NL, NO, PL, PO, PT, RO, SK, SI, ES, SE, CH, TR, UK : This appliance shall not be installed where the public has access.

For other countries : This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance.

**IMPORTANT**

The identification plate is located on the right side near the main switch.

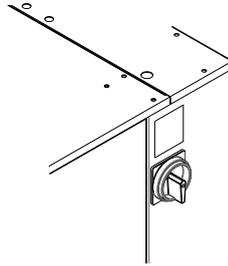

Never use the main switch as an emergency stop. Use it only when the machine does not work in progress. Instead of that, use the emergency stop buttons in both sides of the machine.

**IMPORTANT**

Make sure not to overload the machine. Maximum mass of dry cloth is found in Technical data.

Sound pressure level is found in Technical data.

**IMPORTANT**

Never try to open the outer drum door before the complete stop of the cage.

**CAUTION**

Disconnect all the sources of energy before any intervention on the machine.



The machines comply with the European Directive EMC (Electromagnetic Compatibility). They have been tested in laboratory and approved as such. It is so prohibited to add wires or nonshielded electric cables in the cabinets, strands or cables' troughs. Considering that the volume of the outer drum is superior to 150 litres, the standard kept for the electric part is the IN 60204.

**CAUTION**

With AIDO(Automatic Inner Door Opening) option, Take care of the disc of the opening system above your head. Risk of cutting with the edge of the disc!!

Take care also of the locking system on your side; risk of cutting with the edge of the plate!!

**CAUTION**

When you put your hands into the drum, take care of the edge of the outer drum doors on yours sides. Risk of cutting with the edge of the metal plate!!

**CAUTION**

The machine can work without the protective casing when the electric supply is not cut off.

Interlock the main isolating switch with a padlock.

Close the steam or gas inlet valves.

**IMPORTANT**

Ensure that the machine is not loaded beyond its nominal capacity (see "Specific load" in the instruction booklet's technical characteristics).

An excessive load has consequences for the lifetime of the machine's organs, as follows:

- Rapid destruction of the suspension elements (springs, shock absorbers);
- Excessive fatigue of motorization elements (engine, belt);
- Rapid reduction of lifetime of drum bearings (rolling bearings);
- Opening and destruction of drum doors and tank doors during oil dehydration.

This is particularly important for your safety and that of others.

The consequence is an immediate cancellation of the warranty.



THINK OF THE ENVIRONMENT!



The use and handling of chemical products such as detergent, chlorine, acids, descaling agents, etc may create hazards for health and environment ; the following precautions should be taken:

- Do not breathe the dusts or steam;
- Avoid contact with skin or eyes (may cause burns);
- In case of important spillage, wear a protecting mask, gloves, and eye protectors;
- Handle with care;
- Consult the use and first aid advice on the packing;
- Do not dispose pure products in the environment.



WARNING



The use and handling of chemical products such as detergent, chlorine, acids, antiliming agents etc... may create hazards for health and environment ; the following precautions should be taken.

- Do not breathe the dusts or steam.
- Avoid contact with skin or eyes (may cause burns).
- In case of important spillage, wear a protecting mask, gloves, and eye protectors.
- Handle with care.
- Consult the use and first aid advice on the packings.
- Do not dispose pure products in the environment.

1.1 Symbols

	Caution.
	Caution, presence of dangerous current.
	Read the instructions before using the machine.

1.2 Personal protection equipment

Given below is a summary table of the Personal Protection Equipment (PPE) to be used during the various phases of the machine's service life.

Phase	Protection garments 	Safety footwear 	Gloves 	Glasses 	Ear protectors 	Mask 	Safety helmet 
Transport		X	O				
Handling		X	O				
Unpacking		X	O				
Installation		X	O				
Normal use	X	X	X	X			
Adjustments	O	X					
Routine cleaning	O	X	X	O			
Extraordinary cleaning	O	X	X	O			
Maintenance	O	X	O				
Dismantling	O	X	O				
Scrapping	O	X	O				

Legend : X : PPE required ; O : PPE available or to be used if necessary.

Normal use : Safety footwear must be defined for a use on a wet floor. And use glasses and gloves to manipulate chemical products.

1.3 Preliminary instructions



WARNING




Risk of jamming when opening the lower door for unloading



WARNING




Risk of jamming with trolley and lower door when opening (if trolley height = 900mm)

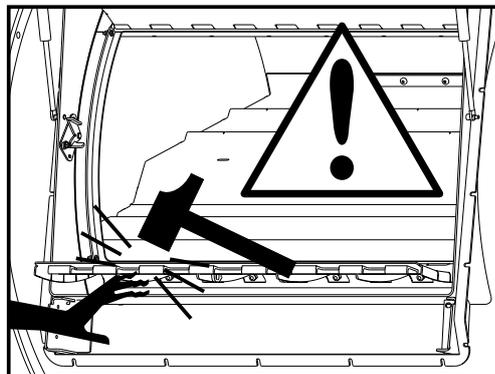

**WARNING**

Risk of the upper door being raised quickly on loading

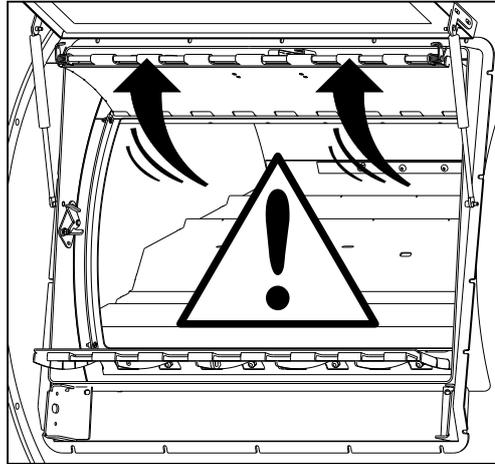**WARNING**

After the installation, Send back the commissioning form ,signed document, to Electro-luxProfessional to validate the warranty of the product.

1.4 Data plate explanation

In this chapter, you will find the explanation of the different data input on the data plate of your product.

- Commercial name : Usual name of your product (i.e. WB6–50).
- Type : Type of your product (you have the same on the Declaration of Conformity CE if delivered with CE certification).
- Model : Model of your product (can be different of commercial name) (i.e WSBA6500H17 for commercial name WB6–50) .
- Serial Number : serial number of your product which indicate the week of the production of your product (the first 4 digit indicate the year and the week of production) and the plant where it has been produced (finish by 17)
- Product N°: Product number of your product.
- Date : The date of the end of manufacture of your product
- Capacity : for washer product, the maximum loaded weight of linen for your product (in kg)(i..e. 50 kg for WB6–50)
- Some technical data depending of the heating of your product : see list below :
- Some technical data depending of the voltage ordered.
the voltage looks like that 380–415V 3 50–60Hz
under this, you find the protection request for your product (i.e 16 A)
- Different logos are available on your data plate .
They represent the different certification obtained for your product
CE, EAC
ETL intertek for USA and Canada countries
- QR code : when you scan it, you will be able to obtain the full documentation for your product (Complete installation and user manuals)
- Standardized protection index of your product : IP24D

Electric heating :

- P.Max : maximum power installed of your product
- Power of the motorization in kW and its isolation class (F) .
- Heating power in W .

Commercial name : WHB5500H

Product N° : 9892420151

Serial N° : 3232000817

Type : WS...

Date : 20/07/2023



Electrolux Professional Laundry Systems France 10430 Rosières-près-Troyes - FRANCE



Commercial name : WHB5500H

Type : WS...

Model : WSB5500H17

Serial N° : 3232000817

Product N° : 9892420151

Capacity : 50 kg

P.Max : 42000 W

- kW Isol.Class. : -

36000 W

380-415 V 3 50-60 Hz

63 A



For safety reasons use only original spare parts.



Date : 20/07/2023

Made in France by
Electrolux Professional Laundry Systems France
10430 Rosières-près-Troyes - FRANCE

32101642E



Commercial name : WHB5500H

Product N° : 9892420151

Serial N° : 3232000817

Type : WS...

Date : 20/07/2023



Electrolux Professional Laundry Systems France 10430 Rosières-près-Troyes - FRANCE



Gas heating :

Left side

- P.Max : maximum power installed of your product
- Power of the motorization in kW and its isolation class (F) .
- Heating power in W .
- Gas approval number depending on your machine except ETL product (begin by1312/.....)

Right side

- Qn (Hi) : heating power of your product
- Gas setting in factory : its pressure, its injector diameter and its consumption .
- 3 Other gas type compatible with their pressure, their injectors diameter

Commercial name : WHB5500H
 Product N° : 9892420153
 Serial N° : 4022002617
 Type : WS....
 Date : 28/02/2024

Electrolux Professional Laundry Systems France 10430 Rosières-près-Troyes - FRANCE



Commercial name : WHB5500H
 Type : WS....
 Model : WSB5500H17



Serial N° : 4022002617
 Product N° : 9892420153
 Capacity : 50 kg
 P.Max : 6000 W
 5.5 kW Isol.Class. : F
 40 W
 380-415 V 3 50-60 Hz
 16 A

Gas Settings Factory
 Qn(Hi) 40 kW
 Natural Gas, G20 20 mBar, Ø 2,9 mm.
 Mn/Vn 1,3 m3/h
 Type FR.II2Esi3+

Other Gas Options
 Natural Gas, G25 25 mbar Ø 3,2 mm.
 LPG, G30 30 mbar Ø 1,85 mm.
 LPG, G31 37 mbar Ø 1,85 mm.

For safety reasons use only original spare parts.

ETL CE 1312/24-1312BL3585

IP24D Date : 28/02/2024

Made in France by
 Electrolux Professional Laundry Systems France
 10430 Rosières-près-Troyes - FRANCE



32101642E

Commercial name : WHB5500H
 Product N° : 9892420153
 Serial N° : 4022002617
 Type : WS....
 Date : 28/02/2024

Electrolux Professional Laundry Systems France 10430 Rosières-près-Troyes - FRANCE



Steam heating :

Left side

- P.Max : maximum power installed of your product
- Power of the motorization in kW and its isolation class (F) .
- Heating power in W .

Right side

- P.Maxi. (kPa) maximum pressure

For additional information, do not hesitate to consult with our quality department.

Commercial name : WHB5500H

Product N° : 9898420006

Serial N° : 1502002317

Type : WS....

Date : 11/02/2022



Electrolux Professional Laundry Systems France 10430 Rosières-près-Troyes - FRANCE



Commercial name : WHB5500H

Type : WS....

Model : WSB5500H17

Serial N° : 1502002317

Product N° : 9898420006

Capacity : 50 kg

P.Max : 6000 W

P. maxi. 600 kPa

 5.5 kW Isol.Class. : F

 W

380-415 V  3 50-60 Hz

 16 A 



For safety reasons use only original spare parts.



IP24D

Date : 11/02/2022

Made in France by
Electrolux Professional Laundry Systems France
10430 Rosières-près-Troyes - FRANCE



32101642E

Commercial name : WHB5500H

Product N° : 9898420006

Serial N° : 1502002317

Type : WS....

Date : 11/02/2022



Electrolux Professional Laundry Systems France 10430 Rosières-près-Troyes - FRANCE



1.5 Warranty terms and exclusions

If the purchase of this product includes warranty coverage, warranty is provided in line with local regulations and subject to the product being installed and used for the purposes as designed, and as described within the appropriate equipment documentation.

Warranty will be applicable where the customer has used only genuine spare parts and has performed maintenance in accordance with ElectroluxProfessional user and maintenance documentation made available in paper or electronic format.

ElectroluxProfessional strongly recommends using ElectroluxProfessional approved cleaning, rinse and descaling agents to obtain optimal results and maintain product efficiency over time.

The ElectroluxProfessional warranty does not cover:

- service trips cost to deliver and pick up the product;
- installation;
- training on how to use/operate;
- replacement (and/or supply) of wear and tear parts unless resulting from defects in materials or workmanship reported within one (1) week from the failure;
- correction of external wiring;
- correction of unauthorized repairs as well as any damages, failures and inefficiencies caused by and/or resulting from:
 - insufficient and/or abnormal capacity of the electrical systems (current/voltage/frequency, including spikes and/or outages);
 - inadequate or interrupted water supply, steam, air, gas (including impurities and/or other that does not comply with the technical requirements for each appliance);
 - plumbing parts, components or consumable cleaning products that are not approved by the manufacturer;
 - customer's negligence, misuse, abuse and/or non-compliance with the use and care instructions detailed within the appropriate equipment documentation;
 - improper or poor: installation, repair, maintenance (including tampering, modifications and repairs carried out by third parties not authorized third parties) and modification of safety systems;
 - Use of non-original components (e.g.: consumables, wear and tear, or spare parts);
 - environment conditions provoking thermal (e.g. overheating/freezing) or chemical (e.g. corrosion/oxidation) stress;
 - foreign objects placed in- or connected to- the product;
 - accidents or force majeure;
 - transportation and handling, including scratches, dents, chips, and/or other damage to the finish of the product, unless such damage results from defects in materials or workmanship and is reported within one (1) week of delivery unless otherwise agreed;
- product with original serial numbers that have been removed, altered or cannot be readily determined;
- replacement of light bulbs, filters or any consumable parts;
- any accessories and software not approved or specified by ElectroluxProfessional.

Warranty does not include scheduled maintenance activities (including the parts required for it) or the supply of cleaning agents unless specifically covered within any local agreement, subject to local terms and conditions.

Check on ElectroluxProfessional website the list of authorized customer care.

2 Environmental information


Concerned by providing the end user with useful and necessary environmental information, we wish to precise:

- Data about energetic consumptions, wastes (atmospheric and liquid) and sound level are indicated in the paragraph «Technical characteristics».
- Foreseeing its recycling, this machine is fully dismantlable.
- This machine is free from any asbestos.
- In conformity with French regulations.
- In the other countries, we recommend that you comply with the legislation in force in the country where the machine is installed.
- In France, all owners of packing waste producing a weekly volume below 1100 litres can forward these to the local collection and treatment department. If exceeding this volume, the owners of packing waste will ensure their valuation by reuse, recycling or, any other action aiming at producing reusable materials or energy... or provide them contractually to a certified intermediate authorised to transport, trade or broke waste.

Therefore, this forbid:

- land filling raw waste;
- open air burning or incineration without energy collection.
- Packaging of our machines are according with the french legislation related to environment requirements.

For additional information, do not hesitate to consult with our environmental department.

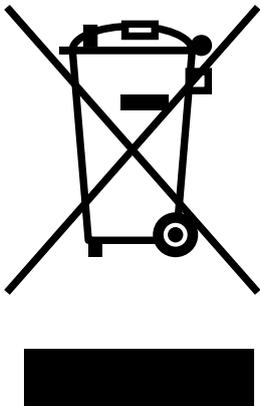

Scrapping of machine








When the machine is no longer to be used, it must be submitted to a recycling facility for destruction.

The majority of the components in the machine can be reused, but it also contains other materials that must be taken care of in the correct way.

Therefore, never mix the machine or its parts with domestic waste as this may lead to health hazards or damage to the environment.

3 Locking and tagging procedure

A red insert at the beginning of this instruction handbook schematically shows the locking and tagging procedure described below. If you wish, you can detach this insert and display it close to the machine to remind maintenance personnel of the safety instructions.

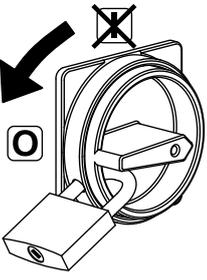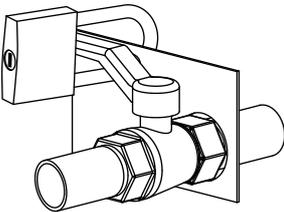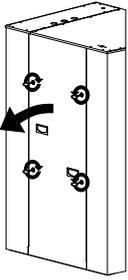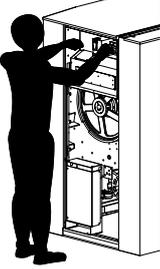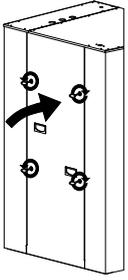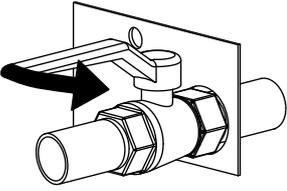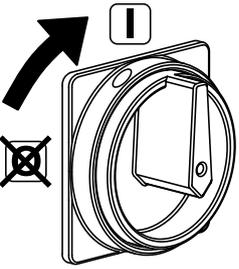1		<p>Always respect items 2, 3 and 4 carefully before doing any repair or maintenance work on the machine.</p>		
2		<p>Put the main switch to Off and lock the handle with a padlock in one of the three holes provided for this purpose.</p>		<p>Close the stop valves for the other supplies (steam, gas, thermal fluid, compressed air) to stop and lock their handle with a padlock.</p>
3		<p>Open the fixed protectors (casings, doors) with the key provided or a special tool.</p>		<p>Do the maintenance.</p>
4		<p>Close and carefully lock the fixed protectors.</p>		
5			<p>Unlock the stop valves and the main switch.</p>	

4 Handling




Important



It is obligatory that all these operations are undertaken by handling specialists.

Before any handling, check that the four transport locks fitted are still in place and well-tightened. To do so, remove the front and rear casings and check presence of four locks (B).

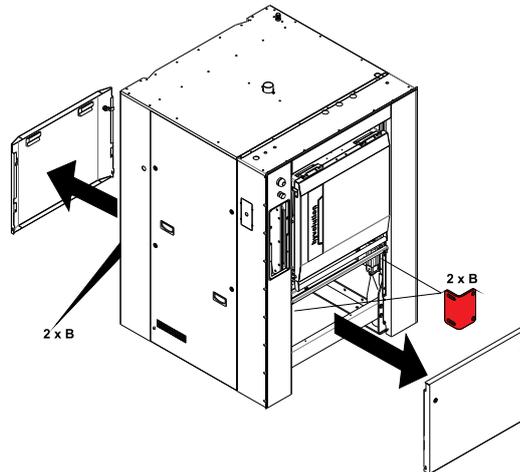

4.1 Lifting with a fork-lift truck




Warning



You should never handle the machine in its longitudinal side (any other than shown on the drawing below) with a fork-lift truck. Important risk of parts deterioration for those fixed under the machine.

This can be carried out from the front or back, at the centre of the machine.

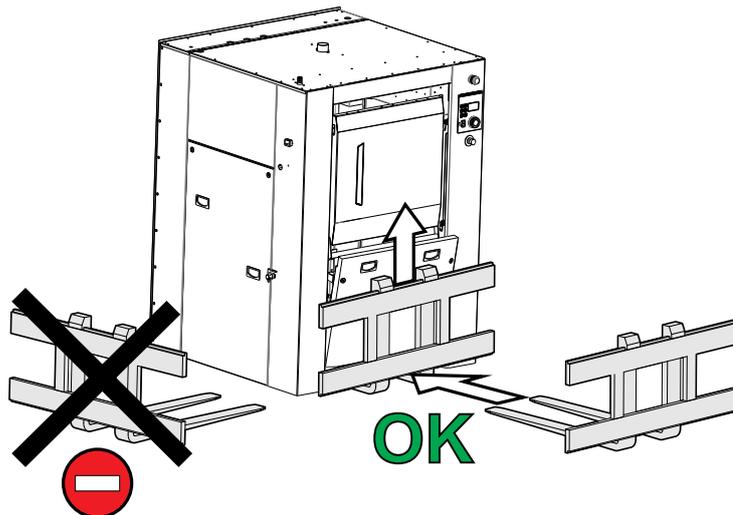


4.2 Lifting with handlings straps

Lifting in that case can only be done with handling straps (minimum capacity 1000 daN / 2200 lb) which bear weight of the machine.

Remove the top cover and pass the straps in the lifting holes.

**Caution**

Make sure to place the straps correctly to avoid any bending of parts of the machine.

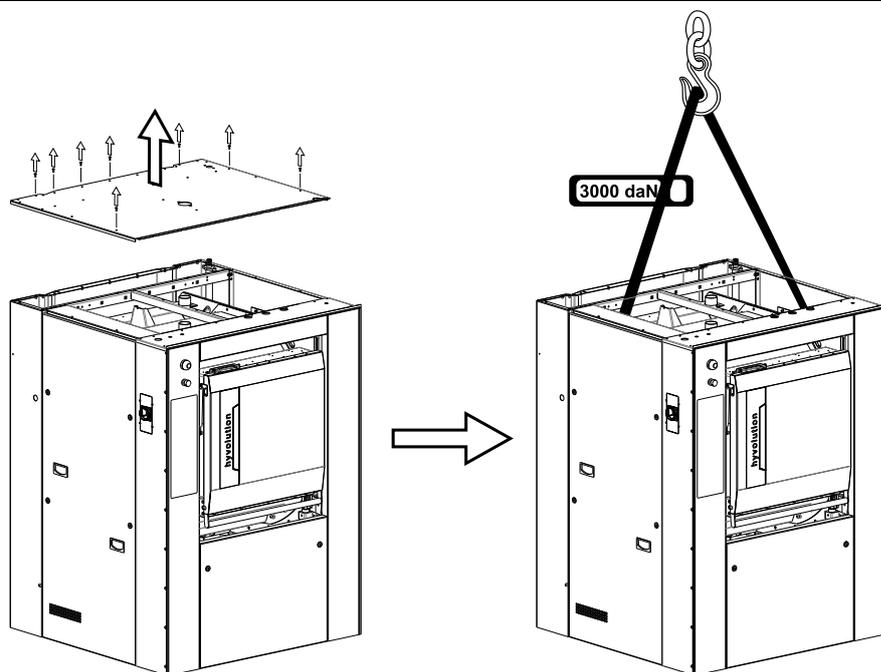**Caution**


In order to avoid any bending of casings, you should never climb and stand on top of the machine.



5 Packing-Weight

5.1 Packing

Packing dimensions in mm/in	Size A	Size B	Size C
Washer extractor type WB6–50	1570 / 61.81	1520 / 59.85	1980 / 77.95

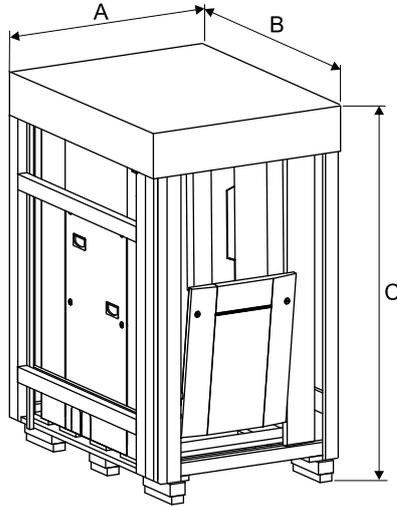

5.2 Weight

Weight in kg/lb (machine + crate)*	
Washer extractor type WB6–50	1280 / 2822

* Precise weight depends on accessories fitted.

5.3 Machine with gas exchanger (gas heating)

The gas exchanger is delivered on a specific pallet :

weight in kg : 175 (gas exchanger) — 345 (gas exchanger + pallet)

Packing dimensions in mm/in	Size A	Size B	Size C
Gas exchanger for WB6	1570 / 61.81	1520 / 59.85	1980 / 77.95

6 Technical characteristics

6.1 Technical data

	Units	WB6-50
Drum diameter	mm	920
Drum length	mm	800
Drum volume	litre	500
Opening inner drum doors (LxH)	mm	670x470
Opening outer drum door (LxH)	mm	645x738
G-factor, max.		350
Specific load 1/10	kg	50
Floor area	m ²	1.63
Max. unbalance	kg	6.5
Net weight	kg	1170*
Weight loaded (high level)	daN	300
Water volume, washing (low level)	l	125
Water volume, washing (high level)	l	250
Heat loss		3 % of installed heating power

* Precise weight depends on accessories fitted.

6.2 Connections

Water	Units	WB6-50
Water valves connection	mm-BSP	DN20-3/4"
Capacity at 250 kPa	l/min	70
Functioning limits for water valve	kPa	50-300
Water consumption for a wash program ¹	l	542

Drain	Units	WB6-50
Drain connection, outer \varnothing	mm	75
Maximum drain flow rate	l/min	240
Waste water collector	DN-mm	150

Air vent	Units	WB6-50
Air vent connection, outer \varnothing	mm	60

Liquid detergents	Units	WB6-50
Liquid detergents connection, outer \varnothing	mm	25

Indirect steam	Units	WB6-50
Thermic fluid inlet or indirect steam heating	mm-BSP	DN15-1/2"
Thermic fluid return or indirect steam heating	mm-BSP	DN15-1/2"
Maximum supply pressure	kPa	600
Installed calorific power	kW	131
Average calorific consumption	kWh	6.3
Inner volume thermic fluid	l	2.4

Electricity	Units	WB6-50
Supply voltage	V	380/415
Frequency	Hz	50/60
Electric cable (section)	mm ²	See chapter "Feeder cable section"
Rated electric power, gas heating	kW	8.6
Rated electric power, electric heating	kW	42
Rated electric power, steam heating / indirect steam heating	kW	8.6

1. ISO 93 98-4 standard type C.


Heating	Units	WB6-50
Installed heating power, electric heating	kW	36
Electric consumption for a standardized cycle, electric heating	kWh	10.7
Electric consumption for a standardized cycle, Indirect steam heating	kWh	1.2

Floor load	Units	WB6-50
Frequency of the dynamic force	Hz	13.75
Max transmitted floor load	daN	1808 +-75
Max. pressure transmitted to floor	kPa	11.77


Compressed air	Units	WB6-50
Compressed air inlet	mm	6/8
Min./max. compress air pressure	bar	4.5/6
Consumption	l/h	10

6.3 Dimensions — WB6–50

WB6–50												
A	B	C	D	E	F	G	H	I	J	K	L	M
1300	1265	1770	920	40	40	1385	330	450	570	220	195	80
N	O	P	Q	R	S	T	U	V	W	X	Y	Z
160	840	670	240	70	1135	635	650		85	270	860	2330

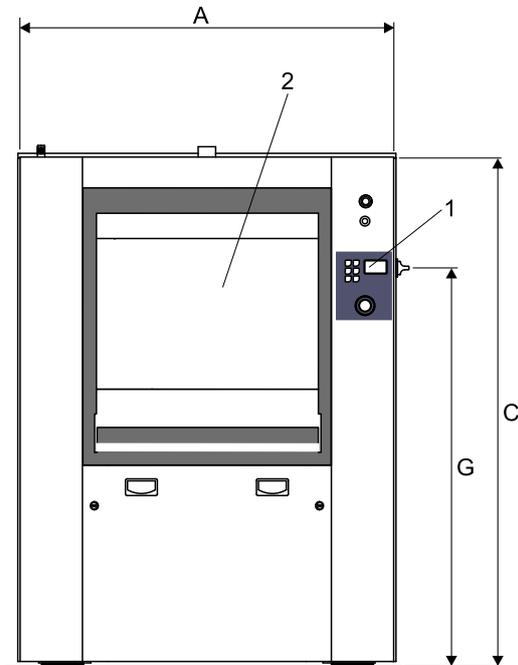


Front view

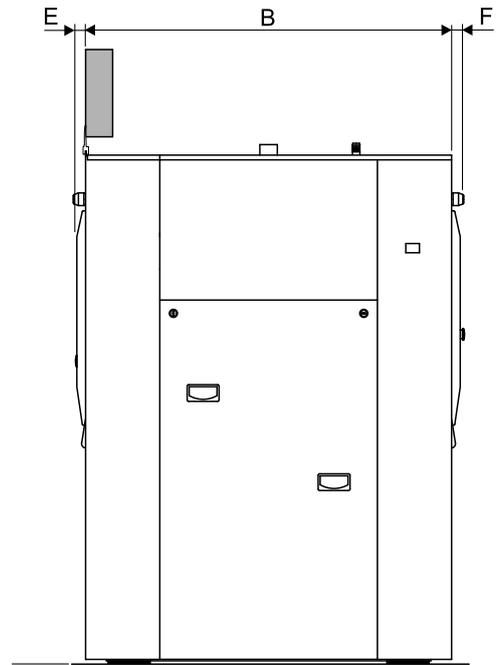

Left view

1	Control panel	10	not applicable
2	Loading door	11	Air vent connection
3	Unloading door	12	Electrical connection
4	not applicable	13	Compressed air inlet
5	Cold hard water inlet	14	Main switch
6	not applicable	15	Electric cable
7	not applicable	16	Liquid detergents inlet
8	Steam connection	17	Rubber plate
9	Drain connection	18	Waste water collector

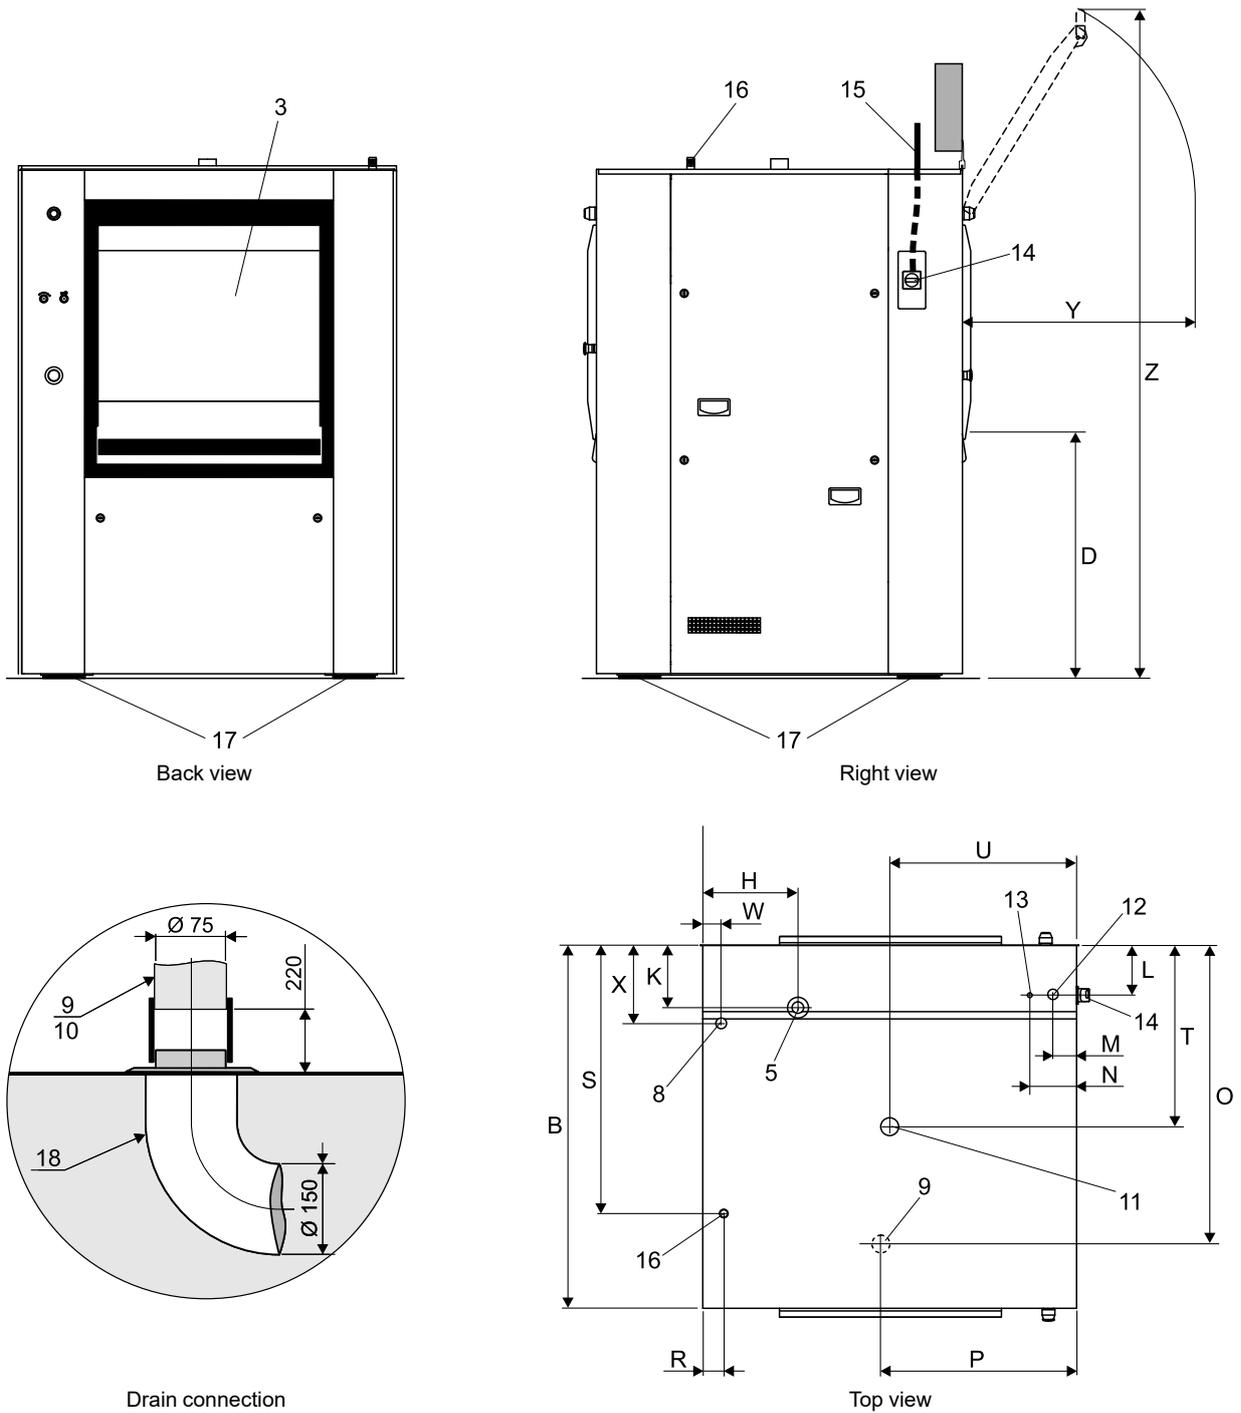

7 Sound levels

The sound power level of the machine is determined by using ISO 3747:2012.

According to test code EN50571 : 2013 annex CC, the sound power level at extraction and during washing are according to the table:

Washing	dB(A)	64
Extraction	dB(A)	83

8 Working place lighting

The lighting should be designed so as to avoid eye strain for the operator ; it should be uniform without any glare, and should be sufficient to detect any hazards.

The average lighting value on the working place recommended by the clothing industry for inspecting linen is **500 lux**. Whenever possible, the working place should be illuminated by daylight.

9 Supplies

Take the box placed inside of the inner drum.

1. Accessories delivered with each machine
 - 1 instruction handbook + converter handbook + spare parts catalogue + 2 electrical schematics + 1 maintenance poster
 - 3 keys for casings
 - 2 or 3 stainless steel flexible pipes 3/4" + 4 or 6 fibre seals
 - 2 or 3 waters filters 3/4"
 - 2 or 3 male nipples 3/4"
 - 1 connection bellow \varnothing 60 + 1 collar
 - 1 connection bellow \varnothing 75 mm + 2 collars for drain
 - 1 connection nozzle
 - 4 fixing dowels
 - 4 bolsters (see explanation for the setting)
2. Accessories delivered with each steam heating machine
 - 1 steam electrovalve
 - 1 steam flexible
 - 1 steam filter
 - 1 pipe union
3. Accessories delivered with each gas heating machine
 - 4 meters blue flexible pipes
 - 2 pipes \varnothing 125 mm (5"), length 500 mm (20") to be connect at the chimney
 - 1 T-square pipe \varnothing 125 mm (5") and an anti-bursting chimney regulator to be connected over the gas exchanger
 - 1 draught accelerator to extract the exhaust of burn gas, to be connected at the chimney (in 3 parts)
 - 4 collars \varnothing 40–60
4. Accessories delivered with each barrier washers
 - 1 rubber seal + aluminium extruded sections + 40 screws
 - 4 flange safety locks (machines with weighing equipment)
 - 1 opening inner drum lever (with manual opening door)

10 Mechanical installation

Depending on its destination, the washer extractor is delivered bare or may be placed on a transport pallet and/or packed with plastic film.

In some cases, it may be delivered in a crate, or in maritime packing (wood box).

10.1 Unpacking

Take off the plastic film or remove the machine from his transport pallet.

Please refer to the handling chapter in this instruction handbook for a description of handling operations.



Important



Check that no damage has been caused during transport.

10.2 Installation

The installation must be done by competent technicians in accordance with local codes and regulations. When there are not local codes and regulations, the installation must comply with European standards applicable.


The machine must be installed on a perfectly even surface, strong and horizontal, capable of resisting the efforts shown in the technical characteristics.

Adjustment of the machine by addition of level plate should be avoided.

Control the horizontal level using a water level placed on the machine's sole.

Place the washer extractor so that it is easy for the user and the service technician to do their work.

Leave at least 1 m (40") (according to the recommendation in standard EN 60204) between the machine, a wall or any other machine at the sides.

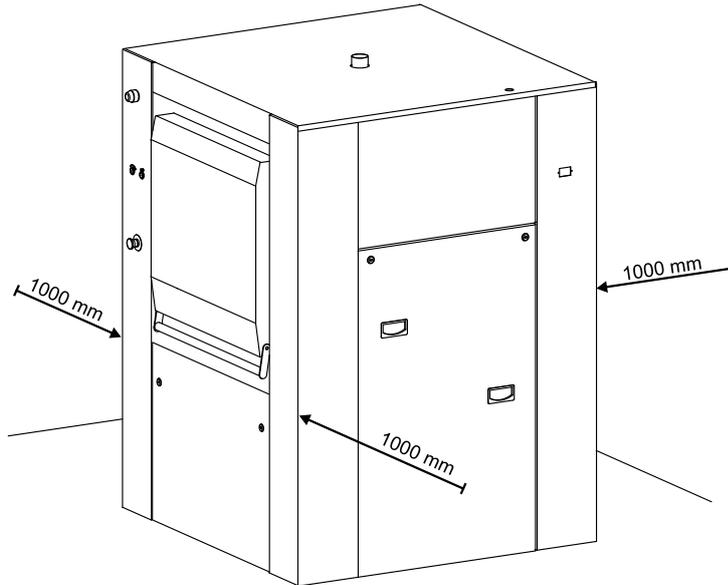

10.3 Installing the shock absorber plates

Preparation of the ground and the machine.

- Carefully degrease the ground and the machine's base plates.

Positioning the shock absorber plates.

- Place each shock absorber plate (P) at its respective location (see diagram) raising each of the machine's support points in series and taking care to let the runner inside of the base plates.

Commissioning the machine

- Time: before commissioning the machine, each support point must be embedded by being crushed in by the runner's upper layer and the lower layer must have been pushed into the porosity in the ground. The crushing time is 2 hours at an ambient temperature of 18 °C.



Warning



Electrical safety device.

As rubber is a very good electric insulating material, the earthing of the machine is compulsory.

Moving machines sealed with the shock absorber plates


- Moving machines sealed with the shock absorber plates

10.4 Instructions for securing the machine on the ground

	Caution	
Only for machines without weighing equipment.		

Place the machine on a perfectly even surface and horizontal.
 Control this using a water level (see drawing).
 Each point must be level.

	A	B	C
WB6-50	891 mm	720 mm	1145 mm

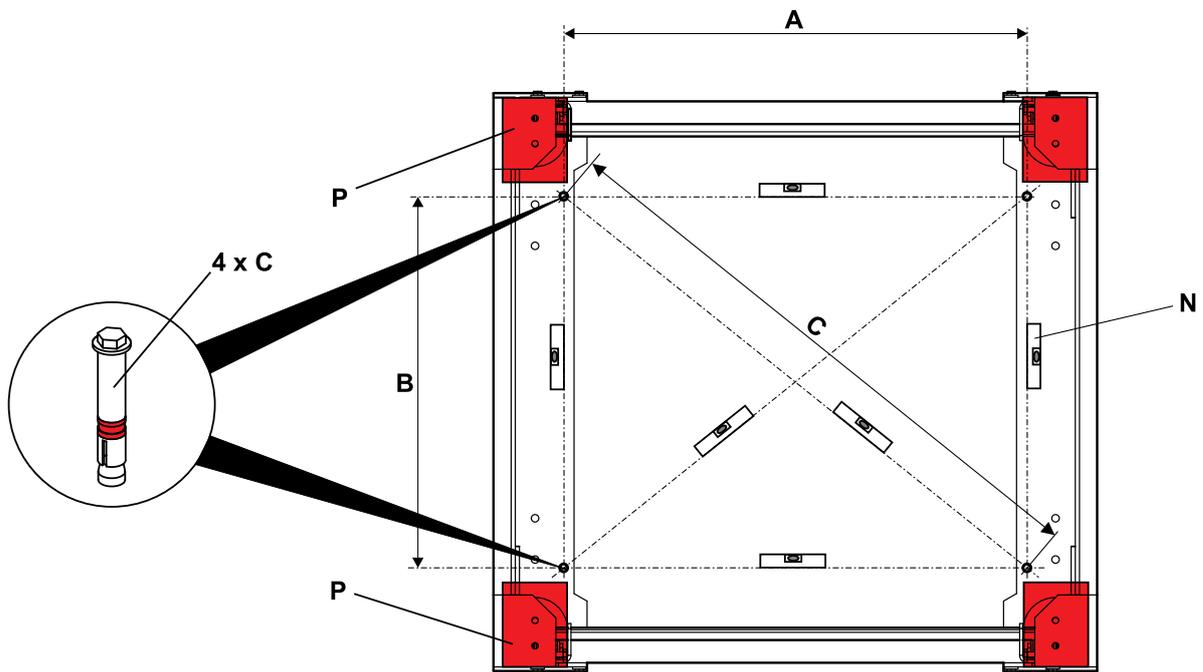

Mark out the drill holes for the securing dowels and drill them so as to insert the 4 dowels, they will secure the machine to the floor.

Put the machine in position and secure it with the dowels without tighten.

Absorber plate : P

Water level: N

Fixing dowels: C



Caution




Only for machines with weighing equipment.

Place the machine on a perfectly even surface and horizontal.

Control this using a water level (see drawing).

Each point must be level.

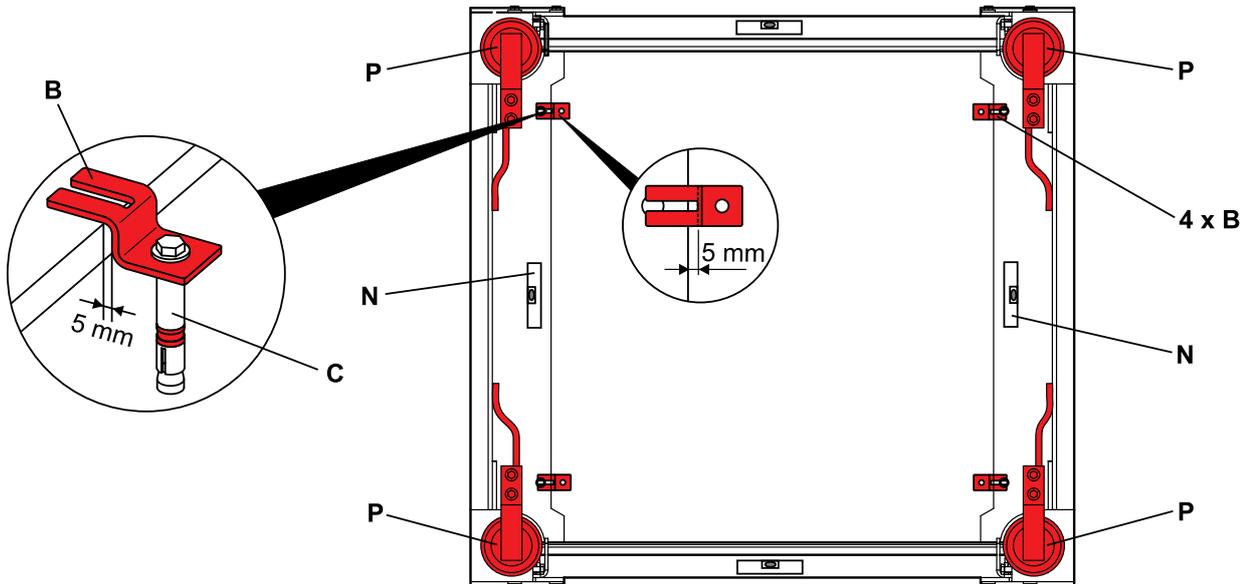

Weighing equipment: P

Water level: N

Fixing dowels: C

Flange safety locks: B

Mark the place of the drilling hole for the fixing dowels (C) and drill the holes for fixing of flanges (holes \varnothing 12 mm (1/2"), depth 80 mm (3")). Put the dowels in the flanges, position the flanges and screw.

11 Remove of the transport locks fitted




Important



Before putting the machine into service, it is compulsory to remove the 4 transport locks fitted.

To do so, remove the front and rear casings, then the fixing screws of the transport locks (B).

Keep the transport locks fitted with their screws and bolts to be able to assemble them again in case you would need to lift the machine.

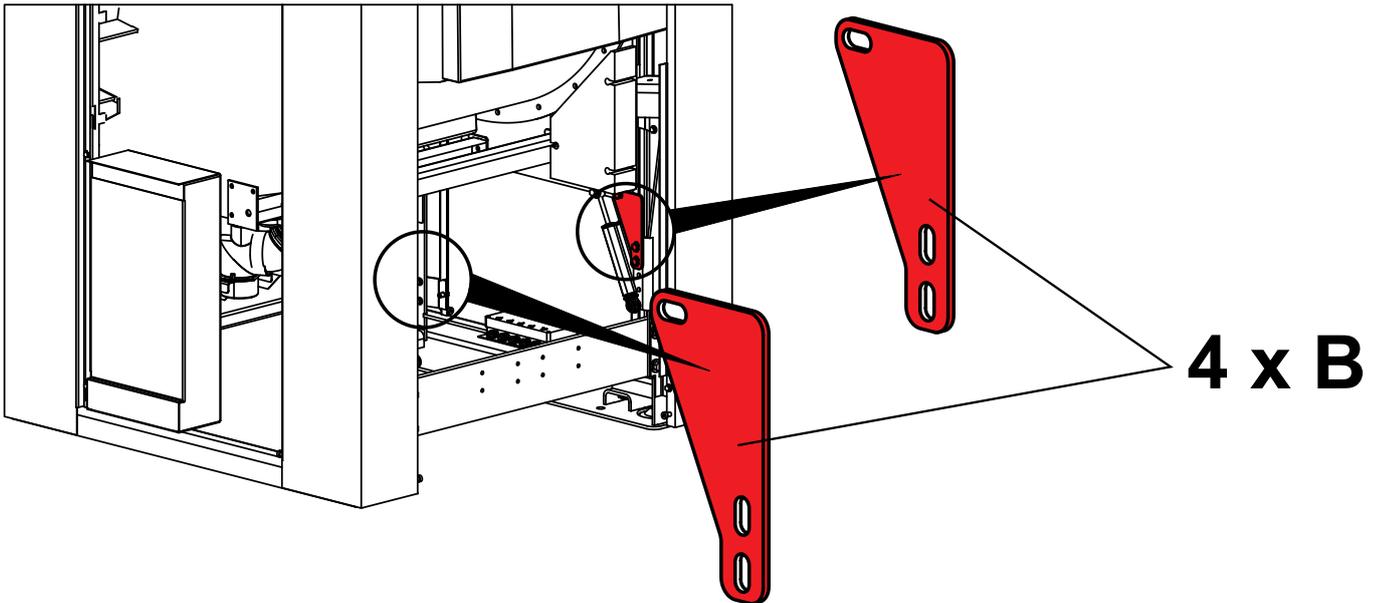


Important



Never handle the machine without the transport locks.

12 Barrier partition

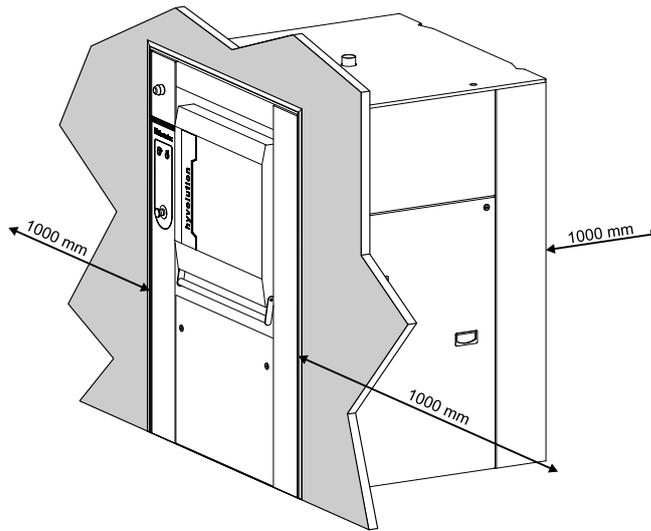


Leave at least 1 m (40") (according to the recommendation in standard EN 60204) between the machine, a wall or any other machine at the sides.

1	Aluminium Profile
2	Rubber seal
3	Barrier partition

mm/in	A	B	C	D
WB6-50	1290 / 50.79	1770 / 69.69	*	30 / 1.18 5 / 0.20

* Minimum 70 mm (2.76"),, maximum 100 mm (4"),.

- The barrier partition (3) shall be built after the installation of the machine.
- Line up the barrier partition (3) with the machine (2).
- Mount the rubber seal (1) on the cutoff edge of the machine (2).

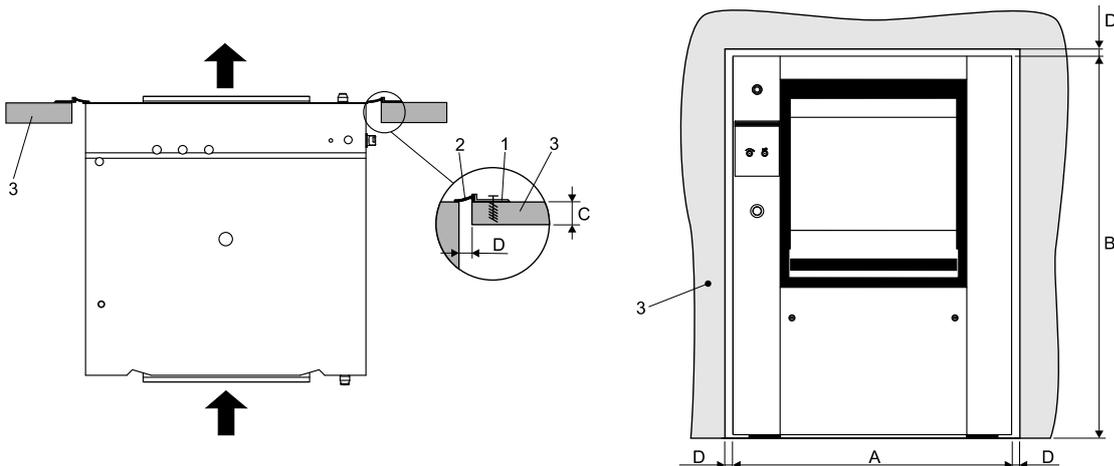

In a cleanroom environment, you may want to minimize air leakage through the barrier wall around the washer. To achieve air tightness, we can recommend the use of either :

- A non-porous, soft seal in a material compatible with cleanroom use (non-porous)
- A silicone compatible with cleanroom use

In such case, the measurement D shall not exceed 5mm (0.2")

If you do not aim at complete airtightness, you may use the aseptic partition seal kit supplied with the machine.

To do so, please refer to the instructions below.

- The barrier partition shall be built after the installation of the machine.
- Line up the barrier partition with the machine.

Note that the barrier washer may, in worst cases, vibrate with a maximum amplitude of +/- 2mm at its top.

13 Drain connection

The machine's exhaust sleeve outside diameter is of 75 mm (3"). It is located underneath the machine.


The waste water collector diameter 150 mm (6") (manufactured by customer) should have a 3 cm/m (3 %) slope and resist to a temperature of 90 °C (194 °F). It should be connected to the waste water general network in accordance with local codes and regulations.


Adapt and connect the machine's exhaust sleeve to the waste waters' collector (rubber bend and connection nozzle are supplied in the machine with collars).

Drawing of drain connection to waste waters' collector

1. Connect the hose (B) to the connect nozzle (C).
2. Seal and fix the nozzle (C) using 2 screws.
3. Then connect the hose (B) to the drain's evacuation sleeve (A).

A	Drain's evacuation sleeve
B	Connection hose
C	Connection nozzle
D	Waste water collector

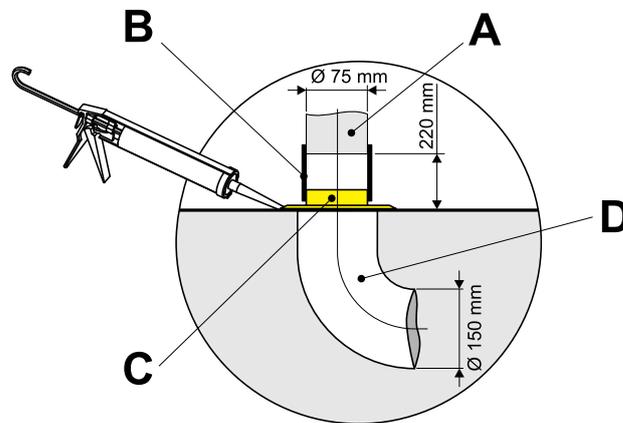

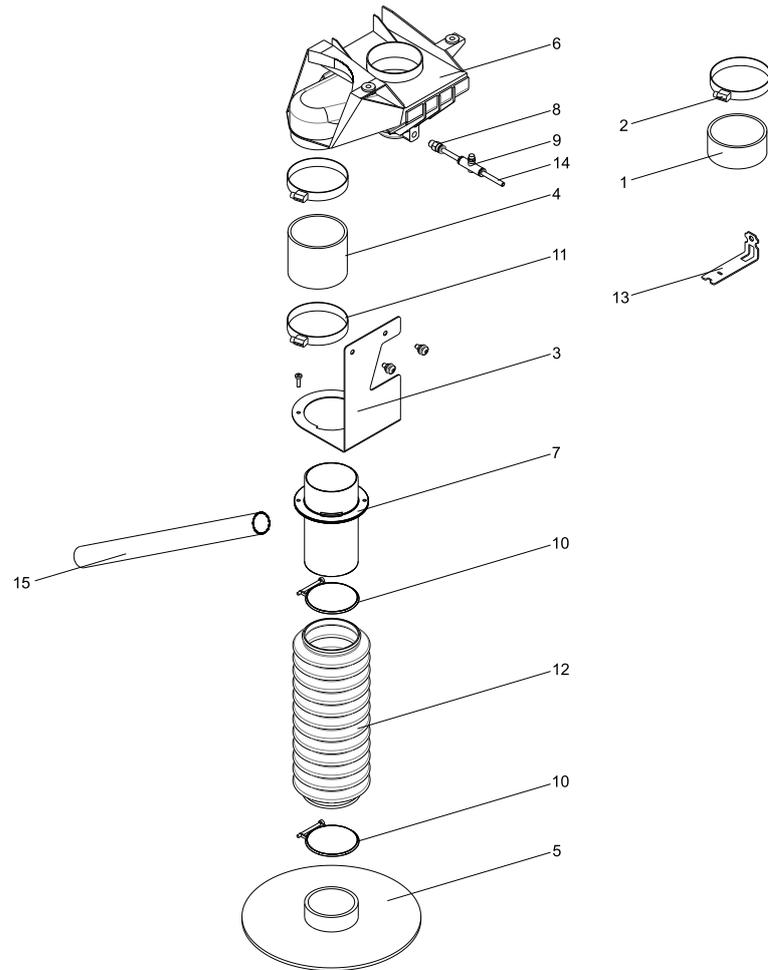



13.1 Drain connection at the left of the machine

All washers

It is possible to connect the simple drain or the double drains on the left side of the washer extractor.

Remove the casings from the washer for easy access to the drain valve.

Adapt and connect the various hoses and their collars to the washer as show in the drawing above for one or two drain connection.

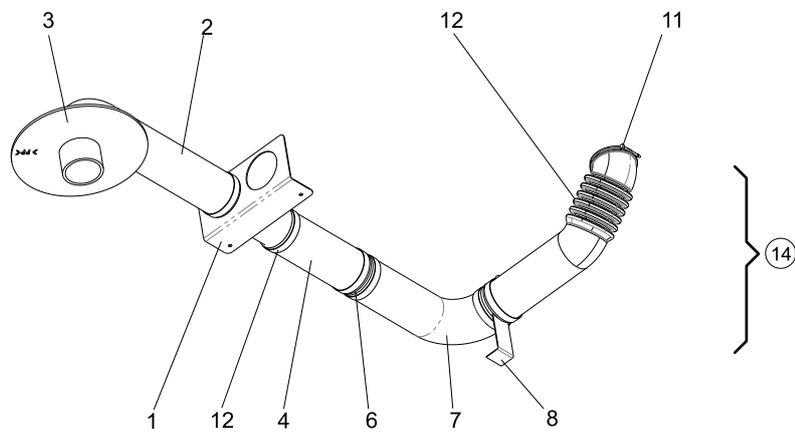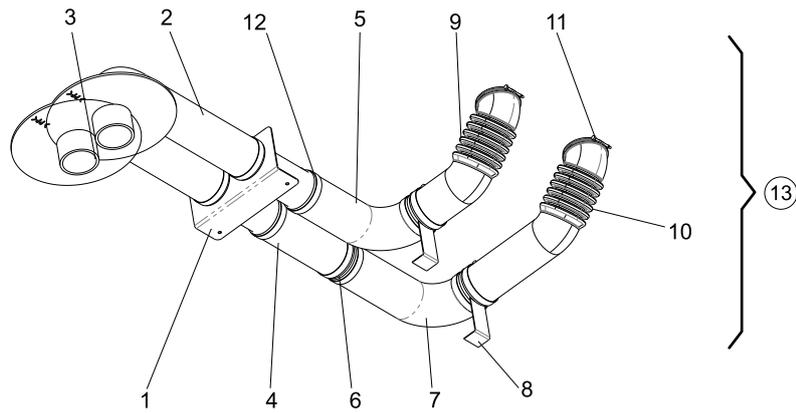

611596

Issue	Month	Year
01	02	17

Rep	Code
13	N/A for clean room machine
14	55015028

Replace the casings after taking care to remove the pre-cut of the left casing to allow the pass of the rubber hose.



13.2 Drain connection at the right of the machine

All washers

It is possible to connect the simple drain or the double drains on the right side of the washer extractor.

Remove the casings from the washer for easy access to the drain valve.

Adapt and connect the various hoses and their collars to the washer as show in the drawing above for one or two drain connection.

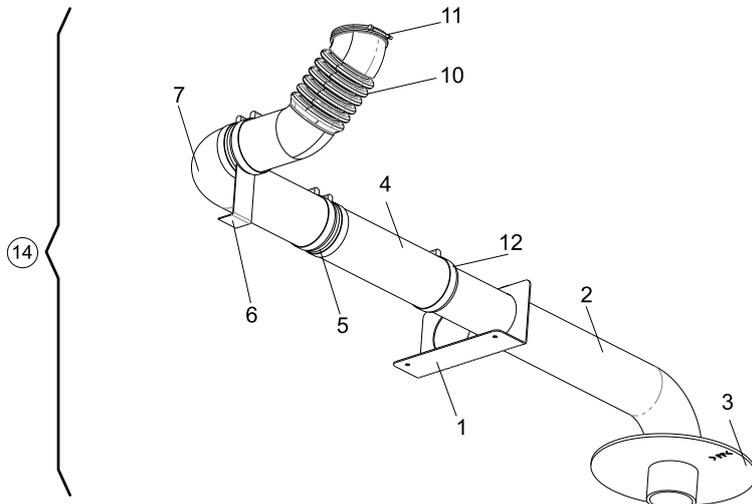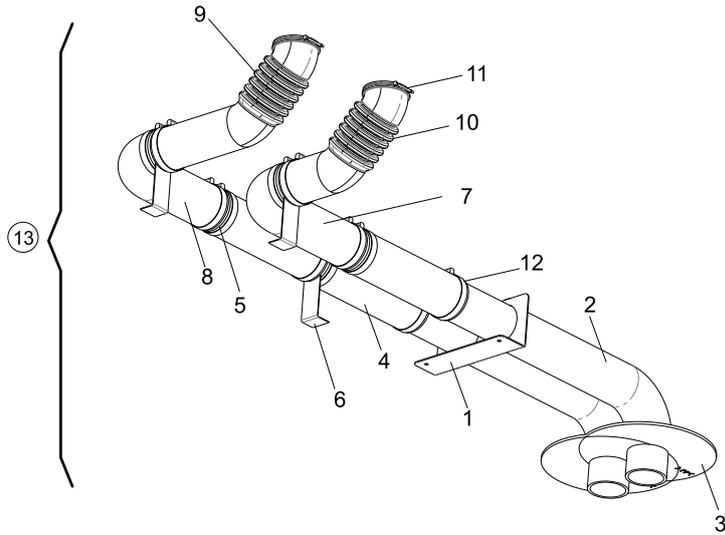

611597

Issue	Month	Year
01	02	17

Rep	Code
13	N/A for Clean room machine
14	55015027

Replace the casings after taking care to remove the pre-cut of the right casing to allow the pass of the rubber hose.

14 Bath inlet (water + detergents) Waters connections

Washer extractors are assembled in standard execution with only one water inlet.

The washer extractor is fitted with a DN 20 flange, a mating flange DN 20 and a seal for the bath inlet.

The supply pipes to the machine should be fitted with manual shut-off valves to facilitate installation and service. Fit filters to the manual shut-off valves with Teflon. Refer to local utilities regulations when fitting nonreturn valves. A screen at the entrance to the machine filter should be necessarily mounted, it must have a mesh size of 0.3 mm

The following values apply to water pressure:


Water supply pressure, 50 kPa (7.25 psi) mini.

Water supply pressure, 300 kPa (43.5 psi) maxi.

The hoses should be flushed through before being connected to the machine.

The hereunder example sketch shows the connection of the machine to the different inlets.

- A** Hard water inlet DN 20 (3/4" BSP) only this one for Clean Room Option
- D** Manual stop valve DN 20 (3/4" BSP) (provided by customer)
- E** Water filter
- F** Male nipple DN 20 (3/4" BSP) (provided)
- G** Flexible pipe DN 20 (3/4" BSP)

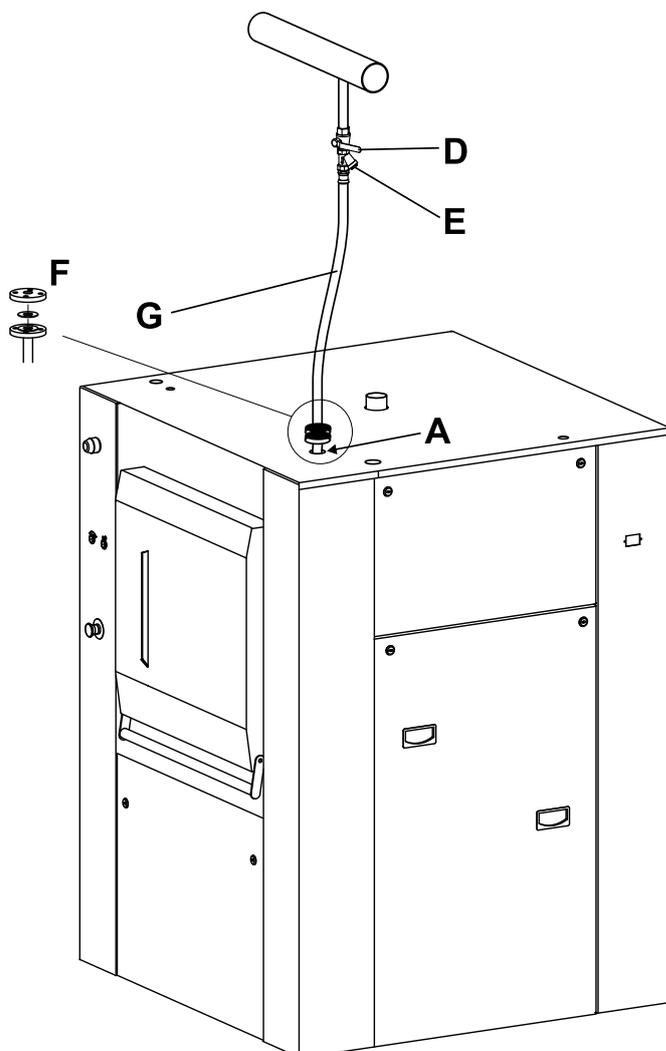

14.1 Connection of external water supply





Electrical installation must be carried out by an authorized personnel




All external equipment which is connected to the machine must be CE/EMC approved and connected using an approved shielded cable.

Connect the electrical control of the water inlet valve on the J238 terminal of the A2 I/O card in the electric cabinet of the machine.

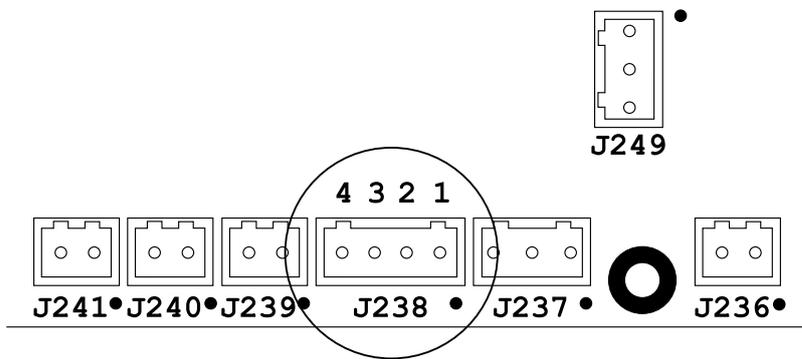

Outputs 24 VDC / 1 amp maxi

Output J238-1 = 0 V

Output J238-2 = Water inlet no 3

Output J238-3 = Water inlet no 2

Output J238-4 = Water inlet no 1

15 Liquid detergents connection



Caution



Liquid detergents are particularly aggressive.
We advise you to use only products with pH lower than 9 in order to avoid the machine's rubbers from being attacked.
Dilute imperatively all of your detergents before letting them flow into the machine.



ADVISE IF USING LIQUID DETERGENTS

After use, there is always chemical remaining in the liquid detergents' dosing pipes.
When the machine is not running, this detergent may slowly drip and so, quickly corrode the parts in contact with.
In order to avoid (ex. corrosion of the drum or by bleach), we advise you to forecast a device to drain every night the distribution pipes of the liquid detergents.



Caution




The running of detergents must be independent from the running of the machine.
The control information of detergents must imperatively be relayed.
It is imperative to use armoured wires for every connection in the electrical box.

15.1 Connection scheme of liquid detergents


We advise you to use one of the two systems shown hereby to connect your liquid detergents.
Single inlet dose controller with a compulsory rinsing device.

1	Retention tank	7	3 way valve
2	Pump	8	Scoops + Rinsing
3	Liquid detergents	9	Water
4	Water	10	Washer extractor
5	Soap box rinsing electrovalve	11	Toward retention tank
6	Dose controller	12	Retention tank

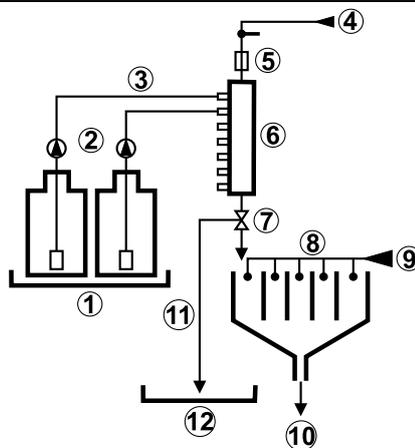

Multi-inlet dose controller with a compulsory rinsing device.

1	Retention tank	7	3 way valve
2	Pump	8	Scoops + Rinsing
3	Liquid detergents	9	Water
4	Water	10	Washer extractor
5	Soap box rinsing electrovalve	11	Toward retention tank
6	Dose controller	12	Retention tank

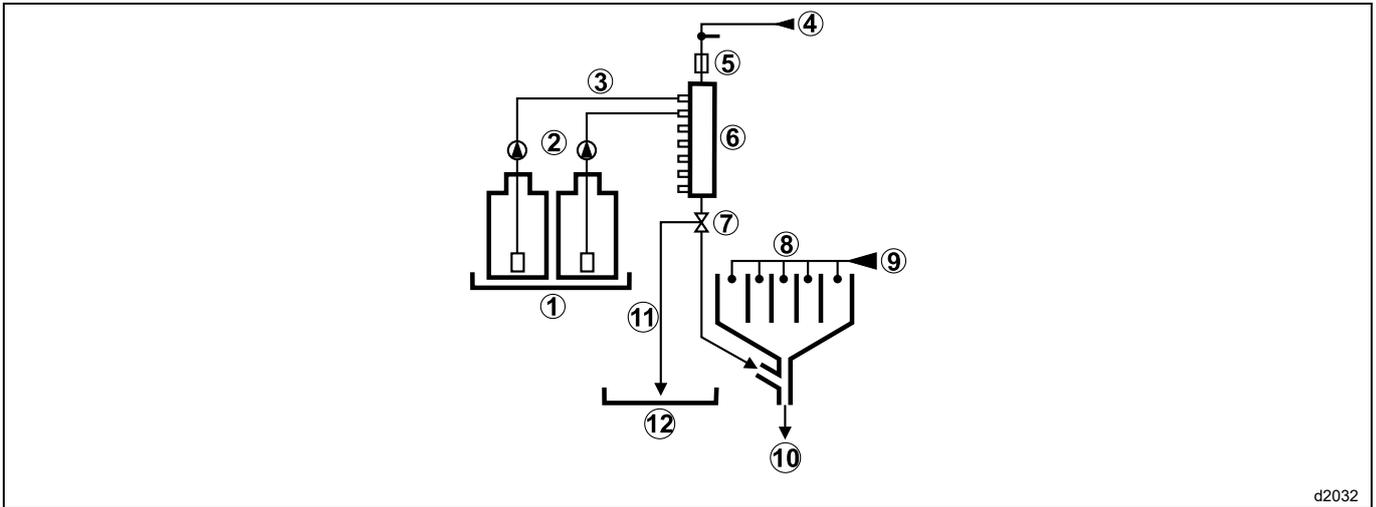

d2032


15.2 Electrical liquid detergents' connection



Electrical installation must be carried out by an authorized personnel.

The A8 output relay card allows to connect from 1 to 16 electrovalves of liquid detergents.

The card is situated in the electric box.

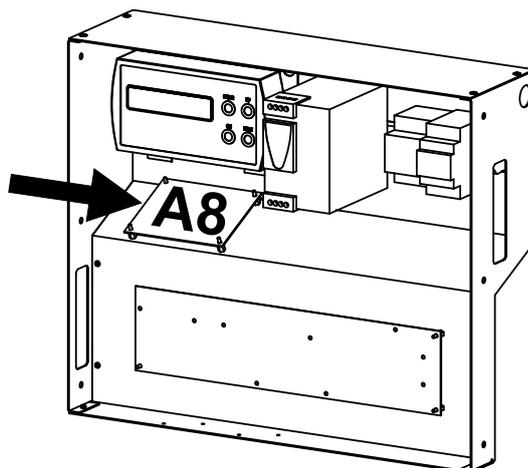


Carry the connection cables by the partition crossing and the cable through of the machine.

To connect the wires on the J802 terminal block, introduce a screwdriver in the upper aperture to open the cable clamp.

Connection on the A8 output relay card

C	Common of signals
1	Signal 1
2	Signal 2
3	Signal 3
4	Signal 4
5	Signal 5
6	Signal 6
7	Signal 7
8	Signal 8
9	Signal 9
10	Signal 10
11	Signal 11
12	Signal 12
13	Signal 13
14	Signal 14 (controlled by water level)
15	Signal 15 (controlled by water level)
16	Signal 16 (reserved)

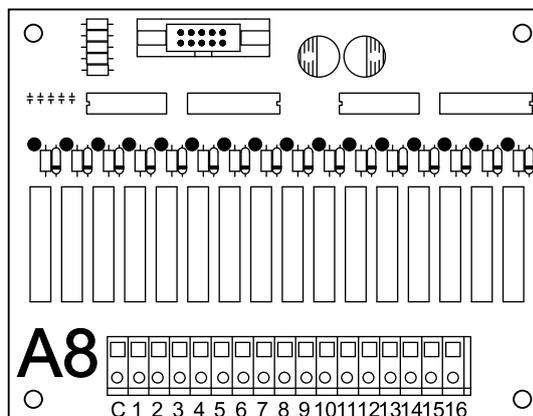

Supply voltage : 250 V~ maximum

Maximum intensity : 6 A.

16 Indirect steam heating

Steam and condensate connections

The washer extractor is fitted with 2 DN 20 flanges, 2 mating flanges DN 20 and 2 seals for the indirect steam heating.

Steam connection

The customer must install a line purge, a manually closing valve with handwheel lockable in off position (do not use a 1/4 turn valve) and a filter on the supply side of the washer-extractor.

Hereunder values apply to the steam pressure.

Recommended pressure: 300 at 600 kPa (3 at 6 kg/cm²) (43.5 at 87 psi)

Limiting of values:

- **mini. 100 kPa (1 kg/cm²) (14.5 psi)**
- **maxi. 600 kPa (6 kg/cm²) (87 psi)**

Connection size : flange DN 20.



Condensate connection

The customer must install a steam trap with float closed with an incondensables drainage device, a by-pass, a non-return valve and a manual closing valve lockable in off position (do not use a 1/4 turn valve).

Connection size: flange DN 20.

Connect the steam installation on the top of the machine (see example sketch).

A	Washer-extractor	H	Non-return valve (provided by customer)
B	Line trap (provided by customer)	M	Pressure gauge (provided by customer)
C	Return of condensates	N	Insulation for the pipework (provided by customer)
D	Manual stop wheel valve (provided by customer)	P	Steam electrovalve (provided)
E	Steam filter (provided by customer)	S	Safety valve (provided by customer)
F	Steam trap (provided)	V	Steam inlet

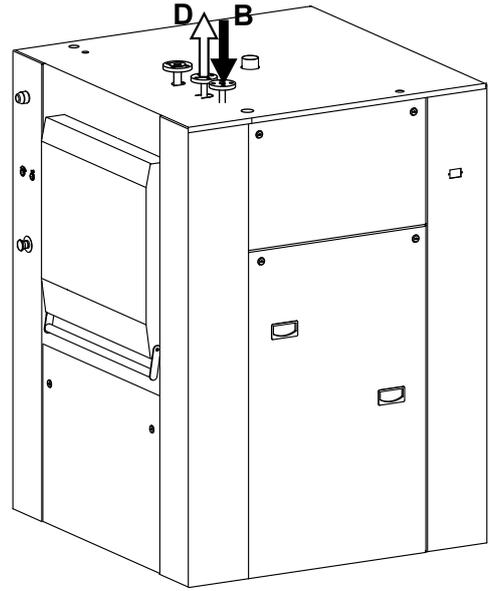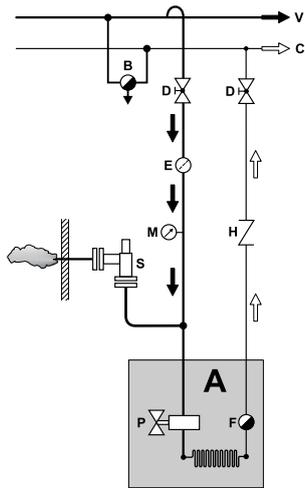


Barrier washer

17 Air vent connection


The air vent of the outer drum opens on the top of the machine. Connect the connection bellow $\varnothing 60$ to this opening. Connect the air vent, to the outside of the laundry in accordance with the legislation.

The air vent should resist to 100 °C (212 °F) temperature and allow the condensates to return to the machine.

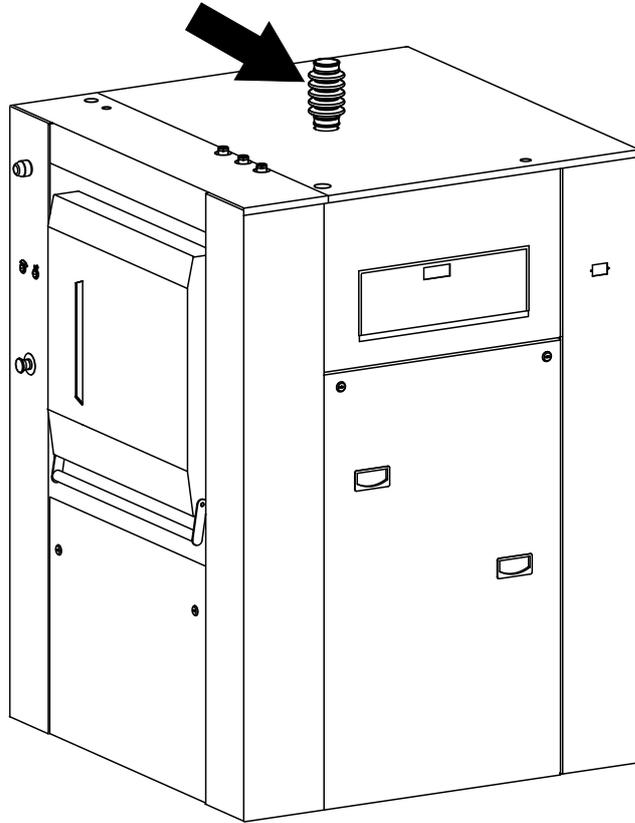

17.1 Air vent connection for clean room installation

The air vent of the outer drum opens on the top of the machines. You may connect according to one of the 2 alternatives we recommend below.

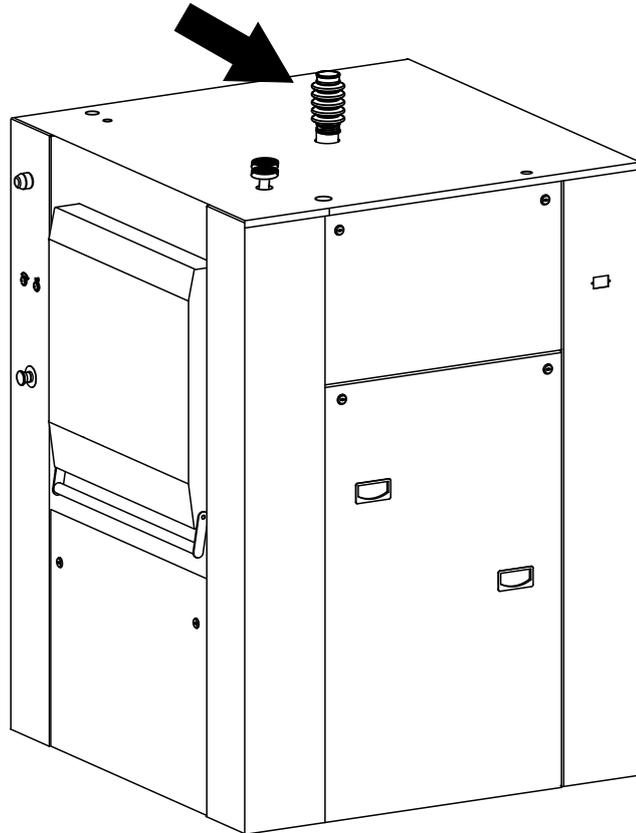

It is important that the machine is put at atmospheric pressure as the levelling of water depends on it.


Alternative 1 :

Pressurized HEPA (High Efficiency Particulate Air) filtered air

When the machine drains water, clean air must go in

When the machine fills with water, dirty air goes out and must be pushed away by HEPA filtered air

Exhaust clean and dirty air into a grey room

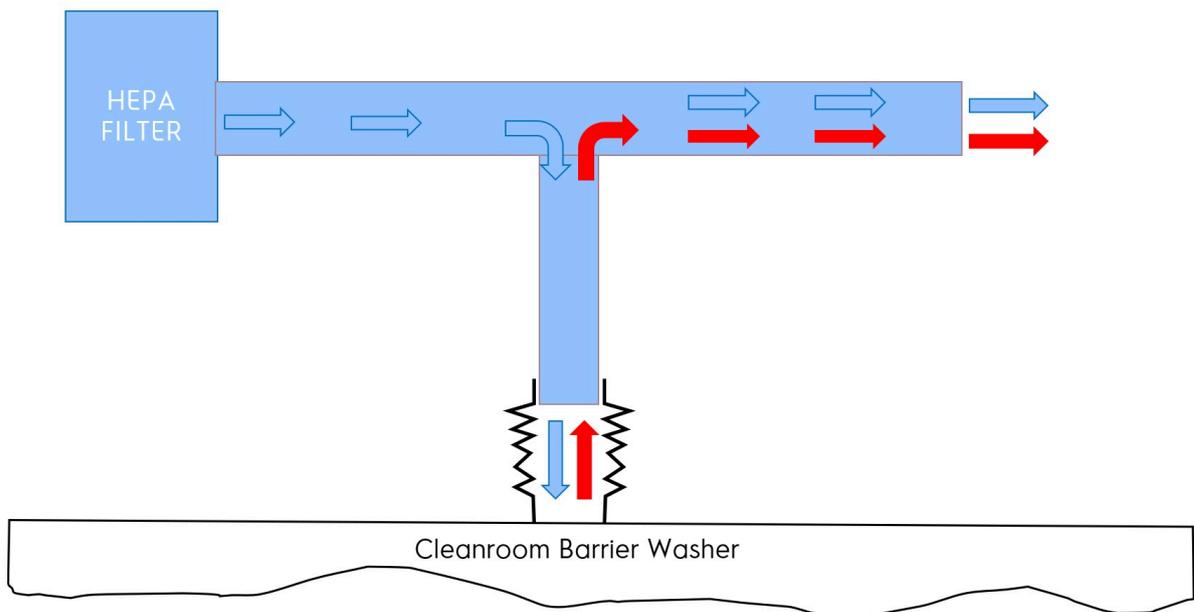


Alternative 2 :

When the machine drains water, clean air must go in

When the machine fills with water, dirty air goes out and must be trapped in the HEPA filter.

The type of HEPA to be used must be so that it works both ways and traps the particles inside. It must not release the particles when the machine drains water.

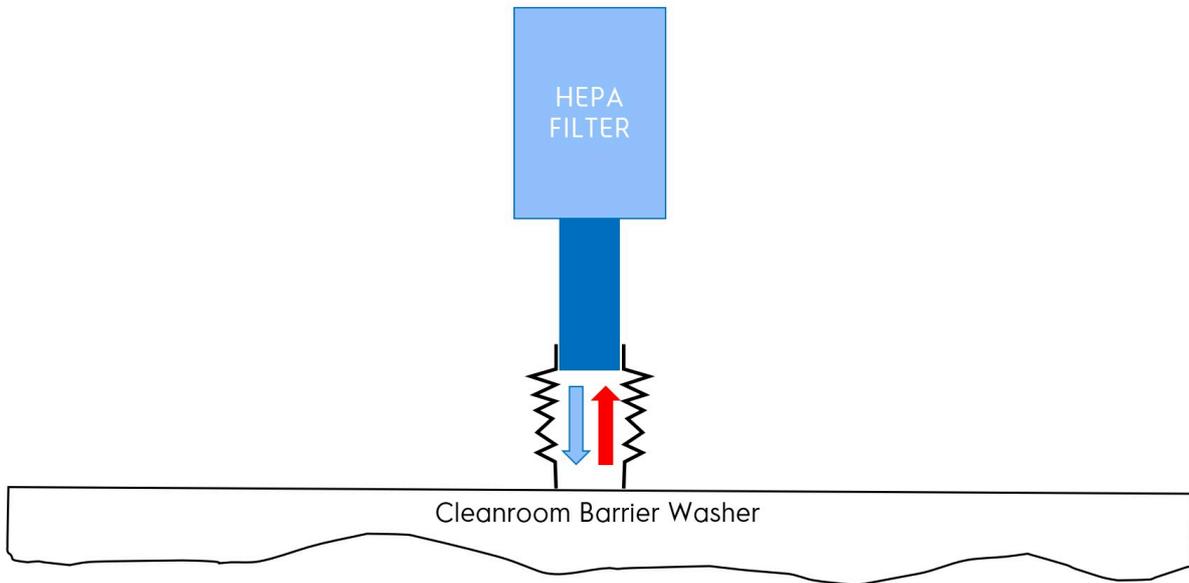

18 Note about the A.C. power

According to the EN 60204-1:2018 standard, the machine is provided for A.C. supplies corresponding to the extracted characteristics below :

4.3.2 A.C. supplies

Voltage:

Steady state voltage: from 0.9 to 1.1 of nominal voltage.

Frequency:

from 0.99 to 1.01 of nominal frequency continuously.

from 0.98 to 1.02 short time.

Harmonics:

Harmonic distortion not to exceed 10 % of the total r.m.s. voltage between live conductors for the sum of the second through to the fifth harmonic. An additional 2 % of the total r.m.s. voltage between live conductors for the sum of the sixth through to the 30th harmonic is permissible.

Voltage unbalance:

Neither the voltage of the negative sequence component nor the voltage of the zero sequence component in three-phase supplies shall exceed 2 % of the positive sequence component.

Voltage interruption:

Supply interrupted or at zero voltage for not more than 3 ms at any random time in the supply cycle. There shall be more than 1 second between successive interruptions.

Voltage dips:

Voltage dips shall not exceed 20 % of the peak voltage of the supply for more than one cycle. There shall be more than 1 second between successive dips.

19 Feeder cable sections

The feeder cable sections mentioned in our literature are given only as a guide.

To obtain a value perfectly suited to your own application and which takes account of the different correction factors in respect of your plant, refer to the tables below.

Table 1 (in accordance with EN Standard 60204-1)

Values given for:

- Cable with copper conductors
- Cable with PVC insulation (for other insulants see Table 3)
- Ambient temperature 40°C max. (for others see Table 2)
- Three-phase cable under load without including starting currents
- BT / C/ E cable layout.

Maximum Admissible Current

Cable section	Seated in Cable Duct or Cable trough	Wall fixing	Cable tray
	B2	BC	E
3 x 1.5 mm ²	12.2 A	15.2 A	16.1 A
3 x 2.5 mm ²	16.5 A	21 A	22 A
3 x 4mm ²	23 A	28 A	30 A
3 x 6 mm ²	29 A	36 A	37 A
3 x 10 mm ²	40 A	50 A	52 A
3 x 16 mm ²	53 A	66 A	70 A
3 x 25 mm ²	67 A	84 A	88 A
3 x 35 mm ²	83 A	104 A	114
3 x 50 mm ²	-	123 A	123 A
3 x 70 mm ²	-	155 A	155 A

Table 2 (correction factors for different ambient temperatures)

Ambient temperature	Correction factor
30 °C	1.15

35 °C	1.08
40 °C	1.00
45 °C	0.91
50 °C	0.82
55 °C	0.71
60 °C	0.58

Table 3 (correction factors for different cable insulating materials)

Insulating material	Max. Working temperature range	Correction factor
PVC	70°C (158 °F)	1.00
Natural or Synthetic Rubber	76°C (140 °F)	0.92
Silicone Rubber	120°C (248 °F)	1.60

Table 4 (B2, C and correction factors for cable grouping)

Number of cables	B2	E	E
	Seated in Cable Duct	Wall fixing or Cable trough	Cable tray
1	1.00	1.00	1.00
2	0.80	0.85	0.87
4	0.65	0.75	0.78
6	0.57	0.72	0.75
9	0.50	0.70	0.73

The total current included for using Table 1 should be the maximum rated current for the machine divided by the product of the different correction factors. Other correction factors may also be applied ; consult the cable manufacturers.

Calculation : Example

- The machine has a rated current of 60 A.
- The ambient temperature is 45 °C ; Table 2 gives a correction factor of 0.91.
- Rubber cable insulant : Table 3 gives a correction factor of 0.92.
- The cable is fixed directly to the wall (Column C), with 2 cables side by side. Table 4 gives a correction factor of 0.85.

$$\text{Total current : } \frac{60 \text{ A}}{0.91 \times 0.92 \times 0.85} = 84 \text{ A}$$

Taking Column C in Table 1 (wall fixing), we obtain a minimum cable section of : 3 x 25 mm².

20 Electricity power supply



Prior to use, the washer-extractor should be connected to a multi-pole switch prior to the machine to facilitate installation and service operations.



Caution



The electrical installation of the machine must be undertaken by qualified personnel.



Caution



Ensure that the electrical voltage is correct and that the power of your supply is sufficient, before connecting the machine.



Caution



The main switch is located on the right side of the machine , identified by this sticker.




Note!

The use of power electronics (converter or filter for example) may lead to unexpected release of breakers with 30 mA differential current device.

Therefore a Type B residual differential protection system with reinforced immunity of 300 mA in accordance with standard NFC 15100 must be used for our washing machines.


To avoid these untimely activations, you ought to use differential protecting systems with residual current only, having a high level of reinforced immunity as regards leakage transient current.

Pass the power supply cable of the machine through the stuffing box on the top of the machine.

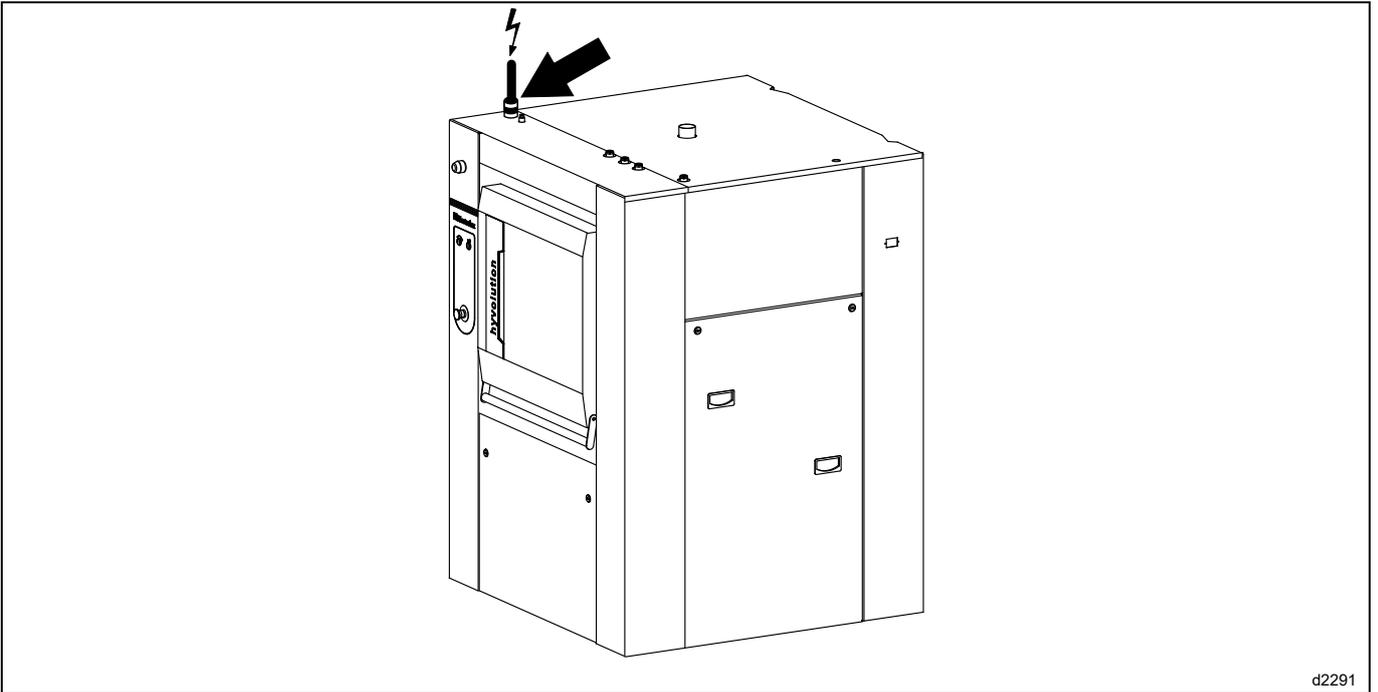

d2291

For each machine, install a fixed multipolar circuit breaker (or fuses protector) in the laundry main cabinet.

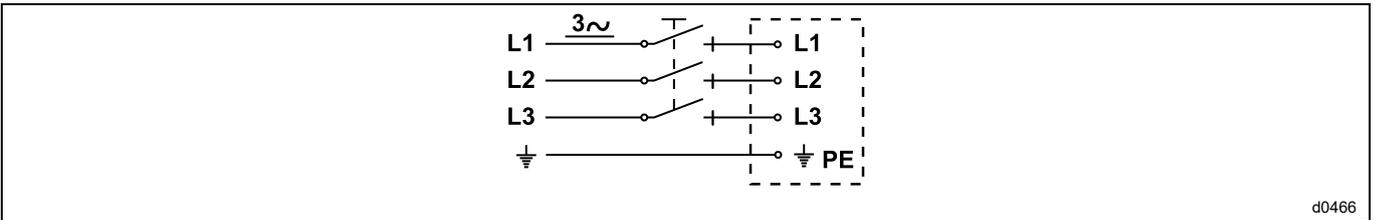


d0466

Connect the power supply cable on the machine main switch. Connect the 3 phases on the main switch (see marks L1, L2, L3) and connect the earth wire on the earth terminal (PE) of this main switch. (see chapter “Function checks”).

Caution

In case of a machine with integrated weighing, you must use a flexible power supply cable to connect the machine.

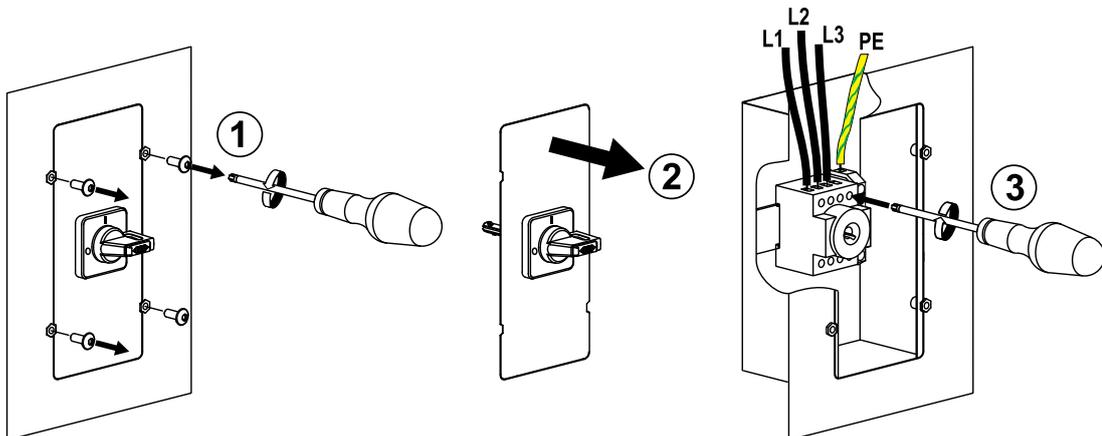

Machine type	Heating	Supply Voltage	Rated Power	Rated Intensity	Connection cable section	Protection
WB6-50	Gas	380/415 V 3+E ~ 50/60 Hz	8.6 kW	12 A	4 x 2.5 mm ²	3 x 16 A
	Electric	380/415 V 3+E ~ 50/60 Hz	42 kW	57 A	4 x 16 mm ²	3 x 63 A
	Electric	230 V 3+E ~ 50/60 Hz	42 kW	97 A	4 x 25 mm ²	3 x 125 A
	Electric	200 V 3+E ~ 50/60 Hz	42 kW	87 A	4 x 25 mm ²	3 x 125 A
	Electric	480 V 3+E ~ 50/60 Hz	42 kW	50 A	4 x 16 mm ²	3 x 63 A
	Steam	380/415 V 3+E ~ 50/60 Hz	8.6 kW	12 A	4 x 2.5 mm ²	3 x 16 A
	Steam	230 V 3+E ~ 50/60 Hz	8.6 kW	21 A	4 x 6 mm ²	3 x 25 A
	Steam	480 V 3+E ~ 50/60 Hz	8.6 kW	10 A	4 x 2.5 mm ²	3 x 16 A

21 Compressed air connection



Caution



The compressed air admitted to the distributors and jacks must be purified to the following values:

- it must be free from solid particles larger than 5 μm . The filter present on our machines has a filtration of 5 μm .
- It should not contain more than 1.5 g of water / m³
- It should not contain more than 5 mg of oil condensate / m³

The customer should arrange the installation of filter/lubricator device, as well as a pressure regulator (manometer) on the machine's compressed air supply.

The manual stopping valve lockable in closed position (provided by customer) should be installed on the machine's compressed air supply.

The supply pipe should accept a pressure of at least 1 Mpa (10 bar) (145 psi).


- Connection diameter: rapid action hose coupling DN 6 (0.24") for hose \varnothing 6/8 mm.
- Advised pressure: 550-700 kPa (5,5-7 bar) (80-102 psi).
- Minimum pressure: 550 kPa (5,5 bar) (80 psi).
- Maximum pressure: 700 kPa (7 bar) (102 psi).
- Consumption 50 l/h.



Important



To avoid too big head losses, the compressed air supply pipe should be bigger in diameter than the coupling diameter (DN 8 for example); in this case, put a 6/8-8/10 adapter.

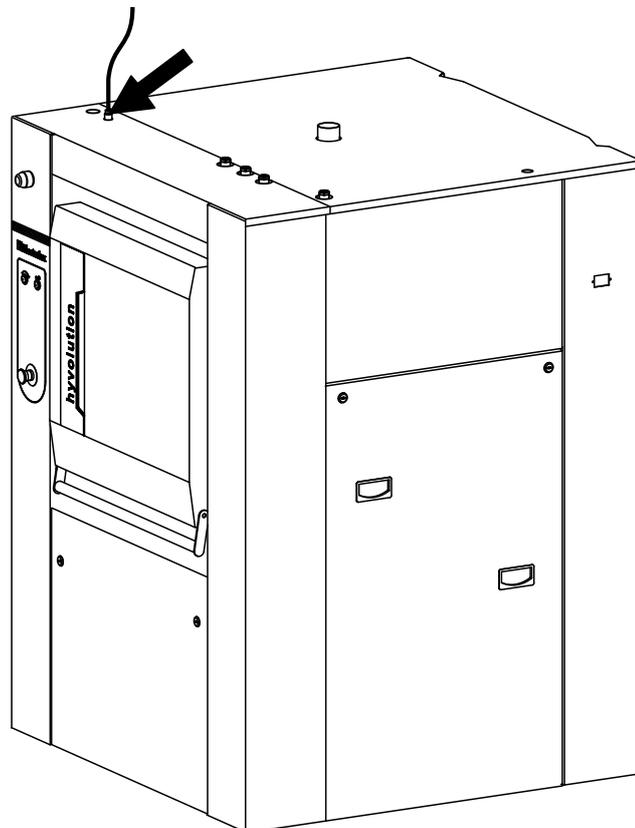

21.1 Compressed air standard ISO 8573–1

This chapter explains the required by our product for the air compressed quality, from the standard EN ISO 8573-1.

This standard shows the quality of the compressed depending on the particles inside it, the tolerance of these particles give a classification of the required compressed air for our product.

Show in the table below the classification :

ISO 8573-1:2010	First Digit			Second Digit			Third Digit
	Solid particles			Water			Oil
	Max.number of particles per m3			Mass concentration	pressure dew point	Liquid	Total oil content (liquid, aerosol and vapour)
	0.1 ... 0.5 µm	0.5... 1 µm	1 ... 5 µm	mg/m3	°C	g/m3	mg/m3
0	In accordance with specifications by device user, stricter requirements than Class 1						
1	< 20,000	< 400	< 10	-	< -70	-	0.01
2	< 400,000	< 6,000	< 100	-	< -40	-	0.1
3	-	< 90,000	< 1,000	-	< -20	-	1
4	-	-	< 10,000	-	< +3	-	5
5	-	-	< 100,000	-	< +7	-	-
6	-	-	-	< 5	< +10	-	-
7	-	-	-	5 ... 10	-	< 0.5	-
8	-	-	-	-	-	0.5 .. 5	-
9	-	-	-	-	-	5 ... 10	-
X	-	-	-	> 10	-	> 10	> 10

So, the customer should arrange the installation of filter device, as well as a pressure regulator (manometer) on the machine's compressed air supply.



Important



To ensure the proper functioning of pneumatic devices (cylinders, distributors, clamps, silencers) of our products, the following air quality is recommended:

Particles = class **7**

Water = class **4**

Oil = class **4**

Recommended air quality class **[7;4;4]**, this means that:

For dust, we tolerate between 5 and 10 mg of dust per cubic meter of compressed air.

For water, we tolerate a dew point which does not exceed 3°C

For oil, the presence of 5 mg of oil per cubic meter of compressed air is tolerated

22 Connectivity of the barrier washer



Caution




Every barrier washer L6000 can be connectable to keep some datas of the production made by this product.

Either the machine comes with the connectivity kit or you can order it to make your barrier washer connected.

INSTALLATION INSTRUCTION OF THE CONNECTIVITY BOARD ON THE BARRIER WASHER L6000 range:

For the installation procedure see instruction **438907725** but it boils down to this:

For type L6000 Barrier washer , the cable supplied with kit 988807401 is used to connect the connectivity board to the machine. The connectivity board is located on the top of the barrier washer as mentioned in the instruction !

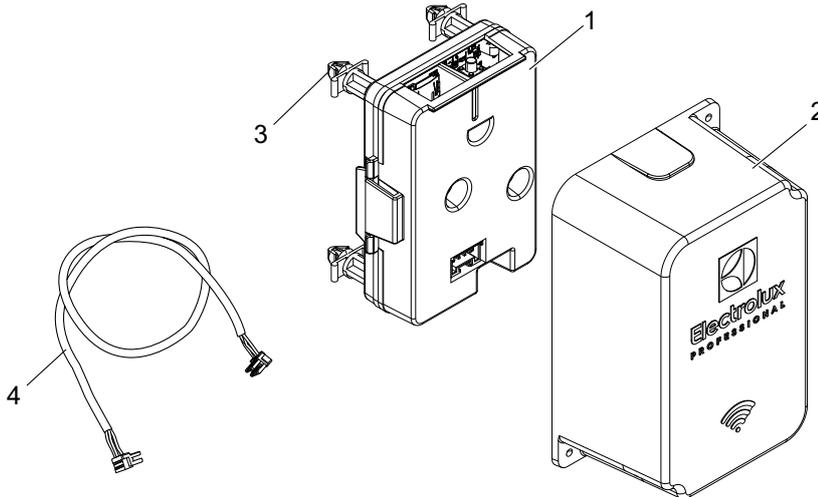

1	432689401	Machine Wireless Board x 1
2	490624901	Machine Wireless Board cover x 1
3	471796002	Circuit support x 4
4	413327505	Harness RS232 Fuse IOT x 1

NETWORK OVERVIEW :

To be able to use Electrolux Professional provided Connectivity and Management Software Tools, ELS network should be established.


The Machine wireless board is a part of ELS Network, it should be installed on each machine with Compass Pro or Clarus Vibe control system and it be connected to the CPU RS232 port via a quick connection port behind or on top of the machine.

The Site wireless board is designed to be connected to PoE (Power over Ethernet according to IEEE 802.3at) port on the ethernet router otherwise a power supply (D) connected via USB type C with output 5V DC / 8A Max. is required to be connected to the Site wireless board if there is no power supply over ethernet cable.

Network details:

- Machine wireless board on each machine (B)
- Site wireless board (C)
- Power supply, output: USB type C 5 VDC / 8A Max. (option) (D)
- Router with PoE (Power over Ethernet according to IEEE 802.3at) (E)
- Client/remote PC (F)
- Web application & Mobile application (G)

Schematic diagram below also valid for L6000 barrier washer range:

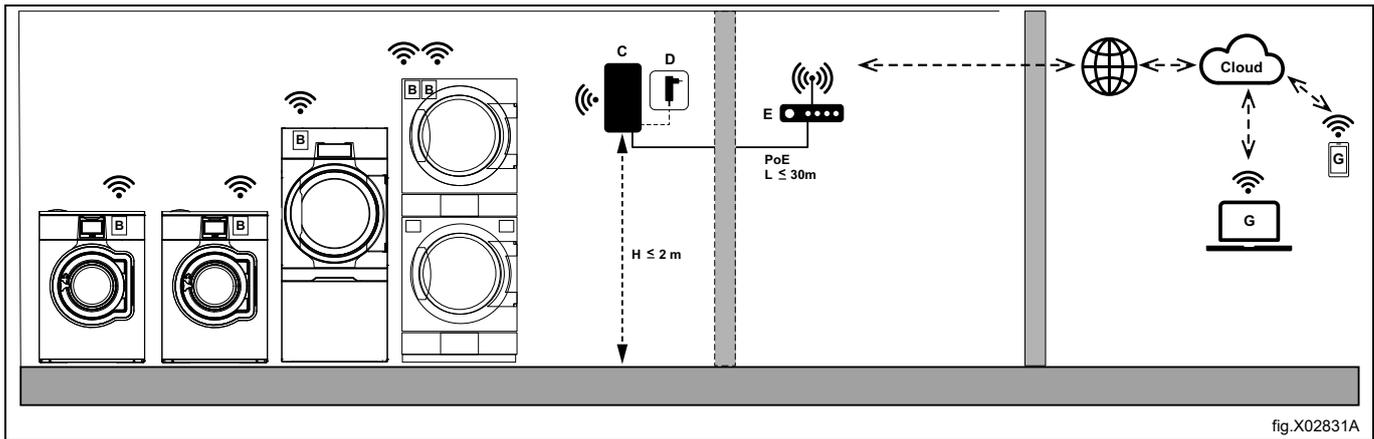

22.1 Process to follow with a pre equipped washer machine

Barrier washing machine:


Installing the kit on a pre-equipped barrier washing machine.

The connectivity box must be installed on the upper part of the machine on the water inlet side (on a small cap) as shown in the instruction **438907725**

To do this, follow the following procedure:

1/ Remove the 4 yellow self-adhesive pads for fixing the box.

2/ The connection cable (red) is located under a grommet, remove it and pull the RS232 connection cable held by a label, Be careful not to drop it in the machine! (example below for a Pullman machine, do the same for Evolution or Hyvolution L6000)

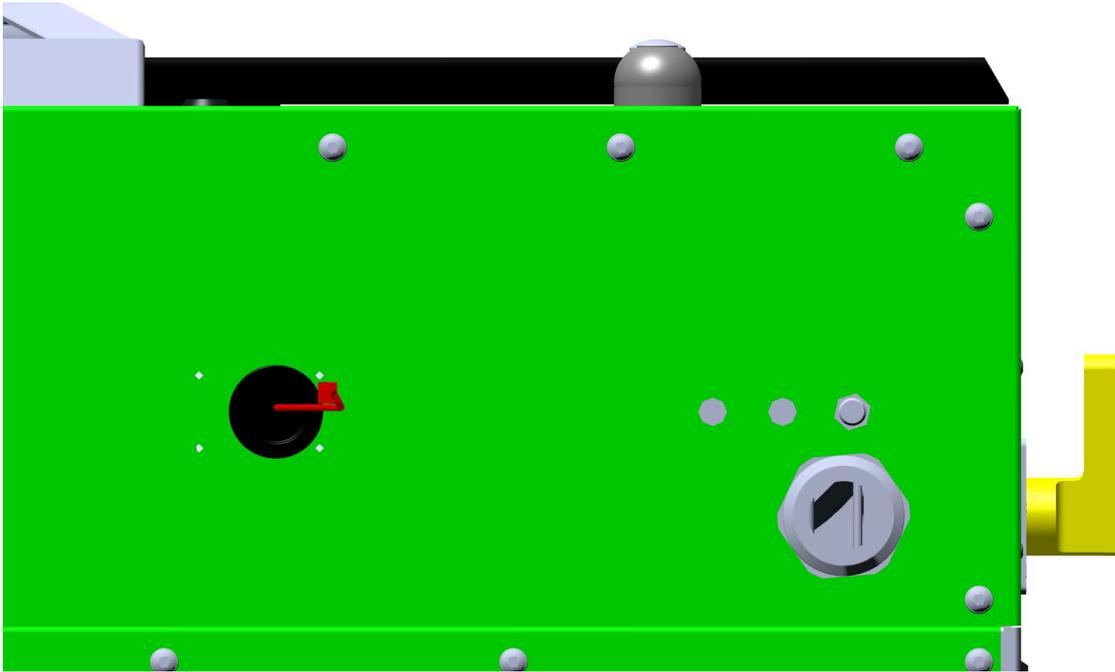

3/ Connect the cable to the machine wireless board,

4/ and clip the board into the 4 fixing holes with the 4 circuit support.

5/ Place the cover.

The machine is now connectable.

22.2 Connectivity of the barrier washer with after sales kit

22.2.1 Contents of the kit

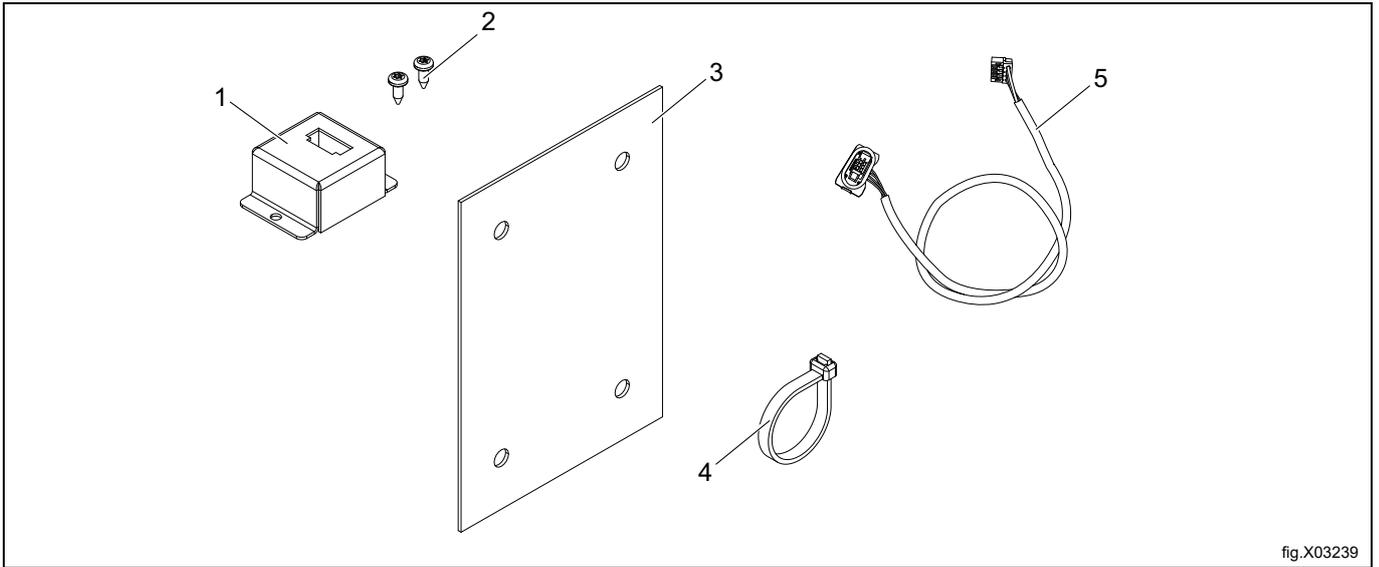


fig.X03239

1	490625001	Plate adapter x 1
2	471836901	Screw M4x11 x 2
3	490625501	Drilling fixture (paper) x 1
4	762910205	Cable tie x 4
5	413327497	Harness RS232 Machine to IOT x 1

22.2.2 Required tools

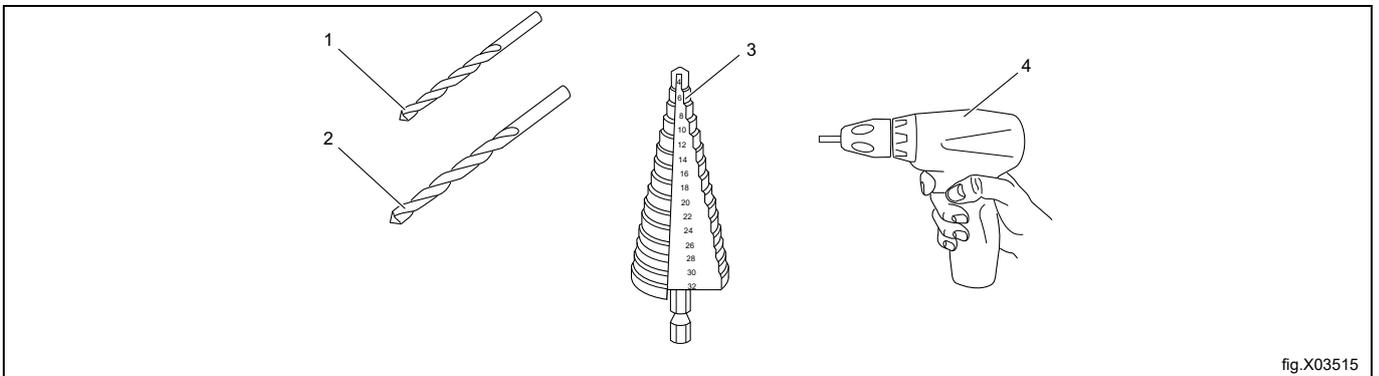


fig.X03515

1	Drill bit \varnothing 3–3.5 mm
2	Drill bit \varnothing 5 mm
3	Step drill bit or drill bit \varnothing 18 mm
4	Drill driver or electric screw driver

22.2.3 Procedure to follow to connect the barrier washer with after sales kit



Caution



Every barrier washer L6000 can be connectable to keep some datas of the production made by this product.

Either the machine comes with the connectivity kit or you can order it to make your barrier washer connected.

Process to install connectivity kit:




Caution



The pictures of this procedure show a **WB6 Evolution** with **Compass Pro**, it's the same for the **WB6 Hyvolution** with **Compass Pro** and also **Hyvolution G5000**


STEP 1 : Remove the small and large upper casings from the machine by unscrewing all the screws. (Fig.1)

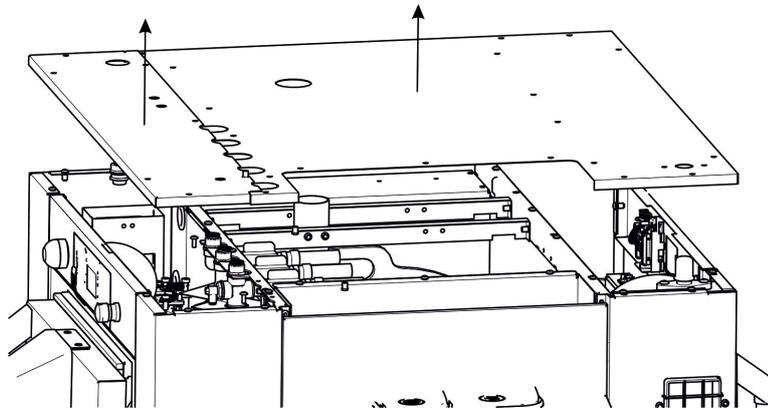



STEP 2 : Using the drilling template, drill the small cap with 4 holes provided for installing the connectivity card (Fig.2)

4 holes with the Drilling fixture (paper) with 5 mm drill bit.

and then drill another hole in the center of the previous 4 with an 18 mm drill bit, to allow the cable to pass through.

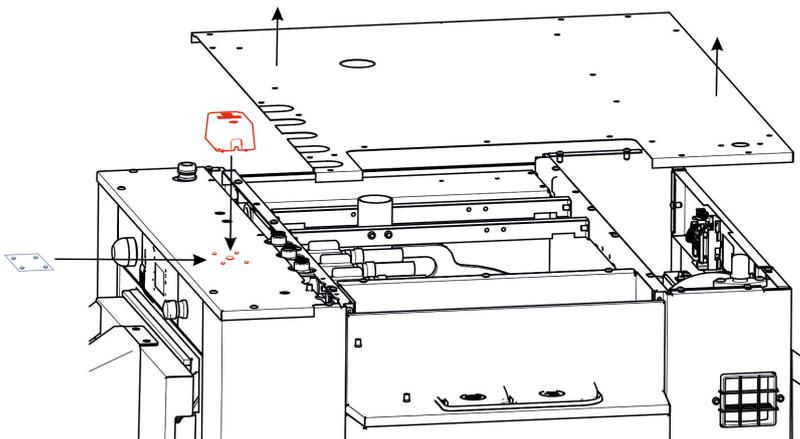

STEP 3 : Pass the cable and attach it to the various bodywork elements. (Fig.3 & Fig.4)

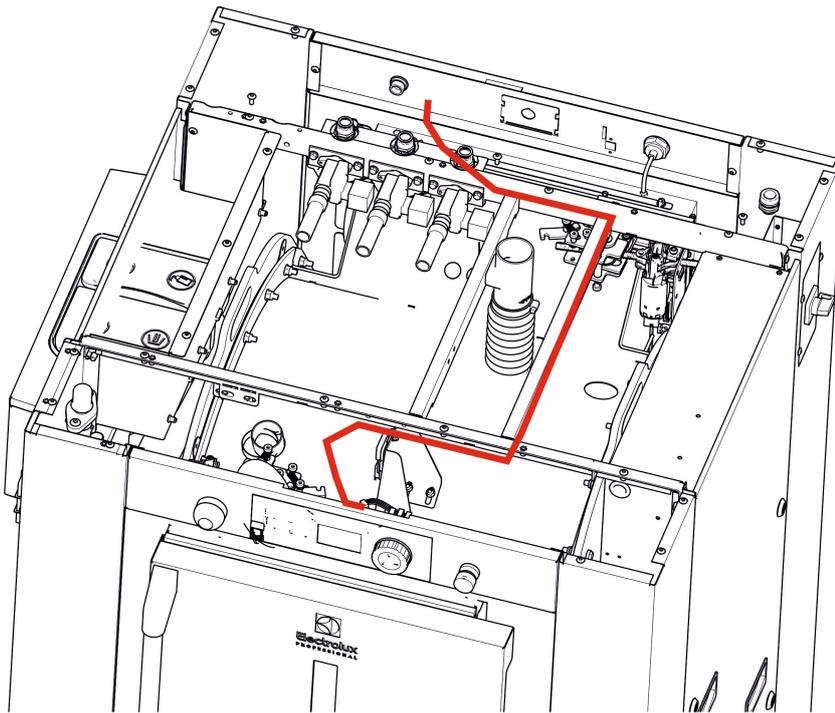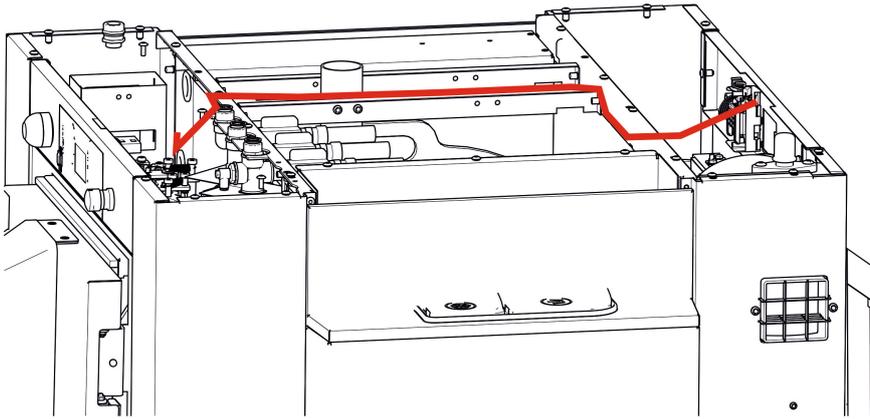

STEP 4 : Connect the cable to the RS232 Port of Compass Pro (loading side)

STEP 5 : Put back the upper casings,

STEP 6 : Connect the connectivity board to the wire . Please follow the instruction **438907725**

STEP 7 : Place the cover of the connectivity board.

Then, your washing machine is now connectable.

23 Function checks



Caution




Before putting the machine into service, carry out the working tests.
The operating inspection must be done by an approved technician.

Manual operation

The procedure for operating the various machine functions manually is described in the chapter "Machine operation" under the heading "Manual operation".

- Switch on the machine's main switch and check the voltage on the three phases (3 x 400 volts).
- Check the direction of rotation of the inner drum during spinning. The inner drum should rotate as shown by the arrow on the drawing below. Check this point especially if you have changed the machine's motor or frequency converter.

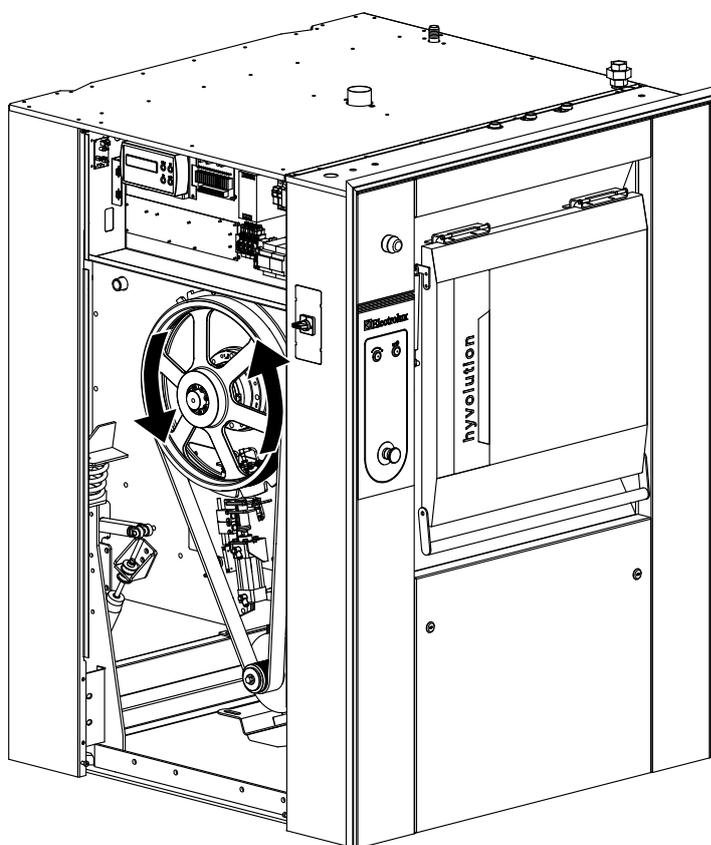

- Check the direction of rotation of the circulating pump and of the draught accelerator gas heating.



The exchangers of the gas heated machines have a water circulating pump. Before the first start of the machine, you must check if this pump is priming well. Therefore, it is necessary to fill the machine with water and to run only the circulating pump, without heating, by pushing, with an isolated screwdriver, on the manual control of the exchanger's KM3 contactor. To be sure that the pump is well primed (10 to 15 seconds), you must pay attention to a change in the running noise when the water goes through the circuit.

- Check that the inner drum is empty.
- Open the manual valves controlling the water and steam supplies (for steam heating machines).
- Operate the machine manually to fill with cold water, then hot water. Check that these water supplies are connected as they should be.
- Start the machine on wash action, and check that the motor is revolving alternately in the both ways, as normal for wash action.
- Start heating by programming a final temperature. Check that the steam valve opens or the heating element relay reacts, as appropriate.
- Check that the detergents container is working as they should.
- Check the water and steam connections and the drain valve for signs of any leakages.
- Empty the water from the machine and open its door.

Automatic operation

- Check that the external switch or switches are switched on and that the manual valves for water and steam (if the machine has steam heating) are open.
- Run one of the machine's built-in (standard) with heating.
- Check that the program proceeds normally, and the water filling, detergent filling, heating and motor action are all working in accordance with the program display on the display screen.

Final checking

If all function checks have been satisfactory, reassemble all protection casings.

24 Explanation of washing symbols

(ISO 3758:2005 standard)

To overcome language barriers, the following are symbols used internationally to give you guidance and recommendations when washing different textiles.

24.1 Washing

The tub symbolizes washing.

Symbols	Max. washing temperature in °C (°F)	Mechanical action
	95 (203)	normal
	95 (203)	mild
	70 (158)	normal
	60 (140)	normal
	60 (140)	mild
	50 (122)	normal
	50 (122)	mild
	40 (104)	normal
	40 (104)	mild
	40 (104)	very mild
	30 (86)	normal
	30 (86)	mild
	30 (86)	very mild
	40 (104)	wash by hand
	-	do not wash

24.2 Bleaching

The triangle symbolizes bleaching.

Symbols	Explanation
	Bleaching allowed (chlorine or oxygen).
	Bleaching allowed (only oxygen).
	Do not bleach.

24.3 Drying

The circle in a square symbolizes tumble drying.

Symbols	Explanation
	Can be put in a tumble dryer. Normal temperature.
	Can be put in a tumble dryer. Lower temperature.
	Do not put in a tumble dryer.

24.4 Ironing

The iron symbolizes the domestic ironing and pressing process.

Symbols	Explanation
	Max. temperature 200 °C.
	Max. temperature 150 °C.
	Max. temperature 110 °C. The steam can cause irreversible damages.
	Do not iron.

24.5 Dry or water cleaning

The circle symbolizes dry or water cleaning.

Symbols	Explanation
	Normal dry cleaning with perchloroethyl, solvent of hydrocarb.
	Mild dry cleaning with perchloroethyl, solvent of hydrocarb.
	Normal dry cleaning with solvent of hydrocarbon.

	Mild dry cleaning with solvent of hydrocarbon.
	Do not dry clean.
	Normal water cleaning.
	Mild water cleaning.
	Very mild water cleaning.

25 Conversion of measurement units

This following is a list of correspondences of the main frequency used units, to avoid the need to use measurement unit conversion table.

bar	1 bar = 100 000 Pa 1 bar = 1.019 7 kg/cm ² 1 bar = 750.06 mm Hg 1 bar = 10 197 mm H ₂ O 1 bar = 14.504 psi	British thermal unit	1 Btu = 1 055.06 J 1 Btu = 0.2521 kcal
calorie	1 cal = 4.185 5 J 1 cal = 10 ⁻⁶ th 1 kcal = 3.967 Btu 1 cal/h = 0.001 163 W 1 kcal/h = 1.163 W	Continental horse power	1 ch = 0.735 5 kW 1 ch = 0.987 0 HP
cubic foot	1 cu ft = 28 316 8 dm ³ 1 cu ft = 1 728 cu in	cubic inch	1 cu in = 16.387 1 dm ³
foot	1 ft = 304.8 mm 1 ft = 12 in	gallon (U.K.)	1 gal = 4.545 96 dm ³ or l 1 gal = 277.41 cu in
gallon (U.S.A.)	1 gal = 3.785 33 dm ³ or l 1 gal = 231 cu in	horse power	1 HP = 0.745 7 kW 1 HP = 1.013 9 ch
inch	1 in = 25.4 mm	joule	1 J = 0.000 277 8 Wh 1 J = 0.238 92 cal
kilogramme	1 kg = 2.205 62 lb	kg/cm²	1 kg/cm ² = 98 066.5 Pa 1 kg/cm ² = 0.980 665 bar 1 kg/cm ² = 10 000 mm H ₂ O 1 kg/cm ² = 735.557 6 mm Hg
pound	1 lb = 453.592 37 g	meter	1 m = 1.093 61 yd 1 m = 3.280 83 ft 1 m = 39.37 in
cubic meter	1 m ³ = 1 000 dm ³ 1 m ³ = 35.214 7 cu ft 1 dm ³ = 61.024 cu in 1 dm ³ = 0.035 3 cu ft	pascal	1 Pa = 1 N/m ² 1 Pa = 0.007 500 6 mm Hg 1 Pa = 0.101 97 mm H ₂ O 1 Pa = 0.010 197 g/cm ² 1 Pa = 0.000 145 psi 1 MPa = 10 bar
psi	1 psi = 0.068947 6 bar	thermie	1 th = 1 000 kcal 1 th = 10 ⁺⁶ cal 1 th = 4.185 5 x 10 ⁺⁶ J 1 th = 1.162 6 kWh 1 th = 3 967 Btu
watt	1 W = 1 J/s 1 W = 0.860 11 kcal/h	watt-hour	1 Wh = 3 600 J 1 kWh = 860 kcal
yard	1 yd = 0.914 4 m 1 yd = 3 ft 1 yd = 36 in	temperature degrees	0 °K = -273.16 °C 0 °C = 273.16 °K t °C = 5/9 (t °F-32) t °F = 1.8 t °C + 32



Electrolux Professional AB
341 80 Ljungby, Sweden
www.electroluxprofessional.com