


Instruction

WE170V, WE170P, TE1120

Pedestal



*Read the instruction in full
before starting work.
If anything is unclear or
incorrect, please contact
your local sales office or
service representative.*

1 How to install the stand on your washing machine



Warning



Do not install the stand on a washer/dryer column.



Caution



If the washing machine is already connected to the mains, proceed as follows:

1. pull out the plug from the mains socket;
2. stop water supply by closing the tap;
3. disconnect the inlet pipe and the drain pipe and get ready to collect any water left in the machine with a shallow basin.

With a brand new washing machine, do as follows:

1. install the stand before connecting the machine to water and electricity mains;
2. follow the instructions to remove any transport safety equipment.

Before you start installing the stand on your washing machine:

1. make sure you have plenty of room. Avoid working in restricted spaces as the installation and subsequent adjustment operations may turn out quite awkward and difficult to carry out;
2. take the stand out of its package and use the cardboard to rest washing machine and stand on, so you won't scratch the equipment varnish and the floor;
3. in the stands drawer you will find an envelope with all the necessary material for a correct assembly;
4. have ready a Phillips screwdriver to fit rear brackets to the stand.

The pack includes:

- 2 front rubber feet (for tumble dryer only);
- 4 rear metal brackets (2 for washing machine and 2 for tumble dryer);
- 6 self-tapping screws (4.2 x 13 mm);
- 1 key to adjust stand feet.

Note!

Before starting the installation, adjust the stand's feet in order to achieve a perfectly stable horizontal position.

1.1 To install the stand

1. Loosen the nuts using the key supplied with the stand.
2. Adjust the feet to allow for an uneven floor.
3. Tighten up all check nuts.

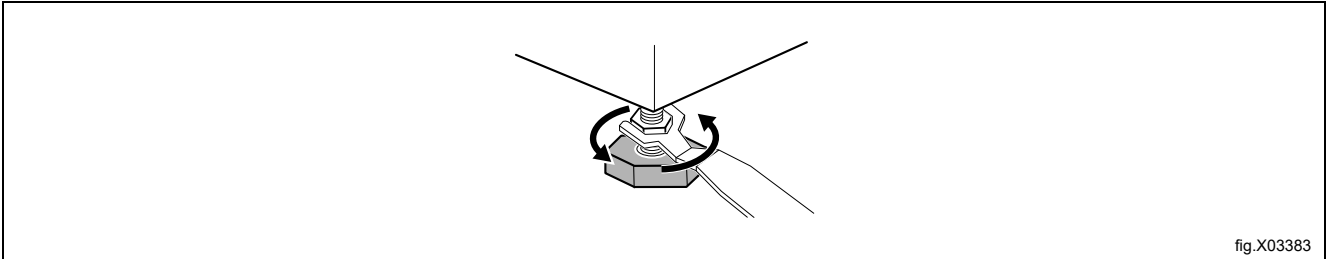


fig.X03383

4. Fit one of the rear brackets to the left side of the stands back using the screws supplied.

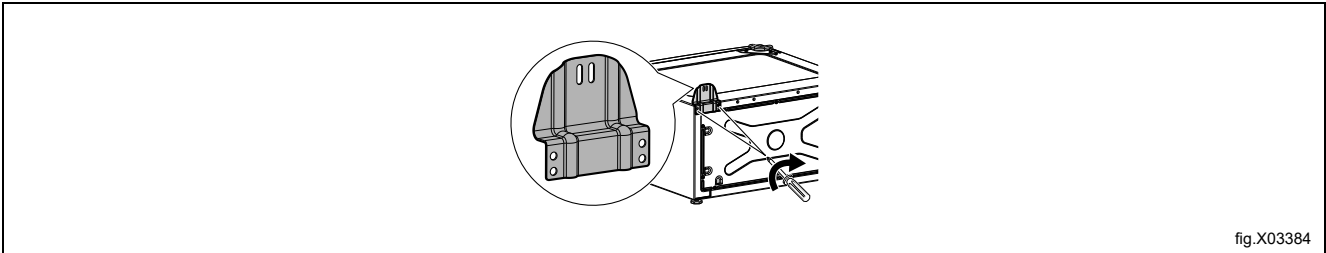


fig.X03384

5. Lay gently the washing machine on the detergent compartment side.
6. Loosen the washing machines adjusting feet using the key supplied with your washing machine, then undo 5 complete turns.

Note!

If the feet are already partly undone, you must first screw them on again and then undo 5 complete turns.

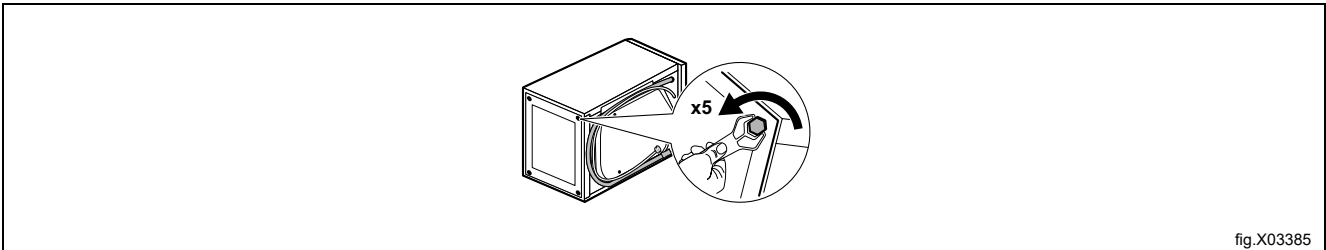


fig.X03385

7. Slide the stand under the washing machine so that its front adjusting feet match the stands front brackets and the rear bracket is positioned against the machines back.

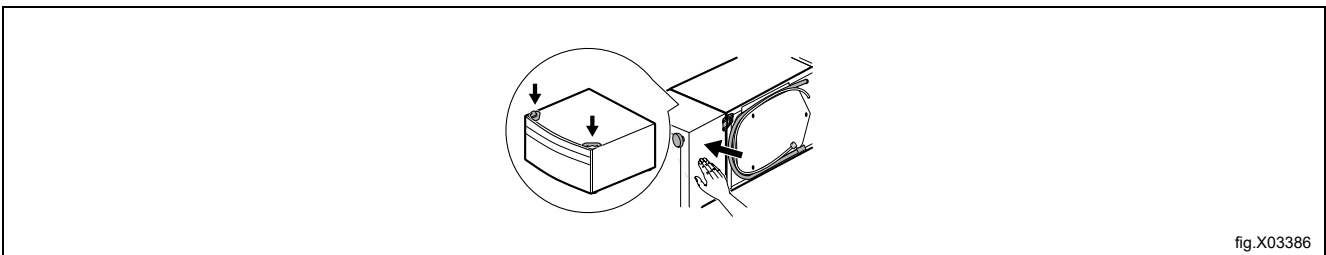


fig.X03386

8. Screw the rear bracket onto the machines back using one of the supplied screws.

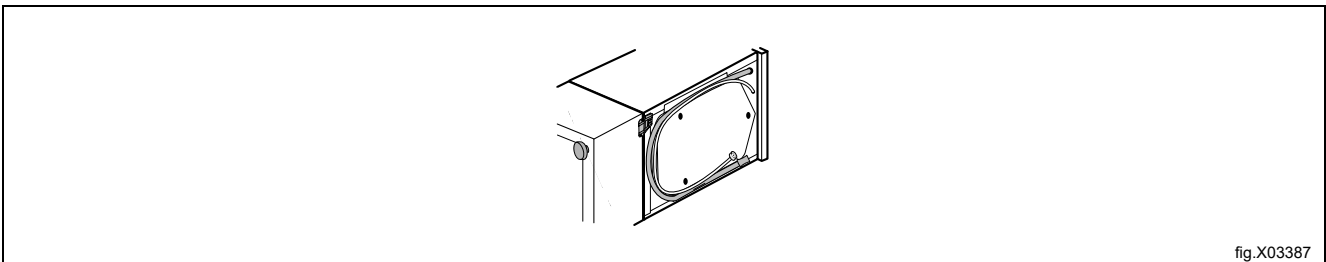


fig.X03387

9. Return machine and stand to a vertical position, and screw the other bracket onto the stand and the machines back using the remaining supplied screws.

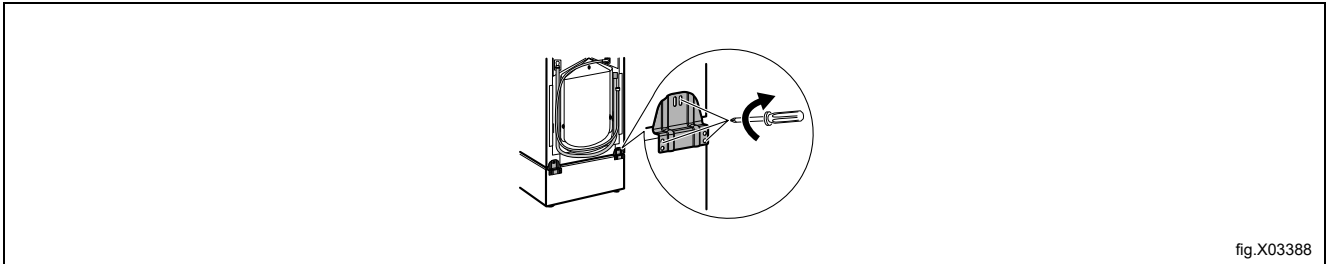


fig.X03388

10. The stand is now installed; check whether your washing machines back feet rest on it . Otherwise undo them using the key supplied with your washing machine.

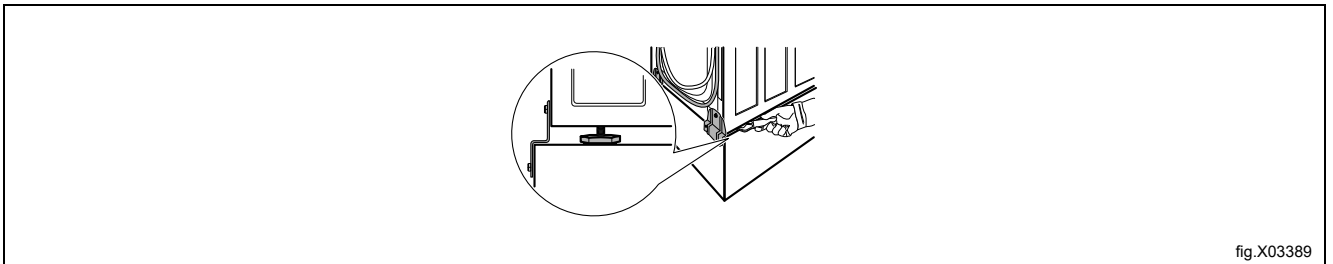


fig.X03389

11. The stands drawer, with a capacity of up to 20 kg, contains two dividers; they may be taken out if you wish. The drawer was designed with a special compartment inside where you can place a folding plastic box, supplied, quite useful to store your washing laundry.

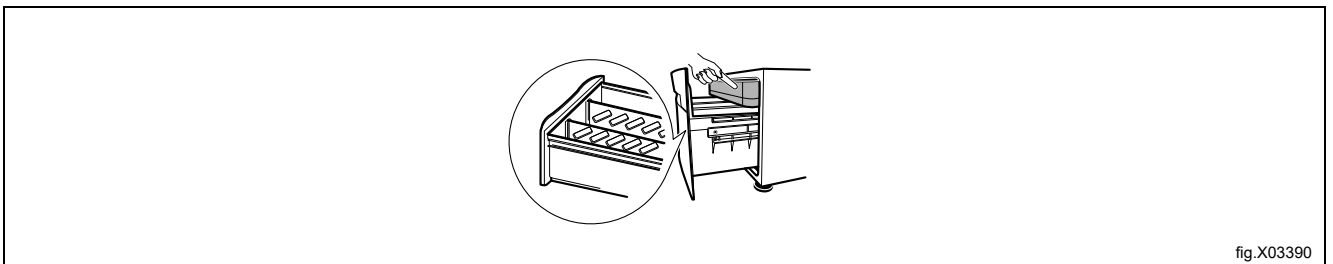


fig.X03390

12. The drawer slides on two metal runners and can easily be pulled out to the full. Should you wish to remove the drawer, you must pull it out completely and act on the two black plastic levers halfway through the metal runners. Pull the right lever up and the left lever down: the drawer will be uncoupled from the runners and easily removed.

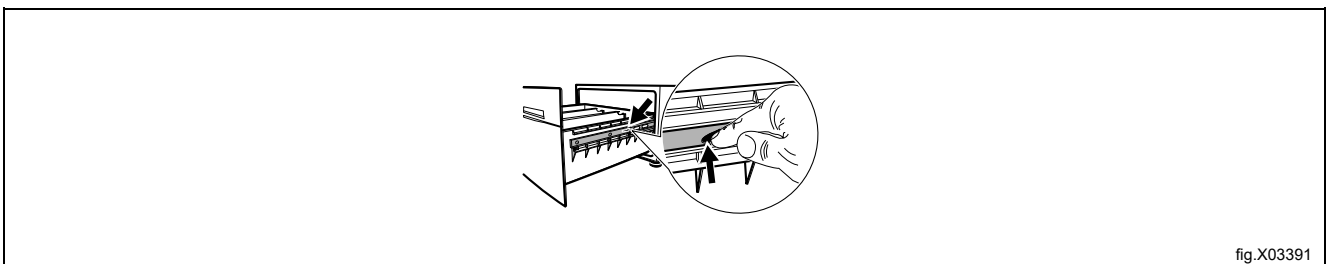


fig.X03391



Warning



Do not place any solvent or flammable substance into the drawer, as the fumes could be a possible cause of fire.

2 How to install the stand on your tumble dryer



Warning



Do not install the stand on a washer/dryer column.



Caution



If the tumble dryer is already connected to the mains, proceed as follows:

1. pull out the plug from the mains;
2. remove the condensation tank found in the upper or alternatively lower part of the tumble dryer (according to machine type) and empty it, if necessary;
3. drain off any condensation water through the hose found on the lower part of the machines back (see the below figure).

Place a mop on the floor and remove first the clamp (A) using a pair of pliers, then the cap (B). Tilt the machine slightly on one side. When all the water has drained off, put the cap back onto the hose and re-fasten the clamp.

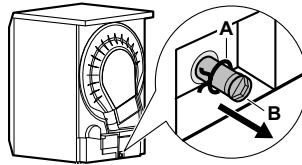


fig.X03392

With a brand new tumble dryer, do as follows:

1. install the stand before connecting the machine to the mains;
2. follow the instructions to remove any transport safety equipment.

Before you start fitting the stand to the machine:

1. make sure you have plenty of room. Avoid working in restricted spaces as the installation and subsequent adjustment operations may turn out quite awkward and difficult to carry out;
2. Take the stand out of its package and use the cardboard to rest machine and stand on, so you won't scratch the equipment varnish and the floor.
3. In the stand's drawer you will find an envelope with all the necessary material for a correct assembly.
4. Have ready a Phillips screwdriver to fit rear brackets to the stand and a Torx screwdriver to fit rear brackets to the machine's back.

The pack includes:

- 2 front rubber feet (for tumble dryer only);
- 4 rear metal brackets (2 for washing machine and 2 for tumble dryer);
- 6 self-tapping screws (4.2 x 13 mm);
- 1 key to adjust stand feet.

Note!

Before starting the installation, adjust the stand's feet in order to achieve a perfectly stable horizontal position.

2.1 To install the stand

1. Loosen the nuts using the key supplied with the stand.
2. Adjust the feet to allow for an uneven floor.
3. Tighten up all check nuts.

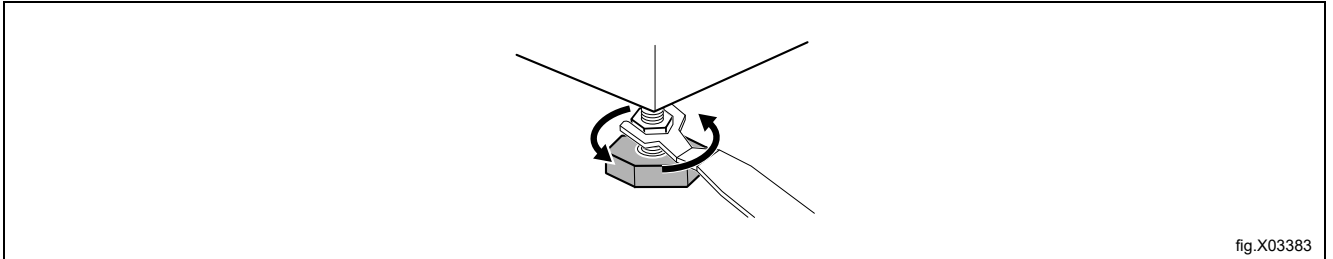


fig.X03383

4. Lay the machine on its left side, making sure you do not damage it. Remove the front feet and replace them with the rubber ones.
5. Tighten the back feet.

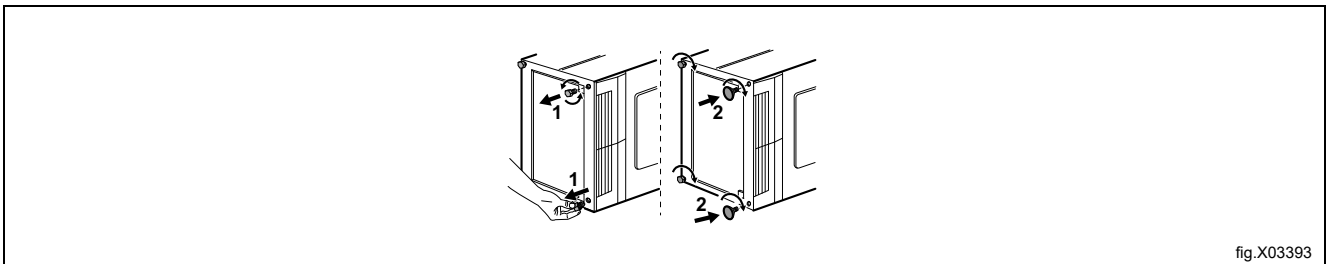


fig.X03393



Warning



If you install the stand under an energy saver model Class A, you must not use the tumble dryer immediately. Please wait 8 hours at least. For more detailed information, read the appliance user manual carefully.

6. After having removed the front brackets from the stand, fit the rear brackets to the stands back, using the screws supplied.

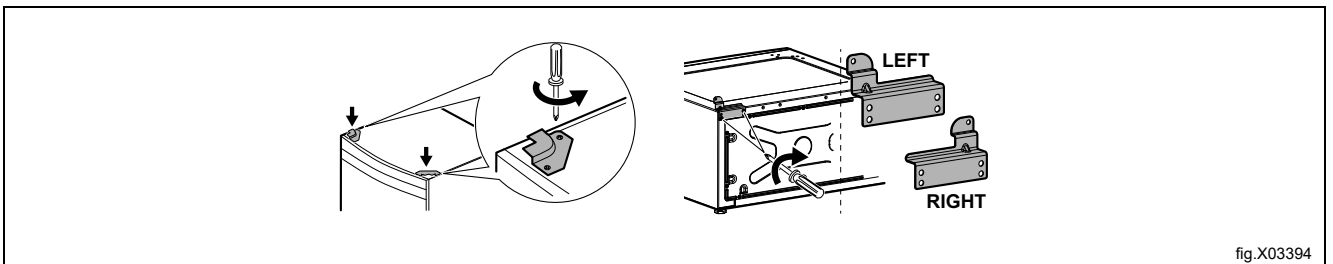


fig.X03394

7. Undo the two screws found left and right on the lower part of the tumble dryer back.

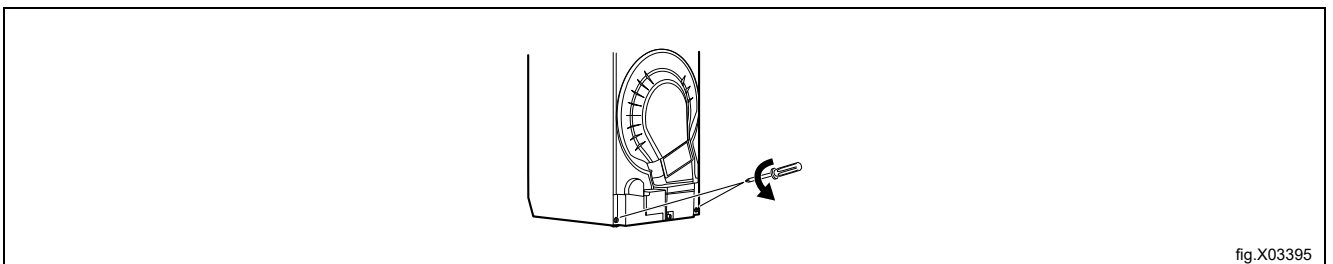


fig.X03395

8. Lift the machine and correctly place it over the stand, trying to position first the stand against the rear brackets and then the suction caps over the stand surface.

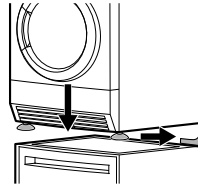


fig.X03396

9. Fit the rear brackets to the machines back using the previously removed screws.

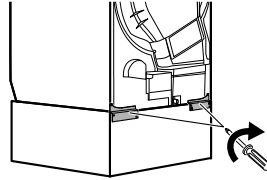


fig.X03397

10. The stands drawer, with a capacity of up to 20 kg, contains two dividers; they may be taken out if you wish. The drawer was designed with a special compartment inside where you can place a folding plastic box, supplied, quite useful to store your washing laundry.

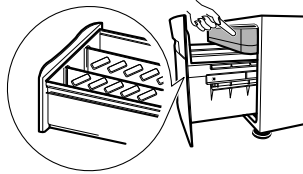 


fig.X03390

11. The drawer slides on two metal runners and can easily be pulled out to the full. Should you wish to remove the drawer, you must pull it out completely and act on the two black plastic levers halfway through the metal runners. Pull the right lever up and the left lever down: the drawer will be uncoupled from the runners and easily removed.

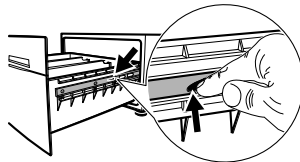


fig.X03391



Warning



Do not place any solvent or flammable substance into the drawer, as the fumes could be a possible cause of fire.



Electrolux Professional AB
341 80 Ljungby, Sweden
www.electroluxprofessional.com