

# User Manual Tumble Dryer

TE1120



**Electrolux**  
PROFESSIONAL

# CONTENTS

1. SAFETY INFORMATION.....	3
2. PRODUCT DESCRIPTION.....	9
3. ACCESSORIES.....	10
4. CONTROL PANEL.....	11
5. COIN OPERATED MACHINES.....	12
6. PROGRAMME TABLE.....	12
7. OPTIONS.....	13
8. BEFORE FIRST USE.....	14
9. DAILY USE.....	14
10. HINTS AND TIPS.....	16
11. CARE AND CLEANING.....	17
12. TROUBLESHOOTING.....	20
13. TECHNICAL DATA.....	21
14. PRODUCT INFORMATION SHEET ACCORDING TO UK ECODESIGN.....	22
15. ENVIRONMENTAL CONCERNS.....	24

## WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux Professional appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux Professional.

Visit our website [www.electroluxprofessional.com/mypro/](http://www.electroluxprofessional.com/mypro/) to:



Get usage advice, brochures, trouble shooter, service and repair information:



Register your product for better service:



Buy Accessories, Consumables and Original spare parts for your appliance:

## CUSTOMER CARE AND SERVICE

Always use original spare parts.

When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.

The information can be found on the rating plate.

 Warning / Caution-Safety information

 General information and tips

 Environmental information

Subject to change without notice.

## 1. ⚠ SAFETY INFORMATION

Before beginning the installation and use of this appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

### 1.1 Children and vulnerable people safety



WARNING!

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children between 3 and 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.
- Children of less than 3 years of age should be kept away from the appliance unless continuously supervised.
- Do not let children play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- Keep detergents away from children.
- Keep children and pets away from the appliance when the door is open.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

## 1.2 Installation

- This appliance is for household and commercial use.
- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not install or use the appliance where the temperature is less than 5°C or higher than 35°C.
- The floor area on which the appliance is to be installed must be flat, stable, heat resistant and clean.
- Make sure that there is air circulation between the appliance and the floor.
- Always keep the appliance vertical when it is being moved.
- Make sure that the appliance is stable during transportation.
- The appliance can be installed as freestanding or below the kitchen counter with correct space (Refer to the Installation leaflet).
- If the tumble dryer is put on top of a washing machine, use the stacking kit. The stacking kit, available from your authorized vendor, can be used only with the appliance specified in the instructions, supplied with the accessory. Read it carefully before installation (Refer to the Installation leaflet).
- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, that would prevent the appliance door from being fully open.
- Do not install the appliance in a moving platform (e.g. on a ship).
- The rear surface of the appliance must be put against the wall.

- When the appliance is in its permanent position, check if it is levelled correctly with the aid of a spirit level. If it is not, adjust the feet accordingly.
- Make sure that the appliance is disconnected from the electricity supply during installation, maintenance and repairs and cannot be reconnected until all work has been carried out.
- Connect the mains plug to the mains socket only at the end of the installation process. Make sure that the mains plug is accessible after installation.
- Ensure good air ventilation in the room where the appliance is installed to avoid the backflow of unwanted gases into the room from appliances burning gas or other fuels, including open fires.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from any appliances burning gas or other fuels.
- **WARNING:** Keep ventilation openings clear of obstruction in the appliance enclosure or in the built-in structure.
- The ventilation opening in the base must not be covered by a carpet, mat, or any floor covering.

### 1.3 Electrical connection



**WARNING!**

Risk of fire and electric shock.

- The appliance must be correctly earthed. The manufacturer is not responsible for the consequences of an inadequate earthing system.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Always use a correctly installed shockproof socket.

- Do not use multi-plug adapters and extension cables.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- This appliance is fitted with a 13 A mains plug. If it is necessary to change the mains plug fuse, use only a 13 A ASTA (BS 1362) fuse (UK and Ireland only).

## 1.4 Use



**WARNING!**

Risk of injury, electric shock, fire, burns or damage to the appliance.

- Obey the maximum load volume of 8kg (refer to the “Programme chart” chapter).
- Do not change the specification of the appliance.
- Do not use the appliance if items have been soiled with industrial chemicals.
- Wipe away lint or packaging debris that has accumulated around the appliance.
- Do not run the appliance without a filter. Clean the lint filter before or after each use.
- Do not dry unwashed items in the tumble dryer.
- **WARNING:** Do not damage the refrigerant circuit.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.

- Fabric softeners, or similar products, should only be used as specified by the product manufacturer's instructions.
- Remove all objects from items that could be a source of fire ignition such as lighters or matches.
- **WARNING:** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- Do not dry damaged (torn, frayed) items that contain padding or fillings.
- Dry only fabrics that are suitable to dry in the appliance. Follow the cleaning instruction on the item label.
- If laundry has been washed with a stain remover, carry out an additional rinse cycle before starting a drying cycle.
- Do not drink or prepare food with the condensed water/ distilled water. It can cause health problems to people and pets.
- Do not sit or stand on the open door of the appliance.
- Do not dry dripping wet clothes in the appliance.

## 1.5 Internal lighting



**WARNING!**  
Risk of injury.

- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.
- Visible LED radiation, do not look directly into the beam.

- To replace the internal lighting, contact the Authorised Service Centre.

## 1.6 Care and cleaning



WARNING!

Risk of injury or damage to the appliance.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

## 1.7 Service

- Only original spare parts can ensure the safety standards of the appliance.
- Only repairs undertaken by an Electrolux approved service technician are covered by the guarantee.

## 1.8 Disposal




WARNING!

Risk of injury or suffocation.

- Disconnect the appliance from the mains electrical and water supplies.
- Cut off the mains electrical cable close to the appliance and dispose of it.
- Remove the door catch to prevent children or pets from becoming trapped in the drum.



## 2. PRODUCT DESCRIPTION

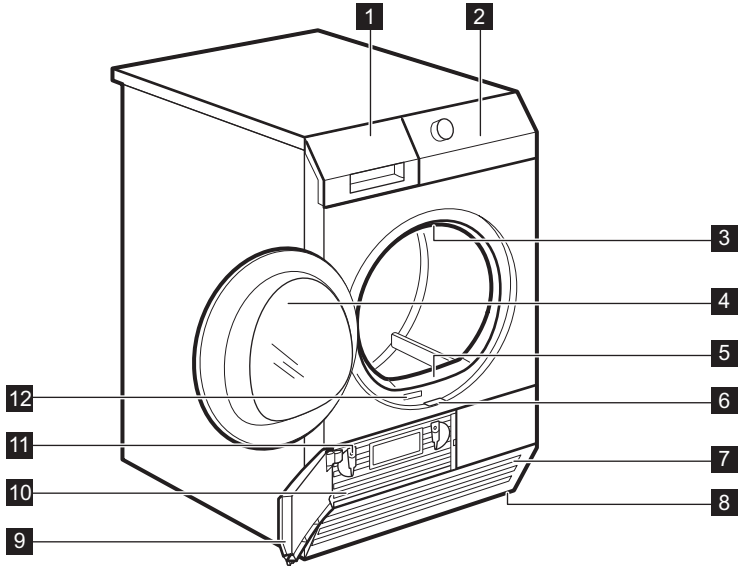


- |          |                           |           |                           |
|----------|---------------------------|-----------|---------------------------|
| <b>1</b> | Water container           | <b>8</b>  | Adjustable feet           |
| <b>2</b> | Control panel             | <b>9</b>  | Condenser door            |
| <b>3</b> | Internal light            | <b>10</b> | Condenser cover           |
| <b>4</b> | Appliance door            | <b>11</b> | Locks for condenser cover |
| <b>5</b> | Filter                    | <b>12</b> | Rating plate              |
| <b>6</b> | Button for condenser door |           |                           |
| <b>7</b> | Airflow slots             |           |                           |

**i** For ease of loading laundry or ease of installation the door is reversible. (see separate leaflet).


## 3. ACCESSORIES

### 3.1 Stacking kit

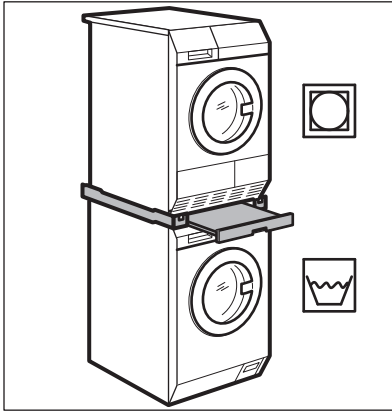

Available from your authorized vendor. Stacking kit can be used only with the washing machines specified in the leaflet. See the leaflet attached. Read carefully the instructions supplied with the accessory.

### 3.2 Draining kit

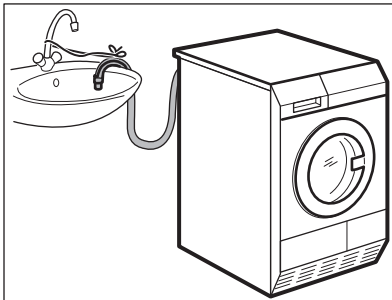

It is available from your authorized vendor (can be attached to some types of the tumble dryers)


The accessory for through draining of the condensed water into a basin, siphon, gully, etc. After the installation, the water container is drained automatically. The

water container must stay in the appliance.

The installed hose must be on the height from minimum of 50 cm to maximum of 1 m from floor level. The hose cannot be in loop. Decrease the length of the hose if necessary.

Read carefully the instructions supplied with the accessory.

### 3.3 Pedestal with the drawer

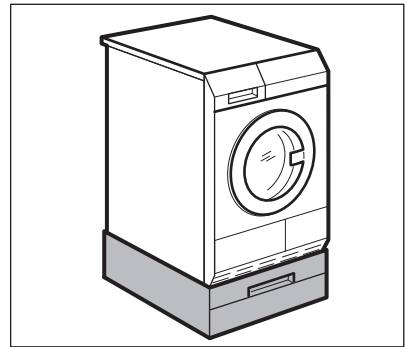


It is available from your authorized vendor.

To put the appliance higher at the level what helps to easy load and remove the laundry.

The drawer can be used for laundry storage e.g. : towels, cleaning products and more.

Read carefully the instructions supplied with the accessory.

### 3.4 Coin operated machine

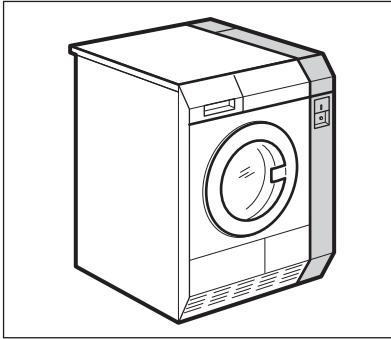


If the appliance is set in a public place, it can be connected to a coin operated machine.



Coin meter is distributed and installed only by the authorized Electrolux service.

## 4. CONTROL PANEL

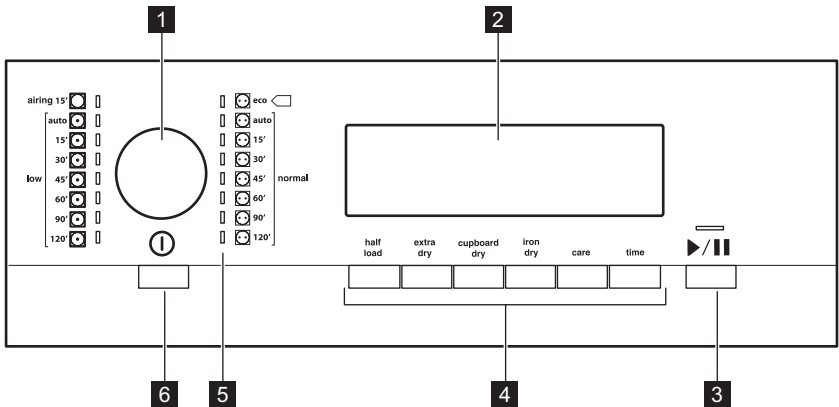

**1** Programme dial

**2** Display

**3** ▶/|| Start/Pause button











**4** Options buttons

**5** Programme indicators


**6** ① ON/OFF button with the Auto Off function

### 4.1 Display



Symbol on the display	Symbol description
<b>1/2</b>	half load
	dryness - extra dry
	dryness - cupboard dry
	dryness - iron dry
	indicator: <i>drain the water container</i>
	indicator: <i>clean filter</i>
	indicator: <i>do the check of the heat exchanger</i>
	indicator: <i>drying phase</i>
	indicator: <i>cooling phase</i>
	indicator: <i>crease guard phase</i>
	time dry option on
<b>2 . 00</b>	cycle time indication
<b>1 . 20</b>	time selection (5 min. steps)

## 5. COIN OPERATED MACHINES

1. Insert correct amount of coins. When inserting coins, the display on the coin meter will count down to: **00** and the machine will be ready to start.
2. Push  *Start/Pause* button to start the machine

## 6. PROGRAMME TABLE

There are two types of programmes, automatic programmes and time programmes.

Automatic programmes has moisture detection and will stop when selected dryness is achieved.

Time programmes has no moisture detection and will stop when the preset or selected time has ended.

The following table shows the available programmes and a short description of those:

Automatic programmes	Load <sup>1)</sup>	Description
Normal	8 kg	Cotton and terry. Normal/medium temperature. The programme will stop when preset dryness/selected option is achieved (Extra dry, Cupboard dry, Iron dry).
Low	3,5 kg	Synthetic (example of synthetic fabrics: polyester, polyamide, polyacrylic and elastan), viscose, polycotton and delicate fabrics. Low temperature. The programme will stop when preset dryness/selected option is achieved (Extra dry, Cupboard dry, Iron dry).
Special	8 kg	Cotton and terry - most efficient in terms of energy consumption. Normal/medium temperature. The programme will stop when preset dryness/selected option is achieved (Extra dry, Cupboard dry, Iron dry).

<sup>1)</sup> The maximum weight refers to dry items.

Time programmes	Description
Normal	Cotton and terry. Different drying times can be selected. The programme will stop when the time is up.
Low	Synthetic (example of synthetic fabrics: polyester, polyamide, polyacrylic and elastan), viscose, polycotton and delicate fabrics. Different drying times can be selected. The programme will stop when the time is up.
Airing	Airing bedspreads, duvets and bedclothes. The programme will stop when the time is up.

## 7. OPTIONS

### 7.1 Half load

Use this option if you dry half load of the laundry .

### 7.2 Extra dry

This option helps to get the laundry extra dried.

### 7.3 Cupboard dry

This option assure that the laundry after drying process is ready to store.

### 7.4 Iron dry

This option assure that the laundry after drying process is suitable to iron.

## 7.5 Care

Extends anti-crease phase (30 minutes) at the end of the drying cycle to 90 minutes. This option prevents laundry from creases. Laundry can be removed during the anti-crease phase.

## 7.6 Time

Lets the user to increase time of drying in 5 min. steps.

# 8. BEFORE FIRST USE

Before you use the appliance to dry items:

- Clean the tumble dryer drum with a moist cloth.

- Start a 1 hour programme with moist laundry.

# 9. DAILY USE

## 9.1 Preparing the laundry







Very often the clothes after washing cycle are kneaded and tangled altogether. Drying kneaded and tangled clothes is inefficient. To assure proper air flow and even drying it is recommended to shake and load one by one the clothes to the tumble dryer.

To assure proper drying process:

- Close the zips.
- Close the fasteners of duvet covers.
- Do not dry ties or ribbons loose (e.g. apron ribbons). Tie them before you start a programme.
- Remove all items from pockets.
- Turn items with the internal layer made of cotton inside out. Cotton layer must be faced outwards.

- Always set the programme suitable for the type of laundry.
- Do not put light and dark colours together.
- Use suitable programme for cottons, jersey and knitwear to reduce shrinkage.
- Do not exceed the maximum load stated in the programmes chapter or shown on the display.
- Dry only the laundry that is suitable for tumble drying. Refer to the fabric label on the items.
- Do not dry large and small items together. Small items can be trapped inside the large items and remain wet.
- Shake the large clothes, fabrics before placing in the tumble dryer. It is to avoid moist places inside the fabric after the drying cycle.


Fabric label	Description
	Laundry is suitable for tumble drying.
	Laundry is suitable for tumble drying at higher temperatures.
	Laundry is suitable for tumble drying at low temperatures only.
	Laundry is not suitable for tumble drying.

## 9.2 Loading the laundry




### CAUTION!

Ensure the laundry is not trapped between the appliance door and the rubber seal.

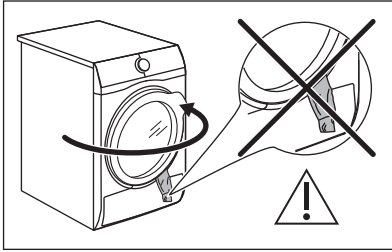

1. Pull open the appliance door.
2. Load the laundry one item at a time.
3. Close the appliance door.

## 9.3 Turning on the appliance

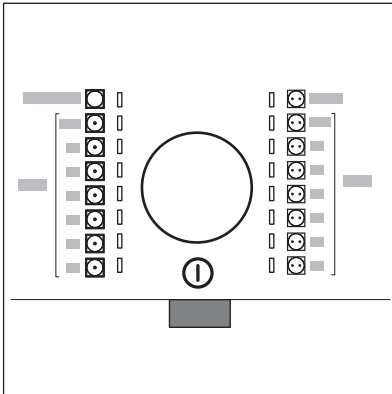

To turn on the appliance:

Push the ON/OFF button.

If the appliance is on, some indicators appear on the display.

## 9.4 Auto Off function


To decrease the energy consumption, the Auto Off function turns the appliance off automatically:

- if the Start/Pause touch button is not touched within 5 minutes.
- 5 minutes after a cycle ends.

Push the ON/OFF button to turn on the appliance.

If the appliance is on, some indications appear on the display.

## 9.5 Setting a programme

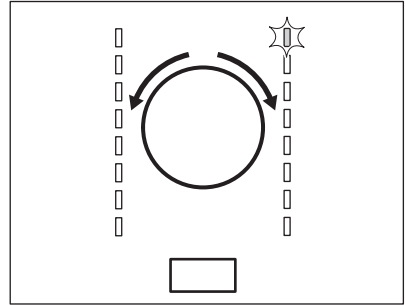


Use the programme dial to set the programme.

The time to the programme end comes into the view on the display.

## 9.6 Options


Together with the programme you can set 1 or more special options.

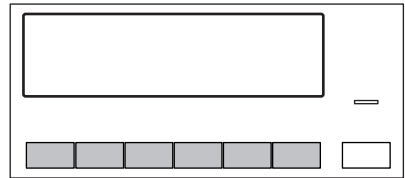

To activate or deactivate an option touch the relevant button or a two button combination.

its symbol appears on the display or the led above the corresponding button lights up.

## 9.7 Starting a program

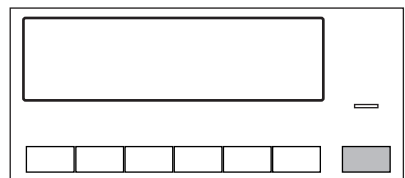

To start the program:

Touch the **Start/Pause** button.

The appliance starts and the LED above the button stops flashing and stays on.

## 9.8 Program change

To change a program:

1. Push the ON/OFF button to turn the appliance off.
2. Push the ON/OFF button again to turn on the appliance.
3. Set a new program.

## 9.9 Programme end



Clean the filter and drain the water container after each drying cycle. (See chapter CARE AND CLEANING.)

# 10. HINTS AND TIPS

## 10.1 Ecological hints


- Spin the laundry well before drying.
- Do not exceed the load sizes which are specified in the programmes chapter.
- Clean the filter after each drying cycle.
- Do not use fabric softener to wash and then dry. In the tumble dryer laundry becomes soft automatically.
- The water from the water container can be used to iron the clothes. You must first filter the water to eliminate remaining textile fibres (simple coffee filter is suitable).
- Always keep the airflow slots at the bottom of the appliance clear.
- Make sure there is good airflow where the appliance is to be installed.

## 10.2 Adjustment of the remaining laundry moisture degree

To change the default degree of the remaining moisture of the laundry:

1. Turn on the appliance.
2. Wait approximately 8 seconds.
3. Select 1 of available programmes.
4. Push at the same time and hold down the **Half load** and **Cupboard dry** buttons.


One of the symbols goes into the view on the display:

If the drying cycle is completed, the symbol  flashes on the display and the acoustic signal sounds intermittently for 1 minute.



If you do not turn off the appliance, the crease guard phase starts. Laundry can be removed during this phase.

To remove the laundry:

1. Push the  ON/OFF button for 2 seconds to turn off the appliance.
2. Open the appliance door.
3. Remove the laundry.
4. Close the appliance door.

 - the maximum dry laundry

 - the more dry laundry

 - the standard dry laundry

5. Push the  Start/Pause button again and again until you set necessary degree.
6. To memorise the setting, push at the same time the **Half load** and **Cupboard dry** buttons for approximately 2 seconds.



## 10.3 Deactivating the Reservoir indicator

*The water container indicator is by default on. It starts to light at the end of the drying cycle or during the cycle if the water reservoir is full. If the draining kit is installed the water container is drained automatically and indicator can be permanently off.*

To deactivate the indicator:



1. Turn on the appliance.
2. Wait approximately 8 seconds.
3. Select 1 of available programmes.
4. Push at the same time and hold down the **Half load** and **Iron dry** buttons.

One of 2 configurations is possible:

- the Reservoir indicator:  is on and the symbol  goes into




the view - the water container indicator is permanently on

- the Reservoir indicator:  is off and the symbol  goes into


the view - the water container indicator is permanently off


## 11. CARE AND CLEANING


### 11.1 Cleaning the filter

At the end of each cycle the symbol  *Filter* is on the display and you must clean the filter.

 The symbol  flashes on the display - the filter is missing. The tumble dryer cannot start.


 The filter collects the lint. The lint occurs while the clothes are dried in the tumble dryer.

 To achieve the best drying performances clean the filter regularly , clogged filter lead to longer cycles and energy consumption increase. Use your hand to clean the filter , and if necessary , a vacuum cleaner .


 **CAUTION!** Avoid the use of water to clean the filter. Instead throw away lint in the dustbin ( avoid dispersion of plastic fiber in water ambient).

To clean the filter:


1. Open the door. Pull the filter.

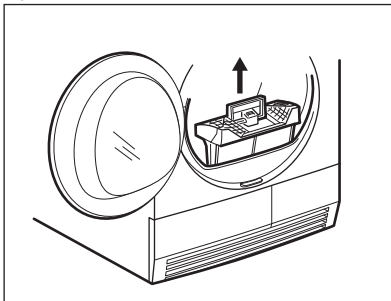


2. Push the button.

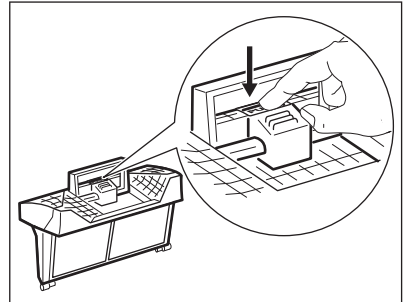

3. Open the filter.

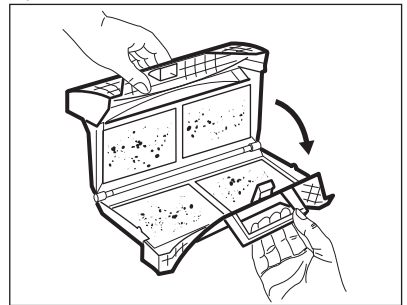


4. Gather lint with hand from internal parts of the filter.

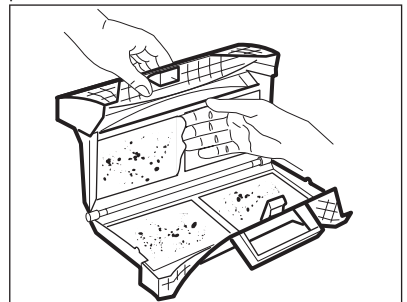


Throw the lint in the dustbin.

5. If necessary, clean the filter with a vacuum cleaner. Close the filter.
6. If necessary remove the lint from the filter socket and gasket. You can use a vacuum cleaner. Put the filter inside the filter socket.

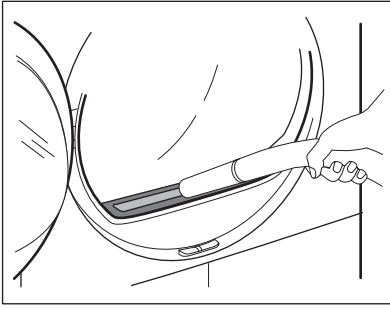


## 11.2 Emptying the water container

Empty the condensed water container after each drying cycle.


If the condensed water container is full, the programme stops automatically. The  *Reservoir* symbol comes on the display and you must empty the water container.

To empty the water container:

1. Pull the water container out keeping it in a horizontal position.

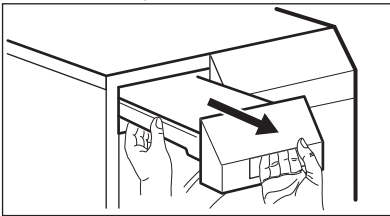


2. Pull the plastic connection out and drain the water into a basin or equivalent receptacle.

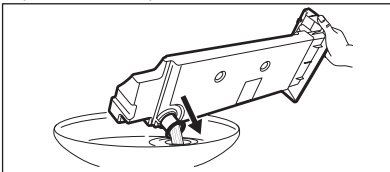


3. Push the plastic connection back in and place the water container back into position.
4. To continue the programme press the Start/Pause button.

## 11.3 Cleaning the condenser

 
If the symbol  *Condenser* flashes on the display, the condenser and its compartment must be cleaned.

To clean the condenser and its compartment:


1. Open the door.
2. Move the release button on the bottom of the door to open the condenser door.

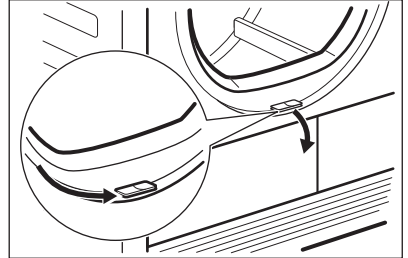


3. Turn 2 blockages to unlock the condenser cover.

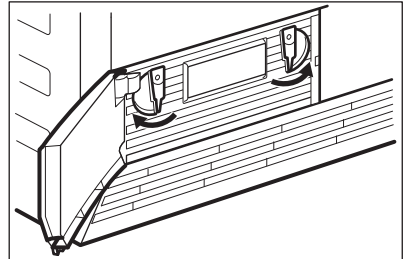


4. Lower the condenser cover.

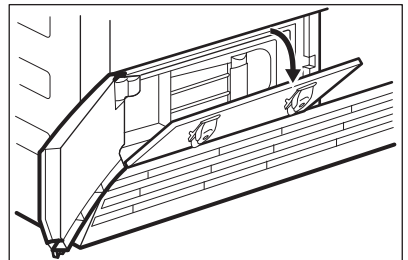

5. Catch the handle and pull the condenser out from the bottom compartment. Move condenser horizontally to do not spill remaining water.

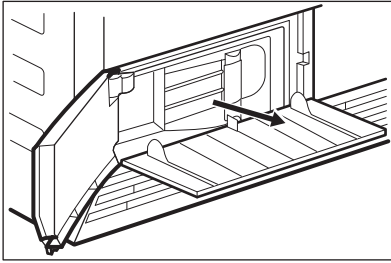

6. Clean the condenser in vertical position over a basin or paddling. Rinse through with a hand shower.

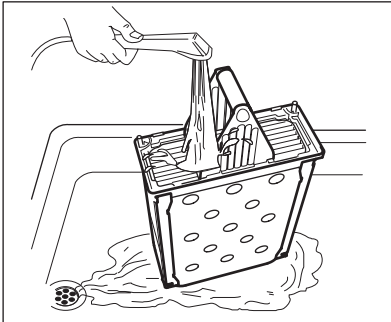

7. Put the condenser back inside the bottom compartment.  
8. Close the condenser cover.  
9. Lock 2 blockages until they snap.  
10. Close the condenser door.

### 11.4 Cleaning the humidity sensor



**CAUTION!**  
Risk of humidity sensor damage. Do not use abrasive materials or steel wool to clean the sensor.

To assure best drying results the appliance is equipped with metal humidity sensor. It is placed on the inner side of the door area.


Over usage time the surface of the sensor may get dirty which deteriorates the drying performance.

We recommend to clean the sensor at least 3 or 4 times or if you observe the drop of drying performance.

To clean you can use harder side of dish-washing sponge and bit of vinegar or dish soap.

To clean the sensor:

1. Open the loading door.
2. Clean the surfaces of the humidity sensor wiping off the metal surface several times.

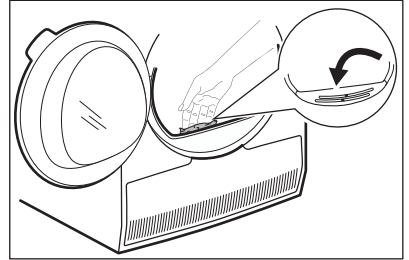

### 11.5 Cleaning the drum



**WARNING!**  
Disconnect the appliance before you clean it.

Use a standard neutral soap detergent to clean the inner surface of the drum and drum lifters. Dry the cleaned surfaces with a soft cloth.



**CAUTION!**  
Do not use abrasive materials or steel wool to clean the drum.

### 11.6 Cleaning the control panel and housing

Use a standard neutral soap detergent to clean the control panel and housing.

Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.











**CAUTION!**  
Do not use furniture cleaning agents or cleaning agents which can cause corrosion.

### 11.7 Cleaning the airflow slots


Use a vacuum cleaner to remove fluff from the airflow slots.

## 12. TROUBLESHOOTING

Problem 1)	Possible cause	Remedy
The tumble dryer does not operate.	The tumble dryer is not connected to mains supply.	Connect in at mains socket. Check fuse in fuse box (domestic installation).
	The loading door is opened.	Close the loading door.
	The  ON/OFF button was not pushed.	Push the  ON/OFF button.
	The  /  Start/Pause button was not pushed.	Push the  /  Start/Pause button.
	The appliance is in the standby mode.	Push the  ON/OFF button.
	The filter is missed or in wrong position.	Insert the filter in the right position.
	The E10 error code on the display - clogged filter.	Clean the filter. 2)
Unsatisfactory drying result.	The E59 error code on the display - dryer overloaded.	Unload part of the laundry. Obey the maximum load.
	Incorrect programme selection.	Do the selection of the applicable programme. 3)
	The EF0 error code on the display - filter abnormally dirty.	Clean the filter. 2)
	The filter is clogged.	Clean the filter. 2)
	Too high volume of the load.	Obey the maximum load volume.
	The airflow grill is clogged.	Clean the airflow grill in the bottom of the appliance.
	Dirt on the humidity sensor in the drum.	Clean the front surface of the drum.
	Incorrect remaining laundry moisture degree.	Adjust remaining laundry moisture degree. 4)
The condenser is clogged.	Clean the condenser. 2)	
The loading door does not closed	The filter not locked in the position.	Put the filter in the correct position.
	The laundry is locked between the door and the seal.	Put the load correctly in the drum.

Problem <sup>1)</sup>	Possible cause	Remedy
<i>Err</i> (Error) on the display.	You try to change the programme or the option after the start of the cycle.	Turn the tumble dryer off and on. Make the new selection.
	The option you try to activate is not applicable with the selected programme.	Turn the tumble dryer off and on. Make the new selection.
No drum light	Defective drum lamp.	Contact the service centre to replace the drum lamp.
Abnormally elapsing time on the display.	The time to end is calculated on the basis of the volume and dampness of the laundry.	The automatic procedure — this is not the appliance malfunction.
Programme inactive.	The water container is full.	Drain the water container, push the  <i>Start/Pause</i> button. <sup>2)</sup>
Drying cycle too short.	Too small laundry volume.	Do the selection of time programme. The time value must be related to the load. To dry 1 item or small quantities of the laundry we recommend to use short times.
	The laundry is too dry.	Do the selection of the time programme with longer time.
Drying cycle too long <sup>5)</sup>	The EFO error code on the display - filter abnormally dirty.	Clean the filter. <sup>2)</sup>
	The filter is clogged.	Clean the filter.
	Too high the laundry load.	Obey the maximum load.
	The laundry not spun sufficiently.	Spin correctly the laundry.
	Very high room temperature - this is not the appliance malfunction.	If possible, lower the room temperature.

<sup>1)</sup> If there is an error message on the display (e.g. E51): Turn the tumble dryer off and on.

Make a selection of the new programme. Push the  *Start/Pause* button. Does not operate? - contact the service centre and give the error code.

<sup>2)</sup> See the *CARE AND CLEANING* chapter.

<sup>3)</sup> Follow the programme description — see PROGRAMME TABLE

<sup>4)</sup> See HINTS AND TIPS chapter

<sup>5)</sup> Note: After maximum 5 hours the drying cycle ends automatically.

## 13. TECHNICAL DATA

Height x Width x Depth	850 x 600 x 605 mm (maximal 648 mm)
------------------------	-------------------------------------

Max. depth with the appliance door open	1072 mm
Max. width with the appliance door open	950 mm
Adjustable height	850 mm (+ 15 mm - feet regulation)
Drum volume	118 l
Maximum load volume	8 kg
Emission sound pressure level in accordance with EN ISO 11204/11203	67 dB
Voltage	230-240 V
Frequency	50 Hz
Necessary fuse	13 A
Total power	2800 W
Energy efficiency class	<b>B</b>
Energy consumption 1)	4,77 kWh
Annual energy consumption <sup>2)</sup>	560 kWh
Left—on mode power absorption	0,12 W
Off mode power absorption	0,12 W
Permitted ambient temperature	+ 5°C to + 35°C
Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture	<b>IPX4</b>

1) With reference to BS EN 61121. 8 kg of cotton centrifuged at 1000 rpm.

2) Energy consumption per year in kWh, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used (according to UK Ecodesign for Energy-Related Products and Energy Information Regulations).

## 14. PRODUCT INFORMATION SHEET ACCORDING TO UK ECODESIGN




PRODUCT INFORMATION SHEET ACCORDING TO UK ECODESIGN FOR ENERGY-RELATED PRODUCTS AND ENERGY INFORMATION REGULATIONS

Product Information Sheet	
Trade Mark	Electrolux Professional
Model	TE1120 PNC916097623
Rated capacity in kg	8
Air vented or condenser tumble dryer	Condenser
Energy efficiency class	B
Energy consumption in kWh per year, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.	560
Automatic tumble drier or non-automatic tumble drier	Automatic
Energy consumption of the standard cotton programme at full load in kWh	4,77
Energy consumption of the standard cotton programme at partial load in kWh	2,53
Power consumption of the off-mode in W	0,12
Power consumption in left-on mode in W	0,12
Duration of the left on mode in minutes	10
The 'standard cotton programme' used at full and partial load is the standard drying programme to which the information in the label and the fiche relates, this programme is suitable for drying normal wet cotton laundry and it is the most efficient programme in terms of energy consumption for cotton.	
Weighted programme time of the 'standard cotton programme at full and partial load' in minutes	97
Programme time of the 'standard cotton programme at full load' in minutes	130
Programme time of the 'standard cotton programme at partial load' in minutes	72
Condensation efficiency class on a scale from G (least efficient) to A (most efficient)	B
Average condensation efficiency of the standard cotton programme at full load as a percentage	85
Average condensation efficiency of the standard cotton programme at partial load as a percentage	85
Weighted condensation efficiency for the 'standard cotton programme at full and partial load'	85

Sound power level in dB	67
Built in appliance Y/N	No

The information given in the chart above is compliant with the UK Ecodesign for Energy-Related Products and Energy Information Regulations.

## 15. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do

not dispose of appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.











Electrolux Professional S.p.A.  
Viale Treviso, 15 -33170 Pordenone  
Italy

[www.electroluxprofessional.com/mypro/](http://www.electroluxprofessional.com/mypro/)