

Operating manual

Tumble dryers

T4900CR, T41200CR

Type N4...

Compass Control



Electrolux
PROFESSIONAL

Contents

Contents

Safety instructions	5
General.....	7
Control panel	7
Control knob.....	7
Display.....	8
Drying program	9
Drying functions	10
Start.....	10
Stop.....	10
Changing drying program after starting	10
Handling.....	11
Starting with control knob	11
Error codes.....	13
Maintenance.....	15

The manufacturer reserves the right to make changes to design and component specifications.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Children of less than 3 years should be kept away unless continuously supervised.

The machine is not to be used if industrial chemicals have been used for cleaning.

Do not dry unwashed items in the machine.

Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the machine.

Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the machine.

Fabric softeners or similar products should be used as specified by the fabric softener instructions.

The final part of a drying cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

Remove all objects from pockets such as lighters and matches.

WARNING. Never stop the machine before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Adequate ventilation has to be provided to avoid the back flow of gases into the room for appliances burning other fuels, including open fires.

Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.

The machine must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the machine in such a way that a full opening of the machine is restricted.

If the machine has a lint trap this has to be cleaned frequently.

The lint must not be accumulated around the machine.

DO NOT MODIFY THIS APPLIANCE.

Servicing shall be carried out only by authorized personnel.

Only authorized spare parts shall be used.

When performing service or replacing parts, the power must be disconnected.

In accordance with the wiring rules: mount a multi-pole switch prior to the machine to facilitate installation and service operations.

Gas heated tumble dryer:

Before installation, check that the local distribution conditions, nature of gas and pressure and the adjustment of the appliance are compatible.

The machine is not to be installed in rooms containing cleaning machines with perchloroethylene, TRICHLOROETHYLENE or CHLOROFLUOROCONTAINING HYDROCARBONS as cleaning agents.

CAUTION: This appliance shall not be installed where the public has access.




If you can smell gas:

- Do not switch on any equipment
- Do not use electrical switches
- Do not use telephones in the building
- Evacuate the room, building or area
- Contact the person responsible for the machine

CAUTION

In order to prevent damage to the electronics (and other parts) that may occur as the result of condensation, the machine should be placed in room temperature for 24 hours before being used for the first time.


Symbols

	Caution
	Caution, hot surface
	Read the instructions before using the machine

General

Control Panel



- 1 The control panel is used to choose the drying program with options and to start and stop the machine. The panel houses a control knob and a display.

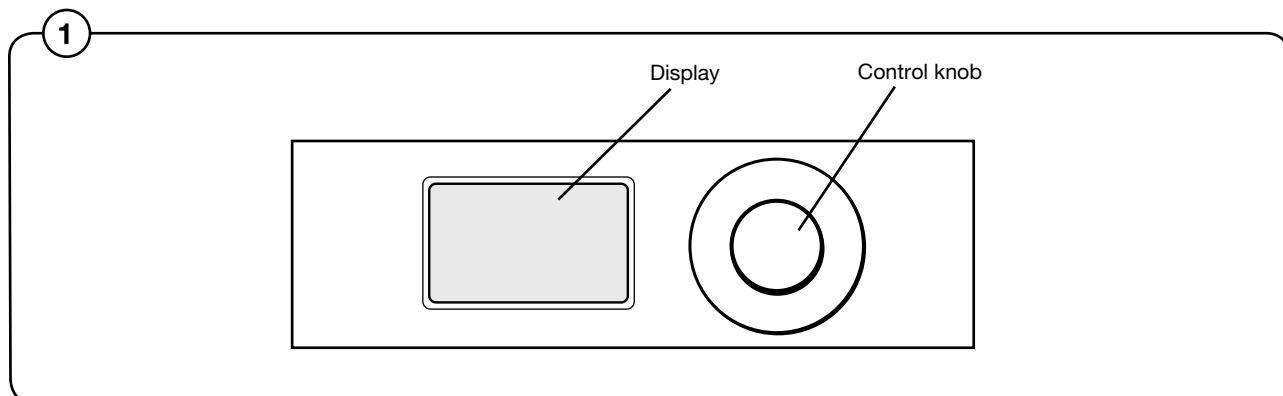

Control knob

The control knob is used to select drying program and any other available functions.

- 2 Turn the knob until the required program is shown on the display.
- 3 Confirm your choice by pushing in the knob.
Repeat this procedure until all the required functions have been chosen.

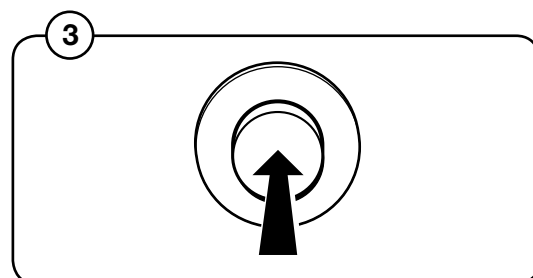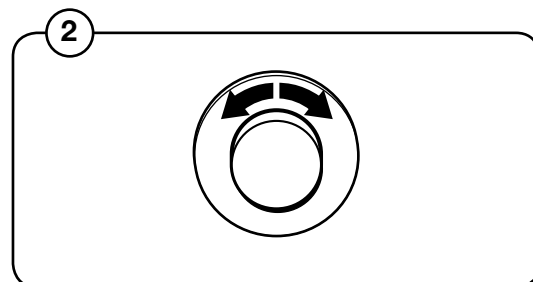


Display

- ④ The display presents the drying programs and additional functions. The up and down arrows on the right-hand side of the display indicate that there are more options available in the current menu. Turn the knob for next program.

Note!

If there is not enough room to show all the text on the display, the first part will be displayed briefly before the text scrolls to the side to display the second part. This sequence will be repeated as long the text in question is activated.



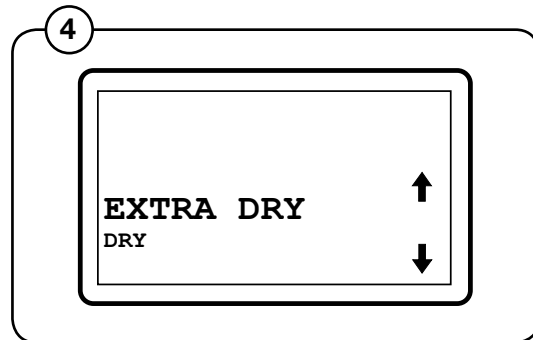


Drying Program

The machine is programmed with a number of programs adapted to the range of uses to which the machine is intended.

The following drying programs can be available:

- ① Drying program EXTRA DRY.
- ② Drying program DRY.
- ③ Time program X MINUTES. Duration depends on the selected time, up to 90 minutes.

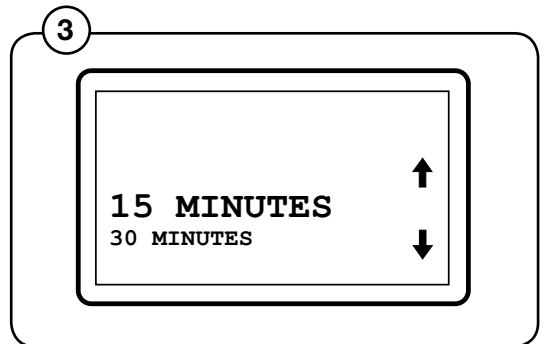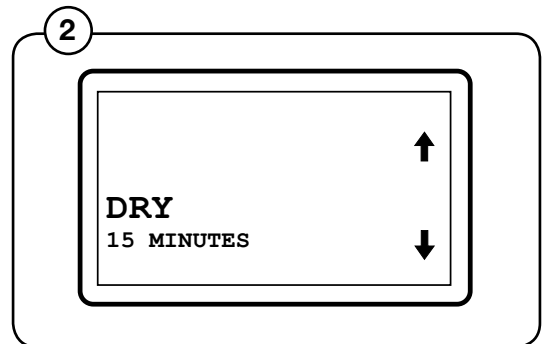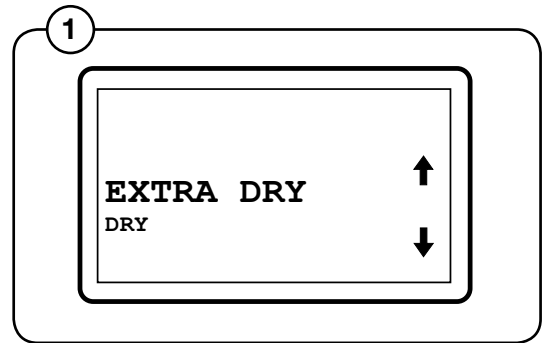

Drying Functions

START



- 1 Turn the control knob to the START row. Press the knob to start the selected program.

STOP

- 2 Press the control knob to stop the program. Restart the drying program by pressing the control knob again.

Changing drying program after starting




Press the control knob to stop the program. Turn the control knob to the new program and press.

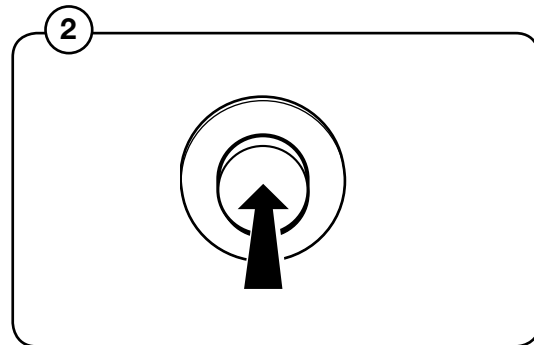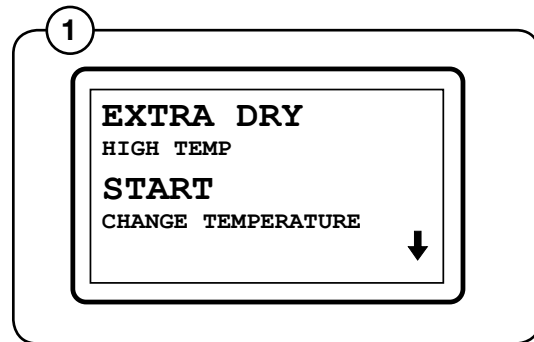

Handling

Starting with control knob


- ① • Select the desired drying program with the control knob and confirm by pressing the knob.
- ② • Turn knob clockwise to change drying temperature.
- ③ • Press knob and select desired temperature: HIGH (70 °C), MEDIUM (60 °C) or LOW (50 °C).
- Press knob to start.

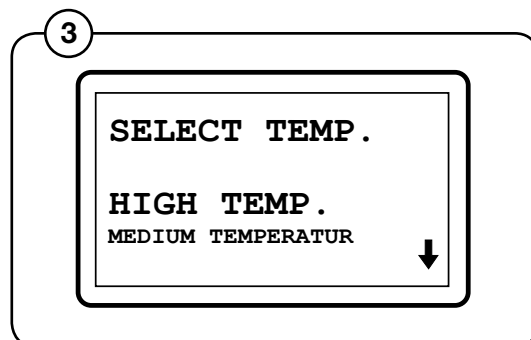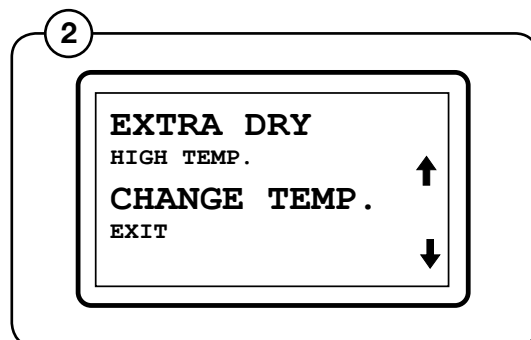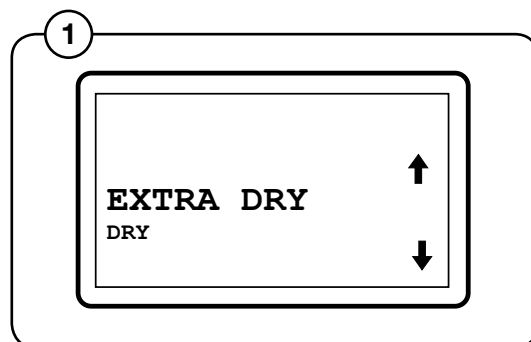

Error codes

- ① A fault in the program or in the machine is indicated by an error message comprising an error code and a descriptive text.

The drying program and the error code can be reset before restarting by holding in the knob for at least 10 seconds or turning off the power to the machine.

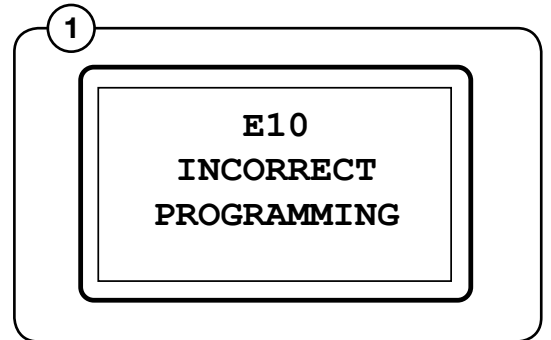

Code	Text	Cause/Action
E10	INCORRECT PROGRAMMING	Programming error/incorrect or missing parameter(s).
E12	DRYING ERROR WITH AUTOSTOP PROGRAM	Maximum allowable Autostop time exceeded
E15	NO VACUUM DETECTED	The vacuum switch/pressostat does not shut within 12 seconds after the dryer is started.
E27	HEPA FILTER PRESSURE WARNING	High pressure in Hepa filter. Replace filter.
E28	INPUT TEMPERATURE OSCILLATING	Internal temperature fluctuating. Warning: the heat has been on/off an unusual amount due to the intake air temperature having been too high. Check the air flow through the machine. Only applies to Clean Room dryers: Check that the prefilter and filter in the machine are not clogged. Replace or clean the filter.

For other error messages or repeated error messages, contact service personnel.

Maintenance

The following checks should be carried out regularly and as required, depending on the amount of use.

Daily

- Check that the machine stops when the door is opened.
- Check that the door seal is clean (clean with a damp cloth).

Every month

Clean the fan

- Remove the covers from the bottom section of the side plates and vacuum the compartment and fan intake.
- Check that the fall in pressure above the Hepa filter is not too great.

When the air resistance through the machine increases, the following occurs:

- Moderate air resistance
 - The fan speed increases
- High air resistance
 - The fan speed is high
 - The machine switches the heat on and off
- Very high air resistance
 - The fan speed is high
 - The machine switches the heat on and off
 - Error code E28 is triggered and the machine stops
 - If error code E27 is displayed during drying, the air resistance through the filter has been very high.

Every third month

Check that the following are not clogged by fluff or dust or blocked in any other way:

- The fresh-air intake on the rear of the machine.
- The area around the machine.
- The evacuation duct.
- The draught valve on the evacuation duct.
- The fresh-air intake to the room.

Check that the connections in the outflow system are airtight.



Skrotning av maskin

När maskinen inte längre skall användas måste den lämnas till en återvinningsstation för destruktion. Många detaljer i maskinen går att återanvända, men den innehåller även annat material som måste tas om hand på ett korrekt sätt. Lämna därför aldrig maskinen eller delar av maskinen i hushållsavfallet, eftersom det kan leda till hälsorisker eller skador på miljön.

Scrapping of machine

When the machine is no longer to be used, it must be submitted to a recycling facility for destruction. The majority of the components in the machine can be reused, but it also contains other material that must be taken care of in the correct way. Therefore, never mix the machine or its parts with domestic waste as this may lead to health hazards or damage to the environment.

Entsorgung des Geräts

Wenn das Gerät nicht länger im Gebrauch ist, muss dieses einer Recyclingstation zur Entsorgung zugeführt werden. Viele Komponenten des Geräts sind recyclingfähig, enthalten aber auch Materialien, die vorschriftsmäßig entsorgt werden müssen. Entsorgen Sie daher das Gerät oder Geräteteile niemals im Hausmüll, da dies Gefahren für die Gesundheit oder Umweltschäden nach sich ziehen kann.

Mise au rebut de machine

Lorsque la machine n'est plus utilisée, elle doit être déposée à une installation de recyclage pour y être détruite. La majorité des composants de la machine peuvent être réutilisés mais celle-ci contient également d'autres matériaux qui doivent être traités correctement. C'est pourquoi vous ne devez jamais mélanger la machine ou ses pièces avec les ordures ménagères, risque de pollution pour l'environnement ou la santé.

Desguace de la máquina

Cuando la máquina no tenga que utilizarse más, ha de entregarse a una instalación de destrucción para su reciclado. La mayor parte de sus componentes pueden volver a utilizarse, pero consta también de otros materiales que han de ser tratados de la manera correcta. Por esa razón nunca mezclar la máquina ni sus partes con la basura doméstica pues esto podría constituir un peligro para la salud o dañar el medio ambiente.

Bortskaffelse af maskinen

Når maskinen ikke længere er i brug, skal den afleveres til destruktion på en genbrugsstation. Mange dele i maskinen kan genanvendes, men den indeholder også andre materialer, der skal håndteres korrekt. Smid derfor ikke maskinen eller dele af den ud sammen med husholdningens almindelige affald, da det kan være forbundet med sundhedsrisiko eller give miljøskader.

Koneen hävittäminen

Kun koneita ei enää käytetä, se pitää luovuttaa kierrätyskeskukseen tuhottavaksi. Suurinta osaa koneen osista voidaan käyttää uudelleen, mutta se sisältää myös materiaaleja, jotka pitää käsitellä asianmukaisesti. Älä sen vuoksi koskaan laita koneita tai sen osia kotitalousjätteen sekaan, sillä se saattaa aiheuttaa terveysriskejä tai vahinkoa ympäristölle.

Skrotning av maskin

Når maskinen ikke lenger skal brukes, må den leveres til en gjenvinningsstasjon for destruksjon. Det går an å gjenbruke mange deler av maskinen, men den inneholder også annet materiale som man må ta hånd om på riktig måte. Legg derfor aldri maskinen eller deler av maskinen i husholdningsavfallet, siden det kan føre til helse- eller miljøskader.

Afdanken van de machine

Als de machine niet langer gebruikt gaat worden, moet deze ter vernietiging worden aangeboden bij een recyclinginrichting. De meeste componenten van de machine kunnen worden hergebruikt, maar hij bevat ook ander materiaal dat op een juiste wijze moet worden behandeld. Daarom de machine of zijn onderdelen nooit bij het huisvuil zetten, want dat kan leiden tot gezondheidsrisico's of schade aan het milieu.

Rottamazione della macchina

Quando la macchina non può più essere utilizzata, deve essere affidata a un centro di riciclaggio che ne effettui la rottamazione. La maggior parte dei componenti della macchina sono riciclabili, ma ce ne sono anche alcuni che devono essere smaltiti in modo appropriato. Perciò, non mischiare mai la macchina o parti di essa con i normali rifiuti domestici, poiché ciò potrebbe comportare rischi per la salute o per l'ambiente.

Złomowanie maszyny

Wycofaną z użytkowania maszynę należy przekazać do zakładu utylizacji w celu złomowania. Większość podzespołów maszyny nadaje się do powtórnego wykorzystania, lecz zawiera ona także inne materiały, z którymi należy postępować w odpowiedni sposób. Z tego powodu niedozwolone jest łączenie maszyny lub jej części z odpadami domowymi, gdyż może to prowadzić do zagrożenia zdrowia lub szkody dla środowiska.

Vyřazení přístroje

Přístroj, který již nebude používán, by měl být odevzdán k likvidaci do ekodvora. Většina součástí přístroje může být opětovně použita, některé ale vyžadují likvidaci přesně daným způsobem. A proto nikdy nemíchejte dohromady přístroje nebo jejich části s domácím odpadem, mohlo by to vést ke zdravotním rizikům nebo k poškození životního prostředí.

Οριστική απόσυρση μηχανήματος

Όταν το μηχάνημα δεν προορίζεται για περαιτέρω χρήση, θα πρέπει να οδηγείται σε εγκατάσταση ανακύκλωσης για καταστροφή. Το μεγαλύτερο ποσοστό των εξαρτημάτων του μηχανήματος μπορεί να χρησιμοποιηθεί ξανά, αλλά το μηχάνημα περιλαμβάνει και άλλα υλικά η διαλογή των οποίων θα πρέπει να πραγματοποιείται με τον κατάλληλο τρόπο. Κατά συνέπεια, μην αναμειγνύετε ποτέ το μηχάνημα ή τα εξαρτήματά του με οικιακά απορρίμματα καθώς αυτό μπορεί να αποβεί επικίνδυνο για την υγεία ή επιβλαβές για το περιβάλλον.



Electrolux Professional AB
341 80 Ljungby, Sweden
www.electroluxprofessional.com