

User manual

Tumble dryer

TD7–8, TD7–8LAC
Type N1...



Electrolux
PROFESSIONAL

Contents

Contents

1	Safety Precautions	5
1.1	Additional safety precautions for gas heated tumble dryer	7
1.2	General information	7
1.3	Commercial use only	7
1.4	Copyright	7
1.5	Ergonomics certification	7
1.6	Symbols	8
2	Warranty terms and exclusions	9
3	Energy saving hints and tips	10
3.1	Before drying	10
3.2	Energy consumption	10
4	Handling	11
4.1	Load	11
4.2	How to start the machine	13
4.2.1	Select program and option	13
4.2.1.1	Programs	14
4.2.2	Programs for lagoon	17
4.2.3	Options	18
4.2.4	Coin operated machines	19
4.3	When program has ended	19
4.3.1	Clean the filter	19
4.3.2	Clean the second filter — Only for machines with heat pump	20
5	Error codes	21
6	Maintenance	24
6.1	General	24
6.2	Time for maintenance	24
6.3	Every day	24
6.4	Machines with moisture measurement (RMC)	25
6.5	Machines with heat pump	26
6.5.1	Second lint filter	26
6.5.1.1	To clean the second filter	26
7	Disposal information	27
7.1	Appliance recyclability and disposal	27
7.1.1	Recyclability	27
7.1.2	Procedure regarding appliance disposal and component / material recovery	27
7.2	Disposal of packing	27

The manufacturer reserves the right to make changes to design and component specifications.

1 Safety Precautions

- Servicing shall be carried out only by authorized personnel.
- Only authorized spare parts, accessories and consumables shall be used.
- The machine is not to be used if industrial chemicals have been used for cleaning.
- Do not dry unwashed items in the machine.
- **WARNING:** Items that have been soiled with substances such as hair care products, cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers shall be cleaned sufficiently to remove the contaminant before being tumble dried. When washing such soiled items ensure the use of detergent as specified by the detergent manufacturer and select the highest suitable temperature. If in doubt, wash the items several times.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the machine.
- Fabric softeners or similar products should be used as specified by the fabric softener instructions.
- The final part of a drying cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- Remove all objects from pockets such as lighters and matches.
- **WARNING.** Never stop the machine before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Adequate ventilation has to be provided to avoid the back flow of gases into the room for appliances burning other fuels, including open fires.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
- The machine must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the machine in such a way that a full opening of the machine is restricted.
- If the machine has a lint trap this has to be cleaned frequently.
- The lint must not be accumulated around the machine.
- **DO NOT MODIFY THIS APPLIANCE.**
- When performing service or replacing parts, the power must be disconnected.
- When the power is disconnected, the operator must see that the machine is disconnected (that the plug is removed and remains removed) from any point to which he has access. If this is not possible, due to the construction or installation of the machine, a disconnection with a locking system in the isolated position shall be provided.
- In accordance with the wiring rules: mount a multi-pole switch prior to the machine to facilitate installation and service operations.
- **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- If different rated voltages or different rated frequencies (separated by a /) are stated at the machine data plate, instructions for adjusting the appliance for operation at the required rated voltage or rated frequency are stated in the installation manual.
- Stationary appliances not fitted with means for disconnection from the supply mains having a contact separation in all poles that provide full disconnection under

overvoltage category III, means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.

- The openings in the base, shall not be obstructed by a carpet.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
- Maximum mass of dry cloth: 8.0 kg (for gas heated tumble dryers).
- Maximum mass of dry cloth: 9.0 kg (for heat pump and electric heated tumble dryers).
- A-weighted emission sound pressure level at working stations: 70 dB(A).
- The tumble dryer can be placed on top of a washer extractor or another tumble dryer (WP7–6, WP7–7, WP7–8, TD7–8).
- Additional requirements for the following countries; AT, BE, BG, HR, CY, CZ, DK, EE, FI, FR, DE, GR, HU, IS, IE, IT, LV, LT, LU, MT, NL, NO, PL, PT, RO, SK, SI, ES, SE, CH, TR, UK:
 - The appliance can be used in public areas.
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
 - Children of less than 3 years should be kept away unless continuously supervised.
- Additional requirements for other countries:
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

1.1 Additional safety precautions for gas heated tumble dryer

- Before installation, check that the local distribution conditions, nature of gas and pressure and the adjustment of the appliance are compatible.
- The machine is not to be installed in rooms containing cleaning machines with perchloroethylene, TRICHLOROETHYLENE or CHLOROFLUOROCONTAINING HYDROCARBONS as cleaning agents.
- NOTE: it is pointed out that the connection and commissioning of appliances complying with this standard are subject to observance of the installation regulations in force in the countries where these appliances are marketed.
- Connection to the appliance shall be made with a flexible hose suitable for the appliance category in accordance with national installation regulations of the country of destination and that in case of doubt the installer shall contact the supplier.
- The appliance should be installed on non-flammable materials for the floor, worktop and/or wall close to the appliance if required.
- If you can smell gas:
 - Do not switch on any equipment
 - Do not use electrical switches
 - Do not use telephones in the building
 - Evacuate the room, building or area
 - Contact the person responsible for the machine

1.2 General information

Conditions for storage and transportation of the appliance should fulfil a temperature between -20°C / + 70°C and max Humidity of 95% RH.

In order to prevent damage to the electronics (and other parts) that may occur as the result of condensation, the machine should be placed in room temperature for 24 hours before being used for the first time.

Electric power supply should follow:

- Max range for each country rated voltage: -15% / +10%.
- Max range for each country rated frequency: ± 3 Hz.
- Dips/Interruption: 5 Dips/day (100% voltage lost, with 3-4 minutes duration).

A stable power supply is always the best. Fluctuations gives stress and additional load on all electric and electronic components.

1.3 Commercial use only

The machine/machines covered by this manual is/are made for commercial and industrial use only.

1.4 Copyright

This manual is intended solely for consultation by the operator and can only be given to third parties with the permission of Electrolux Professional AB company.

1.5 Ergonomics certification

The human body is designed for movement and activity but physical stress injuries as a result of static and repetitive movements or unfavorable working postures may occur.

The ergonomic features of your product, the ones which may influence your physical and cognitive interaction with it, have been assessed and certified.

A product which exhibits ergonomic features, in fact, shall fulfil specific ergonomic requirements, belonging to three different areas: Polytechnic, Biomedical and Psychosocial (usability and satisfaction).

For each of these areas, specific tests with real users have been performed. The product was therefore compliant with the ergonomic acceptability criteria requested by the standards.

In case several machines are managed by the same operator the repetitive movements will increase and as a consequence of this the related biomechanical risk will increase exponentially.

The possible postural risks are the interaction with the door handle both in case the machine is placed directly on the floor without a base and in case the machine is placed on top of a washing machine.

Follow the below recommendations to avoid, as much as possible, operators acquiring bodily injury.

- Place the machine on a base instead of directly on the floor so that the operator does not need to bend his/her back unnecessarily when loading and unloading.
Minimum suggested height of bases is 300 mm.
- Move the control panel to the lower position in case the machine is placed on top of a washing machine.
- Make sure there are suitable trolleys or baskets for loading, unloading and transportation.
- Organize job rotation in the working place in the case several machines are managed by the same operator.

1.6 Symbols

	Caution
	Caution, hot surface
	Caution, high voltage
	Warning, risk of fire / flammable material
	Danger, crush hazard
	Read the instructions before using the machine

2 Warranty terms and exclusions

If the purchase of this product includes warranty coverage, warranty is provided in line with local regulations and subject to the product being installed and used for the purposes as designed, and as described within the appropriate equipment documentation.

Warranty will be applicable where the customer has used only genuine spare parts and has performed maintenance in accordance with Electrolux Professional AB user and maintenance documentation made available in paper or electronic format.

Electrolux Professional AB strongly recommends using Electrolux Professional AB approved cleaning, rinse and descaling agents to obtain optimal results and maintain product efficiency over time.

The Electrolux Professional AB warranty does not cover:

- service trips cost to deliver and pick up the product;
- installation;
- training on how to use/operate;
- replacement (and/or supply) of wear and tear parts unless resulting from defects in materials or workmanship reported within one (1) week from the failure;
- correction of external wiring;
- correction of unauthorized repairs as well as any damages, failures and inefficiencies caused by and/or resulting from;
 - insufficient and/or abnormal capacity of the electrical systems (current/voltage/frequency, including spikes and/or outages);
 - inadequate or interrupted water supply, steam, air, gas (including impurities and/or other that does not comply with the technical requirements for each appliance);
 - plumbing parts, components or consumable cleaning products that are not approved by the manufacturer;
 - customer's negligence, misuse, abuse and/or non-compliance with the use and care instructions detailed within the appropriate equipment documentation;
 - improper or poor: installation, repair, maintenance (including tampering, modifications and repairs carried out by third parties not authorized third parties) and modification of safety systems;
 - Use of non-original components (e.g.: consumables, wear and tear, or spare parts);
 - environment conditions provoking thermal (e.g. overheating/freezing) or chemical (e.g. corrosion/oxidation) stress;
 - foreign objects placed in- or connected to- the product;
 - accidents or force majeure;
 - transportation and handling, including scratches, dents, chips, and/or other damage to the finish of the product, unless such damage results from defects in materials or workmanship and is reported within one (1) week of delivery unless otherwise agreed;
- product with original serial numbers that have been removed, altered or cannot be readily determined;
- replacement of light bulbs, filters or any consumable parts;
- any accessories and software not approved or specified by Electrolux Professional AB.

Warranty does not include scheduled maintenance activities (including the parts required for it) or the supply of cleaning agents unless specifically covered within any local agreement, subject to local terms and conditions.

Check on Electrolux Professional AB website the list of authorized customer care.

3 Energy saving hints and tips

3.1 Before drying

- Spin the textiles in the washer extractor at the highest spin speed suitable for the textile type before placing it in the tumble dryer. The lower the remaining moisture content of the textiles, the shorter the drying time and the lower the energy consumption.
- Sort textiles by fabric type, thickness and garment size whenever possible. Drying similar items together improves drying uniformity and can reduce unnecessary drying time.
- Use the correct amount of detergent during washing. Excess detergent may leave residues on the textiles and contribute to build-up on the lifters, filters and air passages, reducing drying performance and increasing energy consumption.

3.2 Energy consumption

- For the best energy efficiency, load the tumble dryer close to the recommended load for the selected program. Do not exceed the maximum load capacity, as excessive loading can increase drying time and reduce drying performance.
- Select the ECO program whenever available. ECO programs are designed to minimise energy consumption while still achieving the intended drying result.
- Clean the lint filter(s) after each drying cycle, or as instructed in this manual. Clean filters ensure unrestricted airflow, shorter drying times and optimal energy performance.
- To maintain optimal energy performance throughout the product lifetime, keep the dryer's airflow system clean and unobstructed. Regularly remove lint and debris from air paths, internal airflow components, air inlets and air outlets as described in this manual. **Cleaning of internal airflow components that are not accessible to the user shall be carried out by a qualified service technician.**
- For exhaust tumble dryers, the exhaust duct and air outlet should be cleaned regularly to maintain optimal airflow, drying performance and energy efficiency. **Cleaning of exhaust ducts or components requiring disassembly shall be performed by a qualified service technician.**
- Install the tumble dryer according to the installation instructions. Correct installation is essential for achieving optimal drying performance and energy efficiency. **Installation and adjustment work shall be carried out by a qualified and authorised service technician where required by local regulations.**
- Remove the textiles soon after the program has finished. This minimises operation of the anti-crease function and avoids unnecessary energy consumption.

4 Handling

4.1 Load

Note!

Remove all objects from pockets and make sure there are no metal objects such as screws, pins etc. left. Metal objects might cause damage to the drum.

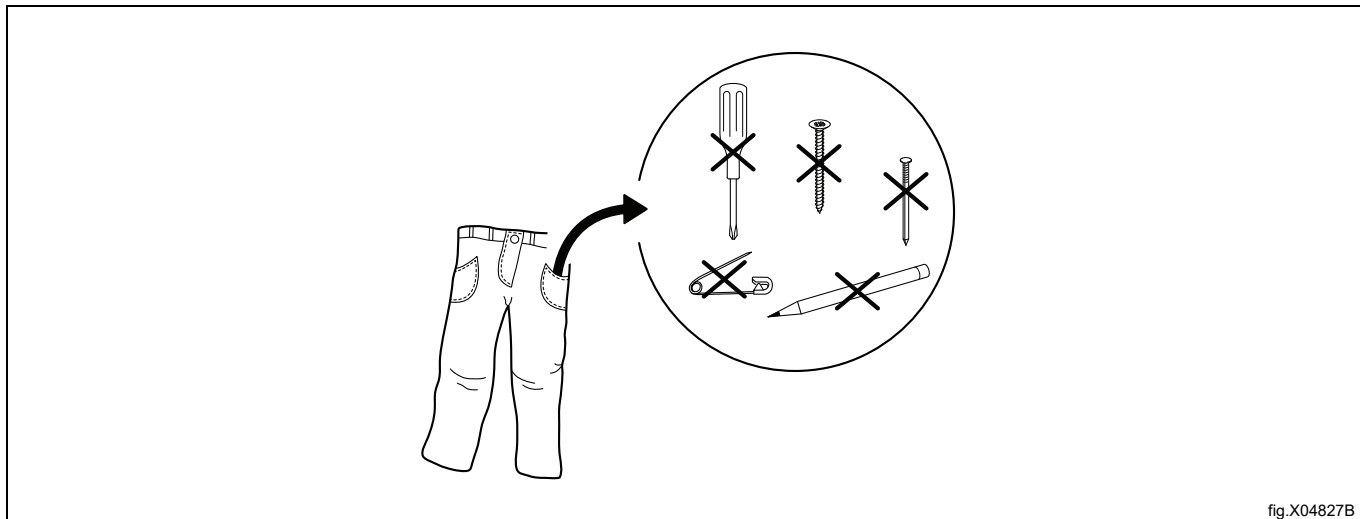


fig.X04827B

Make sure the filter is clean.

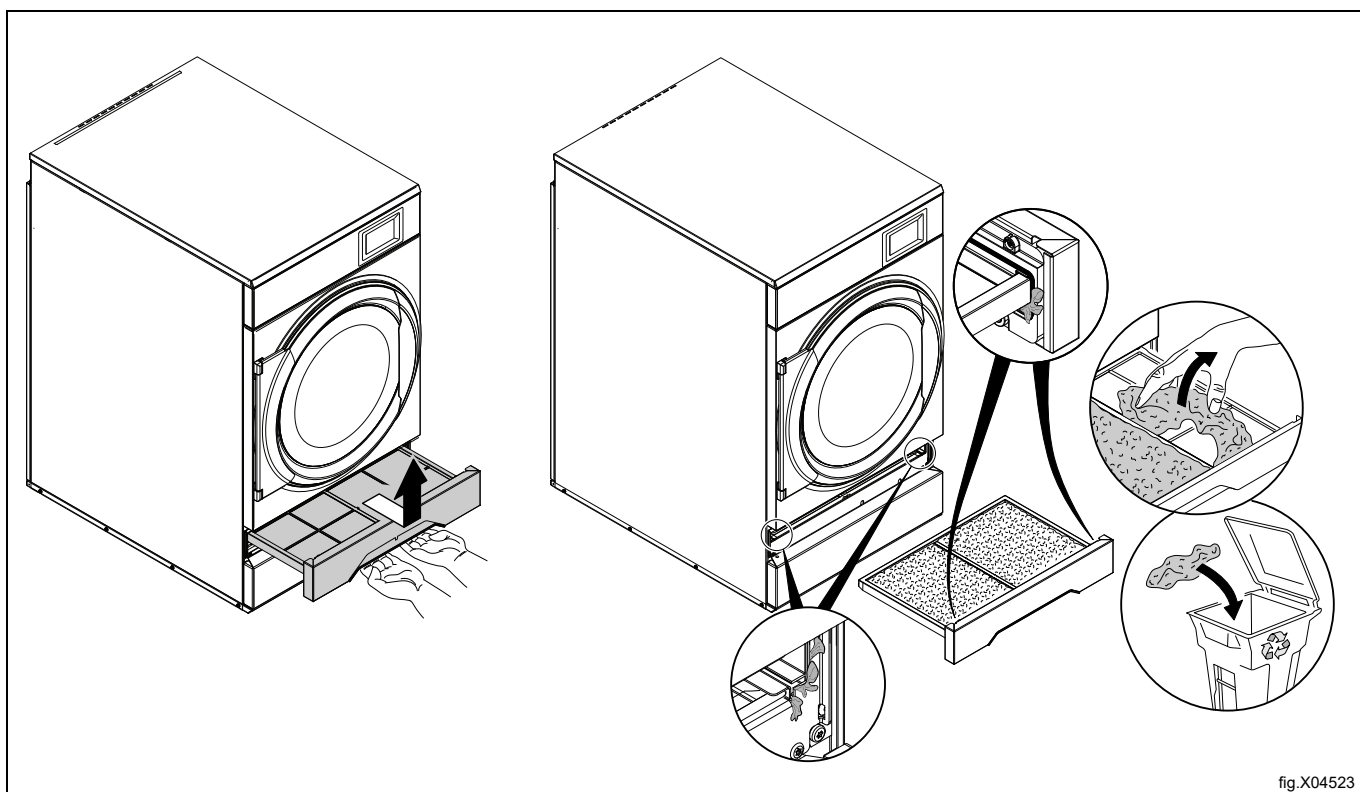


fig.X04523

Load the goods into the machine and close the door.
The recommended maximum load is 7.5 kg.

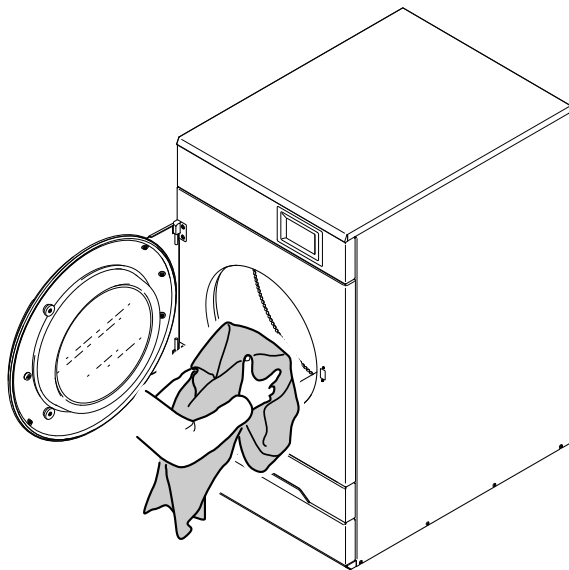


fig.X04535

4.2 How to start the machine

4.2.1 Select program and option

Select a program from the list.

Depending on machine set up the programs can be displayed in different ways. The following illustrations show some examples.

Press the Information icon ⓘ next to the program icon to get more information about that program.

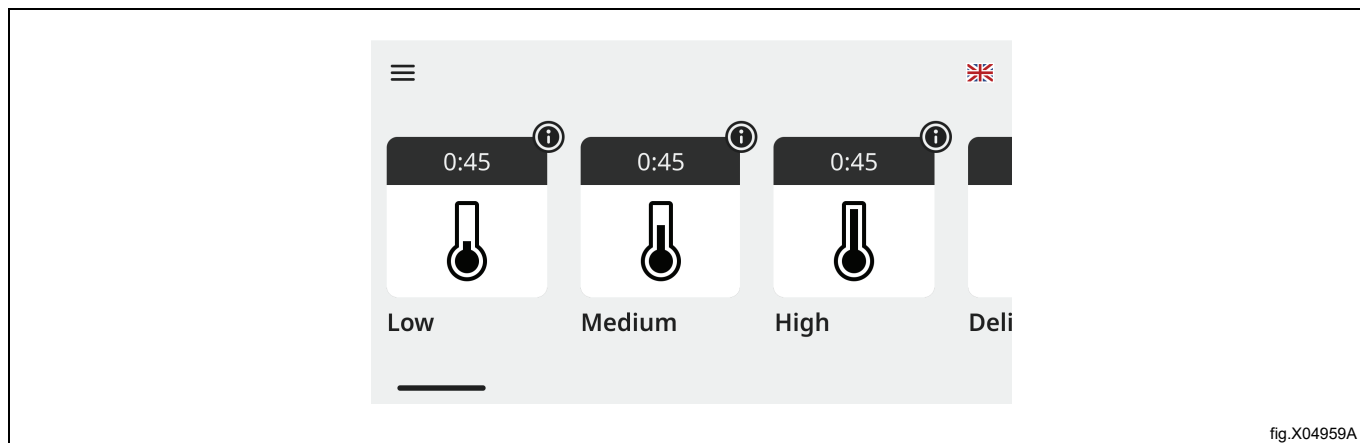


fig.X04959A

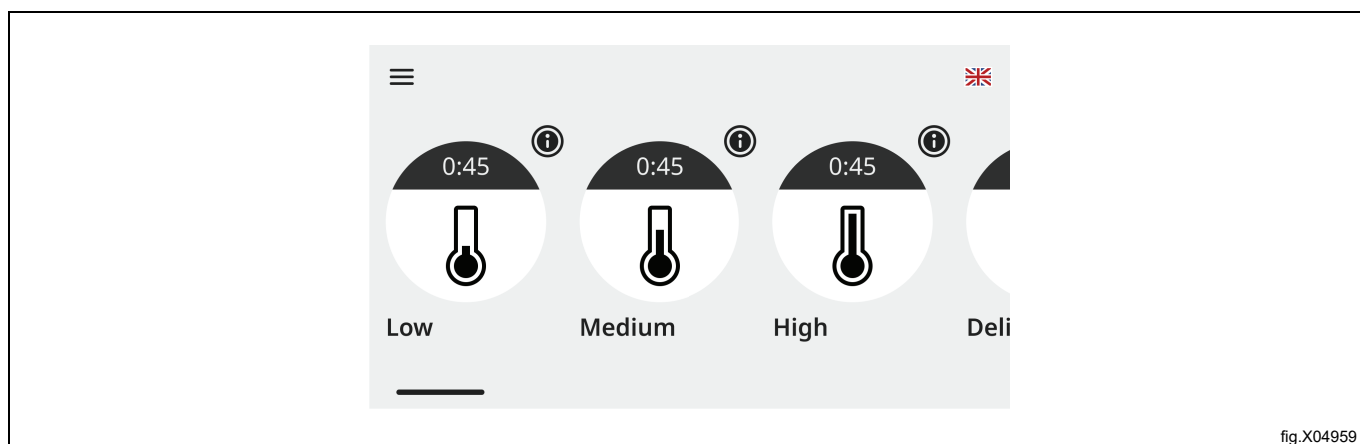


fig.X04959

In the list view, you can quickly see the main parameters of the program, such as the calculated program duration.

When a program is selected, a start screen is displayed. The appearance of this screen depends on the selections made in the installation wizard and the settings menu.

- Before program start
The program duration is displayed either as the estimated cycle time or as the estimated cycle time together with the expected completion time, depending on the intended application and the market requirements.
- After program start
The program duration is displayed as the estimated cycle time remaining until program completion and is continuously updated based on the actual program process.
- It is possible to set a delayed start, depending on the intended application and market requirements.
 - Tap the date/time field and select the desired finish time. Confirm by pressing the start button.
 - The start button will blink until the program begins.
 - If the door is opened before the program starts, the delayed start function will be cancelled. To start the program before the delayed start activates, tap Start again.

4.2.1.1 Programs

The machine is equipped with a number of programs adapted to the range of use to which the machine is intended — different markets use different programs. The following program description is a short description of some examples of programs that can be used.

Note!

For the best drying results, dry garments of the same fabric type together in each drying cycle.

There are two types of programs, automatic programs and time programs.

- Automatic programs have moisture detection and will stop when selected dryness is achieved.
- Time programs have no moisture detection and will stop when the preset or selected time has ended.

The listed options in the following table are the pre-selected options. The pre-selected options can however be changed before start.

Automatic programs

Program name	Explanation	Option
Normal Auto	Normal temperature. Stops automatically when clothes are extra dry. For fabrics that handle normal to high heat, such as cotton, denim and terry.	Extra dry
Low Auto	Low temperature. Stops automatically when clothes are extra dry. For delicate and synthetic fabrics like polyester, viscose and poly cotton.	Extra dry
Normal ECO Auto	Normal temperature. Energy-saving cycle; may influence drying time. Stops when clothes are extra dry. For normal- to high-heat fabrics, like cotton, denim and terry.	Extra dry
Low ECO Auto	Low temperature. Energy-saving cycle; may influence drying time. Stops when clothes are extra dry. For delicate fabrics like polyester, viscose and poly cotton.	Extra dry
Large items Auto	Normal temperature. Stops automatically when fabric is dry. For large items like sheets, tablecloths and curtains. Prevents tangling. For normal to high heat fabrics.	Normal
Large items Auto	Low temperature. Stops automatically when fabric is dry. For large items like sheets, tablecloths and curtains. Prevents tangling. For delicate and synthetic fabrics.	
Small load Auto	Normal temperature. Stops when fabric is dry. For small loads. For fabrics that handle normal to high heat.	Normal
Small load Auto	Low temperature. Stops when fabric is dry. For small loads. For delicate and synthetic fabrics.	
Sensitive Auto	Low temperature. Suitable for delicate fabrics and man-made fibers like polyester and polyamide, as well as natural fibres such as silk.	
Mops Auto	Low temperature. Stops when mops are dry. Suitable for synthetic microfiber mops.	
Cloths Auto	Low temperature. Stops when cloths are dry. Suitable for synthetic microfiber cloths.	
Disinfection Auto	Stops when disinfection is complete. For electric or gas dryers only. <ul style="list-style-type: none"> • Max half load. • Do not stop early. • Ensure load is dry and not tangled. • First use wash disinfection program! 	

Time programs

Program name	Explanation
Normal Time	Normal temperature. Set drying time manually; stops when time ends. For fabrics that handle normal to high heat, such as cotton, denim and terry.
Low Time	Low temperature. Set drying time manually; stops when time ends. For delicate and synthetic fabrics like polyester, viscose and poly cotton, and “tumble dry low”.
Normal ECO Time	Normal temperature. Energy-saving cycle; may require longer drying time. Stops when time ends. For delicate fabrics like polyester, viscose, poly cotton and “tumble dry low”.
Low ECO Time	Low temperature. Energy-saving cycle; may require longer drying time. Stops when time ends. For delicate fabrics like polyester, viscose, poly cotton and “tumble dry low”.
Down Time	Low temperature. Set drying time based on garment type to get desired dryness. Ideal for items like duvet jackets, duvets and pillows.
Wool Time	Normal temperature. Stops before clothes are fully dry to protect fabrics. Gentle program for wool items like blankets and jackets.
Airing Time	Airing program. Airs items like bedspreads, duvets and bedding. Set drying time manually; program stops when time ends.

Coin programs

Program name	Explanation
High Time	High temperature. Set drying time manually; stops when time ends. For fabrics that handle high heat, such as denim and terry.
Medium Time	Medium temperature. Set drying time manually; stops when time ends. For fabrics that handle medium heat, such as cotton and terry.
Low Time	Low temperature. Set drying time manually; stops when time ends. For delicate and synthetic fabrics like polyester, viscose and poly cotton, and “tumble dry low”.
Airing Time	Airing program. Airs items like bedspreads, duvets and bedding. Set drying time manually; program stops when time ends.

4.2.2 Programs for lagoon

Program name	Explanation
Wool high	Wool program. For wool coats, jumpers, suit jackets and trousers. Stops automatically when the selected dryness level is reached.
Wool medium	Wool program. For wool suit jackets and skirts. Stops automatically when the selected dryness level is reached.
Silk	Delicate program. For silk and viscose dresses. Stops automatically when the selected dryness level is reached.
Synthetic mix Medium	Mixed fabrics program. For cotton suits, linen suits, raincoats and cotton blends. Stops automatically when the selected dryness level is reached.
Synthetic mix Low	Delicate program. For synthetic fur and mixed fabrics with viscose or polyester. Stops automatically when the selected dryness level is reached.
Ties	Delicate program. For ties in a net. Stops automatically when the selected dryness level is reached.
Gentle 40	Delicate program. For synthetic fur and mixed fabrics with viscose or polyester. Stops automatically when the selected dryness level is reached.

4.2.3 Options

Programs on this machine may include different options depending on the intended application and market. As requirements vary between markets, available options may differ.

Press the Information icon ⓘ next to the option icon to get more information about that option.

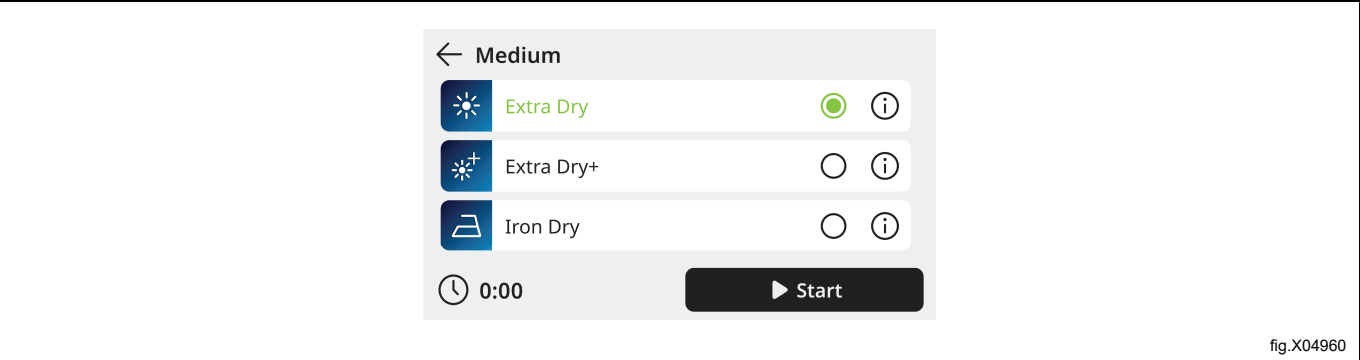


fig.X04960

Two types of options are available:

- Single-selection options: Only one option can be selected at a time.
- Multi-selection options: Two or more options can be selected at the same time.

The descriptions in below table provide brief examples of options that may be available.

Option illustration	Option name	Explanation
	Extra dry	Dries clothes to extra dry.
	Dry	Dries clothes to dry.
	Iron dry	Dries clothes to iron dry/slightly damp.
	Extra dry+	Dries clothes to extra dry, near bone dry.
	Reversing	Alternating drum direction. Improves drying and finishing (wrinkling). Reduces tangling improving wrinkling and evenness of drying, for example for large items like sheets.
	Anti crease	Drum and fan run intermittently after drying to keep clothes moving. Prevents wrinkles by avoiding piling. Keeps garments less wrinkled if not removed immediately.
	Reversing + Anti crease	Combination of: <ul style="list-style-type: none">• Reversing, alternating drum direction. Improves drying and finishing (wrinkling). Reduces tangling improving wrinkling and evenness of drying, for example for large items like sheets.• Anti Crease, drum and fan run intermittently after drying finished to keep clothes moving. Helps prevent wrinkles by preventing clothes from clumping together if not removed immediately.

Tap on the start button to start the program.

During program run it is possible to pause, stop and rapid advance if allowed according to the settings.

4.2.4 Coin operated machines

Select program.

Insert correct amount of coins. Tap the start button to start the machine.

After start it is possible to add time for the selected program. Insert more coins to add time.

4.3 When program has ended


Note!

For the best possible drying result it is important to empty the machine as soon as the program has ended.

If the machine is not emptied as soon as the program has ended the drum will rotate in short intervals in order to keep the goods from being wrinkled.

4.3.1 Clean the filter


The filter must be cleaned after each drying cycle.

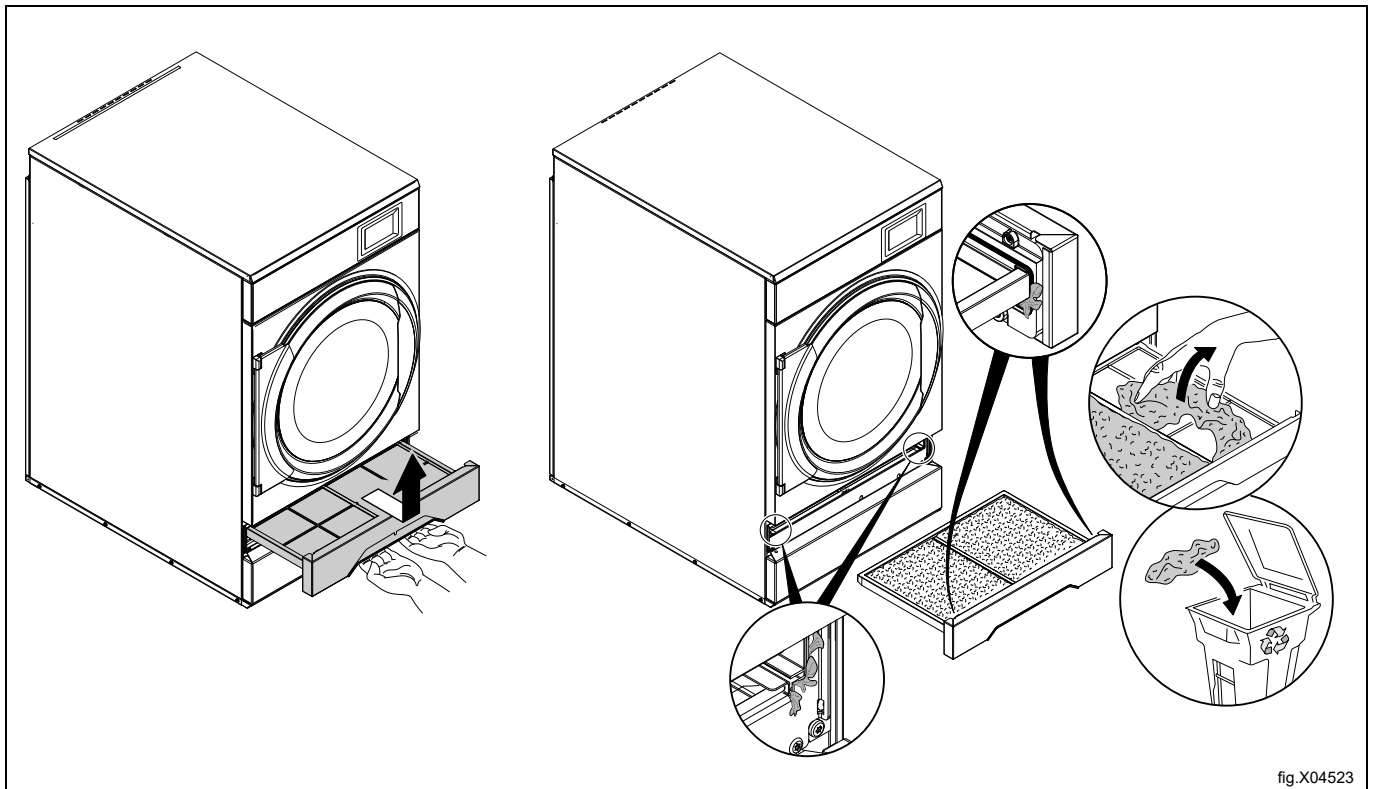


4.3.2 Clean the second filter — Only for machines with heat pump

Remove the filter drawer and pull out the second lint filter.

Clean the second lint filter.

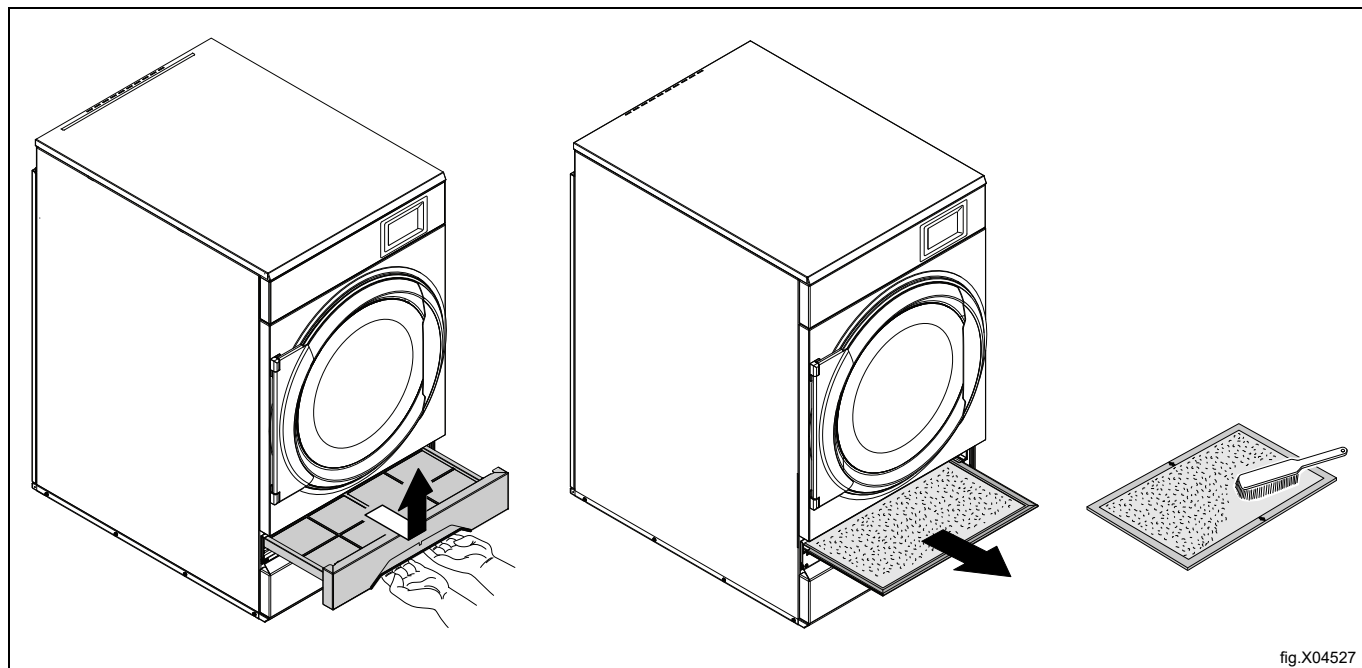

When the second lint filter has been cleaned, insert the second lint filter and the filter drawer.

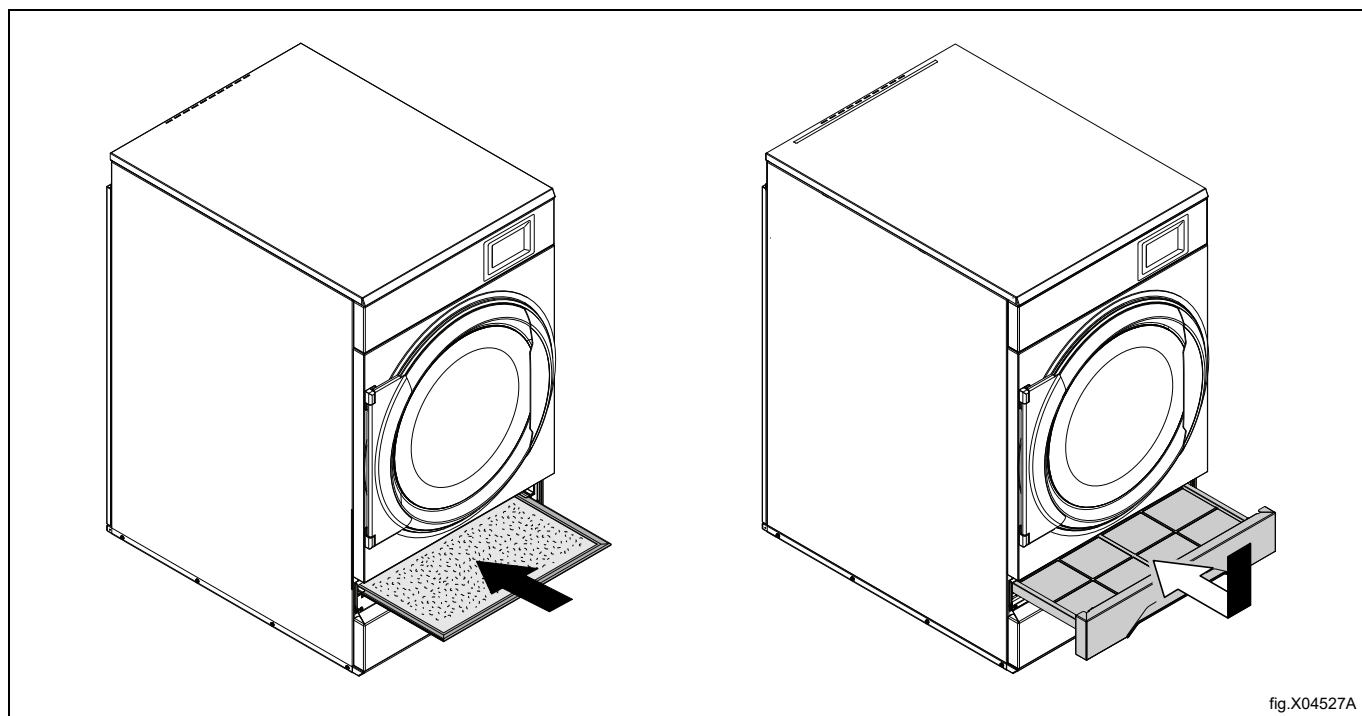

Note!

Leave the door open when ready. This is to prevent that moisture stays in the machine and develop bacteria and mould.

5 Error codes

A fault in the program or in the machine is indicated by an error code on the screen.

Some of these error codes can be solved easily without contacting service personnel.

It is possible to change the conditions and set new values for some error codes. The reason for doing this can for example be if an error code is showing up in cases where it is "normal conditions" and the parameter should be higher or lower to match the conditions.

Error code	Text	Cause/Action
10:1	Control system	Possible cause: The drum spun faster than the maximum speed considered safe during a spin cycle. Suggested action: Turn the machine off for a short time, then turn it back on and try again. If this message keeps appearing, contact an authorized service technician.
10:11	Clock	Possible cause: The machine's internal clock is not working correctly. The machine can still be used, but the date, time, and delayed-finish settings may not work as expected. Suggested action: You can keep using the machine, but the date, time, and delayed-finish settings may not work correctly until the clock is fixed. You can try turning the machine off for about a minute and back on to see if the message clears; otherwise, contact an authorized service technician to have it corrected.
10:13	Control system	Possible cause: The machine's control system did not finish starting up properly when it was turned on. Suggested action: Turn off the power to the machine for a short time and then turn it on again. If this message continues, contact an authorized service technician.
10:15	Machine stop	Possible cause: The machine's stop button or stop switch has been activated. Suggested action: Check if the machine's stop button or stop switch has been pressed or activated, and release it if so. If the machine still will not run, contact an authorized service technician.
10:16	Emergency stop	Possible cause: The machine's emergency stop has been activated. Suggested action: Check whether the emergency stop button has been pressed, and release it if it has, then acknowledge the message on the screen. If the machine still will not start, contact the person responsible for the machine or an authorized service technician.
12:0	Door Status Change	Possible cause: The door was found not fully closed when the machine checked it during use. Suggested action: Make sure the door is fully closed, then try again.
12:0	Lint Door Status Change	Possible cause: The lint filter door is open or not fully closed. Suggested action: Check that the lint filter door is fully closed and latched, then try again.
12:1	Temperature sensor	Possible cause: The air going into the machine's heating system has become too hot, and a built-in safety switch has cut off the heat to protect the machine. Suggested action: Let the machine cool down before using it again, and make sure the lint filter is clean and the air vents are not blocked. If this keeps happening, contact an authorized service technician.
12:2	Temperature sensor	Possible cause: The air coming out of the machine's heating system has become too hot, and a built-in safety switch has cut off the heat to protect the machine. Suggested action: Let the machine cool down before using it again, and make sure the lint filter is clean and the air vents are not blocked. If this keeps happening, contact an authorized service technician.
12:3	Temperature sensor	Possible cause: The sensor that measures the inlet air temperature appears to be disconnected or broken. Suggested action: This is an internal issue and there is nothing you need to check yourself. If this message keeps appearing, contact an authorized service technician.
12:4	Temperature sensor	Possible cause: The sensor that measures the inlet air temperature appears to have a short circuit or wiring fault. Suggested action: This is an internal issue and there is nothing you need to check yourself. If this message keeps appearing, contact an authorized service technician.
12:5	Temperature sensor	Possible cause: The sensor that measures the outlet air temperature appears to be disconnected or broken. Suggested action: This is an internal issue and there is nothing you need to check yourself. If this message keeps appearing, contact an authorized service technician.
12:6	Temperature sensor	Possible cause: The sensor that measures the outlet air temperature appears to have a short circuit or wiring fault. Suggested action: This is an internal issue and there is nothing you need to check yourself. If this message keeps appearing, contact an authorized service technician.

Error code	Text	Cause/Action
12:8	Condense water	<p>Possible cause: The container that collects condensed water is full.</p> <p>Suggested action: Empty the condense water container and make sure it is placed back correctly, then try again.</p> <p>If the message continues, try turning the machine off and on so the condensate pump can restart, and check that the condensate drain hose isn't blocked or kinked. If the pump still doesn't run after restarting, contact an authorized service technician.</p>
12:11	Drying	<p>Possible cause: The drying program ran longer than the maximum allowed time without finishing.</p> <p>Suggested action: Check that the lint filter is clean and the load is not too large or too wet, then try again. Also check that the machine has power (look for a tripped breaker or blown fuse) and, if it uses a gas or steam supply, make sure that supply is turned on. Opening the door will clear the error message.</p> <p>If the message keeps appearing, contact an authorized service technician.</p>
12:12	Drying	<p>Possible cause: The automatic drying program ran longer than the maximum allowed time without finishing.</p> <p>Suggested action: Check that the lint filter is clean and the load is not too large or too wet, then try again. Also check that the machine has power (look for a tripped breaker or blown fuse) and, if it uses a gas or steam supply, make sure that supply is turned on. Opening the door will clear the error message.</p> <p>If the message keeps appearing, contact an authorized service technician.</p>
12:13	Drying	<p>Possible cause: The requested drying time was set longer than the maximum allowed drying time for this program.</p> <p>Suggested action: Check that the lint filter is clean and the load is not too large or too wet, then try again. Opening the door will clear the error message.</p> <p>If the message keeps appearing, contact an authorized service technician.</p>
12:14	Gas	<p>Possible cause: There is a problem with the gas supply or the burner's ignition on this machine.</p> <p>Suggested action: Check that the gas supply is turned on, then try resetting the machine by pressing the reset button.</p> <p>If the problem continues, contact an authorized service technician.</p>
12:15	Airflow	<p>Possible cause: The machine did not detect the airflow it needs in order to start or continue running.</p> <p>Suggested action: Make sure the lint filter is clean and fully closed, the air vents are not blocked, and the door seals are not damaged, then try again.</p> <p>If this keeps happening, contact an authorized service technician.</p>
12:16	Airflow	<p>Possible cause: The airflow switch still shows airflow present even after the fan and drum have stopped, suggesting the switch is stuck or faulty.</p> <p>Suggested action: This is an internal issue and there is nothing you need to check yourself.</p> <p>If this message keeps appearing, contact an authorized service technician.</p>
12:17	Airflow	<p>Possible cause: The dryer's lint filter has been blocked for an extended period and needs cleaning.</p> <p>Suggested action: Clean the lint filter and make sure nothing is blocking the airflow, then try again.</p> <p>If the message keeps appearing after cleaning, contact an authorized service technician.</p>
12:18	Airflow	<p>Possible cause: The machine could not detect enough airflow while a wash or dry program was running, usually because the load is blocking the airflow.</p> <p>Suggested action: Open the door and spread the load out evenly in the drum — removing a few items if the load is very large can also help — then restart the cycle.</p> <p>If the problem continues, contact an authorized service technician.</p>
12:19	Airflow	<p>Possible cause: Airflow inside the machine is restricted, which typically happens when an internal filter becomes clogged.</p> <p>Suggested action: Clean the machine's air filter, then try running the program again.</p> <p>If the message continues after cleaning, contact an authorized service technician.</p>
12:20	Airflow	<p>Possible cause: The airflow sensor appears to be disconnected or has an electrical fault.</p> <p>Suggested action: Check that the filter is clean and properly in place, then try again.</p> <p>If this message keeps appearing, contact an authorized service technician.</p>
12:21	Airflow	<p>Possible cause: The machine's airflow reading has been switching on and off repeatedly, which suggests an unstable or blocked airflow.</p> <p>Suggested action: Check that the filter is clean and that nothing is blocking the airflow, including around the outside vent area.</p> <p>If the problem continues, contact an authorized service technician.</p>
12:22	Airflow	<p>Possible cause: The dryer detected that air is not flowing through it properly.</p> <p>Suggested action: Clean the lint filter and make sure nothing is blocking the airflow, then try running the machine again.</p> <p>If the problem continues, contact an authorized service technician.</p>

Error code	Text	Cause/Action
12:251	Control system	Possible cause: The machine's control system has detected an internal configuration fault. Suggested action: Switch off the machine and contact an authorized service technician for assistance.
12:252	Control system	Possible cause: The machine's control system has detected an internal fault. The door and lint filter door are properly closed, so this is not a door problem. Suggested action: Make sure the door and lint door are properly closed. If the message continues to appear, switch off the machine and contact an authorized service technician.
12:253	Control system	Possible cause: The machine's control system has detected an internal configuration fault. Suggested action: Switch off the machine and contact an authorized service technician for assistance.
12:254	Control system	Possible cause: The machine's control system has detected an internal configuration fault. Suggested action: Switch off the machine and contact an authorized service technician for assistance.
12:255	Control system	Possible cause: The machine's control system has detected an internal configuration fault. Suggested action: Switch off the machine and contact an authorized service technician for assistance.

For other error codes or repeated error codes, disconnect the power for 30 seconds. If the error code keeps coming back, contact authorized service personnel.

6 Maintenance

6.1 General

It is the responsibility of the owner of the machine/the laundry manager to make sure that maintenance is periodically performed.

Note!

Lack of maintenance may deteriorate the performance of the machine and may cause damage to components.

6.2 Time for maintenance

When the display shows a message that it is time for maintenance, contact the owner of the machine/the laundry manager to perform maintenance (if available, a telephone number and/or a tag will also be displayed).

The machine can be used meanwhile. However, the message will keep coming back until the service is performed.

The message will disappear after about 30 seconds.

6.3 Every day

Check that the machine does not operate with the door or the filter drawer open, if so, the machine must be placed out of order until repairs are made.

Note!

Contact qualified service personnel to disconnect power from the affected machine.

Clean the door, door glass, door gasket and other external parts.


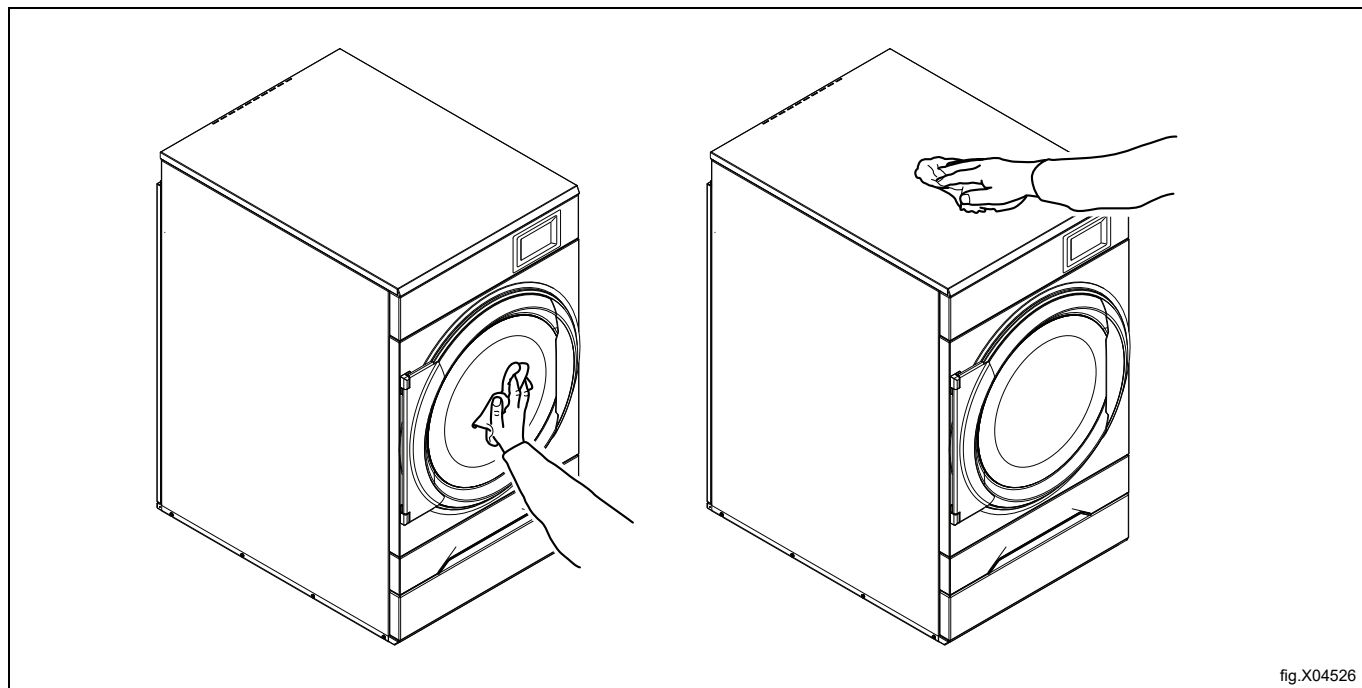


fig.X04526

Check the filter and filter drawer. Clean if necessary.



Remove any lint and dust around the machine.

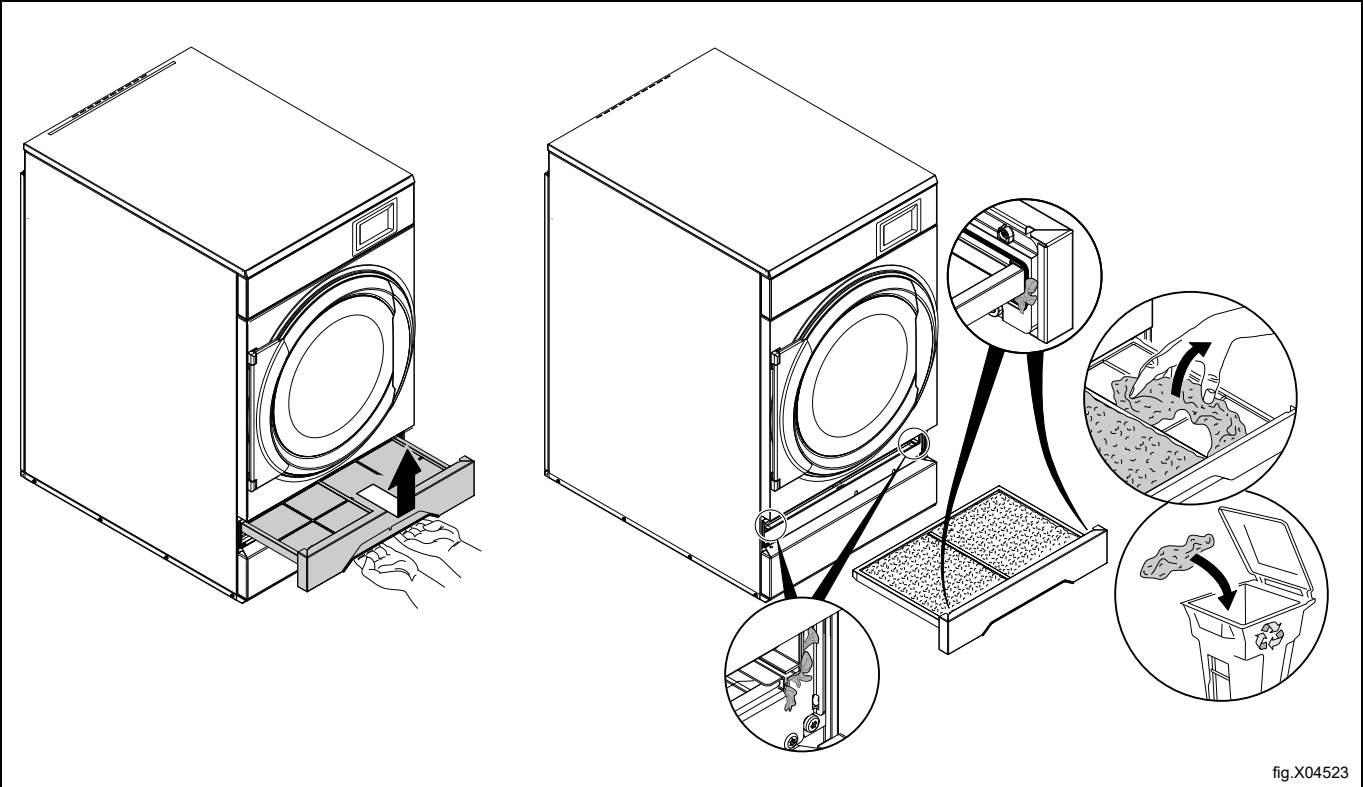

	Correct use For all surfaces	Use mild cleaning agents, follow daily cleaning schedules, wipe with soft cloths and rinse thoroughly.
	Incorrect use For painted surfaces	Do not use polishing agents, abrasive cleaners, bleach or acid descalers.
	Incorrect use For stainless steel surfaces	Do not use chlorine bleach, muriatic acid, steel wool, wire brushes or strong chlorides.

6.4 Machines with moisture measurement (RMC)

At least one a year, wipe off/clean drum and lifters with citric acid (Acidum citricum). If soap/softener residue remains, it is recommended also to use a coarse sponge.

Lack of cleaning can affect the functionality of the residual moisture control. This can result in more moist load than requested at program end.

Note!

Cleaning frequency depends on the laundry process, such as textile types, laundry chemistry, dosing levels and rinsing efficiency. A higher rate of residue build-up requires more frequent cleaning. Keep the drum and lifters clean to ensure reliable RMC and Load Intelligence performance.

6.5 Machines with heat pump


6.5.1 Second lint filter

- If a warning message about cleaning the filter appears on the display; follow the instructions on the display and clean the first and second filter.
- If the first and second filter has been cleaned but the warning message remain on the next drying cycle, the special filter must be cleaned or replaced. Contact the owner of the machine/the laundry manager to clean or replace the special filter.


6.5.1.1 To clean the second filter

Remove the filter drawer and pull out the second lint filter.

Clean the second lint filter.

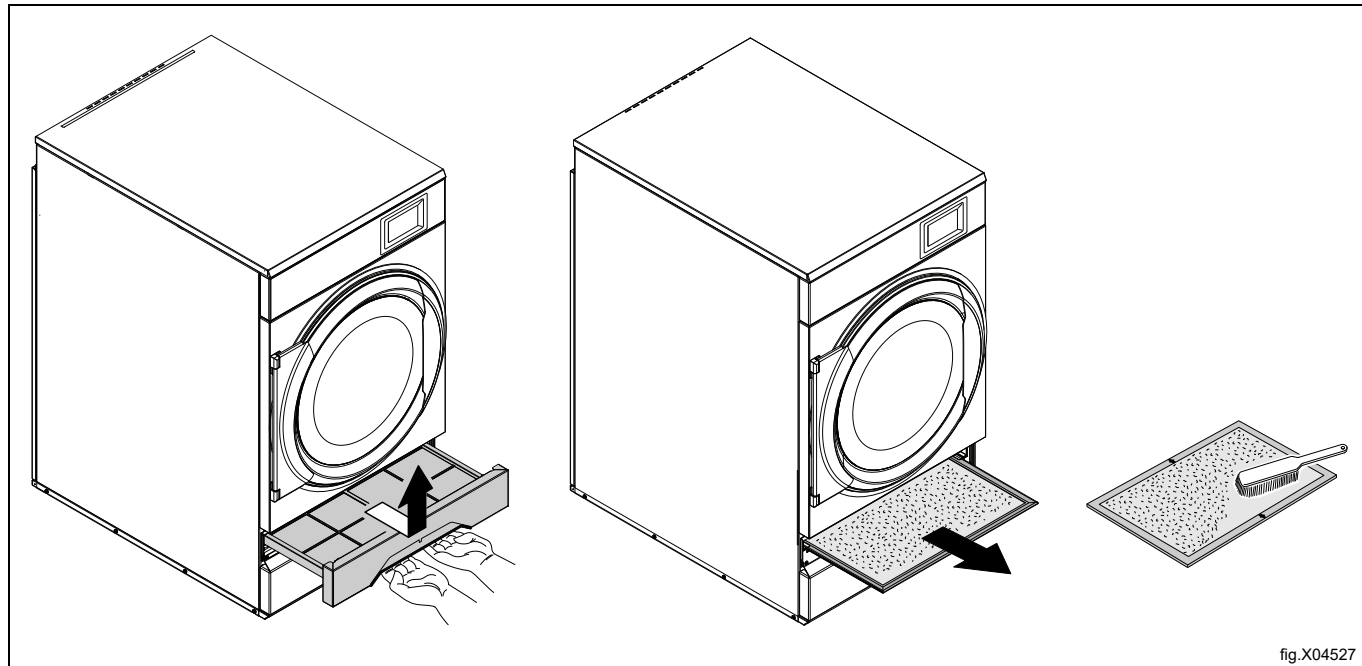

When the second lint filter has been cleaned, insert the second lint filter and the filter drawer.

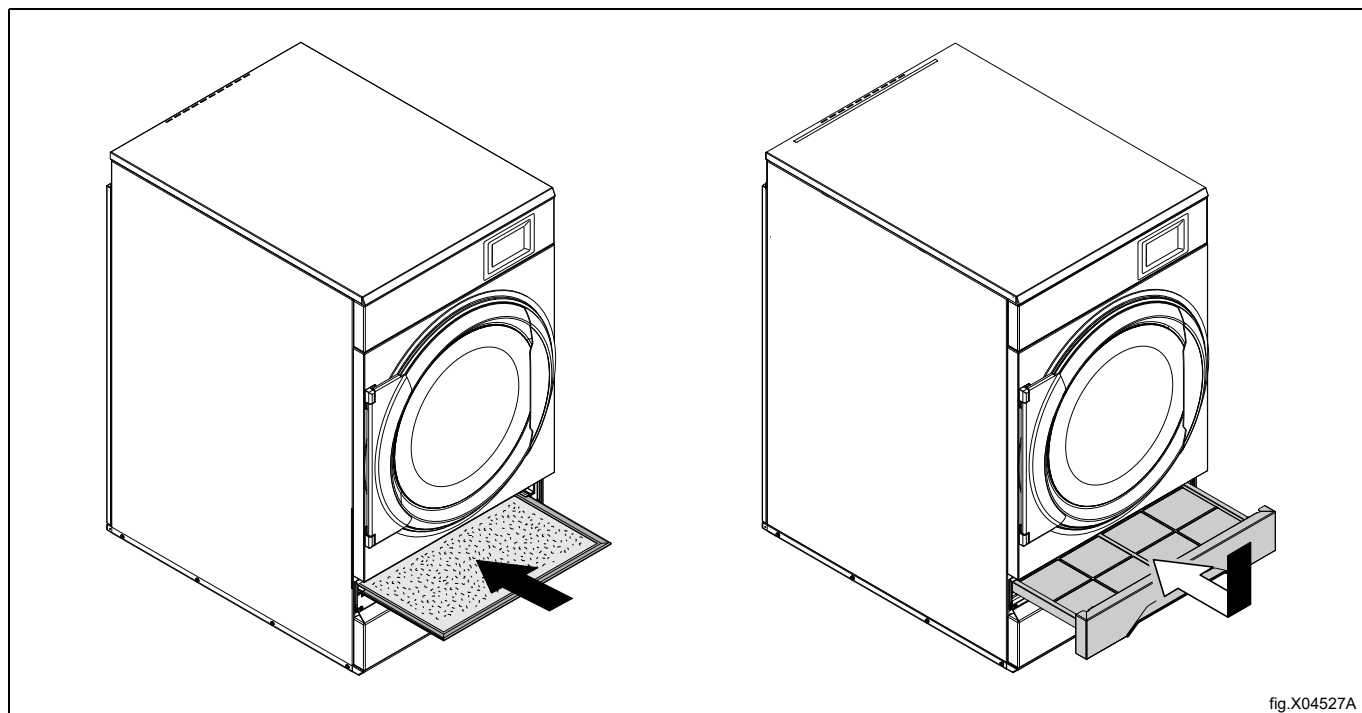

7 Disposal information

7.1 Appliance recyclability and disposal

7.1.1 Recyclability

Our appliances are manufactured using a significant percentage of recyclable metals (such as stainless steel, iron, aluminium, galvanized sheet, copper, etc.), which can be recovered through the local recycling systems, in compliance with the regulations in force in the country of use.

National regulations regarding waste disposal may vary. Disposal of the appliance must therefore be carried out in accordance with the applicable legislation and the directives issued by the competent authorities in the country where the appliance is decommissioned.

The components of the appliance must be separated and disposed of in accordance with their material composition (e.g. metals, oils, greases, plastics, rubber, refrigerant gases, insulating boards and other insulating material, glass wool, LEDs, etc.) and in full compliance with applicable local and international waste management regulations.

Compressors may contain oils and refrigerants fluids - are special waste and has to be recycled on local bases regulations.

7.1.2 Procedure regarding appliance disposal and component / material recovery

This product should not simply be disposed of in the environment at the end of its life cycle; it is imperative instead either to dispose of it in accordance with local environmental regulations, or, preferably, to deliver it whole to an authorized recycling center.

All removed components, including doors and other structural parts, must be delivered together with the appliance to an authorized recycling or dismantling facility.

The dismantling/recycling center will apply state of the art technologies and methods available to them to effectively disassemble the products for best recyclability.

Note that printed circuit boards, electrical motors or other components identified in European Union legislation to be of high critical raw materials recovery potential need to be addressed specifically.

In case of doubts or questions, always refer to your reference customer care service.

Before disposing of the appliance, carefully inspect its physical condition and preservation state, checking for potential leaks of liquids or gases, as well as for broken parts that may pose hazards during handling and subsequent dismantling.



The symbol on the product indicates that this product should not be treated as domestic waste, but must be correctly disposed of in order to prevent any negative consequences for the environment and human health. For further information on the recycling of this product, contact the local dealer or agent, the customer care service or the local body responsible for waste disposal.

Note!

When dismantling the appliance, any marking, this manual and other documents concerning the appliance must be destroyed.

7.2 Disposal of packing

The packing must be disposed of in compliance with the current regulations in the country where the appliance is used. All the packing materials are environmentally friendly.

They can be safely kept, recycled or burned in an appropriate waste incineration plant. Recyclable plastic parts are marked as following examples.

	Polyethylene: <ul style="list-style-type: none"> • Outer wrapping • Instructions bag
	Polypropylene: <ul style="list-style-type: none"> • Straps
	Polystyrene foam: <ul style="list-style-type: none"> • Corner protectors



Electrolux Professional AB
341 80 Ljungby, Sweden
www.electroluxprofessional.com