

Washer instructions

MANUAL DOSING

 


Multi-Housing Laundry

- 1 Touch the the screen and scroll, tap to select a program.



Hint: Change language by tapping the flag in the up right corner.

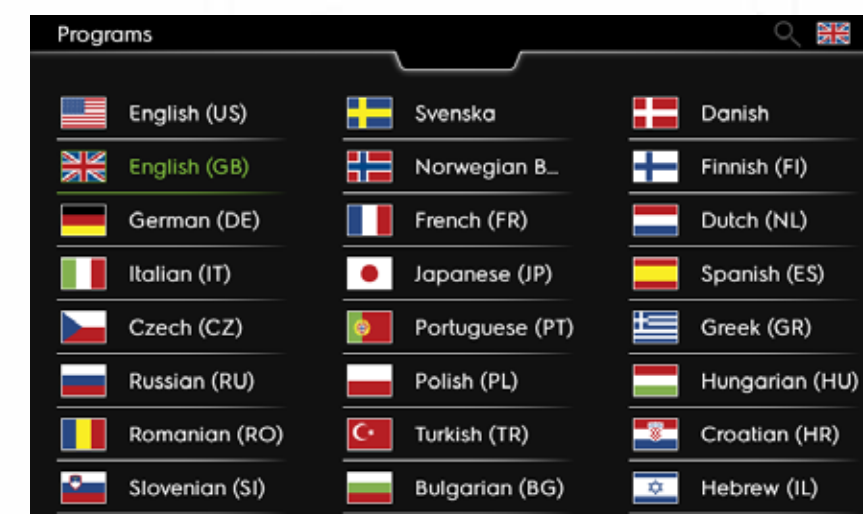 


- 2 Select an option as needed by tapping on the symbols



Dosage

Dispense the detergent according to the instructions on the detergent package

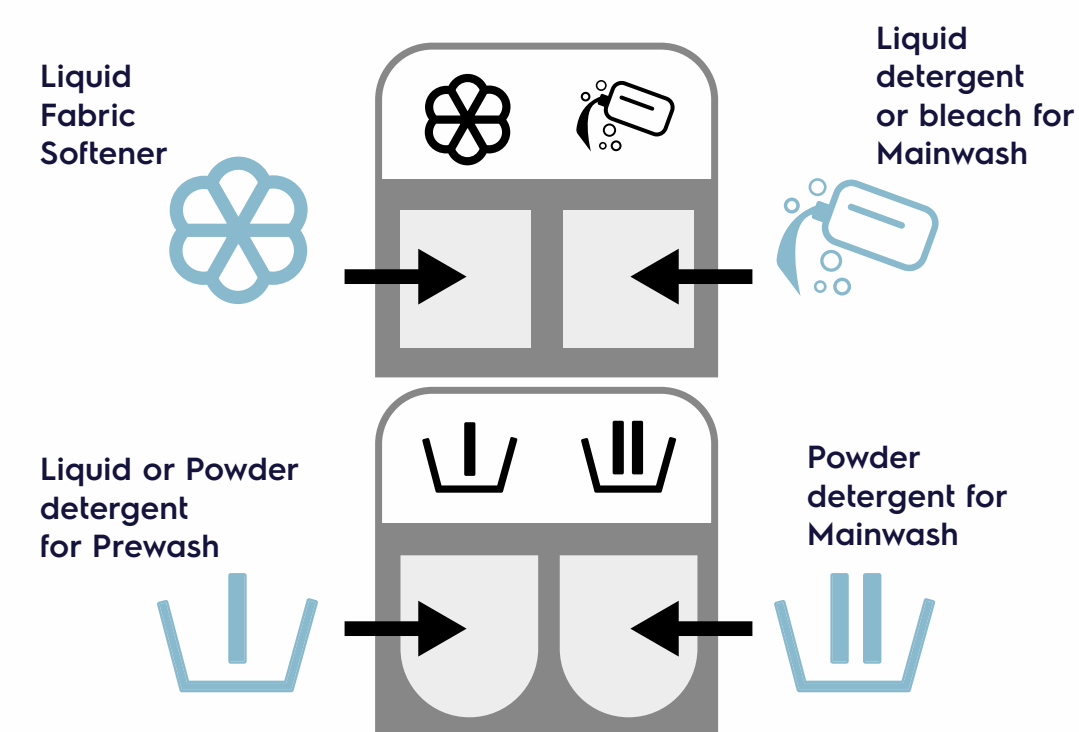

- 3 Tap the green play button to start



Weighing of the wash load starts

The machine weighs the garments for you and adjust the water consumption accordingly.

If you need to pause the program

Tap the pause symbol. The door can be opened after a while unless the water level is too high. Close the door and tap the green play button to continue the wash program.

When "maintenance" is displayed

Inform the person in charge of maintenance. The machine can still be used.

Once you have finished washing

Leave the door open. Clean the detergent compartment, leave the cover of the detergent box open.

Washer instructions

AUTOMATIC DOSING

 


Multi-Housing Laundry

- 1 Touch the the screen and scroll, tap to select a program.



Hint: Change language by tapping the flag in the up right corner.

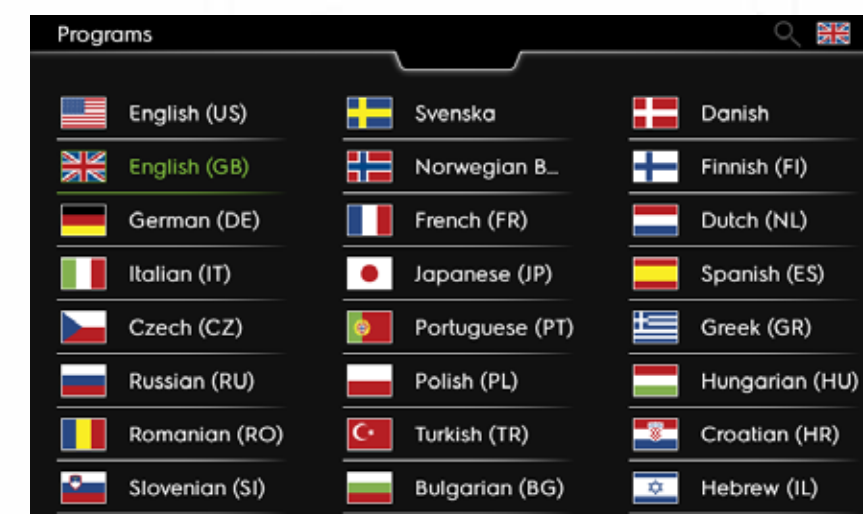

- 2 Select an option as needed by tapping on the symbols



Dosage

No softener is the default. If you want to add it to your laundry - tap the Softener symbol and activate by confirm the green check mark.



- 3 Tap the green play button to start



Weighing of the wash load starts

The machine weighs the garments for you and adjust the water & detergent consumption accordingly.

If you need to pause the program

Tap the pause symbol. The door can be opened after a while unless the water level is too high. Close the door and tap the green play button to continue the wash program.

When "maintenance" is displayed

Inform the person in charge of maintenance. The machine can still be used.

Once you have finished washing

Leave the door open. Clean the detergent compartment, leave the cover of the detergent box open.