


Washer instructions




Self Service Laundry

1 Turn the knob to select a program

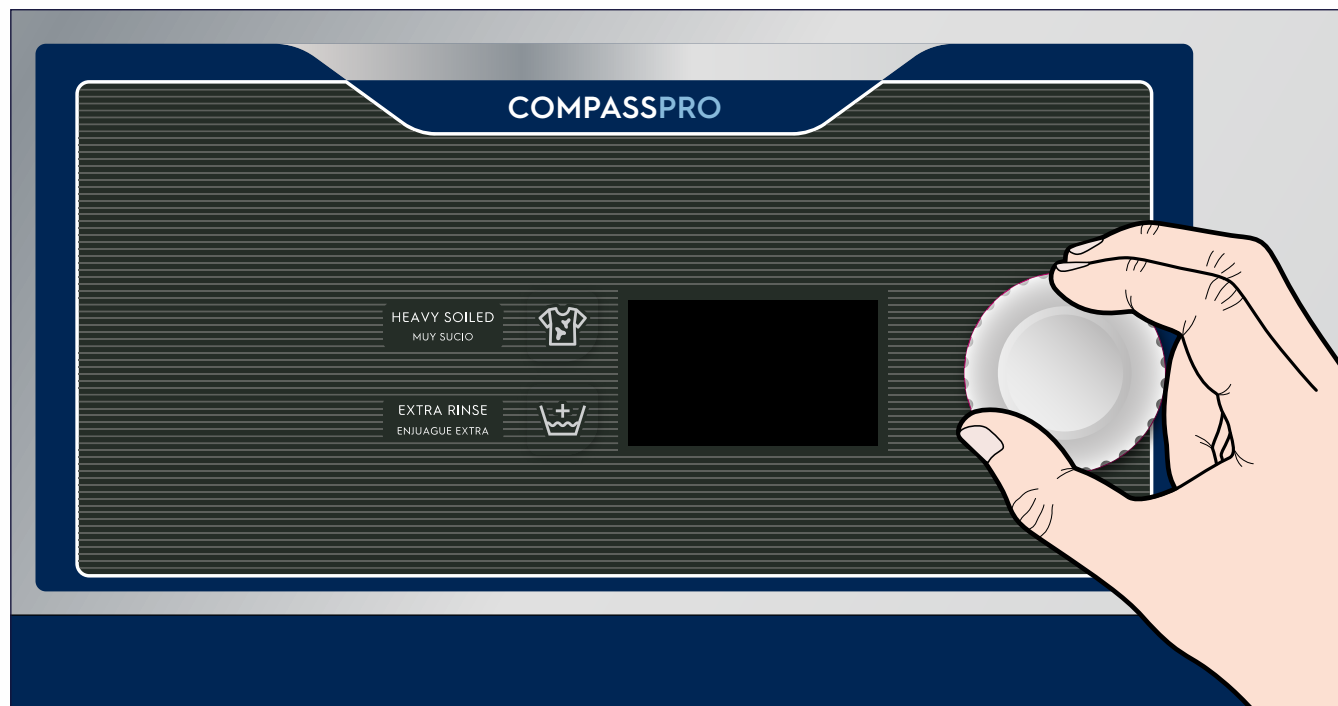

2 Select an option as needed

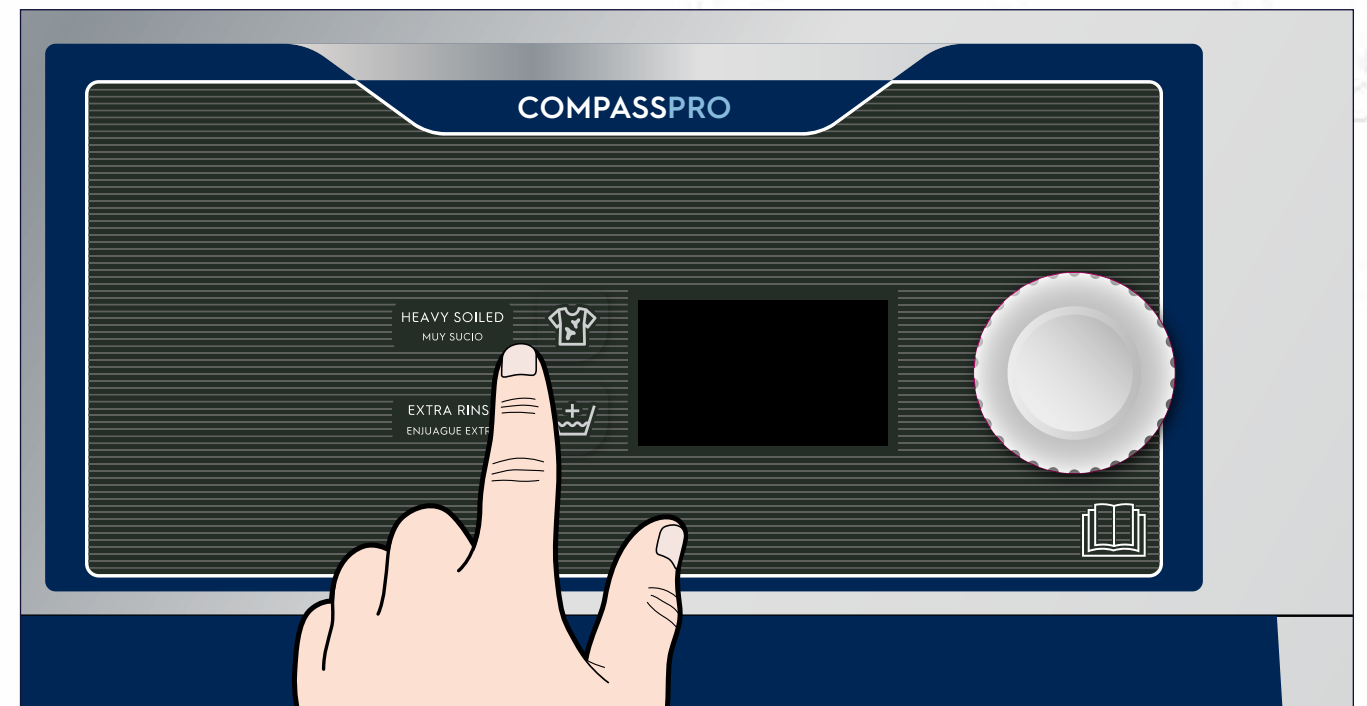

Options



Heavy soil
for heavily soiled
textiles, long wash time



Extra rinse
one rinse
added

3 Follow the instructions for payment. Once the right amount is paid, the machine will automatically start (or can be started by pressing the knob)



Dosage

Dispense the detergent according to the instructions on the detergent package

