


Washer instructions



Facility
Management
Laundry

1 Turn the knob to select a program

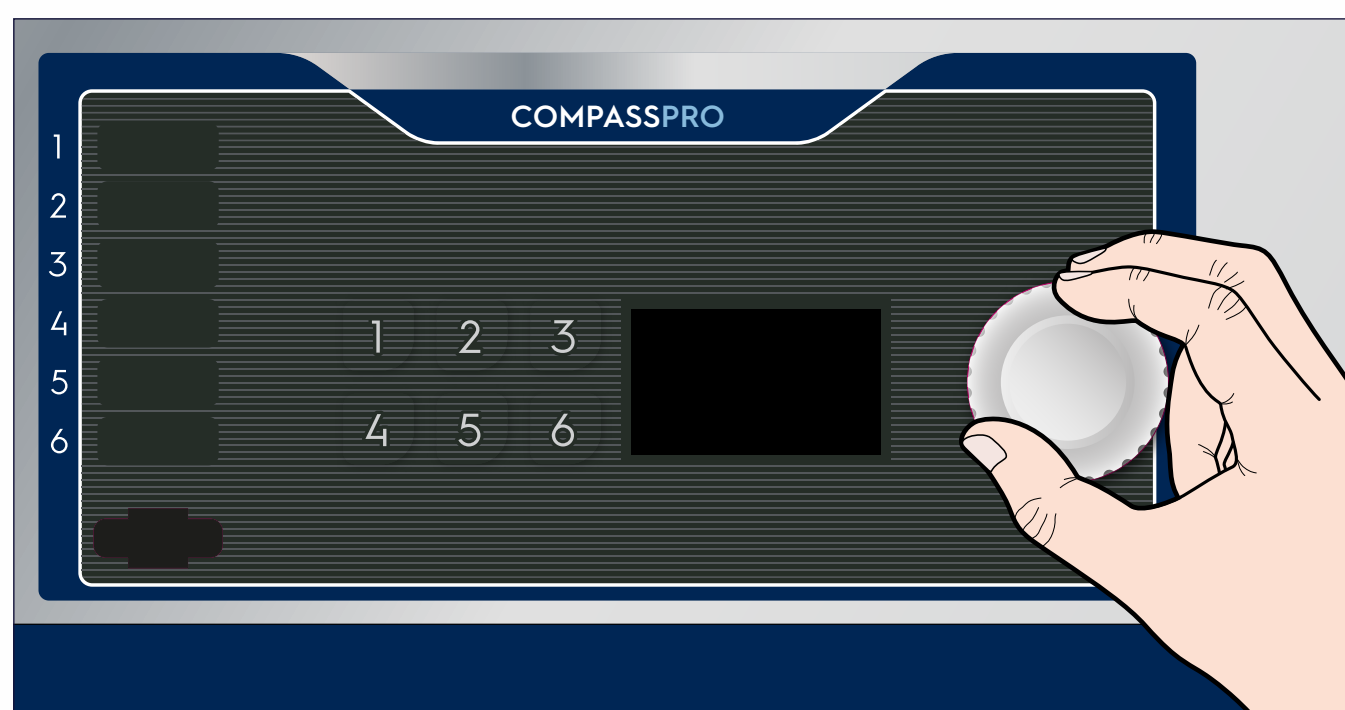

2 Select an option as needed



Specific Hygiene Programs



Global Disinfection MOP 85



Global Disinfection
deactivation of SARS-CoV-2,
Human Norovirus, common
bacteria

Options



Option/
program



Option/
program



10 sec.
extraction



15 sec.
extraction




30 sec.
extraction



45 sec.
extraction

3 Press the knob to start

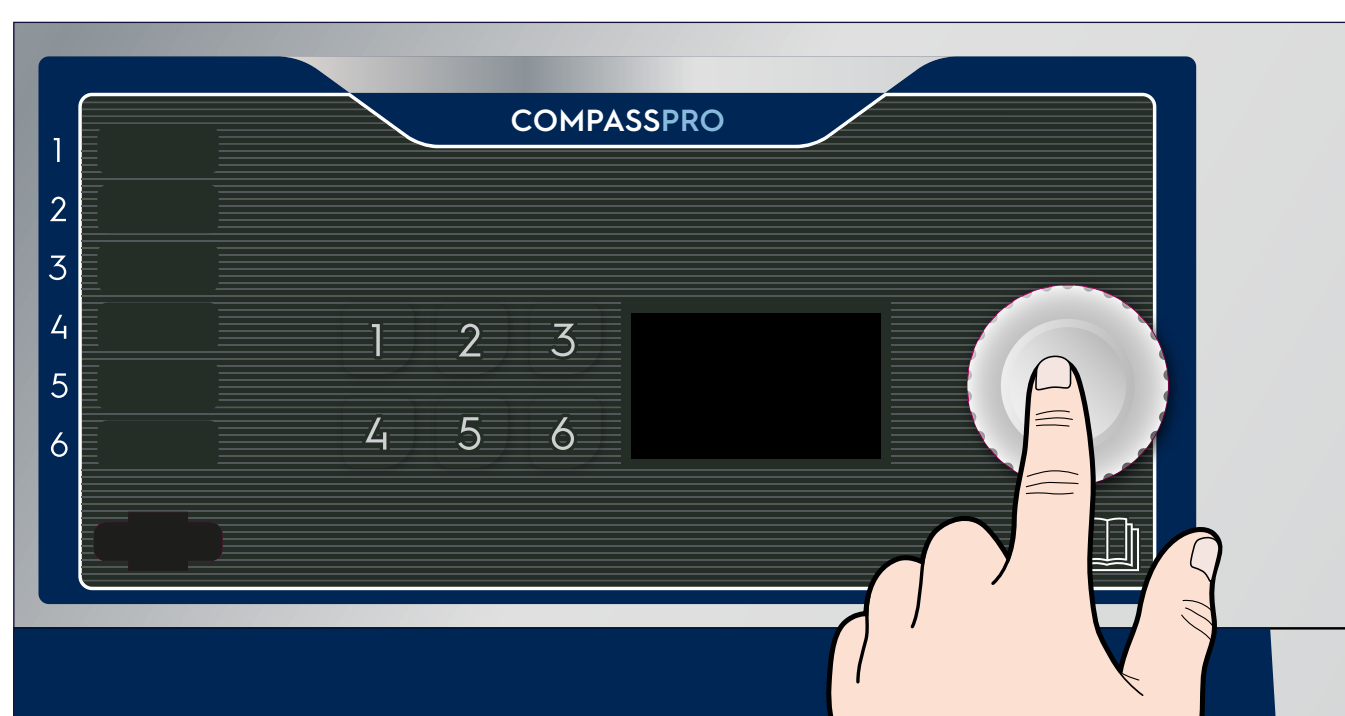

Once you have finished washing

Leave the door open. Clean the detergent compartment, leave the cover of the detergent box open.

If you need to pause the program

Press the knob. A menu with pause highlighted will be shown on the display. Press again to pause the wash program. The door can be opened after a while unless the water level is too high. Close the door and press the knob to continue the wash program.

When "maintenance" is displayed

Inform the person in charge of maintenance. The machine can still be used.



Electrolux
PROFESSIONAL