## Drying cabinet instructions



## Loading the cabinet



Spread garments out as sparsely as possible



Close the door and press one of the program buttons to start the drying

Electrolux

• :





This program is suitable for drying most material



This program is suitable for thin or delicate materials that should not be dried for too long



If you open the door or press the button the drying stops but the fan continues to blow for a while longer. Do not open the door unnecessarily or the drying will take longer!



