

# Drying cabinet instructions


DC6-14



## Loading the cabinet




**1** Spread garments out as sparsely as possible

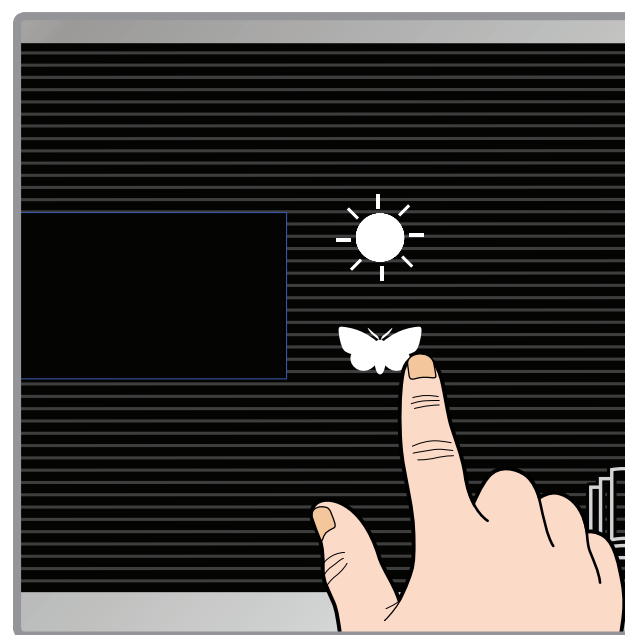

**2** Close the door and press one of the program buttons to start the drying

## Programs

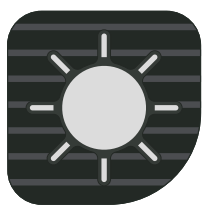

This program is suitable for drying most material



This program is suitable for thin or delicate materials that should not be dried for too long



If you open the door or press the button the drying stops but the fan continues to blow for a while longer. Do not open the door unnecessarily or the drying will take longer!

## Overheating

If the garments have not become dry or if you notice that only cold air blows during drying, the overheating protection may have tripped, press the red button on the back of the fan to reset.

