

Drying cabinet instructions


DC6-4HP



Loading the cabinet



1 Spread garments out as sparsely as possible

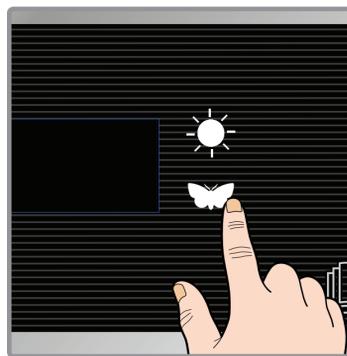

2 Close the door and press one of the program buttons to start the drying

Programs



This program is suitable for drying most material



This program is suitable for thin or delicate materials that should not be dried for too long



If you open the door or press the button the drying stops but the fan continues to blow for a while longer.
Do not open the door unnecessarily or the drying will take longer!

Cleaning of filter

Remove the lint from the filter in the bottom of the drying cabinet when you are finished drying.

Pull out the condensate water tank and empty it. Then slide it back in.

How to find the filter

