


# myPRO by Electrolux Professional

Coin mechanism

# Operating instructions for myPRO<sup>XL</sup> Dryers

## Control panel

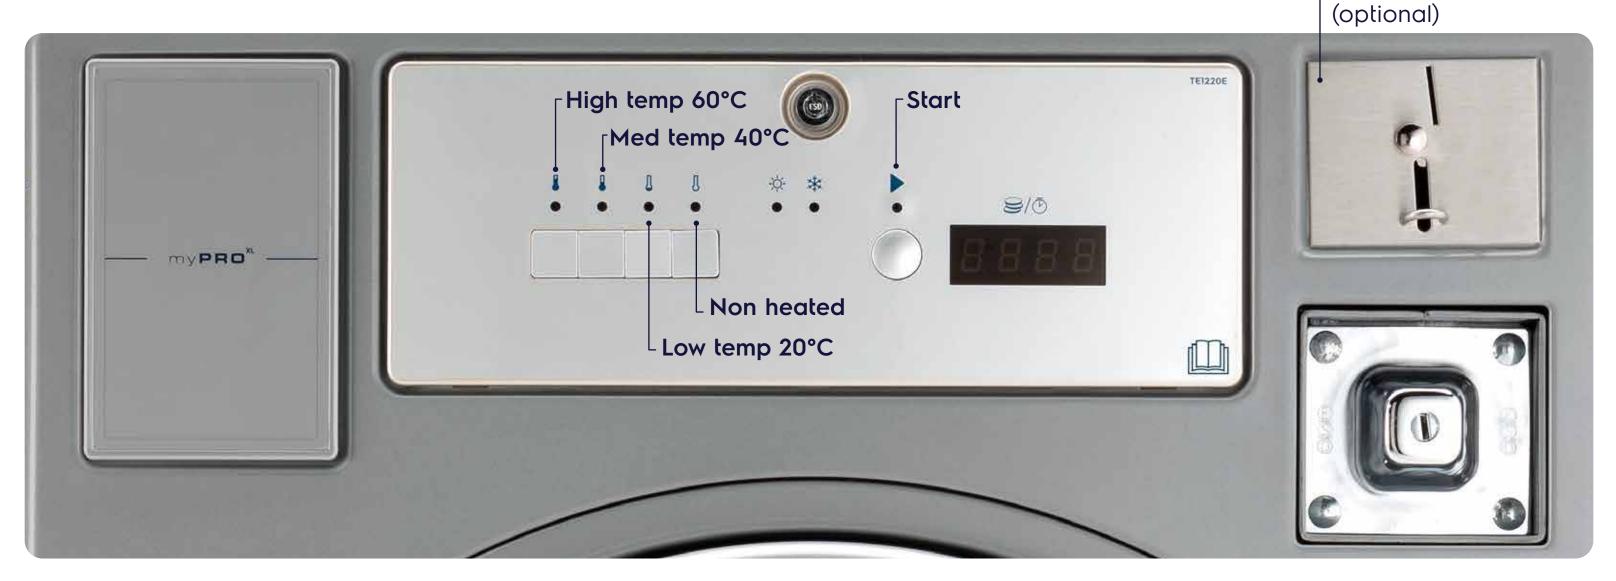

#### Instructions



Open the door and load the machine



Select a program



(insert coin/token if applicable)

Push the ▶ start button
to start programme



Drying is complete when acoustic signal sounds

### Programs



High Temp\* 60°C Best for hygiene cycles



Med Temp 40°C



Low Temp 20°C



Non Heated

Find out more about the advantages of myPRO www.electroluxprofessional.com