

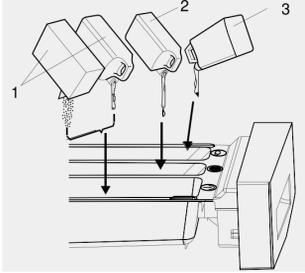
# Operating instructions for myPRO<sup>XL</sup> Washers

## Control panel



## Instructions

**1**  Open the door and load the machine

**2**  Add Detergent  
 1. Powder or liquid detergent  
 2. Softener  
 3. Bleach

Then select a program

**3**  (insert coin/token if applicable)  
Click start!

## Programs

-  Lightly soiled
-  White cotton and colour-fast cotton. Normal soil.
-  Synthetic items and mixed fabric items. Normal soil
-  Delicates like acrylics, viscose, polyester items. Normal soil
-  Disinfection Cycle
-  Drum Self Clean Program
-  Heavy Soil: Add washing time by 5 minutes.
-  Extra Rinse: Add one rinse