

Operating instructions for myPRO Dryers

Instruction

1



Choose program

2



Add program combination optionally and/or push the ► button to start programme


3



Drying process is completed when acoustic signal appears

Find out more about
the advantages of myPRO
www.electroluxprofessional.com

Control panel

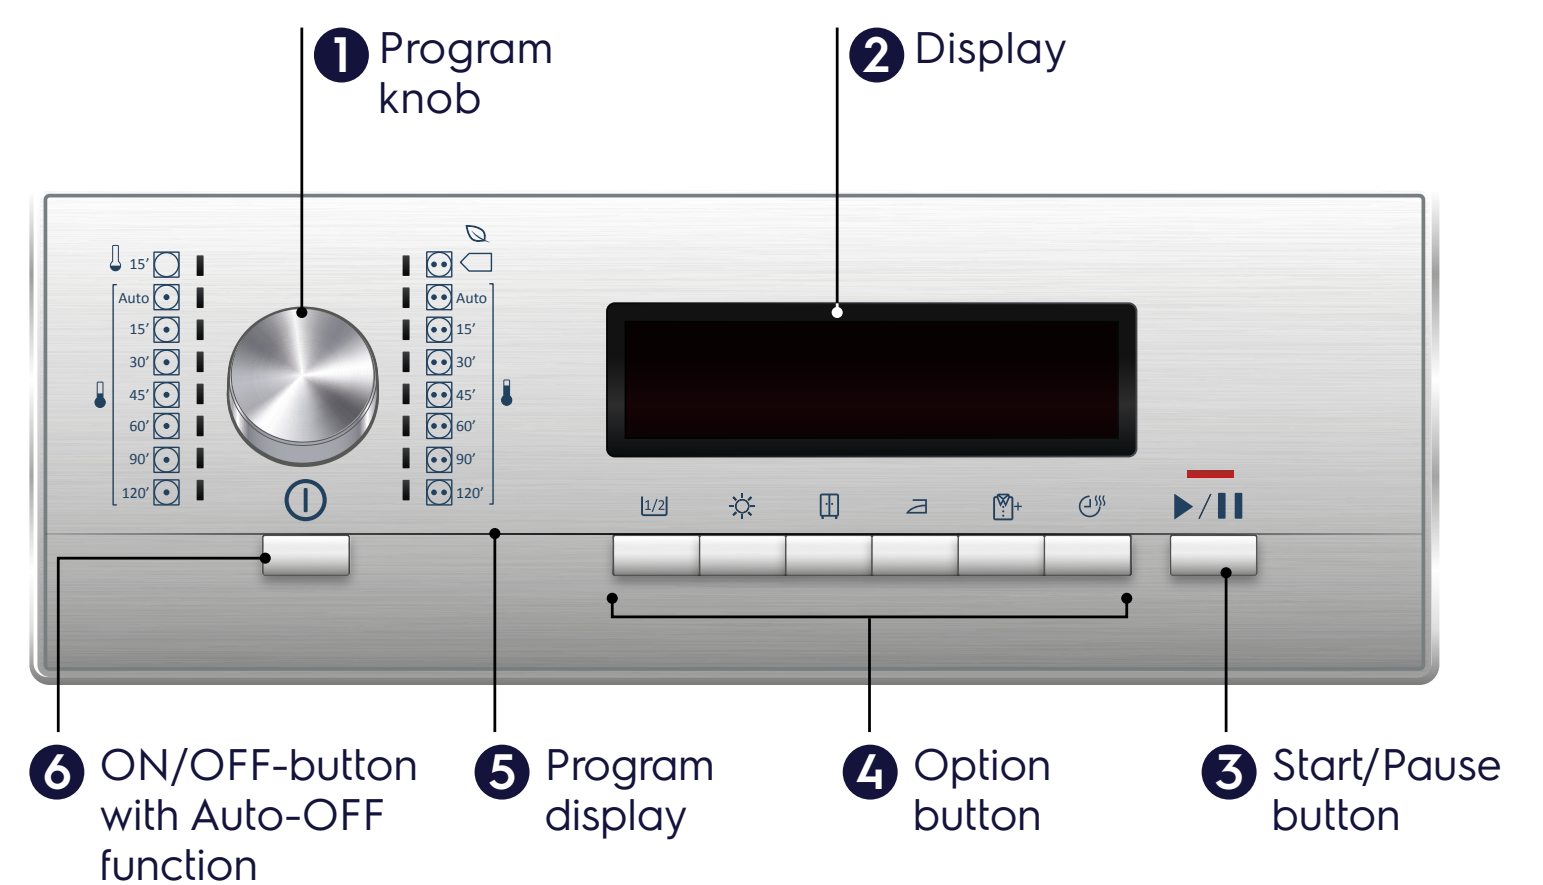

Programs


  **Cotton and towelling** - the most efficient programme concerning energy consumption

  **Cotton and towelling** - normal temperature

  **Easy-to-clean, viscose, cotton blend fabrics and delicate fabrics** - Low temperature

  **Easy-to-clean, viscose, cotton blend fabrics and delicate fabrics** - Low temperature

Options

 If loading capacity is not fully required, use this option

 **Extra Dry** - This option dries laundry more intensely

 **Dryness** - Cupboard dry

 **Dryness** - Iron dry

 **Care** - This option prevents laundry from creases

 **Time dry option** - User can increase time of drying in 5 min steps