

Operating instructions for myPRO Washers

Instructions

1



Do not use more detergent than required



Pre wash¹ Washing phase¹ Softener

2



Choose program

3



Add program combination optionally and/or push the ► button to start program

4

Program duration adjusts to laundry load automatically

5

Washing process is completed when acoustic signal appears

Find out more about the advantages of myPRO
www.electroluxprofessional.com

Control panel



Programs

Eco

White cotton and colour-fast cotton
Normal soil

Fast wash

Cotton and synthetic items
Light soil

Cottons

White cotton
Normal soil and light soil

Cottons

Colour cotton
Normal soil and light soil

Delicates

Delicates like acrylics, viscose, polyester items. Normal soil

Delicates

Synthetic items and mixed fabric items
Normal soil

Hand wash

Machine & hand washable wool and delicates with "hand washing" care symbol

Disinfection

This program removes dust mites and similar micro-organisms including an automatic pre wash phase

Rinse

To rinse and spin the laundry
All fabrics

Mop

Program for cleaning rags, workwear and microfibre including an automatic pre rinse