



Electrolux
PROFESSIONAL



Operating instructions for myPROzip Dryers

Instructions



1. Turn the machine ON



2. Load machine with garments and close door (paying attention not to overfill)



3. Select the desired drying temperature



4. Pay for the desired amount of drying time (time will increase as money inserted)



5. Once the display shows the desired amount of drying time, select START*



6. Once the timer has reached 0, drying is complete



7. Remove garments from the dryer drum and power machine OFF

* NOTE: Dryer will automatically add cool down, extending the total program time

Control panel



Programs/Temperature



Cotton and terry fabrics
Normal / medium temperature



Easy care, viscose, cotton blend and fine linen
Low temperature

Find out more about
the advantages of myPRO
www.electroluxprofessional.com



Scan to see the
tutorial video