



Electrolux
PROFESSIONAL



Operating instructions for myPRO Steam Ironers



IS185
Foldable ironer
85 cm roller length



IS1103
Fixed ironer
103 cm roller length

1 Unfold/fold the ironer

Only for IS185 foldable ironer




Press the locking lever to place the ironer in **working position from folded**.



To fold the ironer for **storage**, push the button until it disengages.

2 Control panel

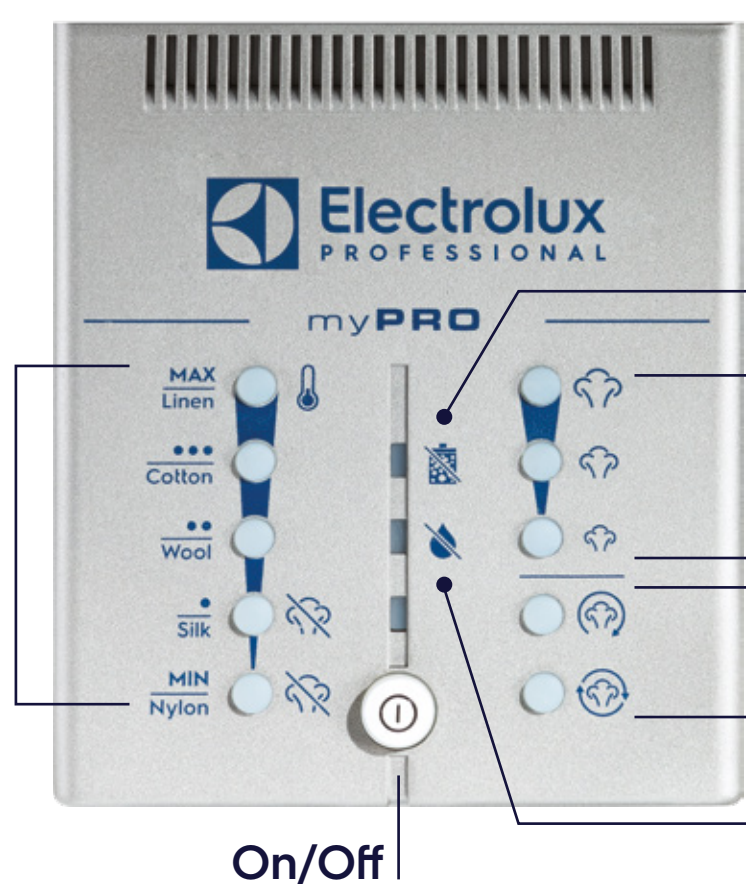

5 temperature settings

MAX Linen
Cotton
Wool
Silk
MIN Nylon

Change water cartridge

3 steam settings
High
Medium
Low

2 steam modes
On demand
Continuous

Empty water tank warning

On/Off


3 Foot pedal



Press foot pedal to activate the ironer and regulate the speed of the roller with the pressure of your foot.


4 Fill water



When the "Empty water tank" warning ignites , lift rubber cap and remove water softener cartridge. Fill water and reinsert water softener cartridge, press firmly and give ¼ turn clockwise. Replace rubber cap firmly.

Note: If storing for long periods empty water and remove water softener cartridge. Ensure floater is properly inserted on cap before replacing. Position the screw cap and turn to close.

5 Emergency release

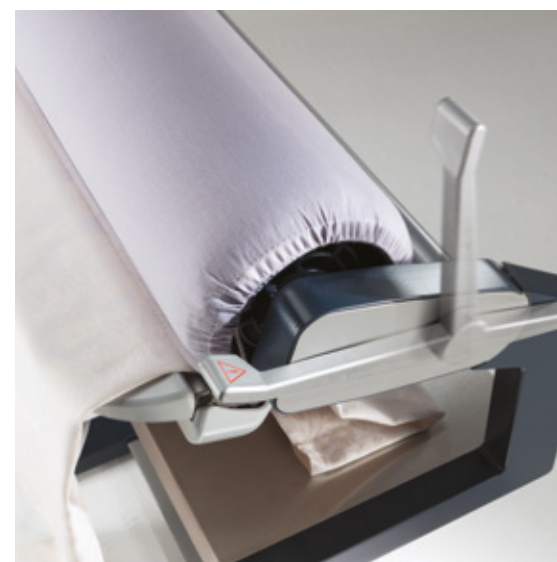

If garment is trapped on the hot surface or in case of power outage, push emergency release lever towards rear of ironer. Padded roller will lift, allowing safe removal of garment. To engage the roller for ironing, simultaneously press foot pedal and pull emergency lever to starting position.



Find out more about the advantages of myPRO
www.electroluxprofessional.com