

Operating instructions for myPRO Dryers

Instruction

1



Choose
program

2




Add program
combination
optionally and/or
push the ► button
to start programme

3




Drying process is
completed when
acoustic signal
appears


Cleaning filter

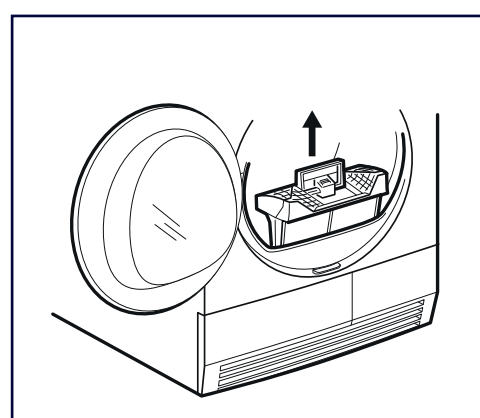

Open the door. Pull
the filter up.

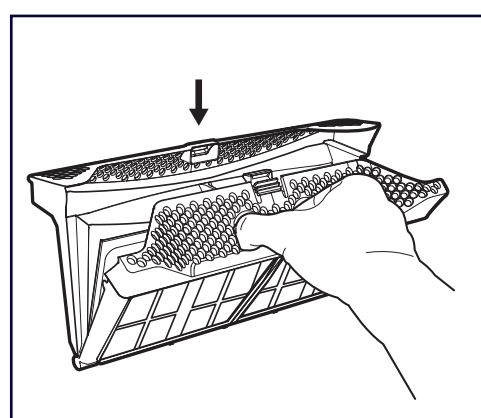


Push the hook to
open the filter.

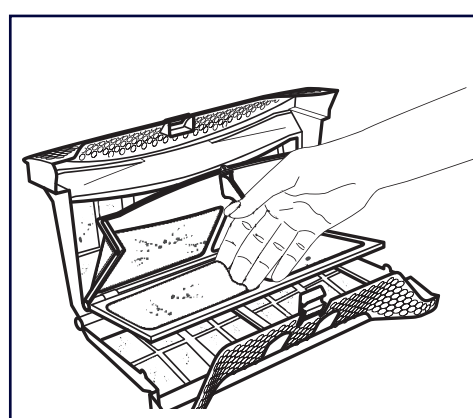





Gather lint with
your hand from the
internal parts of the
filter. Throw the lint in
the dustbin.

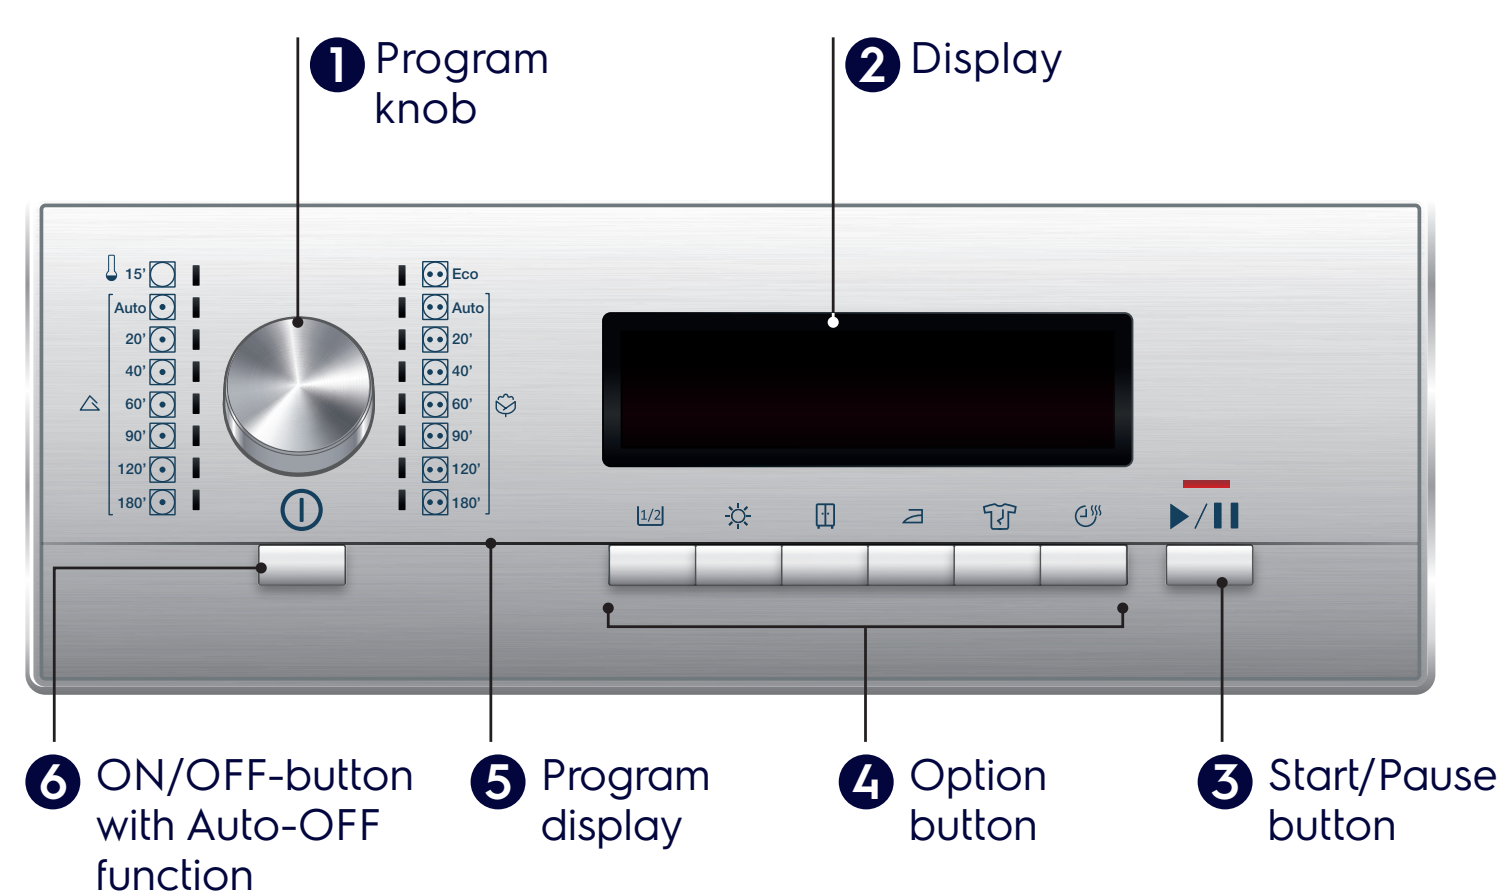If necessary, remove lint from the filter socket and gasket. You can use a vacuum cleaner. Place the filter back inside the filter socket.

 





Control panel



Programs

Eco		Cotton and towelling - the most efficient programme concerning energy consumption
		Cotton and towelling - normal temperature
		Easy-to-clean, viscose, cotton blend fabrics and delicate fabrics - Low temperature
		Airing bedspreads, duvets and bedclothes.

Options

	If loading capacity is not fully required, use this option		Extra Dry - This option dries laundry more intensely
	Dryness - Cupboard dry		Dryness - Iron dry
	Care - This option prevents laundry from creases		Time dry option - User can increase time of drying in 5 min steps

Find out more about
the advantages of myPRO
www.electroluxprofessional.com