

Tumble Dryer

User Tips




Before starting: Remove all objects from pockets and make sure there are no metal items such as screws, pins etc. left.



**Multi
Housing
Laundry**




Swipe and select the program of your choice

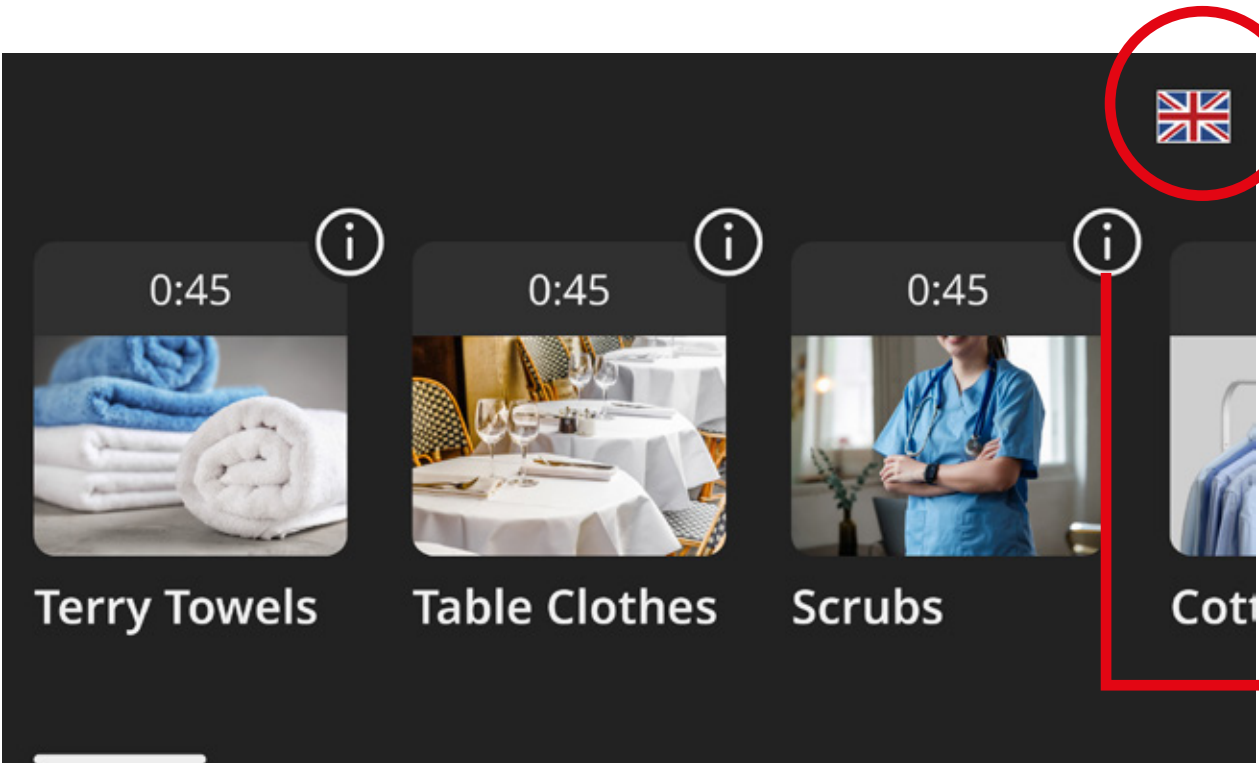

Change language by tapping the flag in the up right corner

Click on **i** icon for more information about the programs



There are three selection screens for optional choices to complete the laundry program

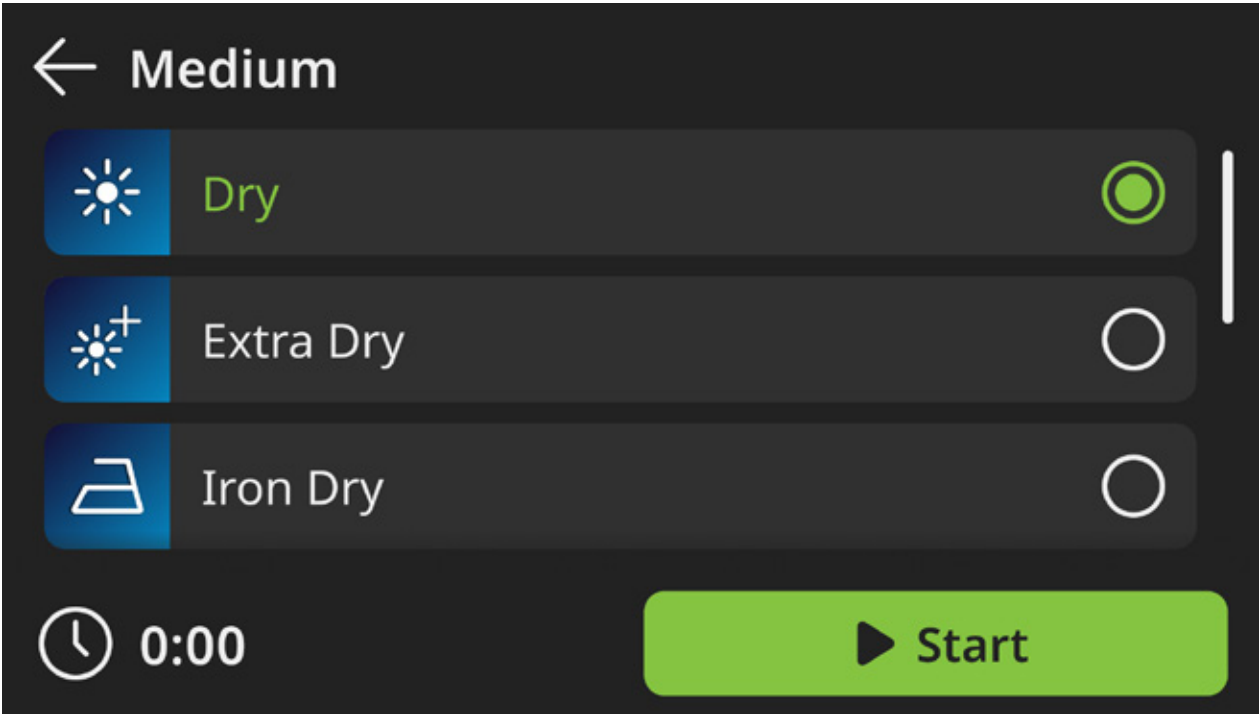

Then tap on the ► button to start the program



When the drying is finished, please clean the filter as per screen instructions

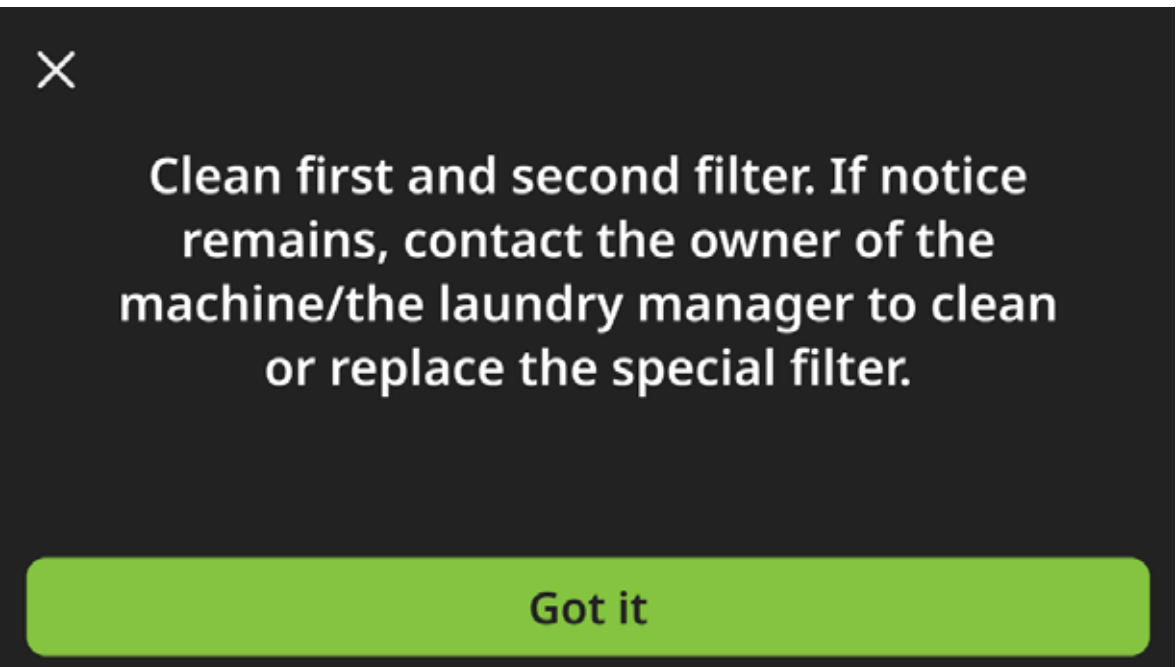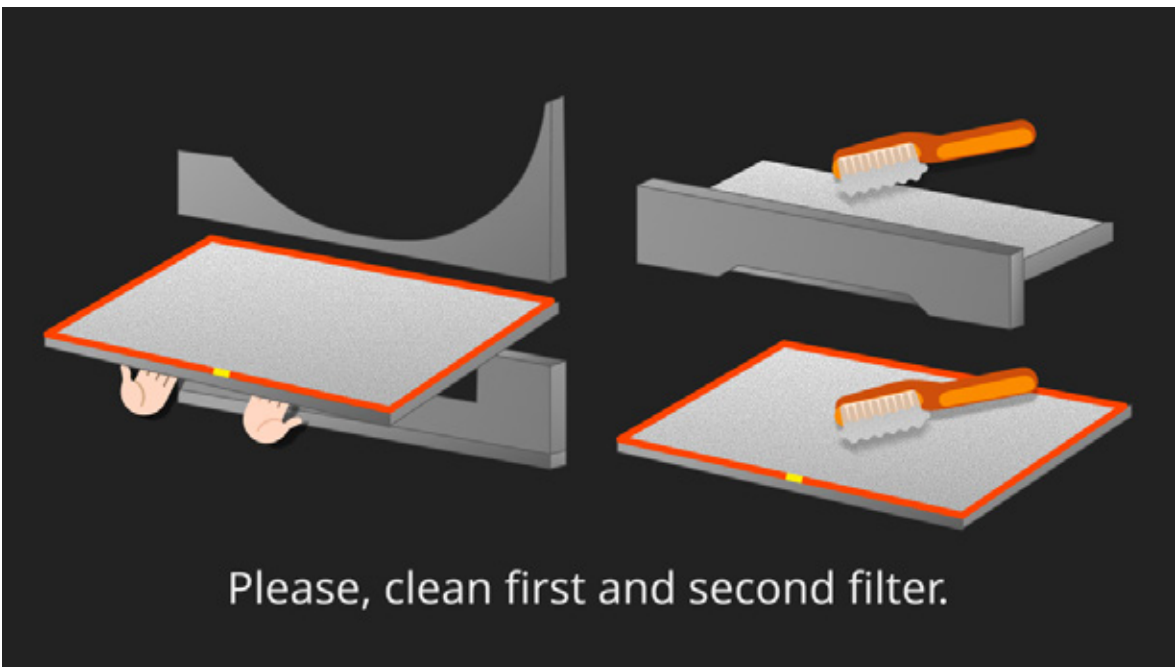

Possible warning

If “maintenance” is displayed, inform the person in charge of maintenance. The machine can still be used.

If you need to pause the program

Tap the pause symbol. The door can be opened after a while, but note that drying time will be prolonged. Close the door and tap the green play button to continue the wash program.

Once you have finished drying

Leave the door open. Clean the filter as per instructions.