

Washer Extractor

 
User Tips




Before starting: Remove all objects from pockets and make sure there are no metal items such as screws, pins etc. left.



Care
Home
Laundry

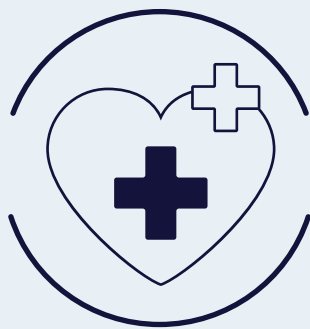

 Swipe and select the program of your choice

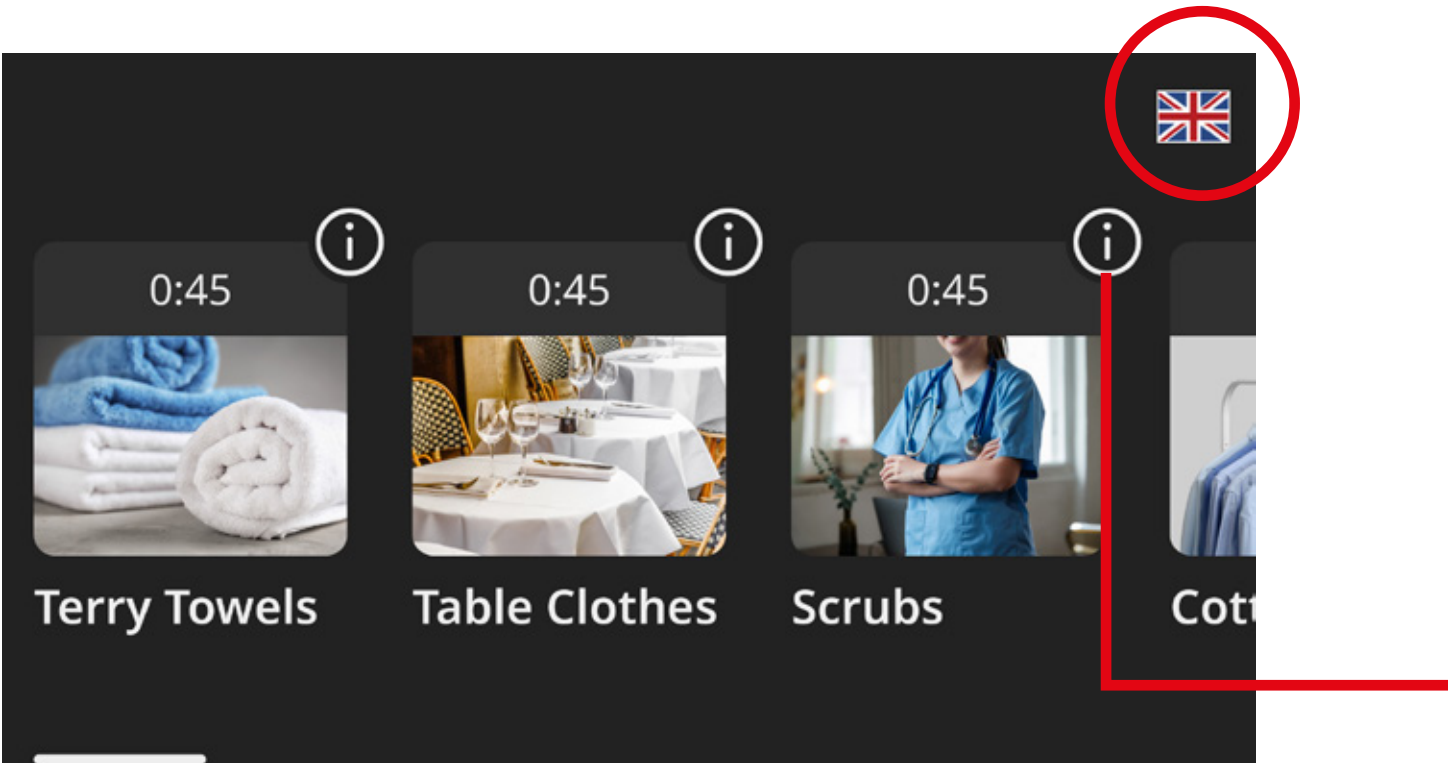

Change language by tapping the flag in the up right corner

Click on icon for more information about the programs



DISINFECTION – HEAVY SOILING
Cold pre-rinses are included to remove heavy soil/feces. Deactivates SARS-CoV-2, Human Norovirus, common bacteria. Use for urine, feces, and vomit.

 


Global Disinfection: 60°, 70°, 90°
Deactivates of SARS-CoV-2, Human Norovirus, common bacteria. Use when risk of infection.

RISE

RISE is Sweden's research institute and a long-term innovation partner of Electrolux Professional in the development and validation of ad hoc solutions for the laundry market.

There are three selection screens for optional choices to complete the laundry program

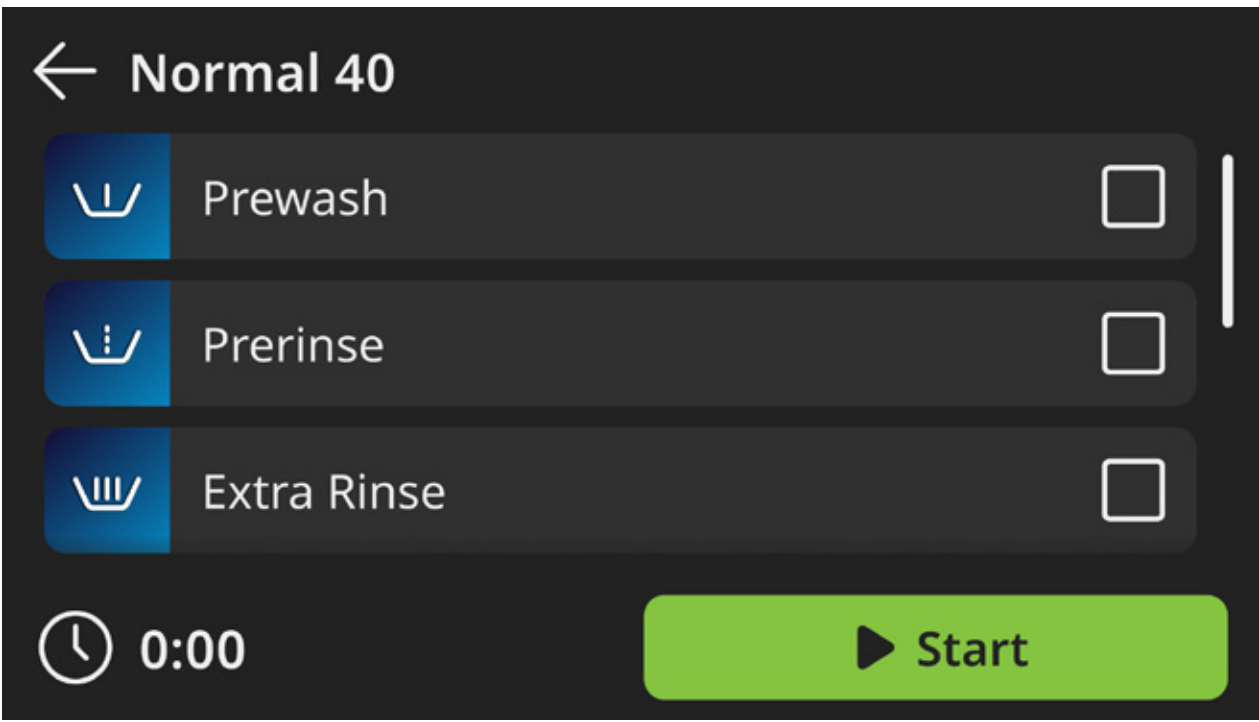

Then tap on the ► button to start the program



Possible warning

If “maintenance” is displayed, inform the person in charge of maintenance. The machine can still be used.

If you need to pause the program

Tap the pause symbol. The door can be opened after a while unless the water level is too high. Close the door and tap the green play button to continue the wash program.

Once you have finished washing

Leave the door open. Clean the detergent compartment, leave the cover of the detergent box open.