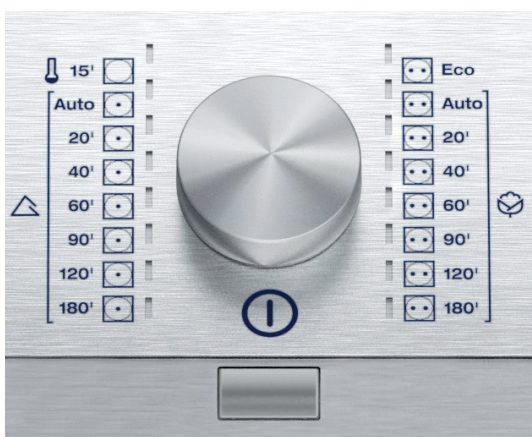
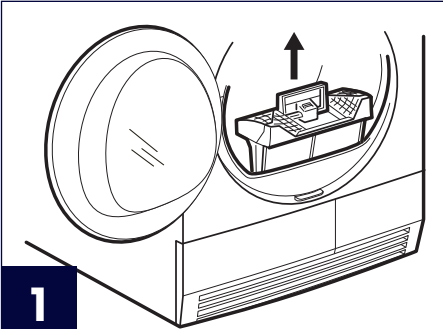
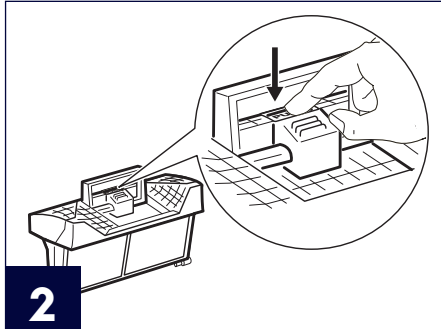
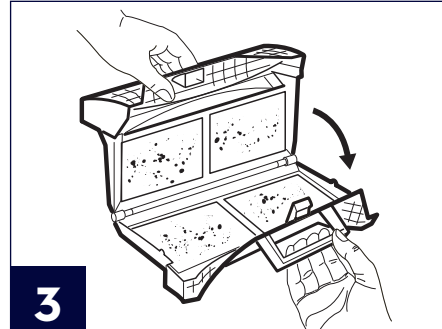
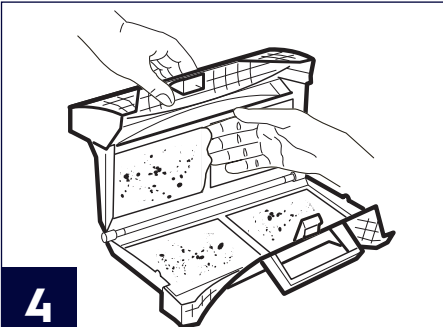
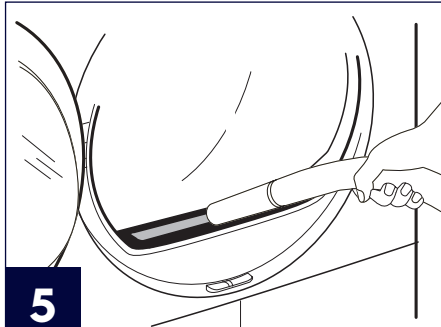


Operating instructions for **myPRO Edge** dryers with Heat Pump technology

Instructions

- 1**  Choose program
- 2**  Optionally select a function and/or push the ► button to start program
- 3**  Drying process is completed when acoustic signal appears

Cleaning filter

- 1**  Open the door. Pull the filter.
- 2**  Push the button.
- 3**  Open the filter.
- 4**  Gather lint with hand from internal parts of the filter. Throw the lint in the dustbin.
- 5**  If necessary remove the lint from the filter socket and gasket. You can use a vacuum cleaner. Put the filter inside the filter socket.

Control panel



Programs

-  **ECO – Cotton and thick fabrics** – The most efficient program concerning energy consumption
-  **Normal Dry – Cotton and thick fabrics** – Normal temperature
-  **Low Dry – Delicate and synthetic fabrics** – Low temperature
-  **Airing** bedspreads, duvets and bedclothes.

Functions

-  **Reverse Plus** – Ideal for long items. Reduces tangling and improves drying uniformity.
-  **Extra Dry** – Thick or difficult-to-dry fabrics. Ensures completely dry results.
-  **Cupboard Dry** – Standard drying needs. Ready-to-store laundry.
-  **Iron Dry** – Leaves slight moisture for easier ironing.
-  **Care** – When laundry cannot be removed immediately. Prevents wrinkles.
-  **Time dry option** – Custom drying needs. User can increase time of drying in 5 min steps.

Find out more about
the advantages of myPRO
www.electroluxprofessional.com