

Operating instructions for **myPRO** Edge washers

Instructions

1



Ensure to use the correct amount of detergent



2



Choose program

3



Optionally select a function and/or push the ► button to start program

4

Program duration adjusts to laundry load automatically

5



Washing process is completed when acoustic signal appears

Control panel



Programs

Eco

Cotton
Eco 40-60 9kg capacity

Fast Wash

Cotton and synthetic items
4kg capacity

Cottons

20°C
40 60 95
White and colored cotton
9kg capacity

Synthetics

30 40
Synthetics and delicates
4kg capacity

Hand Wash

Very delicate garments
2kg capacity

Disinfection

60 70 80
High-hygiene laundry requiring bacteria reduction and sanitation
9kg capacity

Mop

60 85
Program for mops, work-wear and microfibers including an automatic pre rinse
9kg capacity

ProSteam Boost

Garment refresh without washing for cottons, synthetics and mixed items
1kg capacity

Functions

Pre-rinse – Removing loose dirt before main washing.

Spin Time – Increasing water removal after wash.

Prewash – Treating stubborn stains before main wash.

No Softener – Skipping softener use.

Extra Rinse – Improving rinsing performance.

Delay Start – Scheduling wash start time.

Find out more about the advantages of myPRO
www.electroluxprofessional.com