

Operating instructions for **myPRO Go** washers

Instructions



1 Turn the machine ON



2 Load machine with garments and close door (paying attention not to overfill)



3 Add detergent



4 Select the desired program and verify the amount due on the display of the machine



5 Pay the money due for the selected program (value on display will decrease)



6 Once the value due shown on the display is 0, select START



7 The total program time in minutes will be shown on the display at program start



8 Once the timer has reached 0, washing is complete (could be in stand-by mode)



9 Remove garments from the washer drum and power machine OFF

Control panel



Programs

Cottons

-  White and colored cotton
-  9kg capacity
- 

Synthetics

-  Synthetics and delicates
- 4kg capacity

Hand Wash

-  Very delicate garments
- 2kg capacity

ProSteam Boost

-  Garment refresh without washing for cottons, synthetics and mixed items
- 1kg capacity

Find out more about the advantages of myPRO
www.electroluxprofessional.com