



**Electrolux**  
PROFESSIONAL



# Operating instructions for myPROzip Washers

## Instructions



1. Turn the machine ON



2. Load machine with garments and close door (paying attention not to overfill)




3. Add detergent



4. Select the desired program and verify the amount due on the display of the machine



5. Pay the money due for the selected program (value on display will decrease)

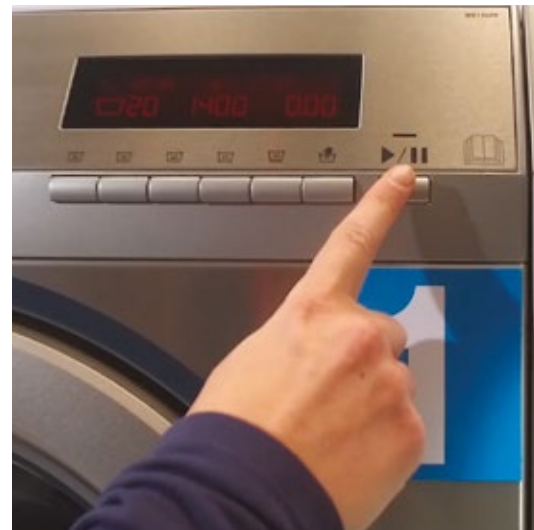

6. Once the value due shown on the display is 0, select START



7. The total program time in minutes will be shown on the display at program start




8. Once the timer has reached 0, washing is complete (could be in stand-by mode)



9. Remove garments from the washer drum and power machine OFF

## Control panel

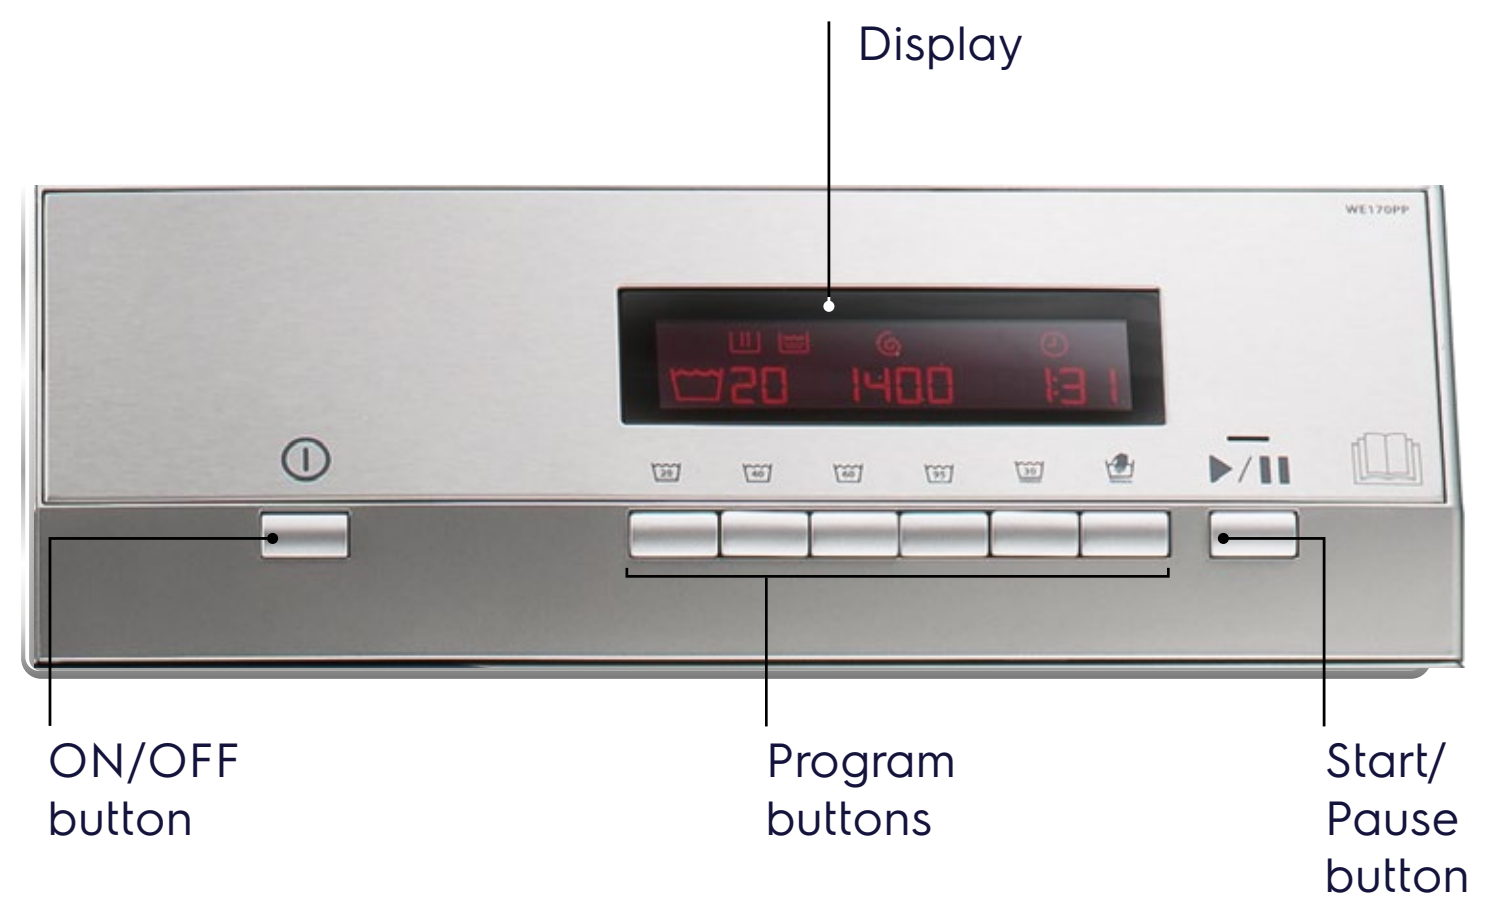

## Programs

### Normal

Coloured cotton

**White cotton**  
Normal soil and light soil

### Delicates

Delicates like acrylycs, viscose, polyester items

### Hand wash

Machine & hand washable wool

Find out more about  
the advantages of myPRO  
[www.electroluxprofessional.com](http://www.electroluxprofessional.com)



Scan to see the  
tutorial video