

## GENERAL INSTRUCTIONS



Before installing and starting the appliance, carefully read this handbook as it provides important information and instructions on safe installation, use and maintenance.

Carefully keep this handbook for further consultation by the various operators, or in case the appliance is resold.

### ATTENTION!

**Appliance installation and any adaptation or maintenance work must only be carried out by professionally qualified personnel authorised by the Manufacturer.**

This appliance is intended for specific industrial use; any other use is deemed improper.

**It must only be used by trained personnel.**

Always switch the appliance off in case of a fault or poor operation.

**For any repairs, only turn to a service centre authorised by the manufacturer and demand original replacement parts.**

**Failure to observe the above can compromise appliance safety and invalidates any form of warranty.**

Do not wash the appliance with direct jets of water.

Do not use products containing chlorine (sodium hypochlorite, hydrochloric acid, etc.), even if diluted, to clean the steel.



**The manufacturer declines any liability for operations carried out on the appliance without following the instructions given in this**

**manual.**

**No part of this manual may be reproduced.**

## INSTALLATION INSTRUCTIONS

### ATTENTION!

**Before moving the appliance, disconnect the power supply and any mechanical stops.**

**Remove any containers or objects on them.**

**NEVER move the trolley when it is still connected to the power**

## REFERENCE STANDARDS

The appliance is manufactured in compliance with the following European Directives:

- LOW VOLTAGE DIRECTIVE 2006/95/EC
- ELECTROMAGNETIC COMPATIBILITY DIRECTIVE 93/68/EEC

## ELECTRICAL CONNECTION

The trolley has a spiral cable and Schuko socket of suitable length and section. Before connecting to the power supply, make sure:

- ✓ a suitable cutout switch is installed between the power outlet and the electric line
- ✓ Appliance max. leakage current is 1 mA/kW.
- ✓ The **electrical safety** of this appliance is guaranteed only when it is connected to an efficient earthing system.

**The Manufacturer declines any liability if the accident-prevention regulations are not respected.**

## POSITIONING

Unpack the appliance and carefully remove the protective film, making sure no traces of glue remain; if necessary, remove any traces with a suitable solvent.

For disposal of the packing, see "DISPOSAL" in the section "THE ENVIRONMENT".

## OPERATING INSTRUCTIONS

This appliance must only be used for its expressly designed purpose, i.e. for keeping food hot **above 65°C and in the right humidity conditions.**

It can also be used as a dish warmer trolley.

Any other use is deemed improper.

## STARTING

For the humidifying function, the appliance needs to be filled with approx. 1.5 litres of water, corresponding to a level of approx. 2.5 cm in the tank. To access the tank, located in the middle of the trolley bottom, just lift the breakwater cover using the special hole. Remember to close the drain cock located under the trolley before filling the tank.

- ✓ Turn the knob "1" clockwise fig. 1.
- Lighting up of indicator signals that the appliance is on.
- ✓ Turn the knob of the thermostat "2" to the required heating temperature setting (between 30°C and 90°C).

Lighting up of indicator signals that the heating elements are on; it goes off when the set temperature is reached. The current compartment temperature is displayed.

- ✓ Turn the knob of the humidistat "3" to the required humidity setting.

Lighting up of indicator signals that the steam generator heating elements are on.

At the end of the service, turn the knob "1" anticlockwise to switch the trolley off. All the indicators go off.

## CLEANING AND MAINTENANCE

### ATTENTION!

**Do not carry out maintenance operations with the appliance plugged in, or start it without the covering panels properly fitted.**

**Use protective gloves during all maintenance operations!!**

Remove any scale deposits from the tray with vinegar or specific scale removers available on the market, following the supplier's instructions.

Clean the stainless-steel parts with lukewarm soapy water, then rinse and dry thoroughly.

NEVER use detergent products containing abrasive or corrosive substances, shavings, scouring pads, common steel brushes or scrapers to clean the stainless-steel surfaces.

Check the power cable regularly and have it replaced in case of signs of wear.

Idle periods

During long appliance idle periods, take the following precautions:

- ✓ disconnect the power supply;
- ✓ go over all the stainless-steel surfaces vigorously with a cloth moistened with paraffin oil in order to create a protective film;
- ✓ store the unit in a dry and well-aired place.

Have the entire appliance checked periodically (at least once a year).

## THE ENVIRONMENT - PACKING

The packing materials are environmentally friendly and can be stored without risk or burned in an appropriate waste incineration plant.

Recyclable plastic components are marked with:



**Polyethylene:** outer wrapping, instruction booklet bag.



**Polypropylene:** straps.



**Polystyrene foam:** corner protectors, padding.

## CLEANING

In order to reduce the emission of pollutants into the environment, it is advisable to clean the appliance (externally and when necessary internally) with products that are more than 90 % biodegradable.

## DISPOSAL

Do not disperse in the environment. Our appliances are manufactured using recyclable metal materials.

Make the appliance unusable by removing the power cable and any compartment or cavity closing devices (when present) in order to avoid the risk of someone becoming trapped inside.

For further information regarding the recycling of this product, contact the product agent or local dealer, the after-sales service or the local body responsible for waste disposal.

**The Manufacturer reserves the right to change the characteristics of the appliance described in this publication without notice.**