


Cookers

N9E

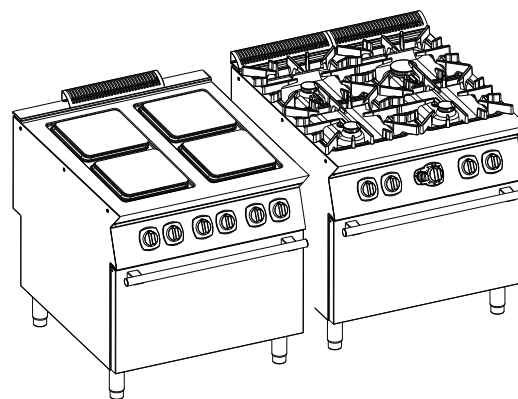

EN Installation and operating manual *



*Original instructions

59589FW02- 2021.03

Foreword



The installation, use and maintenance manual (hereinafter Manual) provides the user with information necessary for correct and safe use of the machine (or “appliance”).

The following must not be considered a long and exacting list of warnings, but rather a set of instructions suitable for improving machine performance in every respect and, above all, preventing injury to persons and animals and damage to property due to improper operating procedures.

All persons involved in machine transport, installation, commissioning, use and maintenance, repair and disassembly must consult and carefully read this manual before carrying out the various operations, in order to avoid wrong and improper actions that could compromise the machine's integrity or endanger people. Make sure to periodically inform the user regarding the safety regulations. It is also important to instruct and update personnel authorised to operate on the machine, regarding its use and maintenance.

The manual must be available to operators and carefully kept in the place where the machine is used, so that it is always at hand for consultation in case of doubts or whenever required.

If, after reading this manual, there are still doubts regarding machine use, do not hesitate to contact the Manufacturer or the authorised Service Centre to receive prompt and precise assistance for better operation and maximum efficiency of the machine. During all stages of machine use, always respect the current regulations on safety, work hygiene and environmental protection. It is the user's responsibility to make sure the machine is started and operated only in optimum conditions of safety for people, animals and property.



IMPORTANT

- The manufacturer declines any liability for operations carried out on the appliance without respecting the instructions given in this manual.
- The manufacturer reserves the right to modify the appliances presented in this publication without notice.
- No part of this manual may be reproduced.
- This manual is available in digital format by:
 - contacting the dealer or reference customer care;
 - downloading the latest and up to date manual on the web site;
- The manual must always be kept in an easily accessed place near the machine. Machine operators and maintenance personnel must be able to easily find and consult it at any time.

Contents

A	WARNING AND SAFETY INFORMATION	5
A.1	General information	5
A.2	Personal protection equipment	6
A.3	General safety	6
A.4	General safety rules	7
A.5	Safety signs to be placed near the machine area	9
A.6	Transport, handling and storage	9
A.7	Installation and assembly	10
A.8	Electrical connection	10
A.9	Machine space limits	10
A.10	Positioning	10
A.11	Reasonably foreseeable improper use	11
A.12	Machine cleaning and maintenance	11
A.13	Machine disposal	12
B	WARRANTY	12
B.1	Warranty terms and exclusions	12
C	TECHNICAL DATA	14
C.1	Dataplate position	14
C.2	Appliance and manufacturer's identification data	14
C.3	N9E Gas appliances Technical data	15
C.4	N9E Gas / Electrical appliances Technical data	16
C.5	N9E Gas / Electrical appliance Technical data – Worktop without pilot	17
D	GENERAL INFORMATION	18
D.1	Law requirements only for Australia	18
D.2	Introduction	18
D.3	Intended use and restrictions	18
D.4	Testing and inspection	18
D.5	Copyright	18
D.6	Keeping the manual	18
D.7	Recipients of the manual	18
D.8	Definitions	18
D.9	Responsibility	19
E	NORMAL USE	19
E.1	Characteristics of personnel trained for normal machine use	19
E.2	Characteristics of personnel enabled to operate on the machine	19
E.3	Operator qualified for normal machine use	19
F	INSTALLATION AND ASSEMBLY	19
F.1	Introduction	19
F.2	Customer's responsibilities	19
F.3	Disposal of packing	19
F.4	Joining Appliances	20
F.4.1	Floor Fixing (depending on the appliance and/or model)	20
F.4.2	Installation On Bridge, Cantilever Frame Or Cement Plinth (depending on the appliance and/or model)	20
F.4.3	Sealing Gaps Between Appliances	20
F.5	Gas, electricity, water and other connections (if present, depending on the appliance and/or model)	20
F.6	Gas Connections	20
F.6.1	Introduction	20
F.6.2	Fume exhaust	20
F.6.3	Before connecting	20
F.6.4	Connection (depending on the appliance and/or model)	21
F.6.5	Gas pressure regulator	21
F.6.6	Conversion to another type of gas	21
F.7	Gas appliances regulations	21
F.7.1	Supply pressure checking (all versions)	21
F.7.2	Primary air checking (static / fan oven)	22
F.7.3	Main burner nozzle replacement (cooktop and static / fan oven)	22
F.7.4	Pilot burner nozzle replacement (cooktop and oven)	22
F.7.5	Minimum flame screw replacement (cooktop and large oven 12kW)	22
F.8	Before completing the installation operations	22
F.9	Replacing the adjustment spring of the pressure regulator (Only for Australia)	22
F.10	Electrical connection	23
F.10.1	Electrical appliances	23
F.10.2	To access the terminal block	23
F.10.3	Equipotential node and Earth connection	24
F.10.4	Power cable	24
F.11	Safety thermostat	24
F.12	Handrail (only for marine appliances)	24
F.12.1	Installation	24
G	INSTRUCTION FOR THE USER	24
G.1	General precautions	24
G.2	Cooktop use – Gas models	24

	G.2.1	Lightning on	24
	G.2.2	Switching off	25
G.3		Cooktop use — Gas models with igniter without pilot flame	25
	G.3.1	Lightning on	25
	G.3.2	Switching off	25
G.4		Cooktop use — Electrical Models	25
	G.4.1	Switching On.....	25
	G.4.2	Switching Off.....	26
G.5		Oven use — Gas models	26
	G.5.1	Lightning on	26
	G.5.2	Switching off	26
G.6		Fan oven use — Gas models	26
	G.6.1	Switching on	26
	G.6.2	Switching off	27
G.7		Interlock	27
G.8		Oven use — Electric Models	27
	G.8.1	Switching On.....	27
	G.8.2	Switching Off.....	27
H		MACHINE CLEANING AND MAINTENANCE.....	27
H.1		Ordinary maintenance	27
	H.1.1	Care information	27
	H.1.2	Cleaning the appliance and accessories	28
	H.1.3	External parts.....	28
	H.1.4	Other surfaces.....	28
	H.1.5	Periods of non-use	28
	H.1.6	Internal parts (every 6 months).....	28
H.2		Brief Troubleshooting guide	28
H.3		Repair and extraordinary maintenance	29
H.4		Maintenance intervals.....	29
H.5		Maintenance contacts (only for Australia).....	30
I		MACHINE DISPOSAL.....	30
I.1		Waste storage.....	30
I.2		Procedure regarding appliance dismantling macro operations	30
J		ENCLOSED DOCUMENTS.....	31

A WARNING AND SAFETY INFORMATION

A.1 General information

To ensure safe use of the machine and a proper understanding of the manual it is necessary to be familiar with the terms and typographical conventions used in the documentation. The following symbols are used in the manual to indicate and identify the various types of hazards:



WARNING

Danger for the health and safety of operators.



WARNING

Danger of electrocution - dangerous voltage.



CAUTION

Risk of damage to the machine or the product.



IMPORTANT

Important instructions or information on the product



Read the instructions before using the appliance








Clarifications and explanations

- This appliance is to be intended for commercial and collective use, for example in kitchens of restaurants, canteens, hospitals and in commercial enterprises such as bakeries, butcheries, etc., not for continuous mass production of food. Any other use is deemed improper.
- Only specialised personnel are authorised to operate on the machine.
- This appliance must not be used by minors and adults with limited physical, sensory or mental abilities or without adequate experience and knowledge regarding its use.
 - Do not let children play with the appliance.
 - Keep all packaging and detergents away from children.
 - Cleaning and user maintenance shall not be made by children without supervision.
- Do not store explosive substances, such as pressurized containers with flammable propellant, in this appliance or close to the appliance
- Do not remove, tamper with or make the machine “CE” marking illegible.
- Refer to the data given on the machine’s data plate “CE” marking for relations with the Manufacturer (e.g. when ordering spare parts, etc.).
- When scrapping the machine, the “CE” marking must be destroyed.

A.2 Personal protection equipment

Summary table of the Personal Protection Equipment (PPE) to be used during the various stages of the machine's service life.

Stage	Protective garments 	Safety footwear 	Gloves 	Glasses 	Safety helmet 
Transport	—	●	○	—	○
Handling	—	●	○	—	—
Unpacking	—	●	○	—	—
Installation	—	●	● ¹	—	—
Normal use	●	●	● ²	—	—
Adjustments	○	●	—	—	—
Routine cleaning	○	●	● ¹⁻³	○	—
Extraordinary cleaning	○	●	● ¹⁻³	○	—
Maintenance	○	●	○	—	—
Dismantling	○	●	○	○	—
Scrapping	○	●	○	○	—
Key:					
●	PPE REQUIRED				
○	PPE AVAILABLE OR TO BE USED IF NECESSARY				
—	PPE NOT REQUIRED				

1. During these operations, gloves must be cut-resistant. Failure to use the personal protection equipment by operators, specialized personnel or users can involve exposure to damage to health (depending on the model).
2. During these operations, gloves must be heatproof to protect hands from contact with hot food or hot parts of the appliance and/or when removing hot items from it. Failure to use the personal protection equipment by operators, specialised personnel or users can involve exposure to chemical risk and cause possible damage to health (depending on the model).
3. During these operations, gloves must be suitable for contact with chemical substances used (refer to the safety data sheet of the substances used for information regarding the required PPE). Failure to use the personal protection equipment by operators, specialized personnel or users can involve exposure to chemical risk and cause possible damage to health (depending on the model).

A.3 General safety

- The machines are provided with electric and/or mechanical safety devices for protecting workers and the machine itself.
- Never operate the machine, removing, modifying or tampering with the guards, protection or safety devices.
- Do not make any modifications to the parts supplied with the appliance.
- Several illustrations in the manual show the machine, or parts of it, without guards or with guards removed. This is purely for explanatory purposes. Do not use the machine without the guards or with the protection devices deactivated.

- Do not remove, tamper with or make illegible the safety, danger and instruction signs and labels on the machine.
- Air recirculation must take into account the air necessary for combustion, 2 m³/h/kW of gas power, and also the “well-being” of persons working in the kitchen.
- Inadequate ventilation causes asphyxia. Do not obstruct the ventilation system in the place where this appliance is installed. Do not obstruct the vents or ducts of this or other appliances.
- Place emergency telephone numbers in a visible position.
- The A-weighted emission sound pressure level does not exceed 70 dB(A).
- Turn the appliance off in case of fault or poor operation.
- Do not use products (even if diluted) containing chlorine (sodium hypochlorite, hydrochloric or muriatic acid, etc.) to clean the appliance or the floor under it.
- Do not use metal tools to clean steel parts (wire brushes or Scotch Brite type scouring pads).
- Do not allow oil or grease to come into contact with plastic parts. Do not allow dirt, fat, food or other residuals to form deposits on the appliance.
- Do not spray water or use water jets or steam cleaner.
- Do not store or use gasoline or other flammable vapours, liquids or items in the vicinity of this or any other appliance.
- Do not spray aerosols in the vicinity of this appliance while it is in operation.
- Never check for leaks with an open flame.
- Install the appliance under conditions of adequate ventilation in order to provide a suitable air change per hour. Make sure that the ventilation system, whatever it is, always remains operational and efficient for the entire period of time during which the equipment is operating.

A.4 General safety rules

Protection devices installed on the machine

- The guards on the machine are:
fixed guards (e.g. casings, covers, side panels, etc.), fixed to the machine and/or frame with screws or quick-release connectors that can only be removed or opened with tools. Therefore the user must not remove or tamper with such devices. The Manufacturer declines any liability for damage due to tampering or their non-use.

Instructions for use and maintenance

- Risks mainly of a mechanical, thermal and electrical nature exist in the machine. Where possible the risks have been neutralised:
 - directly, by means of adequate design solutions.
 - indirectly by using guards, protection and safety devices.
- During maintenance, always carried out by personnel qualified, several risks remain, as these could not be eliminated, and must be neutralised by adopting specific measures and precautions.
- Do not carry out any checking, cleaning, repair or maintenance operations on moving parts. Workers must be informed of this prohibition by means of clearly visible signs.
- To guarantee machine efficiency and correct operation, periodical maintenance must be carried out according to the instructions given in this manual.
- Make sure to periodically check correct operation of all the safety devices and the insulation of electrical cables, which must be replaced if damaged.

- Repair and extraordinary Maintenance have to be carried out by specialised authorised personnel provided with all the appropriate personal protection equipment, tools, utensils and ancillary means.
- Never operate the machine, removing, modifying or tampering with the guards, protection or safety devices.
- Before carrying out any operation on the machine, always consult the manual which gives the correct procedures and contains important information on safety.

Residual risks

- The machine has several risks that were not completely eliminated from a design standpoint or with the installation of adequate protection devices. Nevertheless, through this manual the Manufacturer has taken steps to inform operators of such risks, carefully indicating the personal protection equipment to be used by them. In order to reduce the risks, provide for sufficient spaces while installing the unit.

To preserve these conditions, the areas around the machine must always be:

- kept free of obstacles (e.g. ladders, tools, containers, boxes, etc.);
- clean and dry;
- well lit.

For the Customer's complete information, the residual risks remaining on the machine are indicated below: such situations are deemed improper and therefore strictly forbidden.

Residual risk	Description of hazardous situation
Slipping or falling	The operator can slip due to water or dirt on the floor
Burns/abrasions (e.g. heating elements)	The operator deliberately or unintentionally touches some components inside the machine without using protective gloves
Electrocution	Contact with live parts during maintenance operations carried out with the electrical panel powered
Sudden closing of the lid/door/oven door (if present, depending on the appliance type)	The operator for normal machine use could suddenly and deliberately close the lid/door/oven door (if present, depending on the appliance type)
Tipping of loads	When handling the machine or the packing containing it, using unsuitable lifting systems or accessories or with the unbalanced load

Mechanical safety characteristics, hazards





- The appliance does not have sharp edges or protruding parts. The guards for the moving and live parts are fixed to the cabinet with screws, to prevent accidental access.





CAUTION

In case of a significant anomaly (e.g. short circuits, wires coming out of the terminal block, motor breakdowns, worn electrical cable sheathing, smell of gas indicating possible leakage, etc.) the operator must: immediately deactivate the machine and disconnect all the supplies (electricity, gas, water).

A.5 Safety signs to be placed near the machine area

Prohibition	Meaning
	Do not remove the safety devices
	Do not use water to extinguish fires (placed on electrical parts)
	Keep the area around the appliance clear and free from combustible materials. Do not keep flammable materials in the vicinity of the appliance
	Install the appliance in a well-ventilated place to avoid the creation of dangerous mixtures of unburnt gases in the same room

Danger	Meaning
	caution, hot surface
	danger of electrocution (shown on electrical parts with indication of voltage)

End of use

- When the appliance is no longer to be used, make it unusable by removing the mains power supply wiring.

A.6 Transport, handling and storage

- Due to their size, the machines can be stacked on top of each other during transport, handling and storage by complying with that specified on the slip placed on the packing.
- Do not stand under suspended loads during loading/unloading operations. Unauthorised personnel must not enter the work area.
- The weight of the appliance alone is not sufficient to keep it steady.
- For machine lifting and anchoring, do not use movable or weak parts such as: casing, electrical raceways, pneumatic parts, etc.
- Do not push or pull the appliance to move it, as it may tip over.
- Machine transport, handling and storage personnel must be adequately instructed and trained regarding the use of lifting systems and personal protection equipment suitable for the type of operation carried out (e.g. overalls, safety shoes, gloves and helmet).
- When removing the anchoring systems, make sure the stability of the machine parts does not depend on the anchoring and, therefore, that this operation does not cause the load to fall off the vehicle. Before unloading the machine components, make sure all the anchoring systems are removed.
- Machine positioning, installation and disassembly must be carried out by specialised personnel.

A.7 Installation and assembly

- The operations described must be carried out by personnel qualified (refer to E.1 *Characteristics of personnel trained for normal machine use*) in compliance with the current safety regulations, regarding the equipment used and the operating procedures.
- The plug, if present, must be accessible after positioning the appliance in the place of installation.
- Disconnect the appliance from the power supply before carrying out any installation procedure.

A.8 Electrical connection

Before connecting, make sure the mains voltage and frequency match those indicated on the appliance data plate.

- Work on the electrical systems must only be carried out by specialised personnel.
- Connection to the power supply must be carried out in compliance with the regulations and provisions in force in the country of use; arrange a suitable high-sensitivity manual-reset differential omnipolar thermal-magnetic switch with contact gap enabling complete disconnection in category III overvoltage conditions.
- If the power cable is damaged, it must be replaced by the Customer Care Service or in any case by specialised personnel, in order to prevent any risk.
- Verify that a safety circuit breaker is installed between the power cable of the appliance and the mains electric line. The contact opening max. distance and leakage current must comply with the local safety regulations.
- Be sure to power the equipment with systems that are protected against overvoltage; the manufacturer declines all responsibility for effects due to anomalies induced by the electrical supply system.

A.9 Machine space limits

- A suitable space must be left around the appliance (for operations, maintenance, etc.).
- This space must be increased in case of use and/or transfer of other equipment and/or means or if exit routes are necessary inside the workplace.

A.10 Positioning

- Install the appliance, taking all the safety precautions required for this type of operation, also respecting the relevant fire-prevention measures.
- Handle the appliance with care in order to avoid damage or danger to people. Use a pallet for handling and positioning.
- The installation diagram gives the appliance overall dimensions and the position of connections (gas, electricity, water). Check that they are available and ready for making all the necessary connections.
- Prevent the areas where the machine is installed to be polluted with corrosive substances (chlorine, etc.). In case such prevention cannot be guaranteed, the entire stainless steel surface has to be coated by a paraffin protective film spread by using a rag soaked with paraffin. The manufacturer declines any liability for corrosive effects due to external causes.
- The appliance can be installed separately or combined only with other appliances of the same range.
- The appliances are not suitable for recess-mounting. Leave a space of at least 100 mm between the appliance and side walls and 100 mm from the rear wall, or in any case an adequate space to enable subsequent servicing or maintenance operations.
- Suitably insulate surfaces that are at distances less than that indicated.

- Maintain a distance of at least 100 mm between the appliance and any combustible walls. Do not store or use flammable materials and liquids near the appliance.
- Check and, if necessary, level the appliance after positioning. Incorrect levelling can cause appliance malfunctioning.
- Wear protective gloves and unpack the machine, carrying out the following operations:
 - cut the straps and remove the protective film, taking care not to scratch the surface if scissors or blades are used;
 - remove the cardboard top, the polystyrene corners and the vertical protection pieces;
 - for appliances with stainless steel cabinet, remove the protective film very slowly without tearing it, to avoid leaving glue stuck to the surface;
 - should this happen, remove the traces of glue with a non-corrosive solvent, rinsing it off and drying thoroughly;
 - go over all stainless steel surfaces vigorously with a cloth moistened with paraffin oil in order to create a protective film.
- In case of electrical permanent connection: the device must be lockable in the open position and accessible even after the appliance is installed in its place.



WARNING

Keep the ventilation openings in the appliance casing free of any obstructions.

A.11 Reasonably foreseeable improper use

Improper use is any use different from that specified in this manual. During machine operation, other types of work or activities deemed improper and that in general can involve risks for the safety of operators and damage to the appliance are not allowed. Reasonably foreseeable improper use includes:

- lack of machine maintenance, cleaning and periodical checks;
- structural changes or modifications to the operating logic;
- tampering with the guards or safety devices;
- failure to use personal protection equipment by operators, specialised personnel and maintenance personnel;
- failure to use suitable accessories (e.g. use of unsuitable equipment or ladders);
- keeping combustible or flammable materials, or in any case materials not compatible with or pertinent to the work, near the machine;
- wrong machine installation;
- placing in the machine any objects or things not compatible with its use, or that can damage the machine, cause injury or pollute the environment;
- climbing on the machine;
- non-compliance with the requirements for correct machine use;
- other actions that give rise to risks not eliminable by the Manufacturer.

The previously described actions are prohibited!

A.12 Machine cleaning and maintenance

- Before carrying out any cleaning or maintenance, disconnect the appliance from the power supply and carefully unplug it and empty all the water / oil tanks or grease collecting container (if presents).
- During maintenance, the cable and plug must be kept in a visible position by the operator carrying out the work.
- Do not touch the appliance with wet hands or feet or when barefoot.
- Do not remove the safety guards.

- Use a ladder with suitable protection for work on appliances with high accessibility (depending on the appliance type).
- Use suitable personal protection equipment (protective gloves). Refer to “A.2 *Personal protection equipment*” for suitable personal protection equipment.

Ordinary maintenance

- Disconnect the power supply before cleaning the appliance.
- Do not clean the machine with jets of water.

Precaution in case of long periods

- Machine maintenance, checking and overhaul operations must only be carried out by specialised personnel or the Customer Care Service, provided with adequate personal protection equipment (safety shoes and gloves), tools and ancillary means.
- Work on the electrical equipment must only be carried out by a specialised electrician or the Customer Care Service
- Put the machine in safe conditions before starting any maintenance operation.
- Respect the requirements for the various routine and extraordinary maintenance operations. Non-compliance with the instructions can create risks for personnel.

Preventive maintenance

- In order to ensure the safety and performance of your equipment, it is recommended that service is undertaken by Electrolux Professional authorised engineers every 12 months, in accordance with Electrolux Professional Service Manuals. Please contact your local Electrolux Professional Service Centre for further details.

Repair and extraordinary maintenance

- Repair and extraordinary Maintenance have to be carried out by specialised authorised personnel. The manufacturer declines any liability for any failure or damage caused by the intervention of an unauthorised technician by the Manufacturer and the original manufacturer warranty will be invalidated.

Parts and accessories

- Use only original accessories and/or spare parts. Failure to use original accessories and/or spare parts will invalidate the original manufacturer warranty and may render the machine not compliant with the safety standard.

A.13 Machine disposal

- Dismantling operations must be carried out by specialised personnel.
- Work on the electrical equipment must only be carried out by specialised personnel, with the power supply disconnected.
- Make the appliance unusable by removing the power cable and any compartment closing devices, to prevent the possibility of someone becoming trapped inside.

B WARRANTY

B.1 Warranty terms and exclusions

If the purchase of this product includes warranty coverage, warranty is provided in line with local regulations and subject to the product being installed and used for the purposes as designed, and as described within the appropriate equipment documentation.

Warranty will be applicable where the customer has used only genuine spare parts and has performed maintenance in accordance with Electrolux Professional user and

maintenance documentation made available in paper or electronic format.

Electrolux Professional strongly recommends using Electrolux Professional approved cleaning, rinse and descaling agents to obtain optimal results and maintain product efficiency over time.

The Electrolux Professional warranty does not cover:

- service trips cost to deliver and pick up the product;
- installation;

- training on how to use/operate;
- replacement (and/or supply) of wear and tear parts unless resulting from defects in materials or workmanship reported within one (1) week from the failure;
- correction of external wiring;
- correction of unauthorized repairs as well as any damages, failures and inefficiencies caused by and/or resulting from:
 - insufficient and/or abnormal capacity of the electrical systems (current/voltage/frequency, including spikes and/or outages);
 - inadequate or interrupted water supply, steam, air, gas (including impurities and/or other that does not comply with the technical requirements for each machine);
 - plumbing parts, components or consumable cleaning products that are not approved by the manufacturer;
 - customer's negligence, misuse, abuse and/or non-compliance with the use and care instructions detailed within the appropriate equipment documentation;
 - improper or poor: installation, repair, maintenance (including tampering, modifications and repairs carried out by third parties not authorized) and modification of safety systems;
 - Use of non-original components (e. g.: consumables, wear and tear, or spare parts);
 - environment conditions provoking thermal (e. g. overheating/freezing) or chemical (e. g. corrosion/oxidation) stress;
 - foreign objects placed in- or connected to- the product;
 - accidents or force majeure;
 - transportation and handling, including scratches, dents, chips, and/or other damage to the finish of the product, unless such damage results from defects in materials or workmanship and is reported within one (1) week of delivery unless otherwise agreed;
- product with original serial numbers that have been removed, altered or cannot be readily determined;
- replacement of light bulbs, filters or any consumable parts;
- any accessories and software not approved or specified by Electrolux Professional.

Warranty does not include scheduled maintenance activities (including the parts required for it) or the supply of cleaning agents unless specifically covered within any local agreement, subject to local terms and conditions.

Check on Electrolux Professional website the list of authorized customer care.


C TECHNICAL DATA

C.1 Dataplate position



IMPORTANT

This instruction manual contains information relevant to various appliances. See the dataplate located under the control panel to identify the appliance (see fig. below).

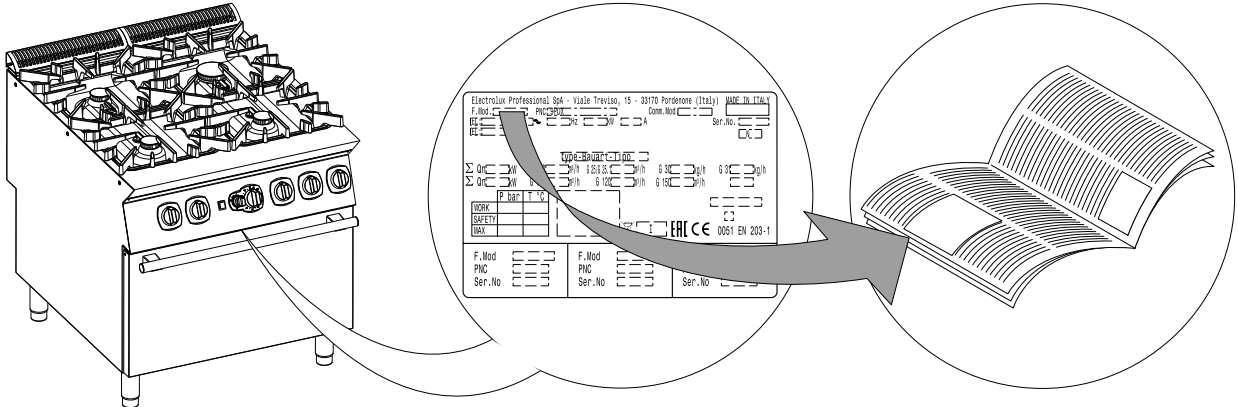

IMPORTANT

When installing the appliance, make sure the electrical connection is carried out in compliance with that specified on the data plate.

C.2 Appliance and manufacturer's identification data

An example of the marking or dataplate on the machine is given below:

GAS appliances

Electrolux Professional SpA - Viale Treviso, 15 - 33170 Pordenone (Italy) MADE IN ITALY	
F.Mod. <input type="text"/> PNC <input type="text"/> 9PDX	Comm.Mod. <input type="text"/>
IEL: <input type="text"/> Hz <input type="text"/> kW <input type="text"/> A <input type="text"/>	Ser.No. <input type="text"/>
IEL: <input type="text"/>	<input type="checkbox"/> N <input type="checkbox"/>
Type-Bauart-Tipo <input type="text"/>	
Σ Qn: <input type="text"/> kW G 20: <input type="text"/> m ³ /h G 25/B 25: <input type="text"/> m ³ /h G 30C: <input type="text"/> kg/h G 3: <input type="text"/> kg/h	
Σ Qn: <input type="text"/> kW G 110: <input type="text"/> m ³ /h G 120: <input type="text"/> m ³ /h G 150: <input type="text"/> m ³ /h	
WORK SAFETY MAX	P bar T °C
L	
<input type="checkbox"/> I ERL CE 0051 EN 203-1	
F.Mod. <input type="text"/>	F.Mod. <input type="text"/>
PNC <input type="text"/>	PNC <input type="text"/>
Ser.No. <input type="text"/>	Ser.No. <input type="text"/>

ELECTRICAL appliances

Electrolux Professional SpA - Viale Treviso, 15 - 33170 Pordenone (Italy) MADE IN ITALY	
F.Mod. <input type="text"/> PNC <input type="text"/> 9PDX	Comm.Mod. <input type="text"/>
IEL: <input type="text"/> Hz <input type="text"/> kW <input type="text"/> A <input type="text"/>	Ser.No. <input type="text"/>
IEL: <input type="text"/>	Type <input type="checkbox"/> N <input type="checkbox"/>
L	
<input type="checkbox"/> I ERL CE	
F.Mod. <input type="text"/>	F.Mod. <input type="text"/>
PNC <input type="text"/>	PNC <input type="text"/>
Ser.No. <input type="text"/>	Ser.No. <input type="text"/>

The dataplate gives the product identification and technical data. The meaning of the various information given on it is listed below:

F.Mod.	factory description of product
Comm.Model	commercial description
PNC	production number code
Ser.No.	serial number
Type	family type
EI	power supply voltage + phase
Hz	power supply frequency
kW	max. power input
A	absorbed current
Power unit EI.	power
CE	CE marking
AB	gas safety certificate number
N	certification group
0051	notified body
EN 203-1	EU standard
L	dust and water protection rating
Cat	gas category
Pmbar	gas pressure
Electrolux Professional SpA Viale Treviso 15 33170 Pordenone Italy	manufacturer

C.3 N9E Gas appliances Technical data

Models		+9GCGD2C00 +9AAIAAOMCE +9GCGD2C0M +9AAGAAOMCE +9GCTD2C0M	+9GCGH4C00 +9AAMAAOMEE +9GCGH4C0M +9AALAAOMEE +9GCTH4C00 +9GCTH4C0M	+9GCGL6C00 +9AANAAOMIE +9GCGL6C0M +9AAOAAOMIE +9GCTL6C0M	+9GCGH4CGL +9AAKABBMEE +9GCGH4CGW	+9GCGH4CG0 +9AAMABBMEE +9GCGHTCGA
		400mm	800mm	1200mm	800mm	
Connection ISO 7/1 - BS/P connection ¹	Ø	1/2"				
Cooktop burners	Nr.	2	4	6	4	4
Cooktop nominal heat output	kW	12	28	44	24	28
		12	28	44		
		20	40	60		
		20	40	60		
		15	24	45		
Type of construction		A1				
Oven type		-			GAS	
Oven max. heat output	kW	-			8.5	
Oven min. heat output	kW	-				
Nominal max. Power	kW	12	28	44	32.5	36.5
		12	28	44		
		20	40	60		
		20	40	60		
		15	24	45		

1. Australia

Models		+9GCGH4CGM +9AALABBMEE +9GCGHTCGB	+9GCGL6C10 +9AANABFMIE +9GCGLTC1A +9GCGL6C1M +9AAOABFMIE +9GCGLTC1B	+9GCGP8CG0 +9GCGP8CGA +9GCGP8SGA	+9GCGL6CL0 +9AANABJMIE +9GCGL6CLM +9AAOABJMIE
		800mm	1200mm	1600mm	1200mm
Connection ISO 7/1 - BS/P connection ¹	Ø	1/2"			
Cooktop burners	Nr.	4	6	8	6
Cooktop nominal heat output	kW	40	44	56	44
			44		
			44		
			60		
			60		
Type of construction					
Oven type		Gas			
Oven max. heat output	kW	8.5		17	12

Models		+9GCGH4CGM +9AALABBMEE +9GCGHTCGB	+9GCGL6C10 +9AANABFMIE +9GCGLTC1A +9GCGL6C1M +9AAOABFMIE +9GCGLTC1B	+9GCGP8CG0 +9GCGP8CGA +9GCGP8SGA	+9GCGL6CL0 +9AANABJMIE +9GCGL6CLM +9AAOABJMIE
		800mm	1200mm	1600mm	1200mm
Oven min. heat output	kW	—			
Nominal max. Power	kW	48.5	52.5	73	56
		48.5	52.5		56
		48.5	68.5		72
			68.5		72

1. Australia

C.4 N9E Gas / Electrical appliances Technical data

Models		+9GCGH4CVL +9AAKBBDMEE +9GCGH4SVL	+9GCGH4CV0 +9AAMBDMEE +9GCGH4SV0	+9GCGH4CVM +9AALBDMEE +9GCGH4SVM	+9GCTH4CEM	+9GCGH4CE0 +9AAMCBCMEE +9GCGHTCEA	+9GCGH4CEN
		800mm					
Power supply voltage	V	230			400	230	
Electrical power absorbed	kW	0.25			6		
Phases	Nr.	1			3+N	3	
Frequency	Hz.	50			50/60		
Connection ISO 7/1 - BS/P connection ¹	Ø	1/2"					
Cooktop burners	Nr.	4					
Cooktop nominal heat output	kW	24	28	40	24	28	28
Type of construction		A1					
Oven type		GAS			ELECTRICAL		
Oven max. heat output	kW	10.5			—		
Oven min. heat output	kW	-					
Nominal max. Power	kW	34.5	38.5	50.5	24	28	28

1. Australia

Models		+9ECED2Q00 +9FFCDAOMCE	+9ECED2Q0N	+9ECMD2005 +9ECMD2006	+9ECEH4Q00 +9FFDDAOMEE +9ECEH4QE0 +9FFDDBCMEE	+9ECEH4Q0N +9ECEH4QEN	+9ECMH4005 +9ECMH4006 +9ECMH4025 +9ECMH4026	
		400mm			800mm			
Power supply voltage	V	380-400	230	400 440	380-400	230	400 440 400 440	
Phases	Nr.	3+N	3		3+N	3		
Frequency	Hz.	50/60						
Cooktop hotplate	Nr.	2			4			
Cooktop hotplate max power	kW	8			16			

Models		+9ECED2Q00 +9FFCDAOMCE	+9ECED2Q0N	+9ECMD2005 +9ECMD2006	+9ECEH4Q00 +9FFDDAOMEE +9ECEH4QE0 +9FFDDBCMEE	+9ECEH4Q0N +9ECEH4QEN	+9ECMH4005 +9ECMH4006 +9ECMH4025 +9ECMH4026
		400mm			800mm		
Oven max. power	kW	—			— — 6 6	— — 6	— — 6 6
Nominal max. Power	kW	7.5–8	8		15–16 15–16 20–22 20–22	16 22	16 16 22 22
Power supply cable section ¹	mm ²	2.5	4	2.5 1.5	4 4 6 6	10 16	4 2.5 6 6

1. Minimum recommended.

C.5 N9E Gas / Electrical appliance Technical data – Worktop without pilot

Models		+9GCGDTC00 +9GCGDTC0M	+9GCGHTC00 +9GCGHTC0M	+9GCGHTCGL +9GCGHTCG0	+9GCGLTC00 +9GCGLTC0M
		400mm	800mm		1200mm
Power supply voltage	V	220 – 230			
Electrical power absorbed	kW	0.01			
Phases	Nr.	1+N			
Frequency	Hz.	50/60			
Connection ISO 7/1 - BS/P connection ¹	Ø	1/2"			
Cooktop burners	Nr.	2	4		6
Cooktop nominal heat output	kW	12 20	28 40	24 24	44 60
Type of construction		A1			
Oven type		—		GAS	—
Oven max. heat output	kW	—		8.5	—
Oven min. heat output	kW	-			
Nominal max. Power	kW	12 20	28 40	32.5 32.5	44 60

1. Australia

Models		+9GCGHTCGM	+9GCGLTC10 +9GCGLTC1M	+9GCGLTCL0 +9GCGLTCLM	+9GCGHTCVL +9GCGHTCV0 +9GCGHTCVM	+9GCGHTSE0
		800mm	1200mm		800mm	
Power supply voltage	V	220 – 230				380 – 400
Electrical power absorbed	kW	0.01			0.2	6
Phases	Nr.	1+N				3+N
Frequency	Hz.	50/60				
Connection ISO 7/1 - BS/P connection ¹	Ø	1/2"				
Cooktop burners	Nr.	4	6		4	

Models		+9GCGHTCGM	+9GCGLTC10 +9GCGLTC1M	+9GCGLTCL0 +9GCGLTCLM	+9GCGHTCVL +9GCGHTCV0 +9GCGHTCVM	+9GCGHTSE0
		800mm	1200mm		800mm	
Cooktop nominal heat output	kW	40	44 60	44 60	24 28 40	28
Type of construction		A1				
Oven type		GAS				ELECTRICAL
Oven max. heat output	kW	8.5		12	10.5	—
Oven min. heat output	kW	-				
Nominal max. Power	kW	48.5	52.5 68.5	56 72	34.5 38.5 50.5	28

1. Australia

D GENERAL INFORMATION



WARNING

Refer to “*WARNING and Safety Information*”

D.1 Law requirements only for Australia

This appliance shall be installed only by authorised persons and in accordance with the manufacturer’s installation instructions, local gas fitting regulations, municipal building codes, electrical wiring regulations, local water supply regulations, AS5601-gas installation, health authorities and any other statutory regulations.

D.2 Introduction

Given below is some information regarding the intended use of this appliance, its testing, and a description of the symbols used (that identifies the type of warning), the definitions of terms used in the manual and useful information for the appliance user.

D.3 Intended use and restrictions

This appliance is designed for cooking food. It is intended for commercial use.

This appliance must not be used by minors and/or adults with limited physical, sensory or mental abilities or without adequate experience and knowledge regarding its use.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



CAUTION

The machine is not suitable for installation outdoors and/or in places exposed to atmospheric agents (rain, direct sunlight, etc.).

D.4 Testing and inspection

Our appliances have been designed and optimized, with laboratory testing, in order to obtain high performance and efficiency.

Passing of the tests (visual inspection - gas/electrical test - functional test) is guaranteed and certified by the specific enclosures.

D.5 Copyright

This manual is intended solely for consultation by the operator and can only be given to third parties with the permission of Electrolux Professional company.

D.6 Keeping the manual

The manual must be carefully kept for the entire life of the machine, until scrapping. The manual must stay with the machine in case of transfer, sale, hire, granting of use or leasing.

D.7 Recipients of the manual

This manual is intended for:

- the carrier and handling personnel;
- installation and commissioning personnel;
- the employer of machine users and the workplace manager;
- operators for normal machine use;
- specialised personnel - Customer Care service (see service manual).

D.8 Definitions

Listed below are the definitions of the main terms used in the manual. It is advisable to read them carefully before use.

Operator	machine installation, adjustment, use, maintenance, cleaning, repair and transport personnel.
Manufacturer	Electrolux Professional SpA or any other service centre authorised by Electrolux Professional SpA.
Operator for normal machine use	an operator who has been informed and trained regarding the tasks and hazards involved in normal machine use.
Customer Care service or specialised personnel	an operator instructed/trained by the Manufacturer and who, based on his professional and specific training, experience and knowledge of the accident-prevention regulations, is able to appraise the operations to be carried out on the machine and recognise and prevent any risks. His professionalism covers the mechanical, electrotechnical and electronics fields etc.
Danger	source of possible injury or harm to health.
Hazardous situation	any situation where an operator is exposed to one or more hazards.
Risk	a combination of probabilities and risks of injury or harm to health in a hazardous situation.
Protection devices	safety measures consisting of the use of specific technical means (guards and safety devices) for protecting operators against risks.

Guard	an element of a machine used in a specific way to provide protection by means of a physical barrier.
Safety device	a device (other than a guard) that eliminates or reduces the risk; it can be used alone or in combination with a guard.
Customer	the person who purchased the machine and/or who manages and uses it (e. g. company, entrepreneur, firm).
Electrocution	an accidental discharge of electric current on a human body.

D.9 Responsibility

The Manufacturer declines any liability for damage and malfunctioning caused by:

- non-compliance with the instructions contained in this manual;
- repairs not carried out in a workmanlike fashion, and replacements with parts different from those specified in the spare parts catalogue (the fitting and use of non-original spare parts and accessories can negatively affect machine operation and invalidates the original manufacturer warranty);

- operations carried out by non-specialised personnel;
- unauthorized modifications or operations;
- missing, lack or inadequate maintenance;
- improper machine use;
- unforeseeable extraordinary events;
- use of the machine by uninformed and / or untrained personnel;
- non-application of the current provisions in the country of use, concerning safety, hygiene and health in the workplace.

The Manufacturer declines any liability for damage caused by arbitrary modifications and conversions carried out by the user or the Customer.

The employer, workplace manager or service technician are responsible for identifying and choosing adequate and suitable personal protection equipment to be worn by operators, in compliance with regulations in force in the country of use.

The Manufacturer declines any liability for inaccuracies contained in the manual, if due to printing or translation errors.

Any supplements to the installation, use and maintenance manual the Customer receives from the Manufacturer will form an integral part of the manual and therefore must be kept together with it.

E NORMAL USE



WARNING

Refer to “*WARNING and Safety Information*”

E.1 Characteristics of personnel trained for normal machine use

The Customer must make sure the personnel for normal machine use are adequately trained and skilled in their duties, as well as ensuring their own safety and that of other persons.

The Customer must make sure his personnel have understood the instructions received and in particular those regarding work hygiene and safety in use of the machine.

E.2 Characteristics of personnel enabled to operate on the machine

The Customer is responsible for ensuring that persons assigned to the various duties:

- read and understand the manual;
- receive adequate training and instruction for their duties in order to perform them safely;

- receive specific training for correct machine use.

E.3 Operator qualified for normal machine use

Must have at least:

- knowledge of the technology and specific experience in operating the machine;
- adequate general basic education and technical knowledge for reading and understanding the contents of the manual, including correct interpretation of the drawings, signs and pictograms;
- sufficient technical knowledge for safely performing his duties as specified in the manual;
- knowledge of the regulations on work hygiene and safety.

In case of a significant anomaly (e. g. short circuits, wires coming out of the terminal block, motor breakdowns, worn electrical cable sheathing, etc.) the operator for normal machine use must:

- immediately deactivate the machine and disconnect all the supplies (electricity, gas, water).

F INSTALLATION AND ASSEMBLY



WARNING

Refer to “*WARNING and Safety Information*”

F.1 Introduction

To ensure correct operation of the appliance and maintain safe conditions during use, carefully follow the instructions given below in this section.



CAUTION

Before moving the appliance make sure the load bearing capacity of the lifting equipment used is suitable for its weight.

F.2 Customer's responsibilities

The tasks and works required of the Customer are:

- prearrange a high-sensitivity manual-reset magneto-thermal circuit-breaker;
- prearrange a device lockable in the open position for the connection to the power supply.
- check the floor planarity on which the machine is placed.
- install a rapid gas shutoff valve ahead of each individual appliance (depending on the model). Install the valve in an easily accessed place.
- for information regarding the electrical connection, refer to F.10.1 *Electrical appliances* paragraph;

F.3 Disposal of packing

The packing must be disposed of in compliance with the current regulations in the country where the appliance is used. All the packing materials are environmentally friendly.

They can be safely kept, recycled or burned in an appropriate waste incineration plant. Recyclable plastic parts are marked as follows:



Polyethylene

- Outer wrapping
- Instructions bag



Polypropylene

- Straps




Polystyrene foam

- Corner protectors


The parts in wood and cardboard can be disposed of, respecting the current regulations in the country where the machine is used.

F.4 Joining Appliances

1. Undo the 4 fixing screws and remove the control panels of the appliances (Fig.1A);
2. Remove the fixing screw nearest the control panel, from each side to be joined (Fig.1B);
3. Bring the appliances together and turn the feet to level them until the tops match (Fig.1D);
4. Turn one of the two plates inside the appliances 180° (Fig.1C);

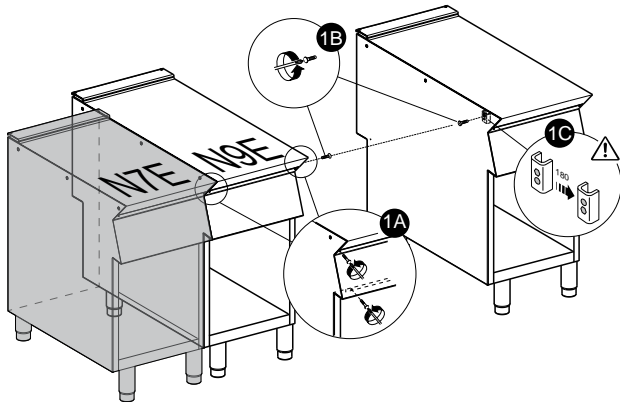

5. From inside the control panel of the same appliance, join them at the front side, screwing one M5x40 Hex Head screw (supplied) on the opposite insert (Fig.1E);
6. From the rear of the appliances, insert the coupling plate (provided) in the side slots on the back panels;
7. Secure the plate with two flat head M5 screws provided (Fig.1F).

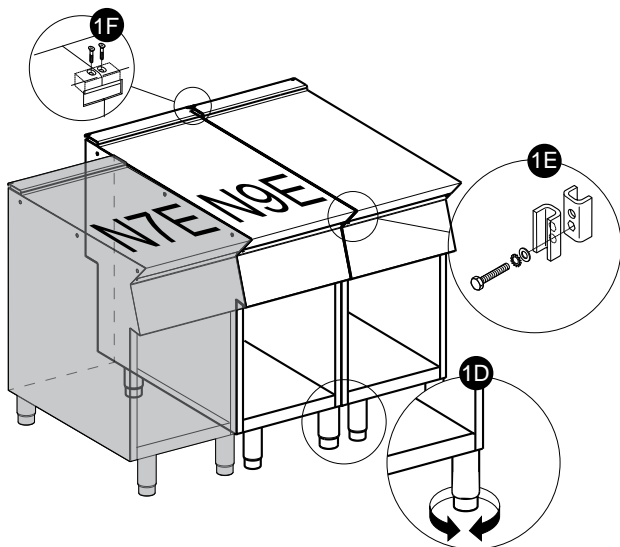

F.4.1 Floor Fixing (depending on the appliance and/or model)

To avoid accidental tipping of built-in half-module appliances installed separately, fix them to the floor carefully following the

instructions enclosed with the corresponding accessory (F206136).

F.4.2 Installation On Bridge, Cantilever Frame Or Cement Plinth (depending on the appliance and/or model)

Carefully follow the instructions enclosed with the corresponding accessory. Follow the instructions supplied with the optional product chosen.

F.4.3 Sealing Gaps Between Appliances

Follow the instructions supplied with the optional sealing paste pack.

F.5 Gas, electricity, water and other connections (if present, depending on the appliance and/or model)

- Any installation work or maintenance to the supply system (gas, electricity, water and/or steam, if present) must only be carried out by the utility company or an authorised installation technician.
- Refer to the appliance dataplate for the product code.
- See the installation diagram for the type and position of appliance connections.

F.6 Gas Connections

F.6.1 Introduction



CAUTION

This appliance is arranged and tested to operate with G20 gas 20 mbar;

To convert it to another type of gas, follow the instructions in F.6.6 *Conversion to another type of gas* paragraph of this section.


F.6.2 Fume exhaust

- “A1” type appliances have to be positioned under an extraction hood to ensure removal of fumes and steam produced by cooking; (not relevant for Australian standard).

For **AUSTRALIA**: the ventilation must be in accordance with Australian building codes and kitchen exhaust hoods must comply with AS/NZS1668.1 and AS 1668.2.

F.6.3 Before connecting

1. Make sure the appliance is arranged for the type of gas to be used.
Otherwise, carefully follow the instructions given in F.6.6 *Conversion to another type of gas* paragraph of this section.
2. Fit a rapid gas shutoff tap/valve ahead of each appliance.
3. Install the tap/valve in an easily accessed place.

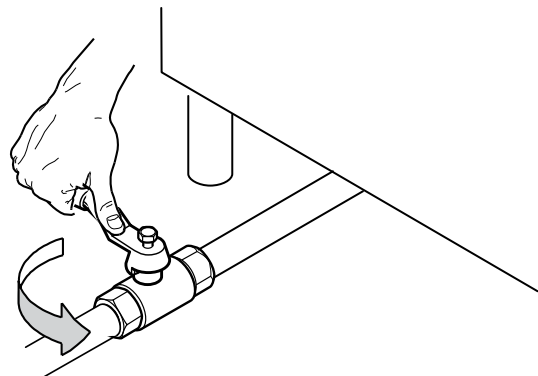

4. Clean the pipes to remove any dust, dirt or foreign matter which could block the supply.
The gas supply line must ensure the gas flow necessary for full operation of all the appliances connected to the system.

A supply line with insufficient flow will affect correct operation of the appliances connected to it.



IMPORTANT

Incorrect levelling of the appliance can affect combustion and cause malfunctioning.


F.6.4 Connection (depending on the appliance and/or model)

Monoblock models

1. See the installation diagram for the position of the gas connection on the bottom of the appliance.
2. Remove the plastic cap protection (if present) from the gas manifold before connecting.

Countertop models (Only for N9E range)

1. See the installation diagram for the position of the gas connection on the bottom of the appliance.
2. Remove the plastic cap protection (if present) from the gas manifold before connecting.
3. Countertop models can be connected to the gas supply also using the rear connection:
 - a. operate at the back appliance;
 - b. unscrew the metal closing plug of the rear connection;
 - c. screw it tightly onto the bottom connection.

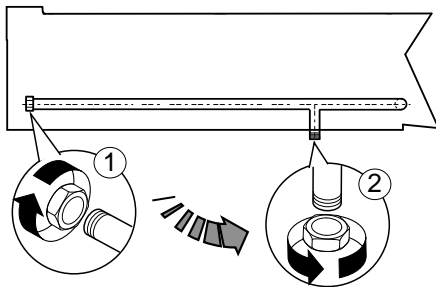

After installation, use soapy water to check connections for leaks.



NOTE!

Only for Australia: The gas connection is male 1/2 BSP.

F.6.5 Gas pressure regulator


The section of the gas supply line must be sufficient to ensure the gas flow necessary for full operation of all the appliances connected to the system.

If the gas pressure is higher than that specified or is difficult to regulate (not stable), install a gas pressure regulator (accessory code 927225) in an easily accessed position ahead of the appliance.

The pressure regulator should preferably be fitted horizontally, to ensure the right outlet pressure.

- | | |
|---|---|
| 1 | connection side gas from mains |
| 2 | pressure regulator |
| 3 | connection side gas towards the appliance |

The arrow on the regulator indicates the gas flow direction.

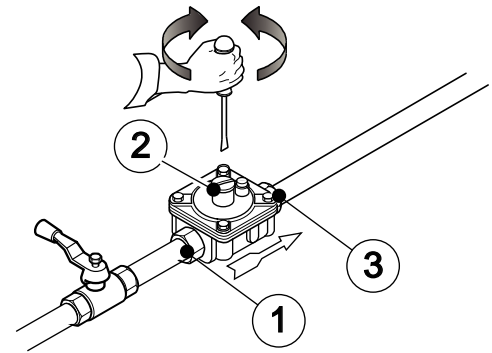

For Australia: Adjust the test point pressure with burners operating at maximum setting (see table "B" of Appendix)

F.6.6 Conversion to another type of gas

Nozzle Table "B" (see Appendix) gives the type of nozzles to be used when replacing those installed by the manufacturer (the number is engraved on the nozzle body).

At the end of the procedure, carry out the following check-list:

1. burner nozzle/s replacement
2. correct adjustment of primary air supply to burner/s
3. pilot nozzle/s replacement
4. minimum flame screw/s replacement
5. correct adjustment pilot/s if necessary
6. correct adjustment of supply pressure (see technical data/gas nozzles table)
7. apply sticker (supplied) with data of new gas type used

F.7 Gas appliances regulations

Cooktop tap — Fig. 1	Static/Fan Oven valve — Fig. 2
Static/Fan Oven burner — Fig. 3	Manometer — Fig. 4

F.7.1 Supply pressure checking (all versions)

1. Make sure the appliance is suitable for the type of gas available, according to that given on the dataplate (otherwise, follow the instructions given in F.6.6 *Conversion to another type of gas* paragraph of this section).
The supply pressure must be measured while the appliance operates, using a manometer (min. 0.1 mbar).
2. Remove the control panel and retaining screw "N" from the pressure point (see Cooktop tap — Fig. 1 and see Static/Fan Oven valve — Fig. 2);
3. Connect the manometer "O" (see Manometer — Fig. 4);
4. Compare the value read on the manometer with that given in Table "B" (see Appendix);

If the manometer gives a reading outside the range of values in Table "B" (see Appendix), do not switch the appliance on;


Consult the gas company.

F.7.2 Primary air checking (static / fan oven)

The primary air is correctly adjusted when the flame does not float with the burner cold and there is no flareback with the burner hot.

1. Undo screw "A" (see Static/Fan Oven burner — Fig. 3);
2. Position aerator "E" at distance "H" given in Table "B" (see Appendix);
3. Retighten screw "A";
4. Seal with paint.

F.7.3 Main burner nozzle replacement (cooktop and static / fan oven)

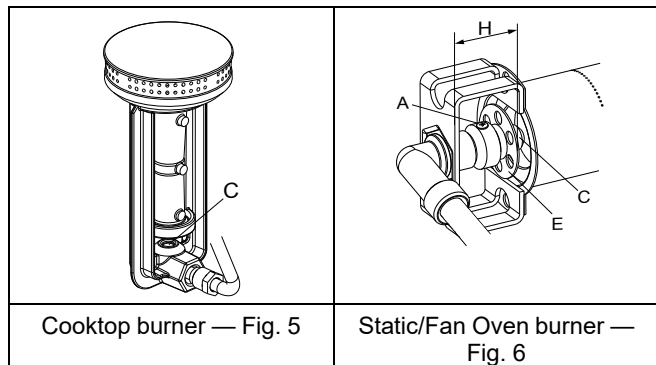


Cooktop

1. Unscrew nozzle "C" (see Cooktop burner — Fig. 5)
2. Replace it with one suitable for the type of gas according to the indications of the table "B" (see Appendix).
3. The nozzle diameter is given in hundredths of mm on the nozzle body.
4. Retighten nozzle "C"

Static / Fan oven

1. Open the door and remove the oven floor;
2. Unscrew nozzle "C" (see Static/Fan Oven burner — Fig. 6;)
3. Remove the nozzle "C" and aerator "E";
4. Replace nozzle "C" with the corresponding nozzle for the selected gas, according to that given in the table "B" (see Appendix).
5. The nozzle diameter is given in hundredths of mm on the nozzle body.

F.7.4 Pilot burner nozzle replacement (cooktop and oven)

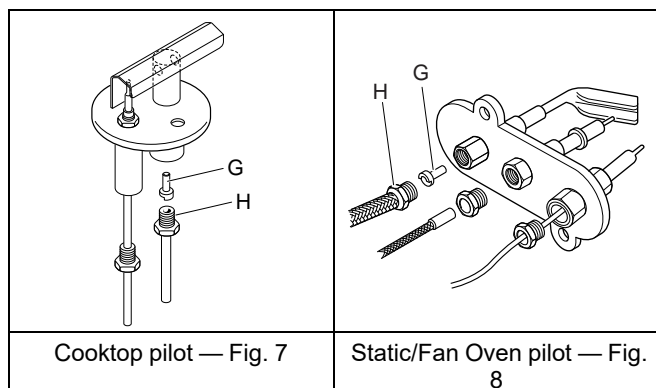

Cooktop


1. Undo screw coupling "H" (see Cooktop pilot — Fig. 7);
Replace nozzle "G" with one suitable for the type of gas (see table "B", Appendix);
2. The nozzle identification number is indicated on nozzle body.
3. Retighten screw coupling "H".

Oven

1. Open the door and remove the floor of the oven;

2. Undo screw coupling "H" (see Static/Fan Oven pilot — Fig. 8);
Replace nozzle "G" with one suitable for the type of gas (see table "B", Appendix)
3. The nozzle identification number is indicated on nozzle body;
4. Retighten screw coupling "H".

F.7.5 Minimum flame screw replacement (cooktop and large oven 12kW)

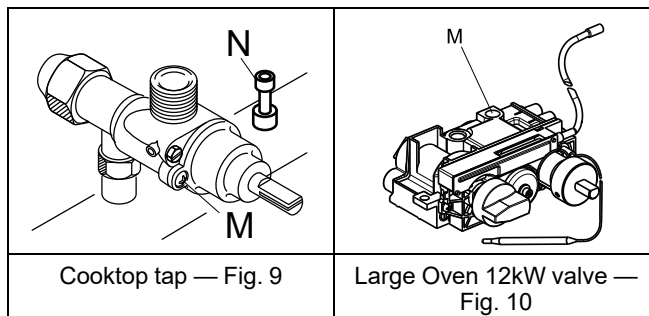

1. Unscrew minimum flame screw "M" from the tap / valve (see Cooktop tap — Fig. 9 and Large Oven 12kW valve — Fig. 10).
2. Replace it with one suitable for the type of gas, screwing it down fully (see table "B", Appendix).

F.8 Before completing the installation operations

- Use soapy water to check all gas connections for leaks.
- DO NOT use a open flame to check for gas leaks.
- Light all the burners separately and also together, to check correct operation of the gas valves, rings and lighting.
- For each burner, adjust the flame regulator to the lowest setting, individually and together.
- After completing the operations, the installer must instruct the user on the correct method of use.


If the appliance does not work properly after carrying out all the checks, contact the local Customer Care service centre.

F.9 Replacing the adjustment spring of the pressure regulator (Only for Australia)


To replace the spring "D" of the pressure regulator with one suitable for the gas pressure type indicated in table "B" (see Appendix) proceed as follows:

1. Remove the seal cap "A", the seal cap gasket "B", the adjusting screw "C" and the spring "D" (see image);
2. Insert the new spring (blue colour = propane gas; silver colour = natural gas) and replace the adjusting screw;
3. Connect a pressure gauge to the appliance's test point pressure – (see paragraph F.7.1 *Supply pressure checking (all versions)*);
4. Ignite the appliance's burners so to have the maximum gas consumption;
5. Regulate the adjustment screw until the pressure gauge shows the working pressure value (see paragraph F.6.5 *Gas pressure regulator*);
6. Replace the seal cap and gasket and screw tightly closed;
7. Remove the pressure gauge and close the test point pressure;

8. Prior to operation, test the gas pressure regulator for leaks.

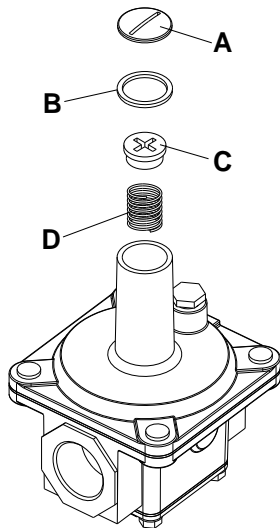

3. Secure the power cable with the cable clamp.

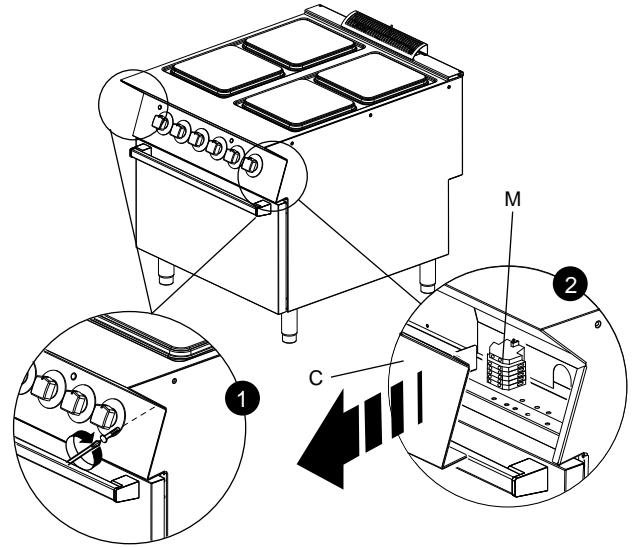

F.10 Electrical connection

F.10.1 Electrical appliances



WARNING

Work on the electrical systems must only be carried out by specialised personnel.

Before connecting, make sure that:

1. the mains voltage and frequency match those indicated on the appliance data plate;
2. there is an efficient earth contact;
3. the power supply is arranged and able to take the actual current absorption and that it is correctly executed according to the regulations and provisions in force in the country of use.

4. a differential thermal-magnetic switch suitable for the input specified on the dataplate, with contact gap enabling complete disconnection in category III overvoltage conditions and complying with the regulations in force, is installed between the power cable and the electric line.

For the correct size of the switch, refer to the absorbed current specified on the appliance dataplate.


F.10.2 To access the terminal block

Countertop / Monoblock models

1. Remove the appliance control panel "C" by undoing the fixing screws.
2. Connect the power cable to the terminal block "M" according to the wiring diagram provided with the appliance.


Monoblock models with cooktop without pilot flame

1. Remove the two screws "V" and slide the box "S" down to access the terminal block "M".
2. Connect the power cable to the terminal block according to the wiring diagram provided with the appliance.
3. Secure the power cable with the cable clamp.
4. Reposition the box and secure it with the screws "V".

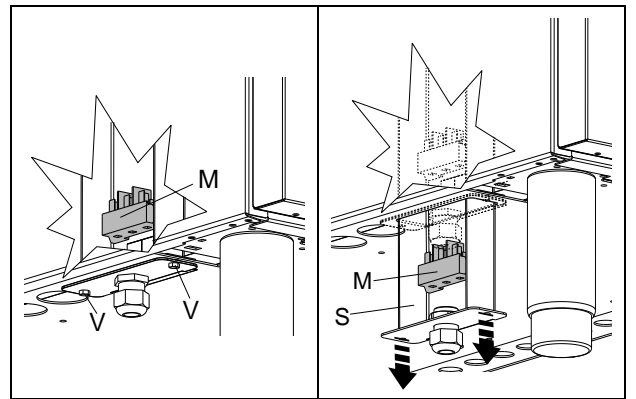

Models with fan oven

1. Remove the appliance rear panel "P" by undoing the fixing screws.
2. Connect the power cable to the terminal block according to the wiring diagram provided with the appliance.
3. Secure the power cable with the cable clamp.

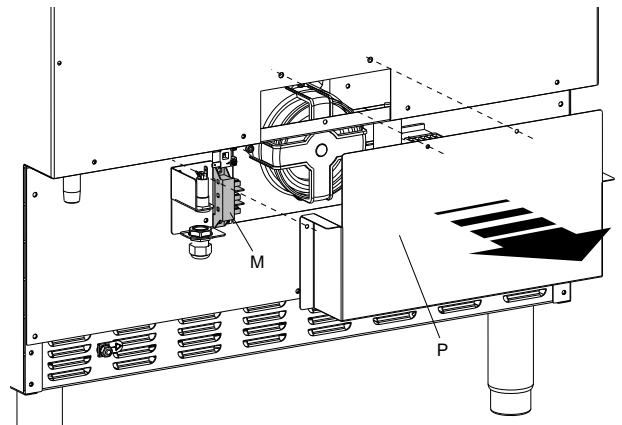

IMPORTANT


The manufacturer declines any liability if the safety regulations are not respected.

- After making the connection, with the machine working check that the power supply does not fluctuate by $\pm 10\%$ the rated voltage;

- Installation requires the inclusion of a device lockable in the “open” position during maintenance.

F.10.3 Equipotential node and Earth connection

Connect the appliance to an earth; it must be included in an equipotential node by means of the screw located under the appliance frame at the back right hand side.

The screw is marked with the symbol .

F.10.4 Power cable

Unless otherwise specified, our appliances are not equipped with a power cable.

The installer must use a flexible cable having characteristics at least equivalent to H07RN-F rubber-insulated type.

Protect the cable section outside the appliance with a metal or rigid plastic pipe.



WARNING

If the power cable is damaged, it must be replaced by the after-sales service or in any case by qualified personnel, in order prevent any risk



WARNING

The manufacturer declines any liability for damage or injury resulting from breach of the above rules or non-compliance with the electrical safety regulations in force in the country where the machine is used

F.11 Safety thermostat

Appliances equipped with safety thermostat (overheating safety thermostat) that trips off automatically when temperatures exceed a set value, shutting off the gas supply (gas appliances) or the electricity (electric appliances).



IMPORTANT

Resetting of the safety thermostat must be carried out by specialised personnel; contact the Customer Care.



IMPORTANT

“Positive trip” effect of the safety thermostat (used on some equipment type as per norms prescriptions) interrupts the unit operability (heating) even in case the capillary is cut.

Similar effect, but with no damage for the safety thermostat, can happen if the machine body temperature drops below -10°C: in such cases, it is required to reset the safety thermostat while installing the machine, hence before connecting it to the mains.




IMPORTANT

On electric heated machines, only reset safety thermostat after disconnecting from the mains. Failure to disconnect from the mains causes the safety thermostat to brake and the unskilled person to risk electrocution.


Tampering with the safety thermostat invalidates the original manufacturer warranty.

F.12 Handrail (only for marine appliances)

Marine appliances are equipped with a front handrail that can be fitted by drilling the shelf according to the following diagram

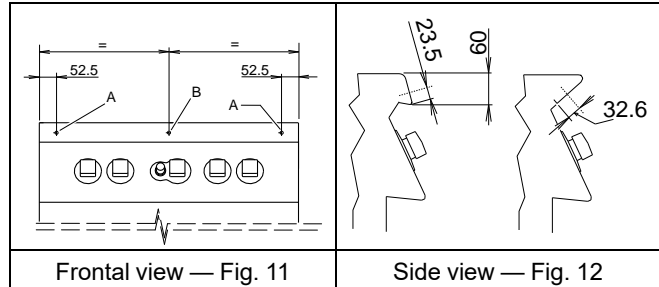

F.12.1 Installation

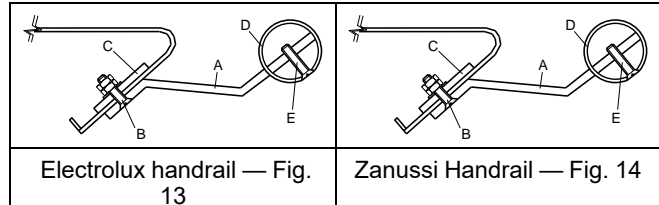

Preparation for installing accessory

- Prepare the equipment by drilling the edge of the top (make Ø6 holes) at points “A”. For 1200mm and 1600mm appliances also drill at point “B” (see Frontal view — Fig. 11 and Side view — Fig. 12)

Electrolux handrail

- Fix supports “A” to the edge of the top at the holes prepared, with screw “B”, plate “C” and respective nuts and washer (see Electrolux handrail — Fig. 13)
- Fit handrail “D” on support “A” and secure it with screw “E”.

Zanussi handrail

- Screw supports “D” on handrail “C” and insert them at the holes prepared (see Zanussi Handrail — Fig. 14)
- Insert reinforcement plate “R” and fix the supports “S” with the nuts and washer.

G INSTRUCTION FOR THE USER

G.1 General precautions

- The appliance is intended for industrial use by trained personnel.
- Do not use the appliance empty or in conditions that compromise its optimum efficiency
Also, if possible, preheat the appliance immediately before use.
- This appliance is designed for cooking food. Any other use is improper.


G.2 Cooktop use – Gas models

G.2.1 Lighting on

The gas control knob “H” of each burner has 4 positions:

- “Off”
- ★ “Pilot ignition”

- 🔥 "Max flame"
- 🔥 "Min. flame"

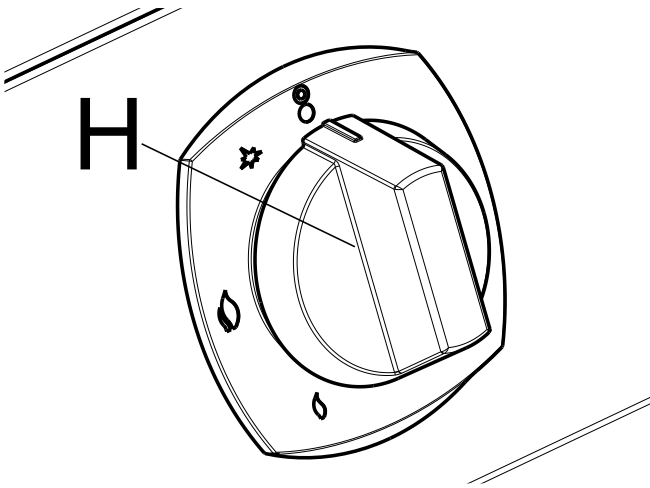


1. Press and turn knob "H" to position *.
2. Press the knob down fully and hold a flame to the pilot in order to light.
Hold the knob down for about 20 seconds; when released, the pilot flame must remain lit. If it does not, repeat the operation.
3. To light the main burner, turn the knob from * position to 🔥 position.
4. For the minimum flame, turn the knob from 🔥 position to 🔥 position.

G.2.2 Switching off

- Turn knob "H" from 🔥 or 🔥 position to * position;
- To shut off the pilot, press the knob lightly and turn it to ● position.



IMPORTANT
Incorrect positioning of the flame spreader can create problems in combustion.

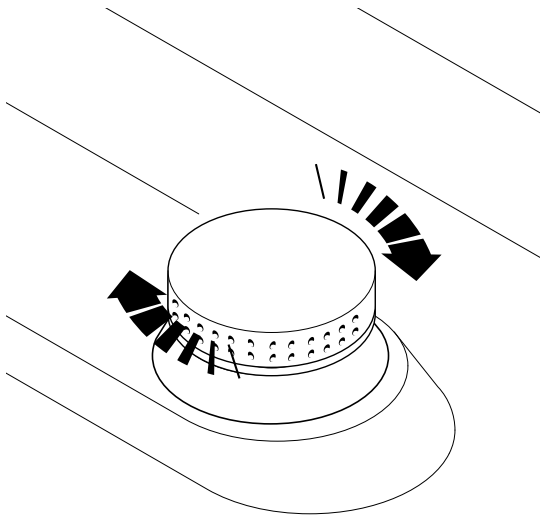


- Before lighting the burners make sure the flame spreaders are turned to the stop position.

G.3 Cooktop use — Gas models with igniter without pilot flame

G.3.1 Lightning on

The gas control knob "H" of each burner has 3 positions:

- "Off"
- 🔥 "Max flame"
- 🔥 "Min. flame"

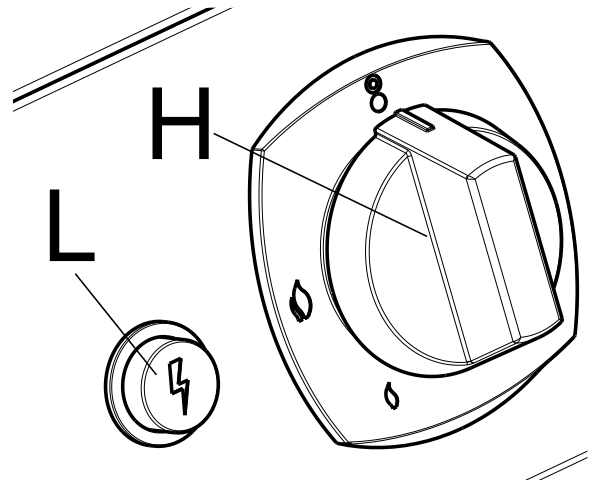

- Press and turn knob "H" to position 🔥. Press the knob down and at the same time press igniter button "L". Hold the knob down for about 10 seconds; when released, the flame must remain lit. If not, check for residual moisture on the ignition plugs, dry if necessary and repeat the operation. If the problem occurs again, use a lighter
- For the minimum flame, turn the knob from 🔥 to 🔥.


G.3.2 Switching off

- Turn knob "H" from 🔥 or 🔥 to position ●;

G.4 Cooktop use — Electrical Models

- Equipped with rapid heating electric hot-plates each of 4 kW power
- To ensure long life of the hot-plates, observe the following:
 - use flat-bottomed pots;
 - do not leave the hot-plates switched on without pots or with empty pots
 - do not spill cold liquids on the hot-plate when hot.

G.4.1 Switching On

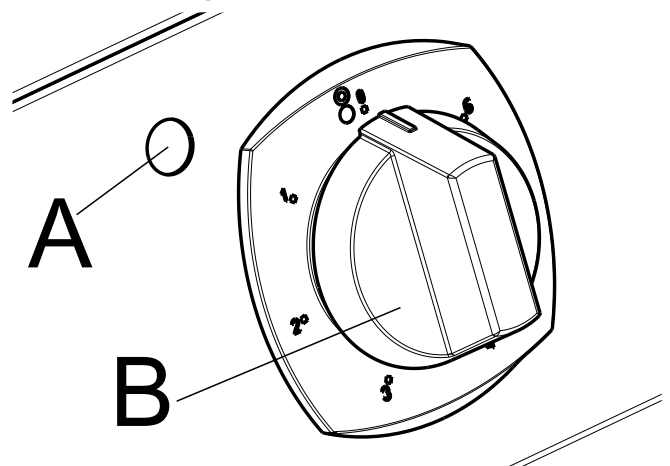

- Turn on the main switch located ahead of the appliance.
- Turn control knob "B" of the required hot-plate, to one of the six available positions marked on the control panel, bearing in mind that "1" corresponds to minimum power and "6" corresponds to maximum power; Lighting up of green indicator "A" signals that the corresponding hot-plate is on


- To adjust hot-plate heat, turn the knobs firstly to “6”; on reaching maximum cooking or boiling temperature, turn the knob to a lower setting.

G.4.2 Switching Off

- Turn the control knobs to “0”.

G.5 Oven use — Gas models

The thermostatic valve has the following knobs

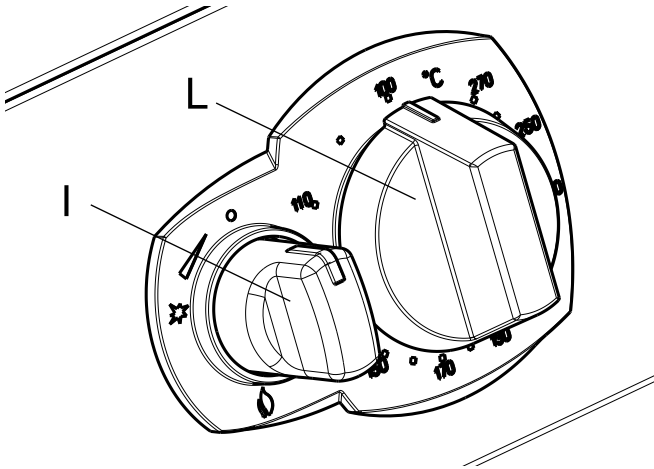

- I Thermostatic valve control knob
- L Temperature adjusting knob

G.5.1 Lightning on

The gas control knob “I” has the following positions:

- “Off”
- ★ “Pilot ignition”
- 🔥 “On”

To switch on the appliance:

1. Press knob “I” lightly and at the same time turn it anticlockwise a few degrees to release it.
2. Press down fully and turn it to position ★. A click will indicate sparking.
3. Keeping knob “I” pressed, turn it to 🔥 position.
4. Hold it there for about 15/20 seconds to allow the gas to reach the pilot burner and the thermocouple to heat.
5. Use knob “L” to select the required temperature.

i NOTE!
In case of emergency the pilot burner can be lit by bringing a flame to it and keeping knob “I” pressed in the ★ position.

! IMPORTANT
The appliance’s oven should only be operated with Knob “I” turned to 🔥 position

G.5.2 Switching off

To turn off the main burner:

1. Turn knob “I” to ★ position;
2. Turn knob “I” to ● position to turn off the pilot burner.

! IMPORTANT
if removing knob “L” for cleaning, always turn knob fully clockwise to the lowest setting and replace the knob so that the mark on the knob aligns with the lowest temperature marking. Failure to replace the knob correctly will result in inaccurate oven temperature




WARNING

The static oven’s grids are trays supports and are not suitable for direct food cooking.

G.6 Fan oven use — Gas models

The thermostatic valve has the following knobs

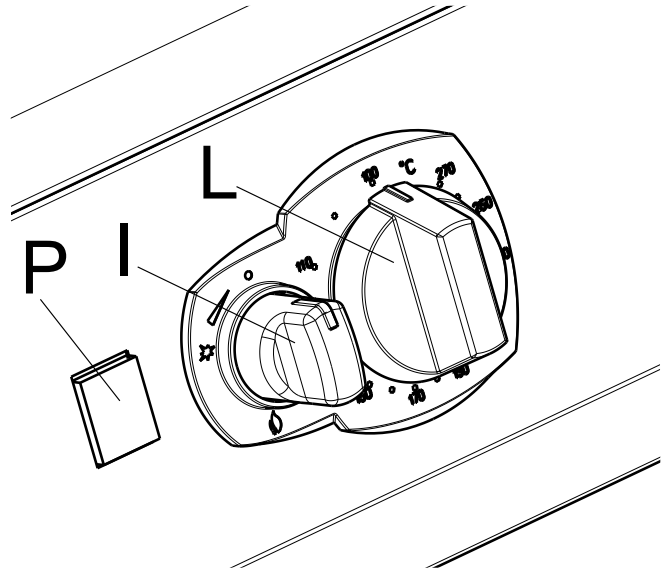

- I Thermostatic valve control knob
- L Temperature adjusting knob
- P Button for activating fan oven

G.6.1 Switching on


The gas control knob “I” has the following positions:

- “Off”
- ★ “Pilot ignition”
- 🔥 “On”

To switch on the appliance:

1. Press knob “I” lightly and at the same time turn it anticlockwise a few degrees to release it.
2. Press down fully and turn it to position ★. A click will indicate sparking.
3. Keeping knob “I” pressed, turn it to 🔥 position.
4. Hold it there for about 15/20 seconds to allow the gas to reach the pilot burner and the thermocouple to heat.
5. Use knob “L” to select the required temperature.

i NOTE!
To check ignition of the pilot flame, open the oven door, turn the door “S” and look through the holes “F” on the bottom of the compartment.

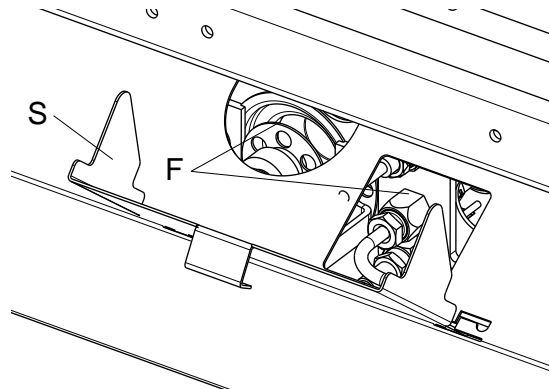

**NOTE!**

Press button "P" to activate the fan oven.

G.6.2 Switching off

To turn off the main burner:

1. Turn knob "I" to * position;
2. Turn knob "I" to • position to turn off the pilot burner.

**IMPORTANT**

if removing knob "L" for cleaning, always turn knob fully clockwise to the lowest setting and replace the knob so that the mark on the knob aligns with the lowest temperature marking. Failure to replace the knob correctly will result in inaccurate oven temperature

G.7 Interlock

The valve features a thermal re-light locking device enabled until the thermocouple is hot.

Such device, called interlock, keeps engaged for about 40 seconds in case of accidental pilot flame shut off, hence allowing accumulated gas to flow out through the chimney prior to light any spark again.


Forcing the interlock leads to a valve damage which is not covered by the original manufacturer warranty.

G.8 Oven use — Electric Models

The heating elements are controlled by a 4-position selector knob "D", whereas the oven temperature is controlled by a thermostat "E". Use the selector knob to choose the most suitable type of heating, activating the heating elements in an appropriate way.

G.8.1 Switching On

○	"Off"
1	"Appliance On"
	"Upper and lower heating elements"
	"Upper heating elements"
	"Lower heating elements"

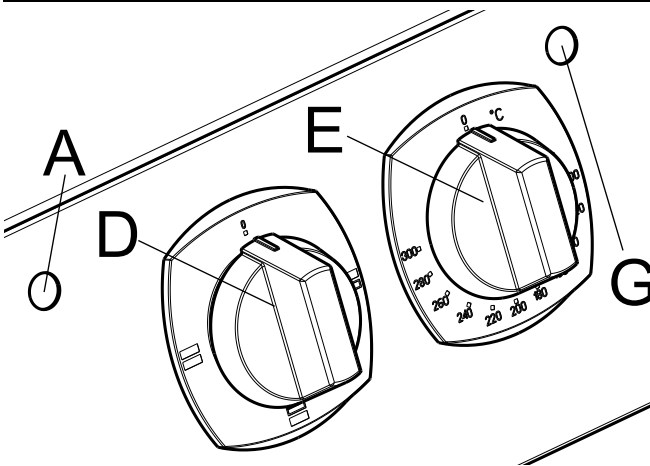**IMPORTANT**

The oven door must be closed for all types of cooking.

- Turn heating element control knob "D" to the required setting.
- Lighting up of green indicator "A" signals that the power is on.
- Turn thermostat knob "E" to the required cooking temperature (between 100°C and 300°C).
- Lighting up of yellow indicator "G" signals that the heating elements are on; it goes off when the oven reaches the set temperature.

G.8.2 Switching Off


- Turn the control knobs to the off position ○. Turn off the electrical switch installed ahead of the appliance.

**WARNING**

The static oven's grids are trays supports and are not suitable for direct food cooking.

**NOTE!**

To discharge excess vapours, move the lever from position "a" (closed) to "b" (open).

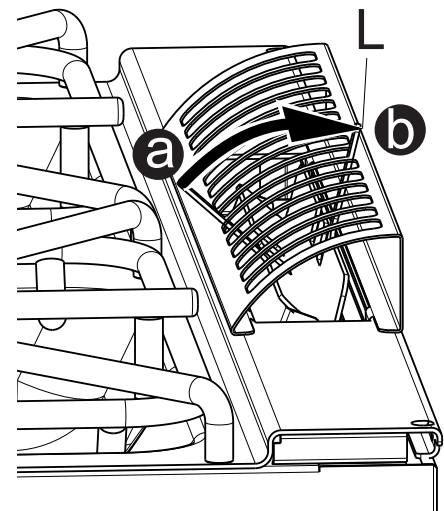**H MACHINE CLEANING AND MAINTENANCE****WARNING**

Refer to "WARNING and Safety Information".

H.1 Ordinary maintenance**H.1.1 Care information**

The following care operations have to be carried out by the owner and/or user of the appliance.

**IMPORTANT**

Problems resulting from poor or lack of care as hereinafter described will not be covered by the warranty.



WARNING

Before carrying out any cleaning or maintenance, disconnect the appliance from the power supply.

H.1.2 Cleaning the appliance and accessories

Before using the appliance, clean all the internal parts and accessories with lukewarm water and neutral soap or products that are over 90% biodegradable (in order to reduce the emission of pollutants into the environment), then rinse and dry thoroughly.



CAUTION

Do not use solvent-based detergents (e.g. trichloro-ethylene) or abrasive powders for cleaning.

H.1.3 External parts

SATIN-FINISH STEEL SURFACES (daily)

- Clean all steel surfaces: dirt is easily removed when it has just formed.
- Remove grime, fat and other cooking residuals from steel surfaces when cool using soapy water, with or without detergent, and a cloth or sponge. Dry the surfaces thoroughly after cleaning.
- In case of encrusted grime, fat or food residuals, go over with a cloth or sponge, wiping in the direction of the satin finish and rinsing often: rubbing in a circular motion combined with the particles of dirt on the cloth/sponge could spoil the steel's satin finish.
- Metal objects can spoil or damage the steel: damaged surfaces become dirty more easily and are more subject to corrosion.
- Restore the satin finish if necessary.


SURFACES BLACKENED BY HEAT (when necessary)

- Exposure to high temperatures can cause the formation of dark marks. These do not constitute damage and can be removed by following the instructions given in the previous section.



IMPORTANT

Avoid dirtying the inside of the Venturi tubes. The presence of dirt inside the appliance can obstruct the nozzles, and thus affect the flame.

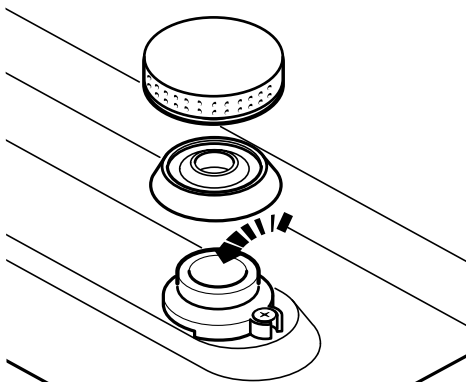

H.2 Brief Troubleshooting guide

In some cases, faults can be eliminated easily and quickly by following a brief troubleshooting guide:

Malfunction	Possible causes:
The pilot burner of open burners does not light	<ul style="list-style-type: none"> • Insufficient pressure in gas pipes. • Blocked nozzle. • Faulty gas valve

H.1.4 Other surfaces

Cast iron electric hot-plates

- Clean the hot-plates with a damp cloth, then switch them on for a few minutes to dry rapidly; lastly, lubricate them with a light film of cooking oil.
- DO NOT pour cold liquids on the hot-plates while they are hot.



IMPORTANT

With electric appliances, make sure no water comes into contact with electrical components: water penetration can cause short circuiting and dissipation, tripping the appliance's protection devices

H.1.5 Periods of non-use

If the appliance is not going to be used for some time, take the following precautions:

- Close the valves or main switches ahead of the appliances;
- Go over all stainless steel surfaces vigorously with a cloth moistened with paraffin oil in order to create a protective film;
- Periodically air the premises;
- Have the appliance checked before using it again;
- For the electric heated models: switch the machine On at the minimum rate of heat for at least 45 minutes; this will allow moisture/humidity accumulated into the heating elements to evaporate without damaging the elements.

H.1.6 Internal parts (every 6 months)



IMPORTANT

Operations to be carried out only by specialised personnel.

- Check the condition of the internal parts.
- Remove any deposits of dirt inside the appliance.
- Check and clean the discharge system.



IMPORTANT

In particular conditions (e.g. intensive use of the appliance, salty environment, etc.) the above cleaning should be more frequent.

The oven pilot burner does not light	<ul style="list-style-type: none"> • Igniter not properly fixed or connected. • The piezoelectric ignition or igniter cable are damaged. • Insufficient pressure in gas pipes. • Blocked nozzle. • Faulty gas valve.
The pilot burner goes out when the igniter knob is released	<ul style="list-style-type: none"> • The pilot burner is not heating the thermocouple sufficiently. • Faulty thermocouple. • The gas valve knob is not being pressed enough • Lack of gas pressure at valve. • Faulty gas valve.
The pilot burner is still lit but the main burner does not light	<ul style="list-style-type: none"> • Loss of pressure in gas pipe. • Blocked nozzle or faulty gas valve. • Burner with gas outlet holes clogged
The oven temperature cannot be adjusted	<ul style="list-style-type: none"> • Faulty thermostat bulb. • Faulty gas valve. • Faulty electric thermostat • Electric safety thermostat cut in
The burner of the open rings does not ignite (version with ignition plugs without pilot flame)	<ul style="list-style-type: none"> • check if metal foil has been used to protect the trays. • check for residual moisture on the ignition plugs.
The pilot burner of open burners does not light	<ul style="list-style-type: none"> • Insufficient pressure in gas pipes. • Blocked nozzle. • Faulty gas valve

H.3 Repair and extraordinary maintenance



NOTE!

Repair and extraordinary maintenance have to be carried out by specialised authorised personnel, who can ask the manufacturer to supply a service manual.

H.4 Maintenance intervals

All the components requiring maintenance are accessible from the front or the rear panel of the appliance.

The inspection and maintenance intervals depend on the actual machine operation conditions and ambient conditions (presence of dust, damp, etc.), therefore precise time intervals cannot be given.

In any case, careful and periodical machine maintenance is advisable in order to minimise service interruptions.

To ensure constant machine efficiency, it is advisable to carry out the checks with the frequency given in the following table:



IMPORTANT

Machine maintenance, checking and overhaul operations must only be carried out by a specialised Technician or the Customer Care Service, provided with adequate personal protection equipment (safety shoes and gloves), tools and ancillary means;

Work on the electrical equipment must only be carried out by a specialised electrician or the Customer Care Service.

Maintenance, inspections, checks and cleaning	Frequency	Responsibility
Ordinary cleaning <ul style="list-style-type: none"> • general cleaning of machine and surrounding area. 	Daily	Operator
Mechanical protection devices <ul style="list-style-type: none"> • check their condition and for any deformation, loosening or removed parts. 	Yearly	Service
Control <ul style="list-style-type: none"> • check the mechanical part, for cracks or deformation, tightening of screws: check the readability and condition of words, stickers and symbols and restore if necessary. 	Yearly	Service
Machine structure <ul style="list-style-type: none"> • tightening of main bolts (screws, fixing systems, etc.) of machine. 	Yearly	Service
Safety signs <ul style="list-style-type: none"> • check the readability and condition of safety signs. 	Yearly	Service

Maintenance, inspections, checks and cleaning	Frequency	Responsibility
Electrical control panel <ul style="list-style-type: none"> check the electrical components installed inside the electrical control panel. Check the wiring between the electrical panel and machine parts. 	Yearly	Service
Electrical connection cable and plug <ul style="list-style-type: none"> check the connection cable (replace if necessary) and plug. 	Yearly	Service
Preventive maintenance <ul style="list-style-type: none"> remove any deposits of dirt inside the appliance. 	Every 6 months ¹	Service
Control <ul style="list-style-type: none"> check the conditions of the internal parts. 	Every 6 months ¹	Service
Control <ul style="list-style-type: none"> check and clean the discharge system. 	Every 6 months ¹	Service
General machine overhaul <ul style="list-style-type: none"> check all components, electrical equipment, corrosion, pipes... 	Every 10 years ²	Service

- In particular conditions (e. g. intensive use of the appliance, salty environment, etc.) the preventive maintenance should be more frequent.
- the machine is designed and built for a duration of about 10 years. After this period of time (from commissioning) the machine must undergo a general inspection and overhaul. Some examples of checks to be carried out are given below.

- Check for any oxidised electrical components or parts; if necessary, replace them and restore the initial conditions;
- Check the structure and welded joints in particular;
- Check and replace bolts and/or screws, also checking for any loose components;
- Check the electrical and electronic system;
- Check the functionality of safety devices;
- Check the general condition of protection devices and guards.



NOTE!

It is advisable to stipulate a preventive and scheduled maintenance contract with the Customer Care Service.

Decommissioning

- All scrapping operations must occur with the machine stopped and cold and the electrical power supply disconnected;
- Work on the electrical equipment must only be carried out by a qualified electrician, with the power supply disconnected;
- To carry out these operations it is necessary to use: overalls, safety shoes and gloves;
- During decommissioning and handling of the various parts, the minimum height from the floor must be maintained.

H.5 Maintenance contacts (only for Australia)

For service and spare parts, please contact:

- Electrolux Professional:
 - Tom Stoddart Pty Ltd — 39 Forest Way, Karawatha QLD 4117 – call 1-300-307-289.
 - Electrolux Professional Australia Pty Ltd – 5–7 Keith Campbell Court – Scoresby, 3179 – call 03-9765-8444
- Zanussi - Electrolux Professional Australia Pty Ltd – 5–7 Keith Campbell Court — Scoresby, 3179 – call 03-9765-8444
- Diamond - Semak Food Service Equipment - 18, 87–91 Hallam South Road, Hallam VIC 3803 – call 03-9796-4583

I MACHINE DISPOSAL



WARNING

Refer to “*WARNING and Safety Information*”

I.1 Waste storage

At the end of the product's life-cycle, make sure it is not dispersed in the environment.

Depending on the model, the doors must be removed before scrapping the appliance.

SPECIAL waste materials can be stored temporarily while awaiting treatment for disposal and/or permanent storage. In any case, the current environmental protection laws in the user's country must be observed.

I.2 Procedure regarding appliance dismantling macro operations

Before disposing of the machine, make sure to carefully check its physical condition, and in particular any parts of the structure that can give or break during scrapping.

The machine's parts must be disposed of in a differentiated way, according to their different characteristics (e. g. metals, oils, greases, plastic, rubber, etc.).

Different regulations are in force in the various countries, therefore comply with the provisions of the laws and competent bodies in the country where scrapping takes place.

In general, the appliance must be taken to a specialised collection/ scrapping centre.

Dismantle the appliance, grouping the components according to their chemical characteristics, remembering that the compressor contains lubricant oil and refrigerant fluid which can be recycled, and that the refrigerator components are special waste assimilable with urban waste.



The symbol on the product indicates that this product should not be treated as domestic waste, but must be correctly disposed of in order to prevent any negative consequences for the environment and human health. For further information on the recycling of this product, contact the local dealer or agent, the Customer Care service or the local body responsible for waste disposal.



NOTE!

When scrapping the machine, any marking, this manual and other documents concerning the appliance must be destroyed.

J ENCLOSED DOCUMENTS

- Set of test and inspection documents.
- Wiring diagram.
- Installation diagram.
- Declaration of Conformity

CE

Electrolux Professional SPA
Viale Treviso 15
33170 Pordenone
www.electroluxprofessional.com