



Spare Parts List

Model: KCICDC10FH
 PNC: 738374
 REV: 4/8/2024

NO	DESCRIPTION	Serial #	QTY	COMPONENT PNC	Model Number	Model PNC
1	Cabinet	ALL	1	N/A	KCICDC10FH	738374
2	Glass cover Bracket	ALL	2	0USDMH	KCICDC10FH	738374
3	Front LED Light	ALL	3	0USDQH	KCICDC10FH	738374
4	Front Glass	ALL	1	0USDQG	KCICDC10FH	738374
5	Bottom Bracket	ALL	1	0USDQC	KCICDC10FH	738374
6	Middle Bracket	ALL	1	0USDQB	KCICDC10FH	738374
7	Glass	ALL	1	0USDQF	KCICDC10FH	738374
8	Left Cover	ALL	1	0USDMA	KCICDC10FH	738374
9	Left Glass	ALL	1	0USDMK	KCICDC10FH	738374
10	Front Glass Bracket	ALL	2	0USDMP	KCICDC10FH	738374
11	Top Bracket(F)	ALL	1	0USDP9	KCICDC10FH	738374
11a	Top Bracket(R)	ALL	1	0USDQA	KCICDC10FH	738374
12	Glass Back Door	ALL	2	0USDL2	KCICDC10FH	738374
13	Right Glass	ALL	1	0USDML	KCICDC10FH	738374
14	Glass Clamp 2	ALL	4	0USDOZ	KCICDC10FH	738374
15	Back Door	ALL	1	0USDL2	KCICDC10FH	738374
16	Right Cover	ALL	1	0USDMB	KCICDC10FH	738374
17	Plug	ALL	1	0USDQJ	KCICDC10FH	738374
18	Frost Removal - Ice scraper	ALL	1	0USDMQ	KCICDC10FH	738374
19	5L pan support metal frame for 10 TUB ICE CREAM DIPPING CABINET	ALL	1	0USDP5	KCICDC10FH	738374
19	5L pan support acrylic frame for 10 TUB ICE CREAM DIPPING CABINET	ALL	1	0USDP6	KCICDC10FH	738374
19a1	Tub Bracket	ALL	1	0USDP2	KCICDC10FH	738374
19a2	Tub Cover Bracket 1 - Front/Back	ALL	2	0USDP0	KCICDC10FH	738374
19a3	Tub Cover Bracket 2	ALL	1	0USDP3	KCICDC10FH	738374
19a4	Tub Cover	ALL	1	0USDP4	KCICDC10FH	738374
19a5	Tub Bracket 2 - Front/Back	ALL	2	0USDP1	KCICDC10FH	738374
19b1	Pan Cover Bracket 1 - Front/Back	ALL	2	0USDP0	KCICDC10FH	738374
19b2	Pan Cover Bracket 2	ALL	1	0USDP5	KCICDC10FH	738374
19b3	Pan Cover	ALL	1	0USDP6	KCICDC10FH	738374
20	Black Platform	ALL	1	0USDQD	KCICDC10FH	738374
21	Back Door Guide	ALL	1	0USDQE	KCICDC10FH	738374
22	Back Platform Bracket	ALL	3	0USDMG	KCICDC10FH	738374
23	Lower Glass Lid	ALL	1	0USDP8	KCICDC10FH	738374
24	Lock and Key	ALL	1	0USDMV	KCICDC10FH	738374
25	Load Boundaries	ALL	1	0USDKN	KCICDC10FH	738374
26	Upper Glass Lid	ALL	1	0USDP7	KCICDC10FH	738374
27	LED Light	ALL	1	0USDQN	KCICDC10FH	738374
28	Plug 2	ALL	10	0USDMI	KCICDC10FH	738374
29	Rear Cover	ALL	1	0USDKP	KCICDC10FH	738374
30	Control Bracket	ALL	1	0USDL0	KCICDC10FH	738374
31	Control Panel	ALL	1	0USDL7	KCICDC10FH	738374
32	Digital Thermostat	ALL	1	0USDQI	KCICDC10FH	738374
33	Switch	ALL	1	0USD86	KCICDC10FH	738374
34	Filter Dryer	ALL	1	0USD78	KCICDC10FH	738374
35	external condenser	ALL	1	0USDL4	KCICDC10FH	738374
36	Cover	ALL	1	0USDKS	KCICDC10FH	738374
37	Fan	ALL	1	0USD69	KCICDC10FH	738374
37a	Fan Blade	ALL	1	0USDQO	KCICDC10FH	738374

38	Fan Bracket	ALL	1	0USD70	KCICDC10FH	738374
39	Power Cord	ALL	1	0USDL8	KCICDC10FH	738374
40	Compressor	ALL	1	0USD90	KCICDC10FH	738374
40a	Relay	ALL	1	0USC8R	KCICDC10FH	738374
40b	Overload	ALL	1	0USC8T	KCICDC10FH	738374
40c	Start Capacitor	ALL	1	0USC8W	KCICDC10FH	738374
41	Control Connection Wire	ALL	1	0USDL6	KCICDC10FH	738374
42	Transformer	ALL	1	0USDMS	KCICDC10FH	738374
42a	Transformer 2	ALL	1	0USDMT	KCICDC10FH	738374
43	Castor with Brake	ALL	2	0USDKQ	KCICDC10FH	738374
44	Water Collector	ALL	1	0USDKO	KCICDC10FH	738374
45	Castor without Brake	ALL	2	0USDKR	KCICDC10FH	738374

Exploded View Of KCICDC10FH

