

Spare Parts List

NO	DESCRIPTION	Serial #	QTY	COMPONENT PNC	Model Number	Model PNC
1	Cabinet	ALL	1	N/A	KCICDC10FH	738374
2	Glass cover Bracket	ALL	2	0USDMH	KCICDC10FH	738374
3	Front LED Light	ALL	3	0USDQH	KCICDC10FH	738374
4	Front Glass	ALL	1	0USDQG	KCICDC10FH	738374
5	Bottom Bracket	ALL	1	0USDQC	KCICDC10FH	738374
6	Middle Bracket	ALL	1	0USDQB	KCICDC10FH	738374
7	Glass	ALL	1	0USDQF	KCICDC10FH	738374
8	Left Cover	ALL	1	0USDMA	KCICDC10FH	738374
9	Left Glass	ALL	1	0USDMK	KCICDC10FH	738374
10	Front Glass Bracket	ALL	2	0USDMP	KCICDC10FH	738374
11	Top Bracket(F)	ALL	1	0USDP9	KCICDC10FH	738374
11a	Top Bracket(R)	ALL	1	0USDQA	KCICDC10FH	738374
12	Glass Back Door	ALL	2	0USO61	KCICDC10FH	738374
13	Right Glass	ALL	1	0USDML	KCICDC10FH	738374
14	Gasket/Grip	< 004352000182	4	0USX04	KCICDC10FH	738374
		≥ 004352000182	4	0USO60	KCICDC10FH	738374
15	Glass Clamp 2	ALL	4	0USDOZ	KCICDC10FH	738374
16	Back Door	ALL	1	0USDL2	KCICDC10FH	738374
16a	Back Door Gasket	ALL	1	0USO43	KCICDC10FH	738374
16b	Back Door Hinge	ALL	1	0USO44	KCICDC10FH	738374
16c	Back Door Latch	ALL	1	0USO45	KCICDC10FH	738374
17	Right Cover	ALL	1	0USDMB	KCICDC10FH	738374
18	Plug	ALL	1	0USDQJ	KCICDC10FH	738374
19	Shelf Components	ALL	1	N/A	KCICDC10FH	738374
19a1	Tub Bracket 1 - Front/Back	ALL	2	0USDP1	KCICDC10FH	738374
19a2	10.16" Lower Tub Bracket Insert for Standard Tub	< 004352000182	0	N/A	KCICDC10FH	738374
		≥ 004352000182	10	0USX05	KCICDC10FH	738374
19a2-1	Bracket Rubber Grip	ALL	40	0USFB1	KCICDC10FH	738374
19a3	Tub Bracket Panel (Lower brackets welded to panel)	< 004352000182	1	0USDP2	KCICDC10FH	738374
	Tub Bracket Panel (with slits for removable brackets)	≥ 004352000182	1	0USX09	KCICDC10FH	738374
19a4	8.25" Lower Tub Bracket Insert for Ropak Tub	< 004352000182	0	N/A	KCICDC10FH	738374
		≥ 004352000182	10	0USFB5	KCICDC10FH	738374
19a4-1	Bracket Rubber Grip	ALL	40	0USFB1	KCICDC10FH	738374
19a5	Tub Cover Bracket 1 - Front/Back	ALL	2	0USDP0	KCICDC10FH	738374
19a6	Tub Cover Bracket 2	ALL	1	0USDP3	KCICDC10FH	738374
19a7	Tub Cover	ALL	1	0USDP4	KCICDC10FH	738374
20	Back Platform	ALL	1	0USDQD	KCICDC10FH	738374
21	Back Door Guide	ALL	1	0USDQE	KCICDC10FH	738374
22	Back Platform Bracket	ALL	3	0USDMG	KCICDC10FH	738374

23	Lower Glass Lid	ALL	1	0USDP8	KCICDC10FH	738374
24	Lock and Key	ALL	1	0USDMV	KCICDC10FH	738374
25	Upper Glass Lid	ALL	1	0USDP7	KCICDC10FH	738374
26	Inner Cabinet LED Light	ALL	1	0USDQN	KCICDC10FH	738374
27	Screw Cover	ALL	10	0USDMI	KCICDC10FH	738374
28	Rear Cover	ALL	1	0USDKP	KCICDC10FH	738374
29	Control Bracket	ALL	1	0USDL0	KCICDC10FH	738374
30	Control Panel	ALL	1	0USDL7	KCICDC10FH	738374
31	Digital Thermostat	ALL	1	0USDQI	KCICDC10FH	738374
32	Switch	ALL	1	0USD86	KCICDC10FH	738374
33	Frost Removal - Ice scraper	ALL	1	0USDMQ	KCICDC10FH	738374
34	Filter Dryer	< 003162000182	1	0USD78	KCICDC10FH	738374
		≥ 003162000182	1	0USO64	KCICDC10FH	738374
35	external condenser	ALL	1	0USDL4	KCICDC10FH	738374
36	Cover	ALL	1	0USDKS	KCICDC10FH	738374
37	Fan	ALL	1	0USD69	KCICDC10FH	738374
37a	Fan Blade	ALL	1	0USDQO	KCICDC10FH	738374
38	Fan Bracket	< 004352000182	1	0USD70	KCICDC10FH	738374
		≥ 004352000182	1	0USO65	KCICDC10FH	738374
39	Power Cord	ALL	1	0USDL8	KCICDC10FH	738374
40	Compressor	ALL	1	0USD90	KCICDC10FH	738374
40a	Relay	ALL	1	0USC8R	KCICDC10FH	738374
40b	Overload	ALL	1	0USC8T	KCICDC10FH	738374
40c	Start Capacitor	ALL	1	0USC8W	KCICDC10FH	738374
41	Control Connection Wire	ALL	1	0USDL6	KCICDC10FH	738374
42	Transformer - Inner Cabinet LED	ALL	1	0USDMS	KCICDC10FH	738374
43	Transformer - FRONT LED	ALL	1	0USDMT	KCICDC10FH	738374
44	Castor without Brake	ALL	2	0USDKQ	KCICDC10FH	738374
45	Water Collector	ALL	1	0USDKO	KCICDC10FH	738374
46	Dipping Well Mounting Screw	ALL	0	N/A	KCICDC10FH	738374
47	Castor with Brake	ALL	2	0USDKR	KCICDC10FH	738374
48	Load Boundaries	ALL	1	0USDKN	KCICDC10FH	738374

Exploded View Of KCICDC10FH

