

Spare Parts List

NO	DESCRIPTION	Serial #	QTY	COMPONENT PNC	Model Number	Model PNC
1	Cabinet	ALL	1	OUSX04	KCICDC4FH	738371
2	Glass cover Bracket	ALL	2	OUSD MH	KCICDC4FH	738371
3	Front LED Light	ALL	3	OUSD OF	KCICDC4FH	738371
4	Front Glass	ALL	1	OUSD OD	KCICDC4FH	738371
5	Bottom Bracket	ALL	1	OUSD N9	KCICDC4FH	738371
6	Middle Bracket	ALL	1	OUSD N8	KCICDC4FH	738371
7	Glass	ALL	1	OUSD OC	KCICDC4FH	738371
8	Left Cover	ALL	1	OUSD MA	KCICDC4FH	738371
9	Left Glass	ALL	1	OUSD MK	KCICDC4FH	738371
10	Front Glass Bracket	ALL	2	OUSD MP	KCICDC4FH	738371
11	Top Bracket(F)	ALL	1	OUSD N6	KCICDC4FH	738371
11a	Top Bracket(R)	ALL	1	OUSD N7	KCICDC4FH	738371
12	Glass Back Door	ALL	2	OUSD OE	KCICDC4FH	738371
13	Right Glass	ALL	1	OUSD ML	KCICDC4FH	738371
14	Gasket	ALL	4	OUSX04	KCICDC4FH	738371
15	Glass Clamp 2	ALL	4	OUSD OZ	KCICDC4FH	738371
16	Back Door	ALL	1	OUSD N5	KCICDC4FH	738371
16a	Back Door Gasket	ALL	1	OUSO43	KCICDC4FH	738371
16b	Back Door Hinge	ALL	1	OUSO44	KCICDC4FH	738371
16c	Back Door Latch	ALL	1	OUSO45	KCICDC4FH	738371
17	Right Cover	ALL	1	OUSD MB	KCICDC4FH	738371
18	Plug	ALL	1	OUSD QJ	KCICDC4FH	738371
19	5L pan support metal frame for 4 TUB ICE CREAM DIPPING CABINET	ALL	1	OUSD N1	KCICDC4FH	738371
19	5L pan support acrylic frame for 4 TUB ICE CREAM DIPPING CABINET	ALL	1	OUSD N2	KCICDC4FH	738371
19a1	Tub Cover Bracket 1 - Front/Back	ALL	2	OUSD MW	KCICDC4FH	738371
19a2	Tub Bracket	< 004332000182	1	OUSD MY	KCICDC4FH	738371
	Tub Bracket Panel	≥ 004332000182	1	OUSD O6	KCICDC4FH	738371
	10.16" Tub Bracket Insert	≥ 004332000182	4	OUSD X5	KCICDC4FH	738371
	8.25" Tub Bracket Insert for Ropacks	≥ 004332000182	4	OUSD B5	KCICDC4FH	738371
19a2-1	Bracket Rubber Grip	ALL	16	OUSD B1	KCICDC4FH	738371
19a3	Tub Bracket 2 - Front/Back	ALL	2	OUSD MX	KCICDC4FH	738371
19a4	Tub Cover Bracket 2	ALL	1	OUSD MZ	KCICDC4FH	738371
19a5	Tub Cover	ALL	1	OUSD N0	KCICDC4FH	738371
19b1	Pan Cover Bracket 1 - Front/Back	ALL	2	OUSD MW	KCICDC4FH	738371
19b2	Pan Cover Bracket 2	ALL	1	OUSD N1	KCICDC4FH	738371
19b3	Pan Cover	ALL	1	OUSD N2	KCICDC4FH	738371
20	Black Platform	ALL	1	OUSD OA	KCICDC4FH	738371
21	Back Door Guide	ALL	1	OUSD OB	KCICDC4FH	738371
22	Back Platform Bracket	ALL	2	OUSD MG	KCICDC4FH	738371
23	Lower Glass Lid	ALL	1	OUSD N4	KCICDC4FH	738371
24	Lock and Key	ALL	1	OUSD MV	KCICDC4FH	738371
25	Upper Glass Lid	ALL	1	OUSD N3	KCICDC4FH	738371
26	LED Light	ALL	1	OUSD QK	KCICDC4FH	738371
27	Screw Cover	ALL	10	OUSD MI	KCICDC4FH	738371
28	Rear Cover	ALL	1	OUSD KP	KCICDC4FH	738371
29	Control Bracket	ALL	1	OUSD L0	KCICDC4FH	738371
30	Control Panel	ALL	1	OUSD L7	KCICDC4FH	738371
31	Digital Thermostat	ALL	1	OUSD QI	KCICDC4FH	738371
32	Switch	ALL	1	OUSD 86	KCICDC4FH	738371
33	Filter Dryer	ALL	1	OUSD 78	KCICDC4FH	738371
34	external condenser	ALL	1	OUSD L4	KCICDC4FH	738371
35	Cover	ALL	1	OUSD KS	KCICDC4FH	738371
36	Fan	ALL	1	OUSD 69	KCICDC4FH	738371
36a	Fan Blade	ALL	1	OUSD QO	KCICDC4FH	738371

37	Fan Bracket	ALL	1	0USD70	KCICDC4FH	738371
38	Power Cord	ALL	1	0USDL8	KCICDC4FH	738371
39	Compressor	ALL	1	0USDQQ	KCICDC4FH	738371
39a	Relay	ALL	1	0USDQX	KCICDC4FH	738371
39b	Overload	ALL	1	0USDQV	KCICDC4FH	738371
39c	Start Capacitor	ALL	1	0USDQW	KCICDC4FH	738371
39d	Run Capacitor	ALL	1	0USDQY	KCICDC4FH	738371
40	Control Connection Wire	ALL	1	0USDL5	KCICDC4FH	738371
41	Transformer	ALL	1	0USDMU	KCICDC4FH	738371
42	Castor without Brake	ALL	2	0USDKQ	KCICDC4FH	738371
43	Water Collector	ALL	1	0USDKO	KCICDC4FH	738371
44	Castor with Brake	ALL	2	0USDKR	KCICDC4FH	738371
45	Frost Removal - Ice scraper	ALL	1	0USDMQ	KCICDC4FH	738371
46	Load Boundaries	ALL	1	0USDKN	KCICDC4FH	738371

