

Spare Parts List

NO	DESCRIPTION	Serial #	QTY	COMPONENT PNC	Model Number	Model PNC
1	Cabinet	ALL	1	N/A	KCICDC4FH	738371
2	Glass cover Bracket	ALL	2	0USDMH	KCICDC4FH	738371
3	Front LED Light	ALL	3	0USD0F	KCICDC4FH	738371
4	Front Glass	ALL	1	0USD0D	KCICDC4FH	738371
5	Bottom Bracket	ALL	1	0USDN9	KCICDC4FH	738371
6	Middle Bracket	ALL	1	0USDN8	KCICDC4FH	738371
7	Glass	ALL	1	0USDOC	KCICDC4FH	738371
8	Left Cover	ALL	1	0USDMA	KCICDC4FH	738371
9	Left Glass	ALL	1	0USDMK	KCICDC4FH	738371
10	Front Glass Bracket	ALL	2	0USDMP	KCICDC4FH	738371
11	Top Bracket(F)	ALL	1	0USDN6	KCICDC4FH	738371
11a	Top Bracket(R)	ALL	1	0USDN7	KCICDC4FH	738371
12	Glass Back Door	ALL	2	0USDOE	KCICDC4FH	738371
13	Right Glass	ALL	1	0USDML	KCICDC4FH	738371
14	Gasket	ALL	4	0USX04	KCICDC4FH	738371
15	Glass Clamp 2	ALL	4	0USDOZ	KCICDC4FH	738371
16	Back Door	ALL	1	0USDN5	KCICDC4FH	738371
16a	Back Door Gasket	ALL	1	0USO42	KCICDC4FH	738371
16b	Back Door Hinge	ALL	1	0USO44	KCICDC4FH	738371
16c	Back Door Latch	ALL	1	0USO45	KCICDC4FH	738371
17	Right Cover	ALL	1	0USDMB	KCICDC4FH	738371
18	Plug	ALL	1	0USDQJ	KCICDC4FH	738371
19	Shelf Components	ALL	1	N/A	KCICDC4FH	738371
19a1	Tub Cover Bracket 1 - Front/Back	ALL	2	0USDMW	KCICDC4FH	738371
19a2	Tub Bracket	< 004332000182	1	0USDMY	KCICDC4FH	738371
	Tub Bracket Panel	≥ 004332000182	1	0USX06	KCICDC4FH	738371
	10.16" Tub Bracket Insert	≥ 004332000182	4	0USX05	KCICDC4FH	738371
	8.25" Tub Bracket Insert for Ropacks	≥ 004332000182	4	0USFB5	KCICDC4FH	738371
19a2-1	Bracket Rubber Grip	ALL	16	0USFB1	KCICDC4FH	738371
19a3	Tub Bracket 2 - Front/Back	ALL	2	0USDMX	KCICDC4FH	738371
19a4	Tub Cover Bracket 2	ALL	1	0USDMZ	KCICDC4FH	738371
19a5	Tub Cover	ALL	1	0USDN0	KCICDC4FH	738371
19b1	Pan Cover Bracket 1 - Front/Back	ALL	2	0USDMW	KCICDC4FH	738371
19b2	Pan Cover Bracket 2	ALL	1	0USDN1	KCICDC4FH	738371
19b3	Pan Cover	ALL	1	0USDN2	KCICDC4FH	738371
20	Black Platform	ALL	1	0USDOA	KCICDC4FH	738371
21	Back Door Guide	ALL	1	0USDOB	KCICDC4FH	738371
22	Back Platform Bracket	ALL	2	0USDMG	KCICDC4FH	738371
23	Lower Glass Lid	ALL	1	0USDN4	KCICDC4FH	738371
24	Lock and Key	ALL	1	0USDMV	KCICDC4FH	738371
25	Upper Glass Lid	ALL	1	0USDN3	KCICDC4FH	738371
26	LED Light	ALL	1	0USDQK	KCICDC4FH	738371
27	Screw Cover	ALL	10	0USDMI	KCICDC4FH	738371
28	Rear Cover	ALL	1	0USDKP	KCICDC4FH	738371
29	Control Bracket	ALL	1	0USDL0	KCICDC4FH	738371
30	Control Panel	ALL	1	0USDL7	KCICDC4FH	738371
31	Digital Thermostat	ALL	1	0USDQI	KCICDC4FH	738371
32	Switch	ALL	1	0USD86	KCICDC4FH	738371
33	Filter Dryer	ALL	1	0USD78	KCICDC4FH	738371
34	external condenser	ALL	1	0USDL4	KCICDC4FH	738371
35	Cover	ALL	1	0USDKS	KCICDC4FH	738371
36	Fan	ALL	1	0USD69	KCICDC4FH	738371
36a	Fan Blade	ALL	1	0USDQO	KCICDC4FH	738371
37	Fan Bracket	ALL	1	0USD70	KCICDC4FH	738371
38	Power Cord	ALL	1	0USDL8	KCICDC4FH	738371

39	Compressor	ALL	1	0USDQQ	KCICDC4FH	738371
39a	Relay	ALL	1	0USDQX	KCICDC4FH	738371
39b	Overload	ALL	1	0USDQV	KCICDC4FH	738371
39c	Start Capacitor	ALL	1	0USDQW	KCICDC4FH	738371
39d	Run Capacitor	ALL	1	0USDQY	KCICDC4FH	738371
40	Control Connection Wire	ALL	1	0USDL5	KCICDC4FH	738371
41	Transformer	ALL	1	0USDMU	KCICDC4FH	738371
42	Castor without Brake	ALL	2	0USDKQ	KCICDC4FH	738371
43	Water Collector	ALL	1	0USDKO	KCICDC4FH	738371
44	Castor with Brake	ALL	2	0USDKR	KCICDC4FH	738371
45	Frost Removal - Ice scraper	ALL	1	0USDMQ	KCICDC4FH	738371
46	Load Boundaries	ALL	1	0USDKN	KCICDC4FH	738371

Exploded View Of KCICDC4FH

