


PNC	Model	Ref	Page	Notes
283013	E0UUAEBOMCA	a	2 - 3	ELECTROLUX
283020	Z0UUAEBOMCA	b	2 - 3	ZANUSSI
283027	N0UUAEBOMCA	c	2 - 3	TO BRAND
283014	E0UUAEBOMOA	d	2 - 3	ELECTROLUX
283021	Z0UUAEBOMOA	e	2 - 3	ZANUSSI
283028	N0UUAEBOMOA	f	2 - 3	TO BRAND
283015	E0UUADBOMCA	g	2 - 3	ELECTROLUX
283022	Z0UUADBOMCA	h	2 - 3	ZANUSSI
283029	N0UUADBOMCA	i	2 - 3	TO BRAND

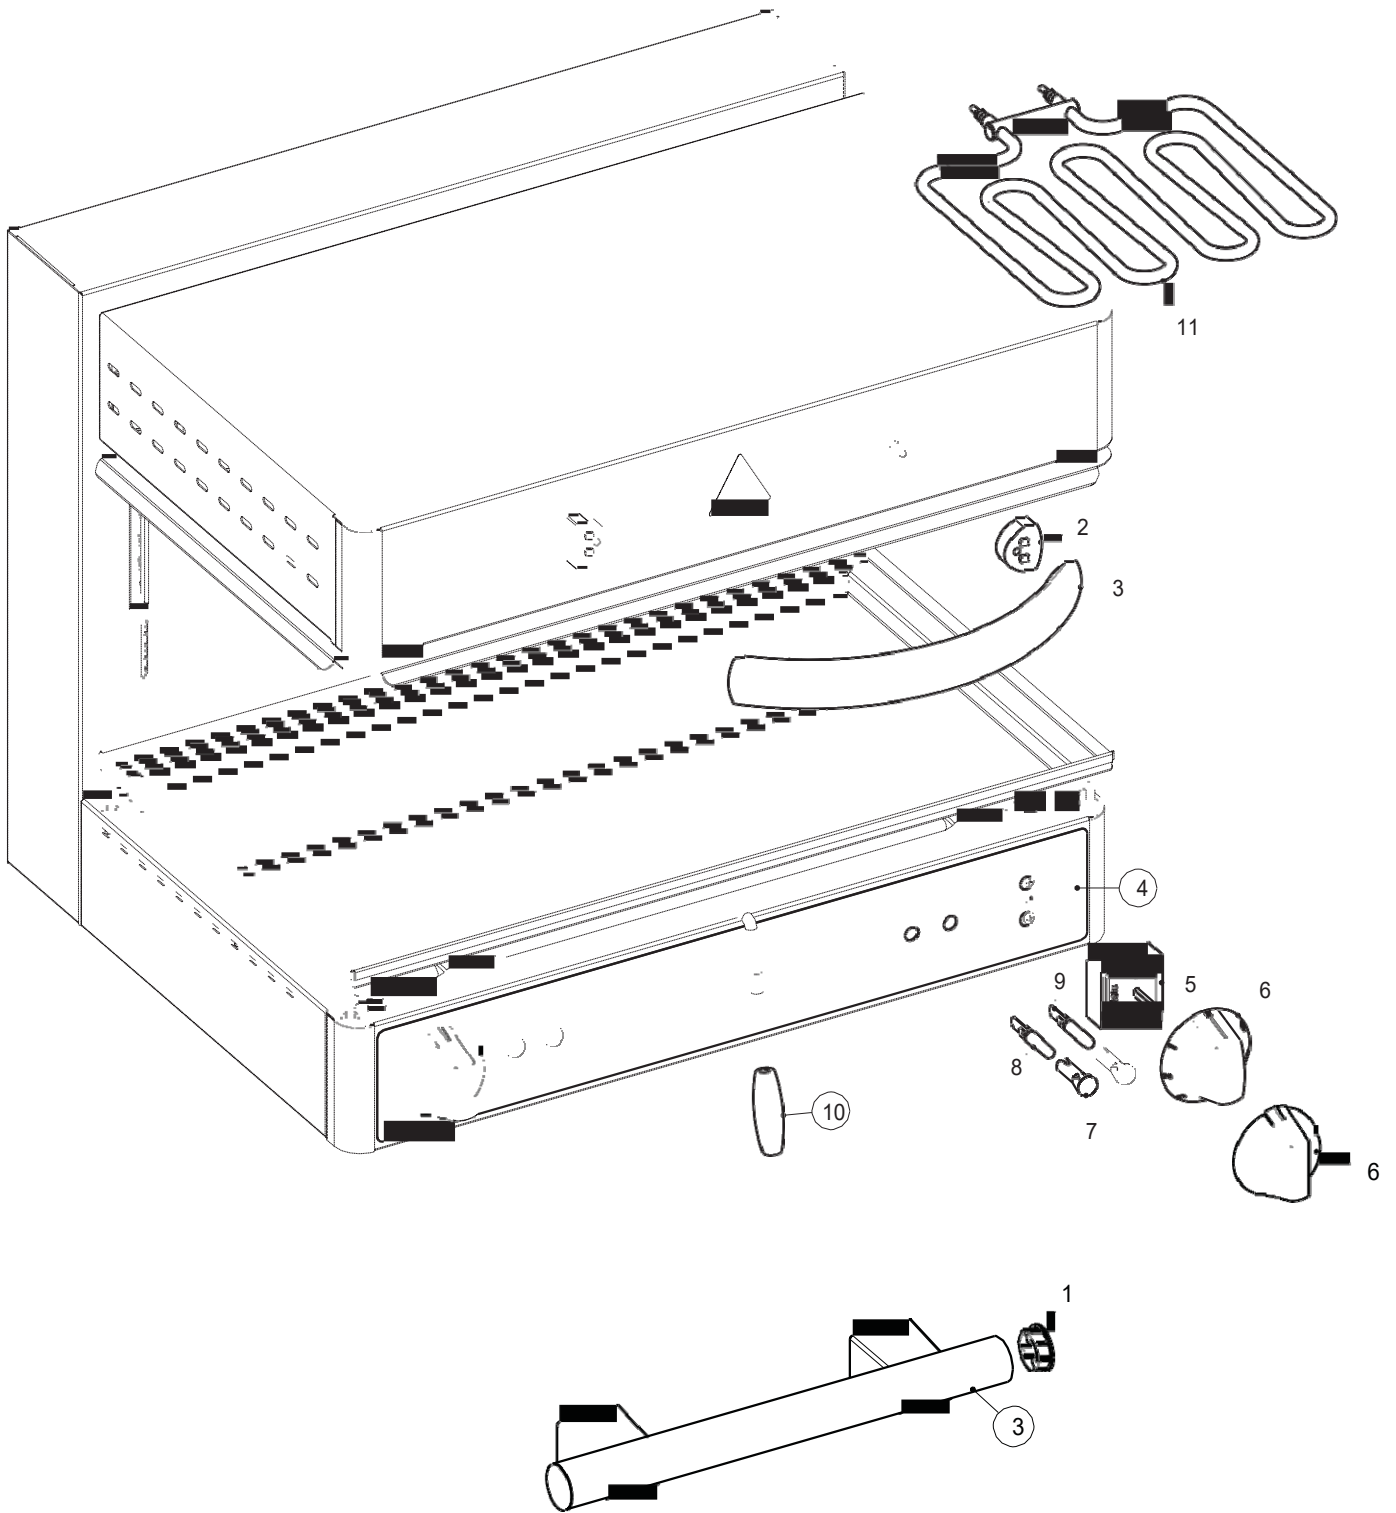

EL.SALAMANDER, OPEN 3 SIDES  
SALAMANDRA EL., APERTA 3 LATI

Pos.	Cod.ric. Part No.	Factory Code	Descrizione	Description	v	w	t	c	Note/Notes
1	0C6823	-	Tappo per maniglia electrolux	Plug for handle electrolux				x	a, d, g
2	0CB602	RC02634000	Distanziale maniglia salamandra	Spacer handle					b, c, e, f, h, i
3	0CB603	RC01784000	Maniglia vano zanussi - to brand	Handle zanussi - to brand					b, c, e, f, h, i
	095206	0835R12503	Maniglia sal. Electrolux	Handle electrolux					a, d, g
4	0CB618	RC02709000	Membr. ades. Electrolux 400MM	Adhesive layer Electrolux				x	a
	0CB619	RC02710000	Membr. ades. Zanussi 400MM	Adhesive layer Zanussi				x	b
	0CB620	RC02711000	Membr. ades. ToBrand 400MM	Adhesive layer to brand				x	c
	0CB623	RC02704000	Membr. ades. Electrolux 600MM	Adhesive layer Electrolux				x	d, g
	0CB624	RC02705000	Membr. ades. Zanussi 600MM	Adhesive layer Zanussi				x	e, h
	0CB625	RC02706000	Membr. ades. ToBrand 600MM	Adhesive layer to brand				x	f, i
5	0CB621	RC00006501	Simmostato	Energy regulator	x	x			
6	0C8700	-	Manopola electrolux	Knob electrolux					a, d, g
	0CB616	RC01941000	Manopola zanussi - to brand	Knob zanussi - to brand					b, c, e, f, h, i
7	0CB607	RC01783000	Portalampada trasparente d10	Transparent lamp holder d10					
8	0CB608	RC01782000	Lampada neon verde 230V	Lamp green 230V	x				
9	004895	RC00052000	Lampada neon arancio 230V	Lamp orange 230V	x				
10	0CB609	RC01027000	Impugnatura	Handle					
11	0CB622	RC00363000	Resistenza el. SE40 230V	Heating element SE40 230V	x				a,b,c
	0CB626	RC00364000	Resistenza el. SE60 230V	Heating element SE60 230V	x				d,e,f,g,h,i