

SPARE PARTS CATALOGUE

6 GN 1/1 ELECTRIC OVEN


CONVECTION CROSSWISE OVEN

PNC	MODEL	REF.	PAG.	DESCRIPTION	NOTE/BRAND
240451	ZFCE61CSDS	a	3-8	CONVECTION OVEN 6 GN 1/1 - ELECTRIC	Zanussi
240452	ZFCE61CSCS	b	3-8	CONVECTION OVEN 6 GN 1/1 - ELECTRIC - 230V	Zanussi
240489	ZFCE61CSES	c	3-8	CONVECTION OVEN 6 GN 1/1 - ELECTRIC - 60HZ	Zanussi
260688	EFCE61CSDS	d	3-8	CONVECTION OVEN 6 GN 1/1 - ELECTRIC	EPR
260689	EFCE61CSCS	e	3-8	CONVECTION OVEN 6 GN 1/1 - ELECTRIC - 230V	EPR
260869	EFCE61CSES	f	3-8	CONVECTION OVEN 6 GN 1/1 - ELECTRIC - 60HZ	EPR
697005	TFCE61CSDS	g	3-8	CROSSWISE OVEN ELECTRIC 6 GN 1/1	To Brand
697006	TFCE61CSCS	h	3-8	CROSSWISE OVEN ELECTRIC 6 GN 1/1 - 230V	To Brand
697035	TFCE61CSES	m	3-8	CROSSWISE OVEN ELECTRIC 6 GN 1/1 - 60HZ	To Brand
697045	DFCE61CSDS	n	3-8	CONVECTION OVEN 6 GN 1/1 - ELECTRIC	Diamond

INDEX - INDICE

PAG.

OVEN CABINET	3
SPARE PART LISTS - OVEN CABINET	4
DOOR	5
SPARE PART LISTS - DOOR	6
ELECTRICAL COMPONENTS	7
SPARE PART LISTS - ELECTRICAL COMPONENTS	8

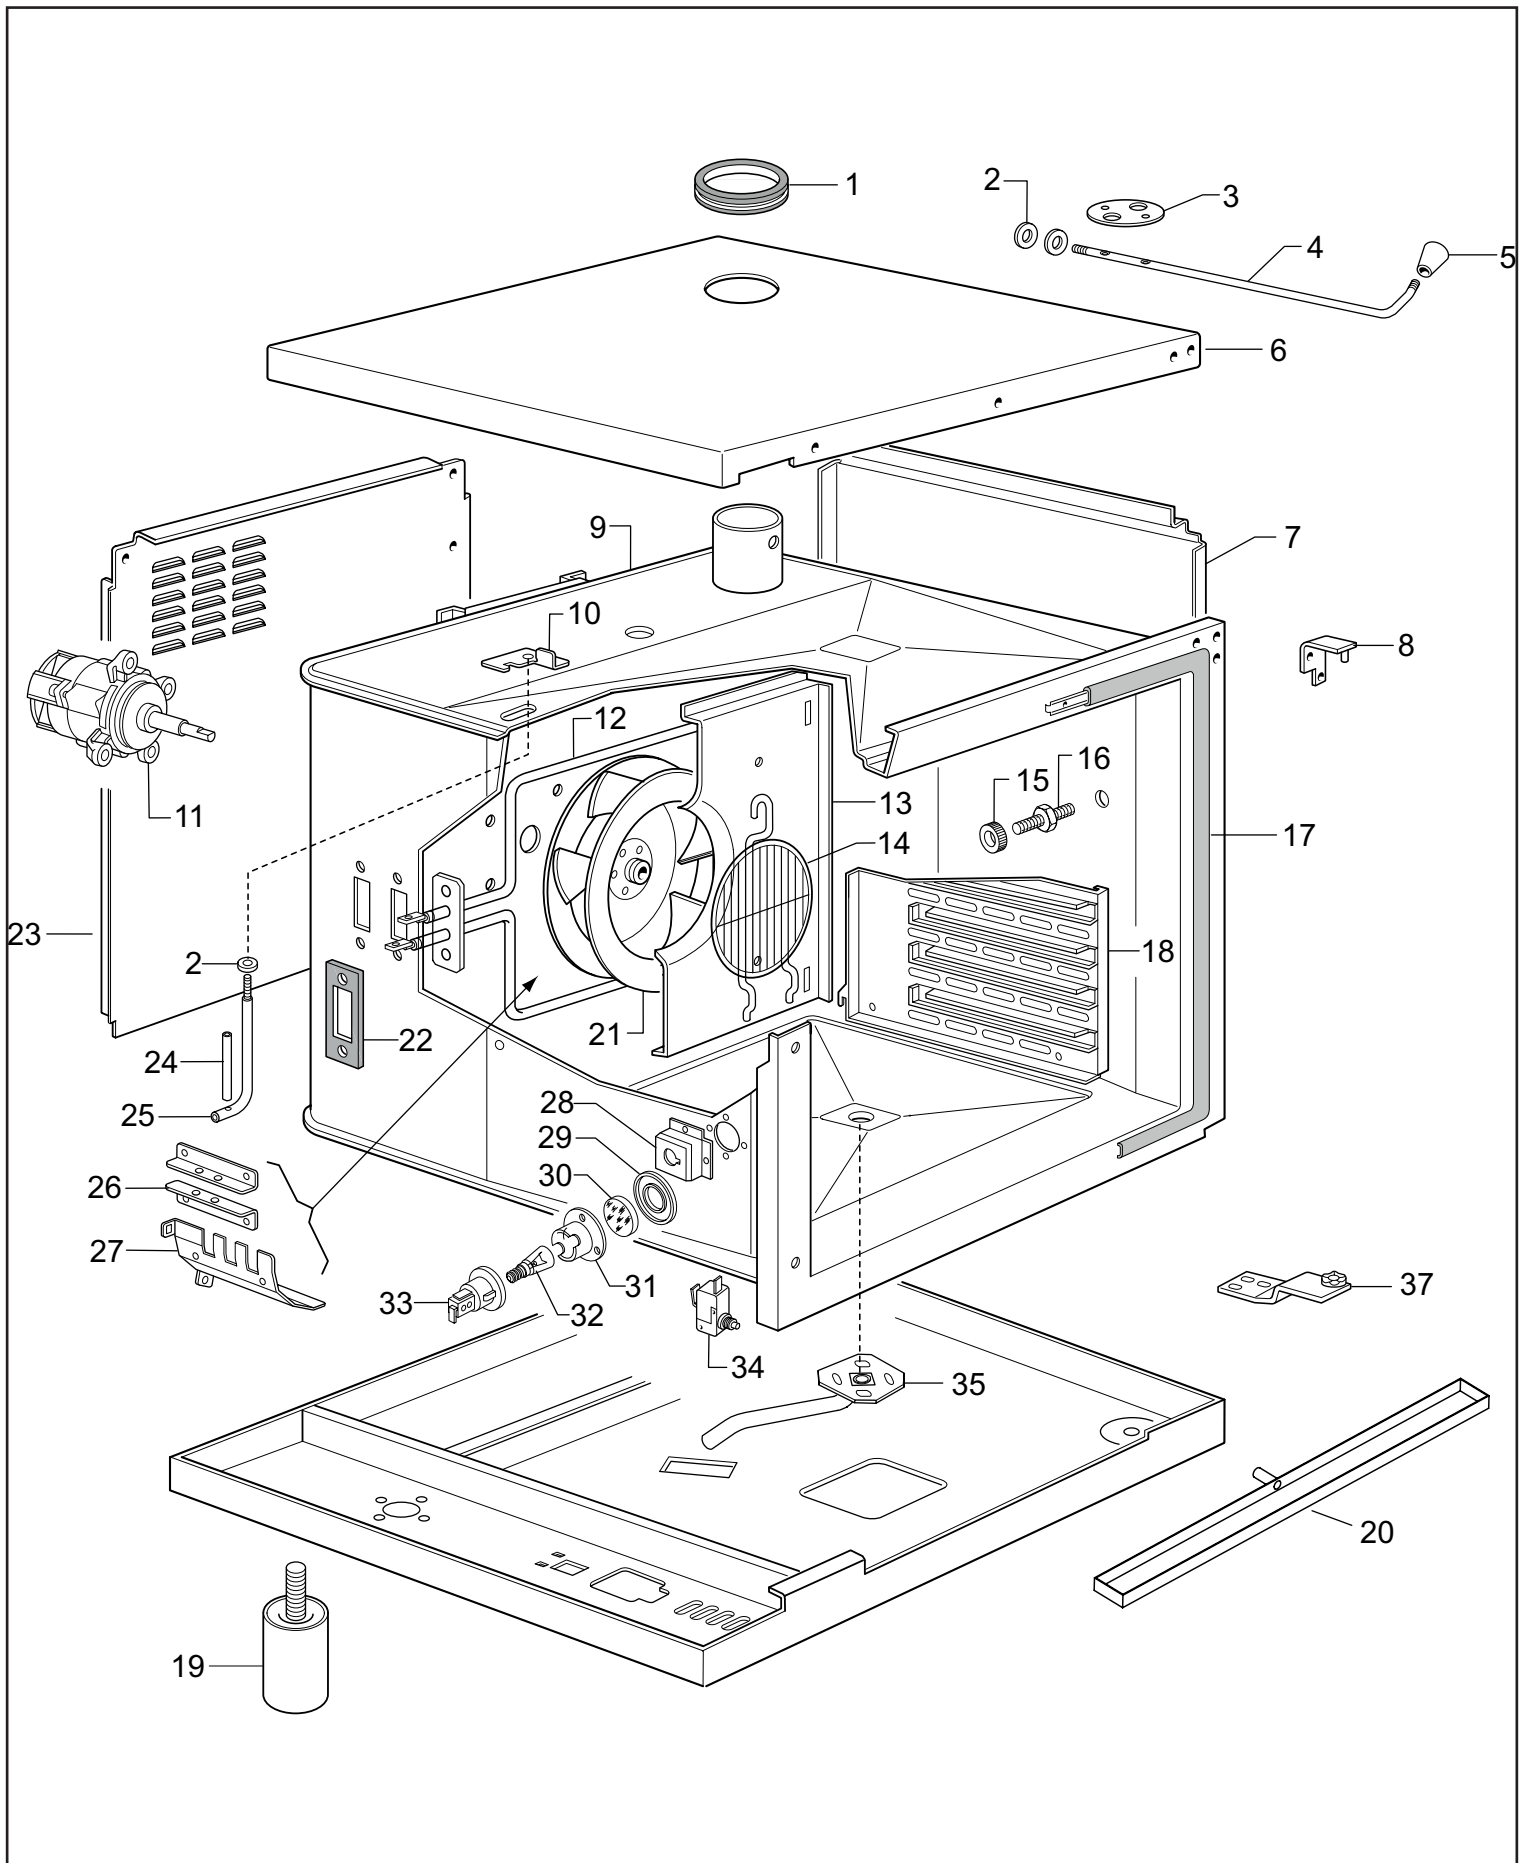

OVEN CABINET

From Ser. Nr.
Up to Ser. Nr.

Ed. 01 2023-05
Ed. 01 2023-12

Page: 3 @

Doc No: 595406K00


POS	FACTORY CODE	S.P. CODE	DESCRIPTION	V	W&T	REF.	NOTES	S/N BREAK (YYYY/WK)
1	0543801400	053829	Gasket, air steam		x			
2	0214530100	057762	Spring washer		x			
3	0506829202	0C1863	Throttle valve, air steam		x			
4	0516823900	0C5258	Valve lever, air steam		x			
5	0330281100	029898	Knob, lever		x			
6	0521882205	0C0893	Lid		x			
7	0521879704	0C0537	Right side panel		x			
7	0850868606	0C2988	Left side panel		x			
8	0512811204	002651	Upper hinge, door	x				
9	083040RK00		Oven cabinet	x				
10	0525855300		Bracket, thermostat fixing		x			
11	0611804002	002616	Motor, fan oven	x				
12	0617805405	056945	Heating Element 400 V	x				
13	0524819303	003724	Suction wall	x				
14	0830883500	003673	Protection, fan		x			
15	0514836901	0C1270	Ring nut, diffuser	x				
16	0516811601	002958	Support, diffuser	x				
17	0543825301	005713	Gasket, oven cabinet		x			
18	0850866202	003675	Right air diffuser		x			
18	0850866103	003676	Left air diffuser		x			
19	0835840500	003703	Foot, 2" inox		x			
20	0830400W00	0CBCAY	Oven cabinet tray		x			
21	0831857602	0C6462	Fan, oven	x		a,b;d:e:g;h;n	50 Hz	
21	0830400800	0C8325	Fan, oven	x		c;f;m	60 Hz	
22	0282217501	057534	Gasket, heating element		x			
23	0521879901	0C0719	Back panel		x			
24	0517852200	0C1271	Pipe, thermostat	x				
25	0516823000	0C1260	Protection, thermostat		x			
26	0505401300	0TTMQK	Bracket, heating element fixing		x			
27	0504401P00	0TTMQI	Support, heating element		x			
28	0508840702	0C4062	Support, lamp holder		x			
29	0508840801	002628	Flange, gasket lamp		x			
30	0574804900	002627	Glass, lamp		x			
31	0543817202	002626	Gasket, lamp		x			
32	0660802502	054840	Lamp		x			
33	0660807200	0C5508	Lamp holder		x			
34	0640602014	046063	Microswitch	x				
35	0805400K02	0C9814	Drain pipe, condensation		x			
37	0805400P00	0C6521	Lower hinge door	x				

SPARE PARTS CODE - OVEN CABINET

* On demand

Bold=last change

From Ser. Nr. Up to Ser. Nr.	Ed. 01 2023-05 Ed. 01 2023-12	Page: 4	Doc No: 595406K00
---------------------------------	----------------------------------	---------	--------------------------

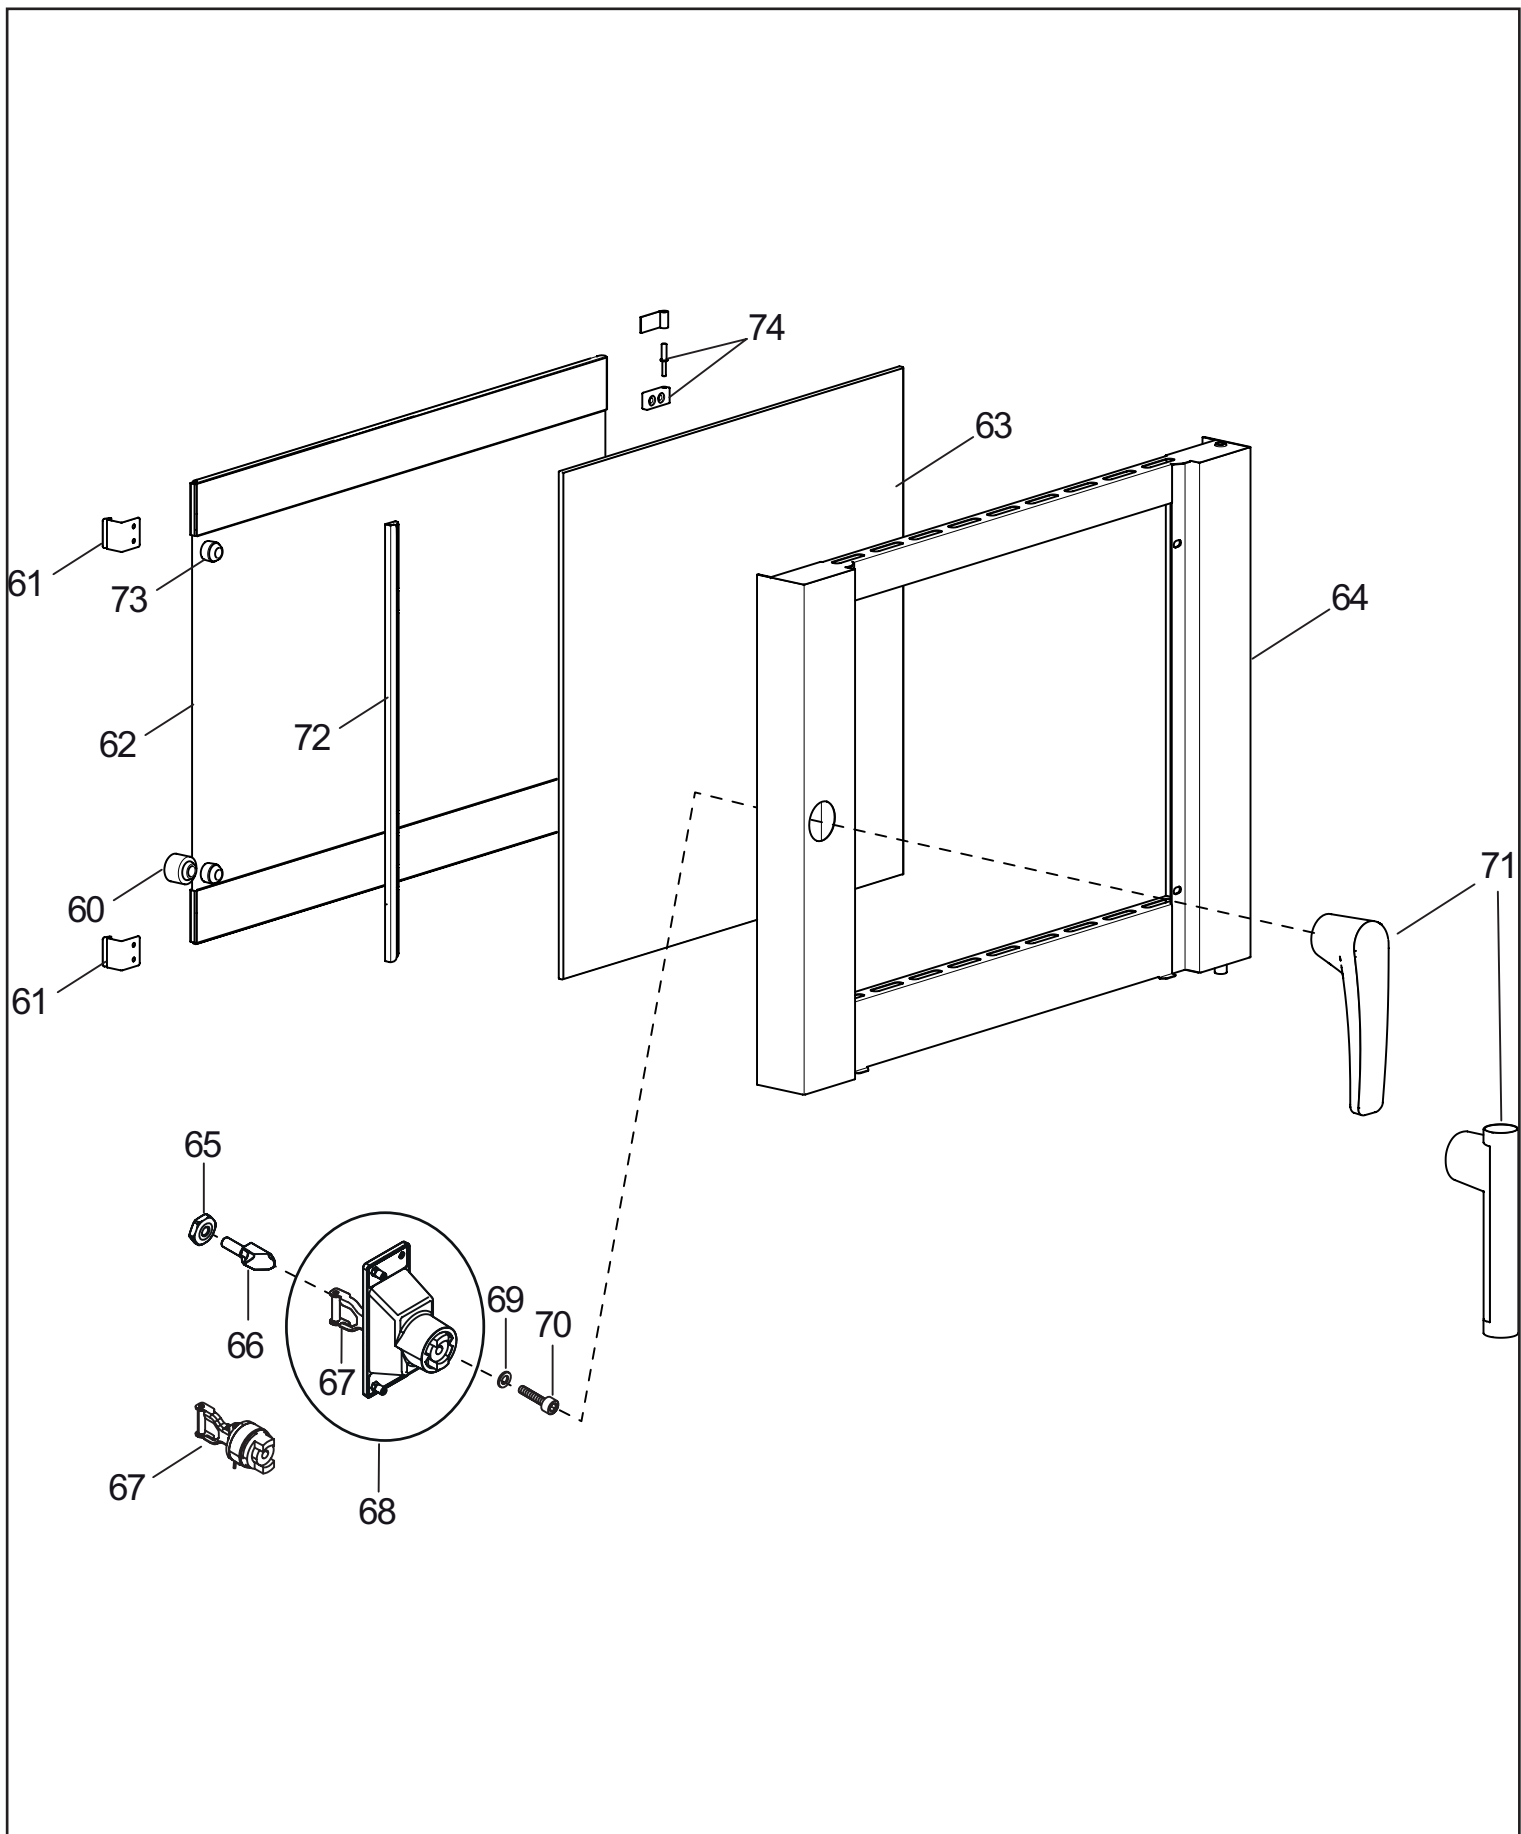


DOOR

From Ser. Nr.
Up to Ser. Nr.

Ed. 01 2023-05
Ed. 01 2023-12

Page: 5 @

Doc No: 595406K00

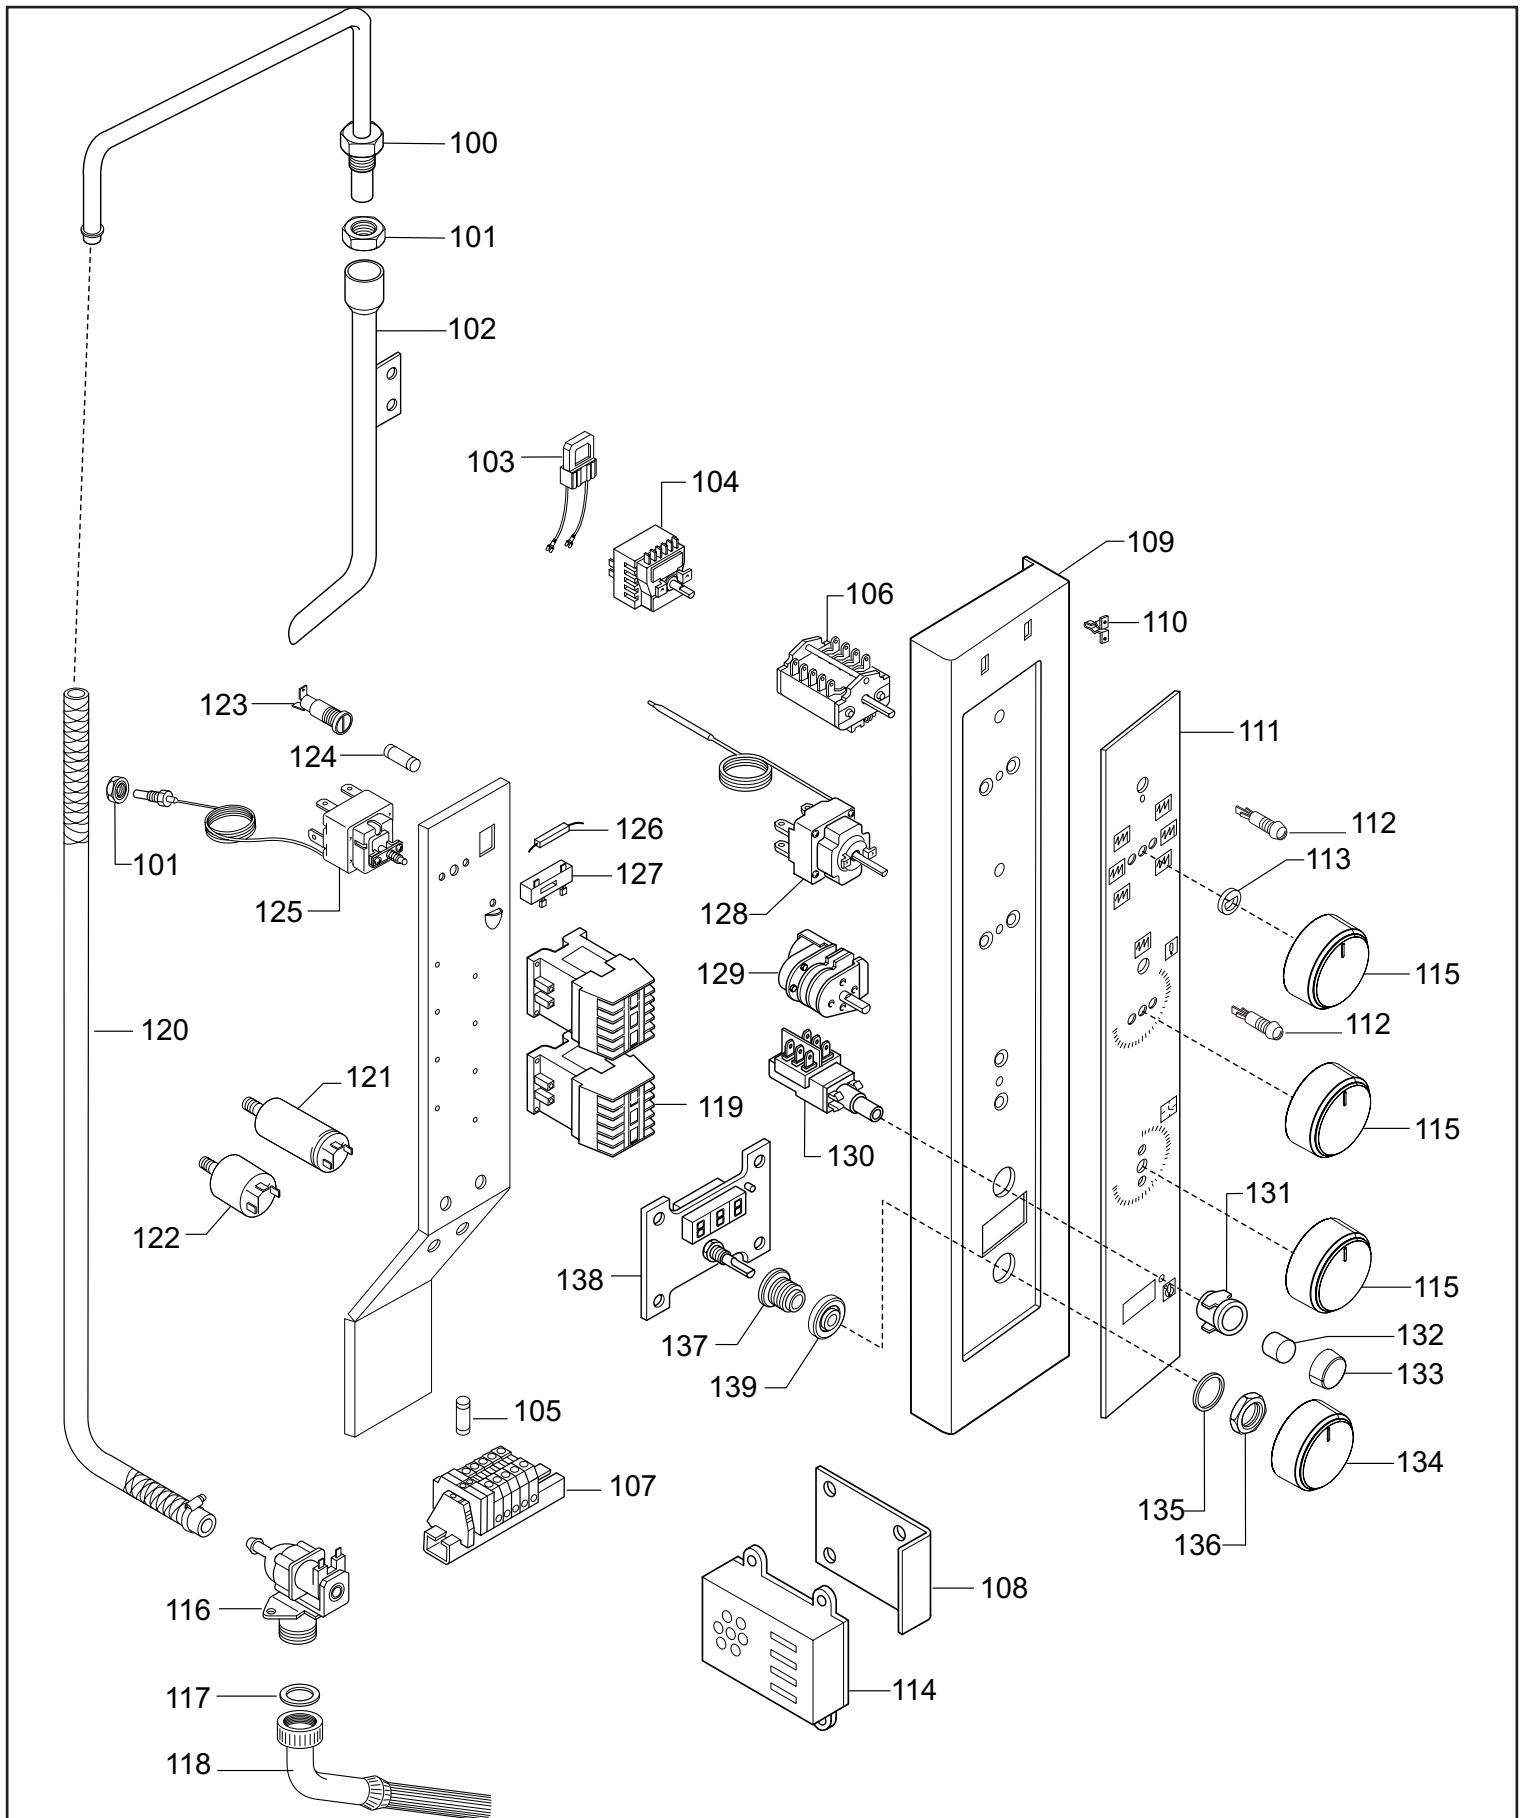

ELECTRICAL COMPONENTS

POS	FACTORY CODE	S.P. CODE	DESCRIPTION	V	W&T	REF.	NOTES	S/N BREAK (YYYY/WK)
100	0806869301	0C5543	Pipe, humidifier		x			
101	0514875601	006245	Nut		x			
102	0805889300	003753	Pipe, humidifier		x			
103	0694801600	003510	Snubber 100 ohm	x				
104	0699802200	0C1605	Energy regulator	x				
105	0652800901	058871	Fuse 6,3 A	x				
106	0641400000	0C6245	Change-over switch	x				
107	0639805900	059794	Terminal board	x				
108	0505404M01	0CA260	Bracket support, buzzer		x			
109	0850401103	0C6493	Control panel		x			
110	0518801801	053342	Spring, brand		x			
111	0548402F00	0CBCAK	Membrane, control panel		x	a;b;c	Zanussi	
111	0548402H00	0CBCAM	Membrane, control panel		x	d;e;f	EPR	
111	0548402K00	0CBCAO	Membrane, control panel		x	g;h;m	To brand	
111	0548402W00	0CBCJ3	Membrane, control panel		x	n	Diamond	
112	0661400000	0C6080	Indicator lamp		x			
113	0543801701	0C3796	Gasket, knob		x			
114	675401000	0CA485	Buzzer		x			
115	0548402C00	0CBCAI	Knob, with indicator	x		d;e;f	EPR	
115	0548402M00	0CBCAQ	Knob, with indicator	x		a;b;c	Zanussi	
115	0548402M00	0CBCAQ	Knob, with indicator	x		g;h;m;n	To brand	
116	0696400000	0C6081	Solenoid valve, humidifier		x			
117	0246001622	061488	Gasket		x			
118	0830401G00	0C8316	Inlet pipe, water		x			
119	0648807400	006879	Contactora	x		b;e;h	230V models	
119	0648807300	088477	Contactora	x		a,c;d,f,g;m;n	Not 230V models	
120	0544819400	0C5829	Rubber pipe	x				
121	0694800300	056148	Condenser 10 µF	x				
122	0694605400	049303	R.F.I. filter		x			
123	0805408R00	0CB130	Fuse holder	x				
124	0652801800	002820	Fuse 160 mA	x				
125	0646807101	002730	Safety thermostat	x				
126	0617813201	058872	Resistor	x				
127	0639400700	0C9000	Terminal board, resistor	x				
128	0646804001	056384	Thermostat	x				
129	*	0C8755	Timer		x			
130	0641803100	003766	Switch, meat probe	x				
131	0548845000	003767	Support, switch	x				
132	0548844900	003768	Push button, switch	x				
133	0548801500	053979	Protection, push button	x				
134	0548402N00	0CBCAR	Knob, without indicator	x				
135	0508836400	002727	Washer	x				
136	0214114900	051263	Lock nut	x				
137	0516807301	002662	Bushing, knob	x				
138	0675401D01	0CB045	Board, meat probe	x				
139	0543816100	002663	Gasket, bushing	x				

SPARE PARTS CODE - ELECTRICAL COMPONENTS

* On demand

Bold=last change

From Ser. Nr. Up to Ser. Nr.	Ed. 01 2023-05 Ed. 01 2023-12	Page: 8	Doc No: 595406K00
---------------------------------	----------------------------------	---------	--------------------------

Electrolux Professional SpA
Viale Treviso, 15
33170 Pordenone, ITALY
Fax (+39) 0434 380 201
<https://www.electroluxprofessional.com>
<https://webgate.electroluxprofessional.com>