


BMX60 / BMXE60 / BMXE80

PNC	Model	Modules	Description	Note
600177	BMX60	A;C;E;H;I;K	PLANETARY MIXER - 3 230-400 50 - 60LT -	
600178	BMX60	A;C;F;H;I;K	PLANETARY MIXER - 3 230-400 50 - 60LT -	
600179	BMX60	A;C;E;G;I;K	PLANETARY MIXER - 3 230-400 50 - 60LT - ACCESSORY HUB	
600180	BMX60	A;C;F;G;I;K	PLANETARY MIXER - 3 230-400 50 - 60LT - ACCESSORY HUB	
600181	BMXE60	A;C;E;H;I;L	PLANETARY MIXER - 3 230-400 50 - 60 LT - ELECTROMECHANICAL SPEED	
600186	BMXE80	A;C;E;H;J;L;M	PLANETARY MIXER - 3 230-400 50 - 80 LT - ELECTROMECHANICAL SPEED - BOWL TROLLEY	
600277	BMX60	B;C;E;H;I;K	PLANETARY MIXER - 3 230-400 50 - 60LT -	
600278	BMXE60	B;C;E;H;I;L	PLANETARY MIXER - 3 230-400 50 - 60LT - ELECTROMECHANICAL SPEED	
600279	BMX60	B;C;E;G;I;K	PLANETARY MIXER - 3 230-400 50 - 60LT - ACCESSORY HUB	
600281	BMX60	B;C;F;H;I;K	PLANETARY MIXER - 3 230-400 50 - 60LT -	
600286	BMX60	B;D;E;G;I	PLANETARY MIXER - 3 440 60 - 60LT - ACCESSORY HUB	
600287	BMXE80	B;C;E;H;J;L;M	PLANETARY MIXER - 3 230-400 50 - 80LT - ELECTROMECHANICAL SPEED - BOWL TROLLEY	
600288	BMXE80	B;C;E;G;J;L;M	PLANETARY MIXER - 3 230-400 50 - 80LT - ELECTROMECHANICAL SPEED - ACCESSORY HUB - BOWL TROLLEY	

BMX60 / BMXE60 / BMXE80**Modules classifications**


A	DITO SAMA
B	ELECTROLUX PROFESSIONAL
C	III - 220-240/380-415V 50HZ
D	III - 440V 60HZ
E	STANDARD VERSION
F	STAINLESS STEEL VERSION
G	ACCESSORY HUB
H	WITHOUT ACCESSORY
I	60 LITERS
J	80 LITERS
K	MANUEL SPEED
L	ELECTROMECHANICAL SPEED
M	BOWL TROLLEY

Pag.	Index
4	Exploded view - Structure
5	Parts list - Structure
10	Exploded view - Head with or without accessory socket
11	Parts list - Head with or without accessory socket
14	Exploded view - Raising and lowering of bowl
15	Parts list - Raising and lowering of bowl
22	Exploded view - Mechanical speed control
23	Parts list - Mechanical speed control
28	Exploded view - Electric speed control
29	Parts list - Electric speed control

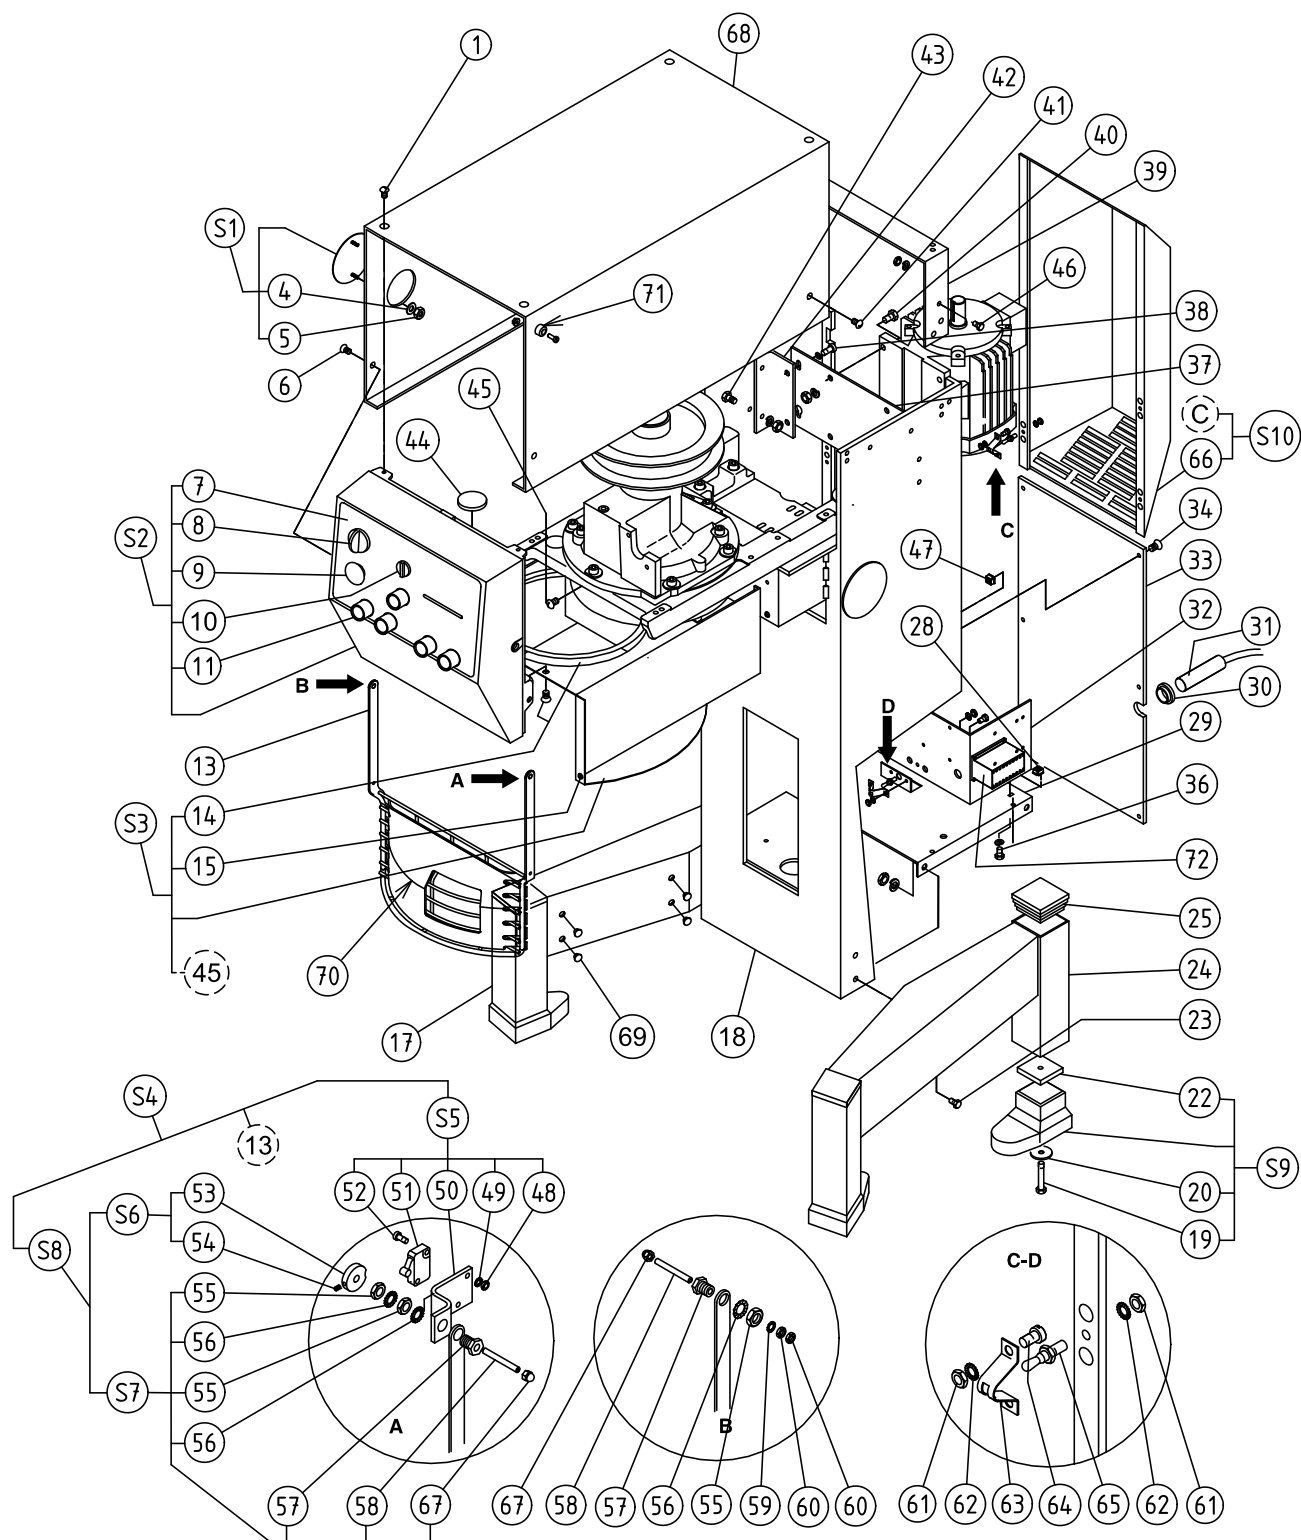


BMX60 / BMXE60 / BMXE80 - Parts list - Structure

Pos.	Code	Description	V	W&T	Ref.	Notes	S/N break
1	0D0517	Screw RL M8x16 stainless steel (set x 10)					
4	0D0631	Washer (set x 4)					
5	0KL159	Nut M4 stainless steel (set x 10)					
6	0D0517	Screw RL M8x16 stainless steel (set x 10)					
7	0DF184	Control panel		X	A;K		
7	0DF185	Control panel		X	B;K		
7	0DF186	Control panel		X	A;L		
7	0DF187	Control panel		X	B;L		
8	0KQ287	Complete timer	X				
9	0KQ687	Off button	X				
10	0KQ648	Rotating button	X				
11	0KJ038	On button	X				
13	0D7799	Wire screen		X			
14	0U0657	Foam seal		X			
15	0D2706	Self-adhesive rubber stop (set x 10)		X			
17	0D7797	Left/right foot assembly		X	E		
17	0D7815	Stainless steel left/right foot assembly		X	F		
18	0D5663	Beige column			E		
18	0D5664	Stainless steel column			F		
19	0D0598	Screw H M8x50 (set x 10)					
20	0D3581	Foot washer (set x 10)					
22	0D1956	Nut					
23	0D3554	Screw TH M10x25 (set x 10)					
23	0D2265	Washer w10 (set x 10)					
23	0D2958	Nut HU M10 (set x 10)					
24	0D7797	Left/right foot assembly			E		
24	0D7815	Stainless steel left/ right assembly			F		
25	0KQ432	Square foot plug (set x 10)					
28	0D1021	Captive nut M4 (set x 10)					
29	0D5666	Base plate					
30	0D6160	Grommet DA 9x16x4 (set x 5)		X			
31	0D1168	Three-phase lead	X				
32	0D5667	Components bracket					
32	0KQ195	Transformer 230/440	X		C		
32	0KQ694	Transformer 440/230	X		D		
33	0D5668	Beige lower back plate			E		
33	0D3442	Stainless steel lower back plate			F		

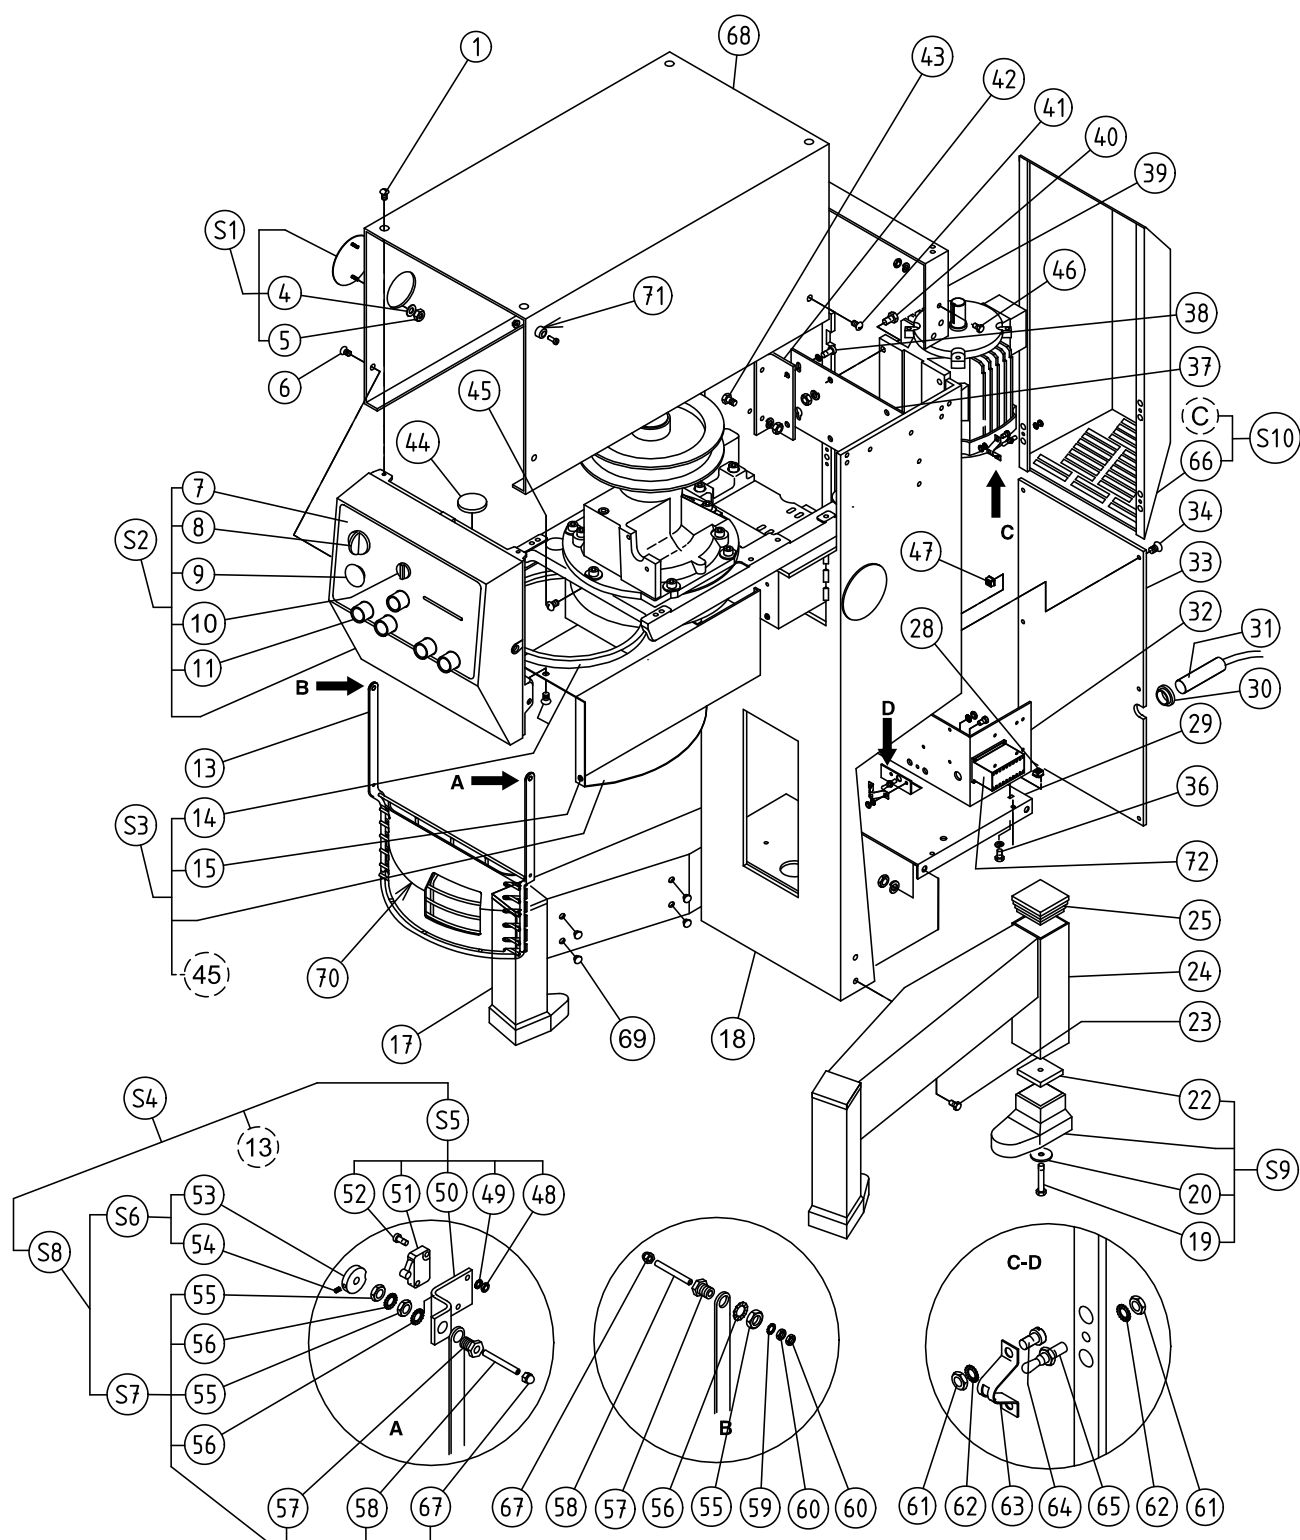

BMX60 / BMXE60 / BMXE80 - Parts list - Structure


Pos.	Code	Description	V	W&T	Ref.	Notes	S/N break
34	0D0601	Screw M6x12 RL (set x 10)					
36	0D5298	Screw TH M4x12 (set x 10)					
36	0D0631	Washer 4 contact (set x 10)					
37	0D5670	Motor support plate					
38	0KQ492	Screw TCHC M8x20 (set x 10)					
39	0D3889	Omega upper column					
40	0D2844	Screw TH M10x30 (set x 10)					
40	0D2265	W10 washer (set x 10)					
40	0D2958	Nut M10 HU (set x 10)					
41	0D0512	Screw TRL 8x25 (set x 10)					
42	0D5671	Motor bracket					
43	0D6064	Screw TH M10x25 (set x 10)					
44	0U0388	Light window					
45	0D2901	Stainless steel TH base screw (set x 10)					
46	0D6064	Screw TH M10x25 stainless steel (set x 10)					
46	0D2265	W10 washer (set x 10)					
46	0D2958	Nut HU M10 (set x 10)					
47	0D5647	captive nut M6x3,6-4,5 (set x 10)					
48	033987	Nut M3 HU stainless steel (set x 10)					
49	0D2877	Washer AZ3 (set x 10)					
50	0D5672	Micro-switch bracket					
51	0D6661	Micro-switch	X				
52	0KQ511	Screw TC M3x16 stainless steel (set x 10)					
53	0U0391	Cam					
54	0KQ526	Screw SHC M4x8 stainless steel (set x 10)					
55	0KQ554	Nut HM M12 aczn (set x 10)					
56	0KQ490	Washer AZ12 (set x 10)					
57	0KQ333	Bush					
58	0D6761	Screw SHC M8x70 stainless steel (set x 10)					
59	0KQ523	Nut HM M8 zinc-plated (set x 10)					
60	0KQ524	Washer M8 stainless steel (set x 10)					
61	0D0579	Nut HUM5 stainless steel (set x 10)					
62	0KQ491	Washer (set x 10)					
63	0D5654	Quick-release fastener (set x 5)					
64	0D0614	Screw TC M5x12 stainless steel (set x 10)					

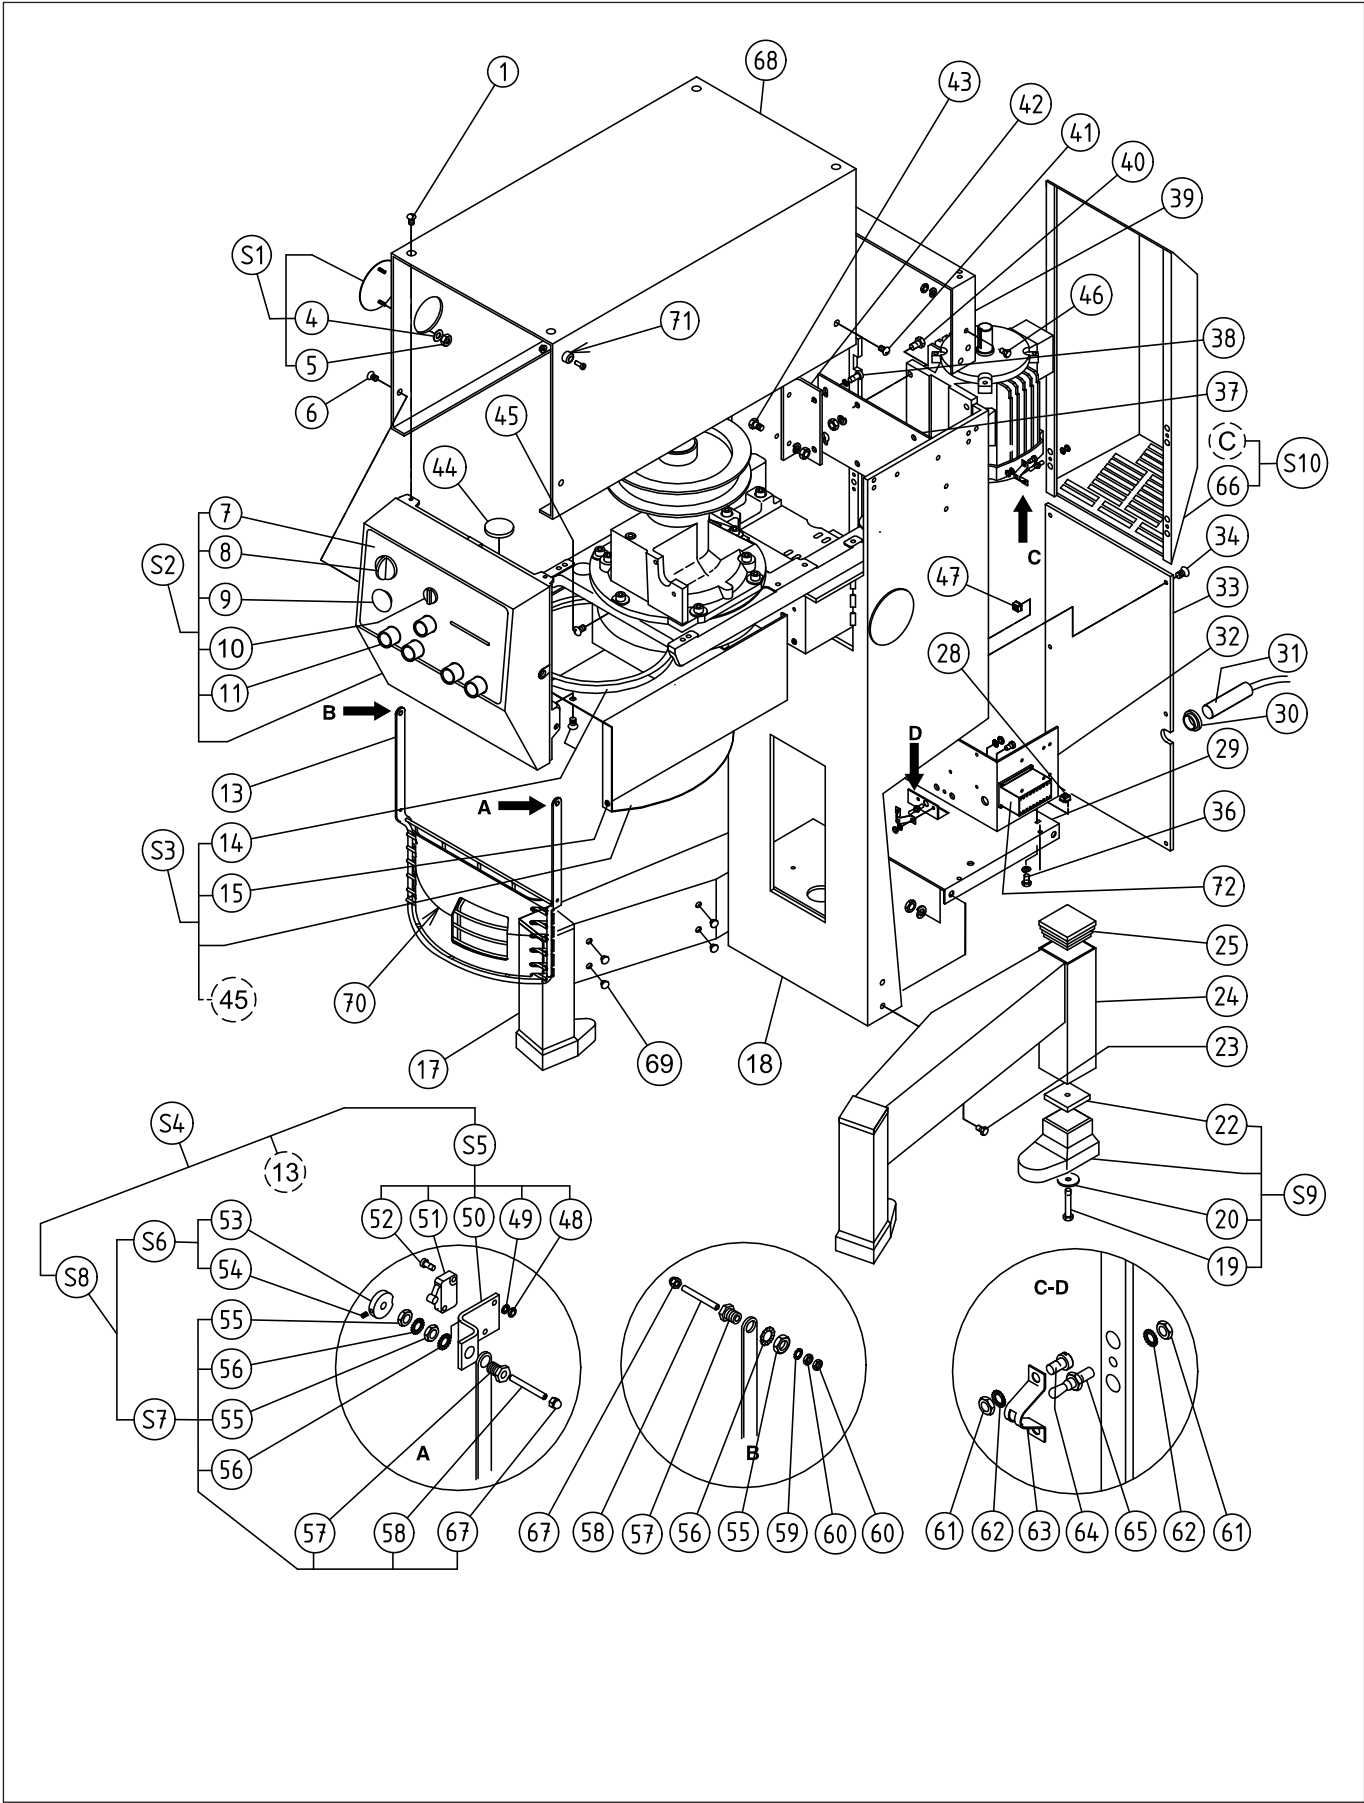

BMX60 / BMXE60 / BMXE80 - Parts list - Structure


Pos.	Code	Description	V	W&T	Ref.	Notes	S/N break
65	0D5444	Quick-release pin (set x 5)					
67	0KL161	Nut M8 (set x 10)					
68	0D6476	Standard cover			E		
68	0D6477	Stainless steel cover			F		
69	0D3601	Square F9					
70	0D7757	Screen		X			
71	0D8028	Assembly stop		X			
71	0D0615	Screw TC M6x16 (set x 10)					
71	0D8004	Nut HU M6 (set x 10)					
72	0D7994	Contacteur 9A	X				
72	0KQ437	Relay 3,5-5A	X				
72	0D0790	Contacteur inverseur	X		L		
72	0D1560	Relay 0,63-1A	X		L		
72	0U0486	Contact additif	X		L		
S1	0D5655	Accessory socket cover assembly			H		
S2	0D0120	Bmx60 front panel assembly	X		A;B;I		
S2	0D1857	Bmx60 front panel assembly	X		A;B;I;K		
S2	0D3287	Bmx60 front panel assembly	X		A;B;J;K		
S3	0D6020	Side protection assembly		X			
S4	0D0195	Complete wire screen kit	X				
S5	0D1613	Screen micro-switch assembly	X				
S6	0D5656	Cam assembly					
S7	0D5657	Hinge bush assembly					
S8	0D1614	Cam unit assembly					
S9	0KQ430	Pad assembly		X			
S10	0D6478	Standard rear hood assembly			E		
S10	0D6479	Stainless steel rear hood assembly			F		

BMX60 / BMXE60 / BMXE80 - Exploded view - Head with or without accessory socket

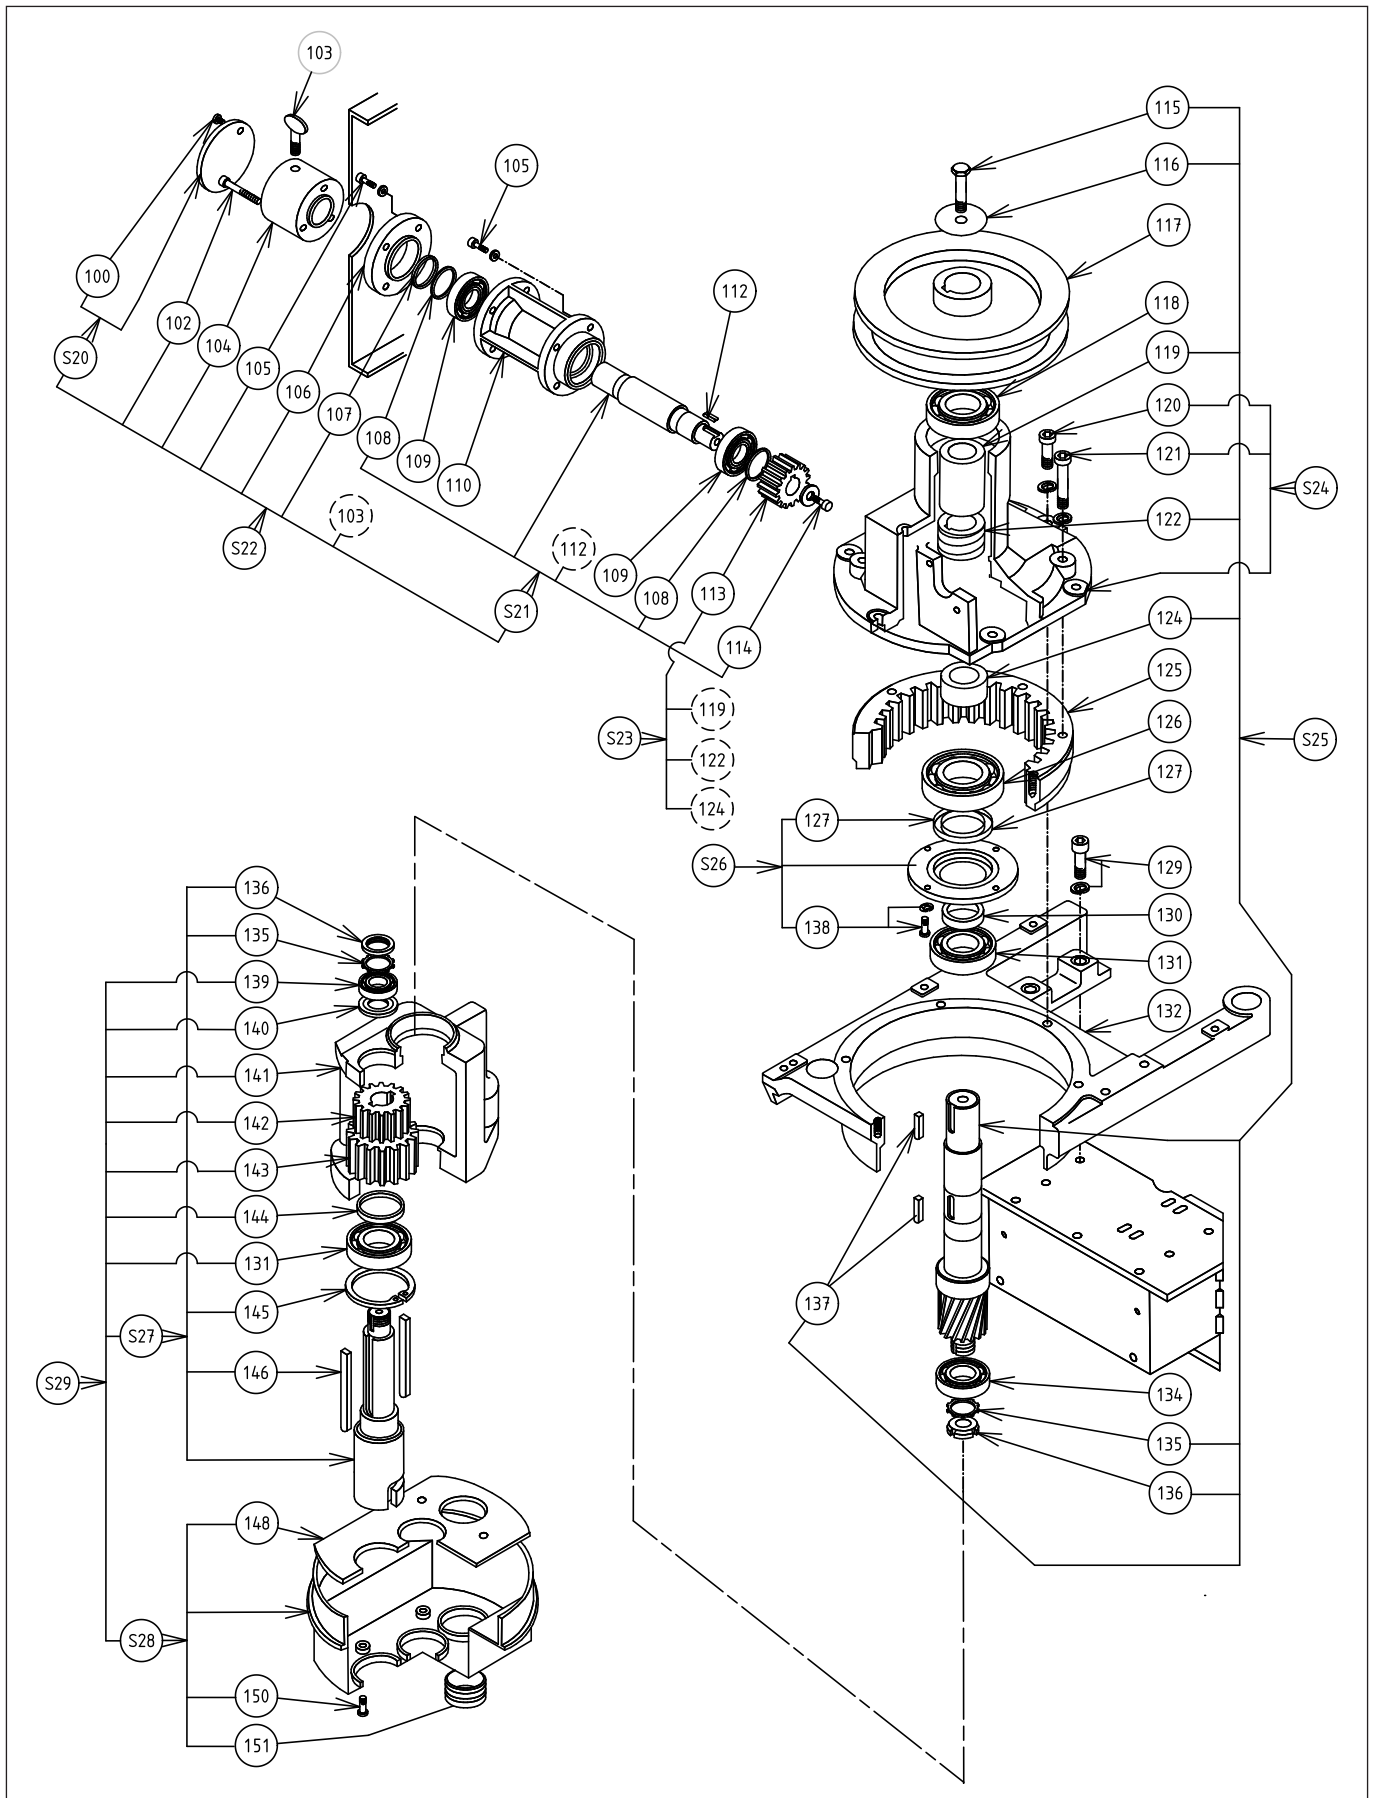

BMX60 / BMXE60 / BMXE80 - Parts list - Head with or without accessory socket


Pos.	Code	Description	V	W&T	Ref.	Notes	S/N break
100	0D3547	Screw TF M4x12 stainless steel (set x 10)			G		
102	0D1018	Screw TCHC M6x60 (set x 10)			G		
103	0KQ334	Thumb bolt		X	G		
104	0KL098	H hub sleeve			G		
105	0D0657	Screw TCHC M6x20 CHC (set x 10)			G		
105	0D2876	W6 washer (set x 10)			G		
106	0D5692	Accessories hub spacer			G		
107	0H1040	Lip seal 30x40x7 (set x 5)		X	G		
108	0D0654	30e circlip (set x 10)			G		
109	0KT993	6006 bearing		X	G		
110	0D5693	Barrel holder			G		
112	0D0637	C8x7x25 key (set x 5)			G		
113	0D1226	Accessories hub gear wheel		X	G		
114	0KQ520	Screw FHC M6x16 FHC (set x 10)			G		
114	0D3576	Countersunk washer (set x 5)			G		
115	0D3554	Screw TH M10x25 (set x 10)					
116	0D5695	Pulley washer (set x 5)					
117	0D5706	Driven pulley		X			
118	0D1129	6308 bearing		X			
119	0D5780	Upper spacer			G		
119	0D5732	Spacer for without accessories hub			H		
120	0D6099	Screw TCHC M10x40 (set x 10)					
120	0D2265	Washer W10 washer (set x 10)					
121	0D5696	Screw TCHC M10x60 (set x 10)					
121	0D2265	Washer W10 (set x 10)					
122	0D1726	Accessories hub screw		X	G		
124	0D5781	Lower spacer					
125	0D3168	Crown wheel		X			
126	0D1130	6309 bearing		X			
127	0D1133	55x70x8 lip seal		X			
129	0D5699	Screw TCHC M12x45 (set x 5)					
129	0D5700	W12 washer (set x 6)					
130	0U0374	Sun gear shaft spacer					
131	0HD044	6009 bearing		X			
132	0D5701	Mounting plate					
134	0KJ748	Bearing 6305		X			

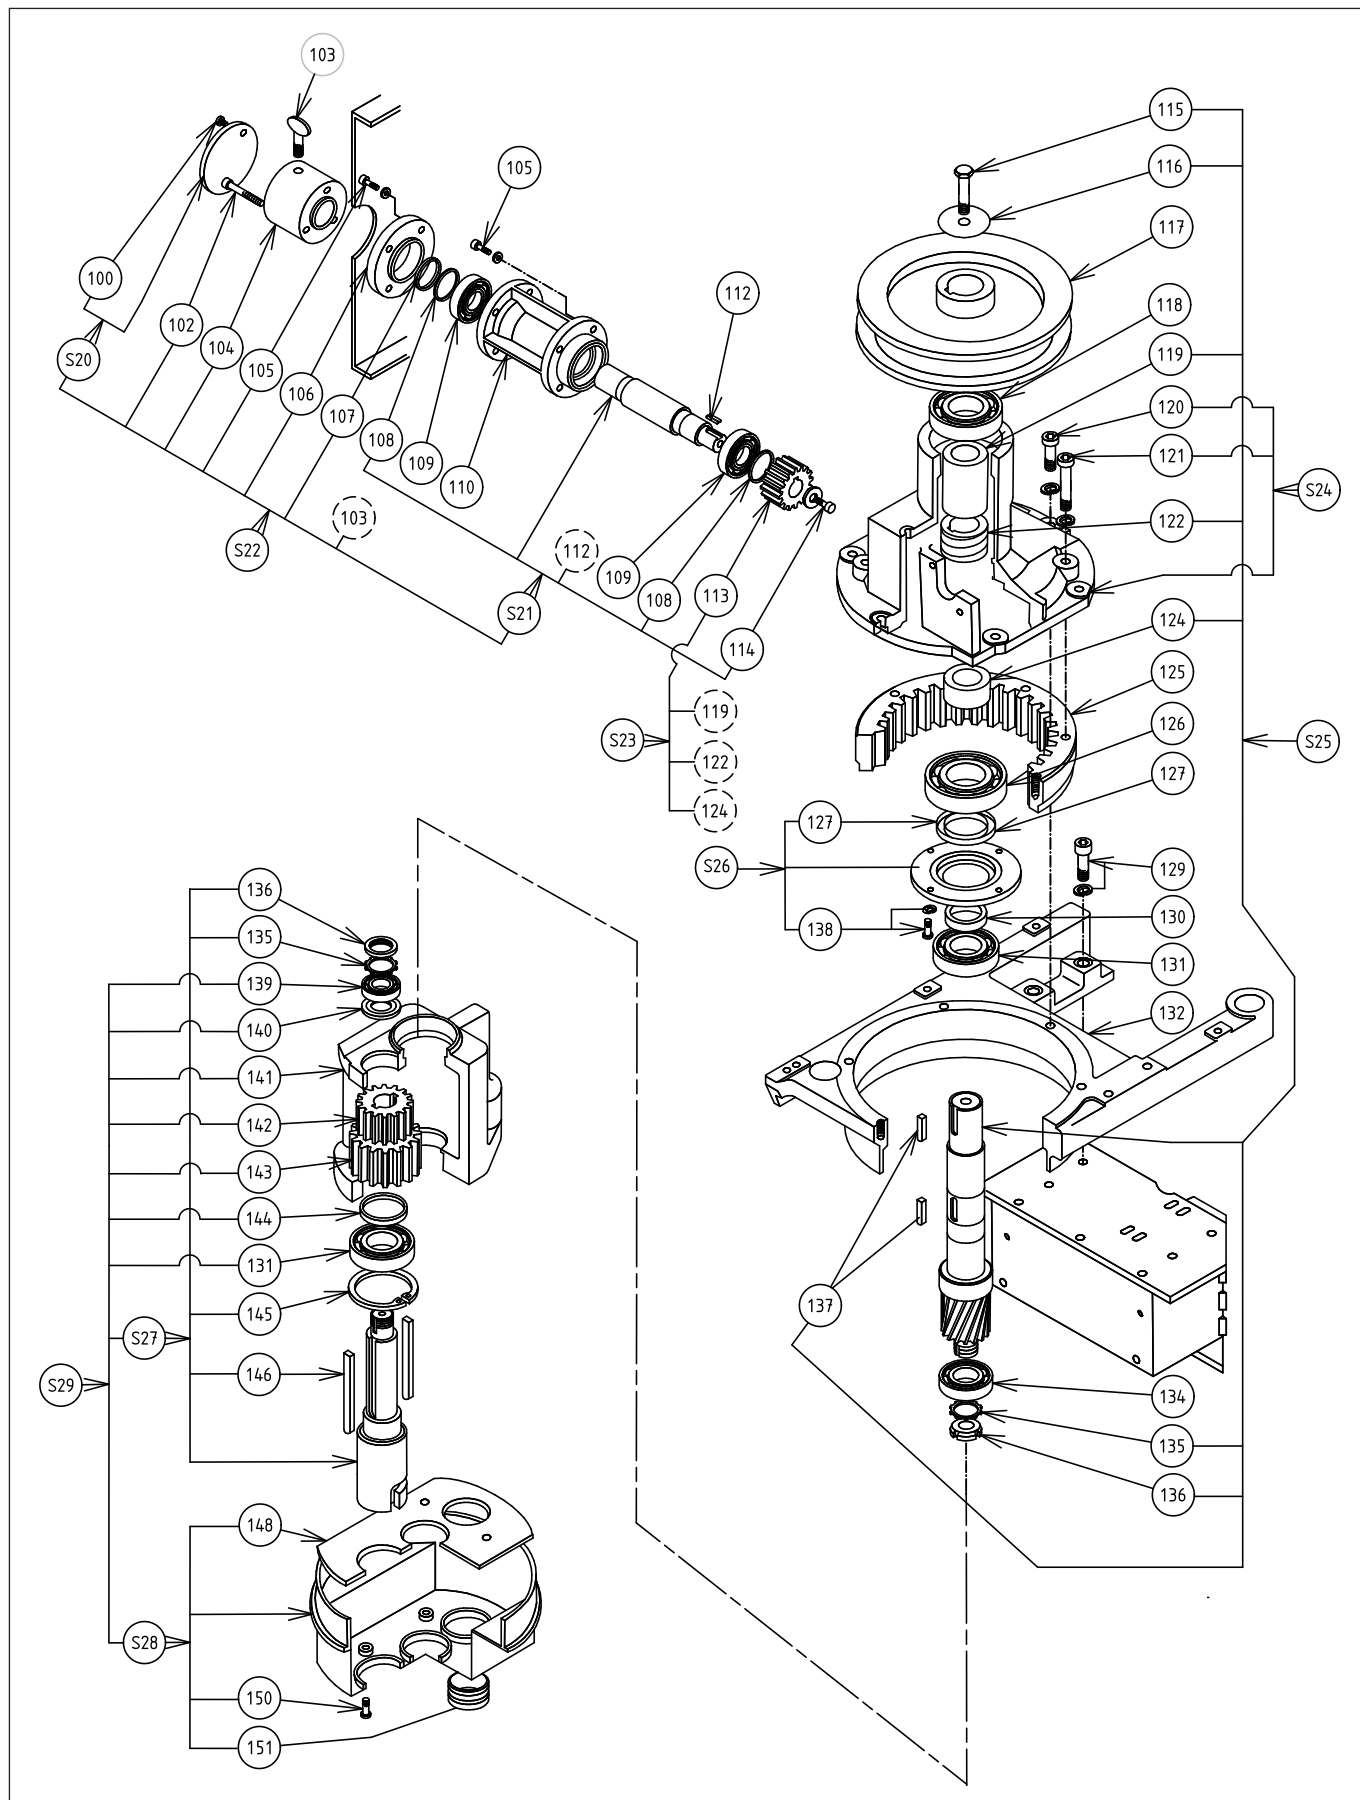

BMX60 / BMXE60 / BMXE80 - Parts list - Head with or without accessory socket

Pos.	Code	Description	V	W&T	Ref.	Notes	S/N break
135	0D5042	Washer MB 5					
136	0D0002	Nut notched M25x1.5					
137	0D0543	Key A12x8x36 (set x 5)					
138	0D0499	Screw TH M6x16 stainless steel (set x 10)					
138	0D0624	Washer CS M6 stainless steel (set x 10)					
139	0KQ394	6205 bearing		X			
140	0U0375	Upper spacer					
141	0D1216	Planetary gear support					
142	0U0373	17-tooth gear wheel		X			
143	0U0372	24-tooth gear wheel		X			
144	0U0376	Lower spacer					
145	0U0668	Circlips 75I (set x 5)					
146	0D2340	Key A10x8x115 (set x 2)					
148	0U0292	Retainer seal		X			
150	0D0595	Screw TH M6x25 stainless steel (set x 10)					
151	0D1054	Plug F35 GPN 300 (set x 4)					
S20	0KL100	Cap assembly			G		
S21	0D2545	Accessories hub shaft assembly			G		
S22	0D0958	Accessories hub assembly			G		
S23	0D7914	Gear wheel + screw pairing		X	G		
S24	0D5703	Reducing gear bearing with accessories hub assembly			G		
S24	0D2713	Reducing gear bearing without accessories hub			H		
S25	0D1409	Sun gear shaft + screw with accessories	X		G		
S25	0KL002	Standard sun gear shaft without accessories	X		H		
S26	0U0698	Bearing cap assembly		X			
S27	0U0243	Tool holder shaft assembly		X			
S28	0D5204	Standard planetary gear retainer assembly					
S29	0D5705	Standard planetary gear support assembly					


BMX60 / BMXE60 / BMXE80 - Exploded view - Raising and lowering of bowl

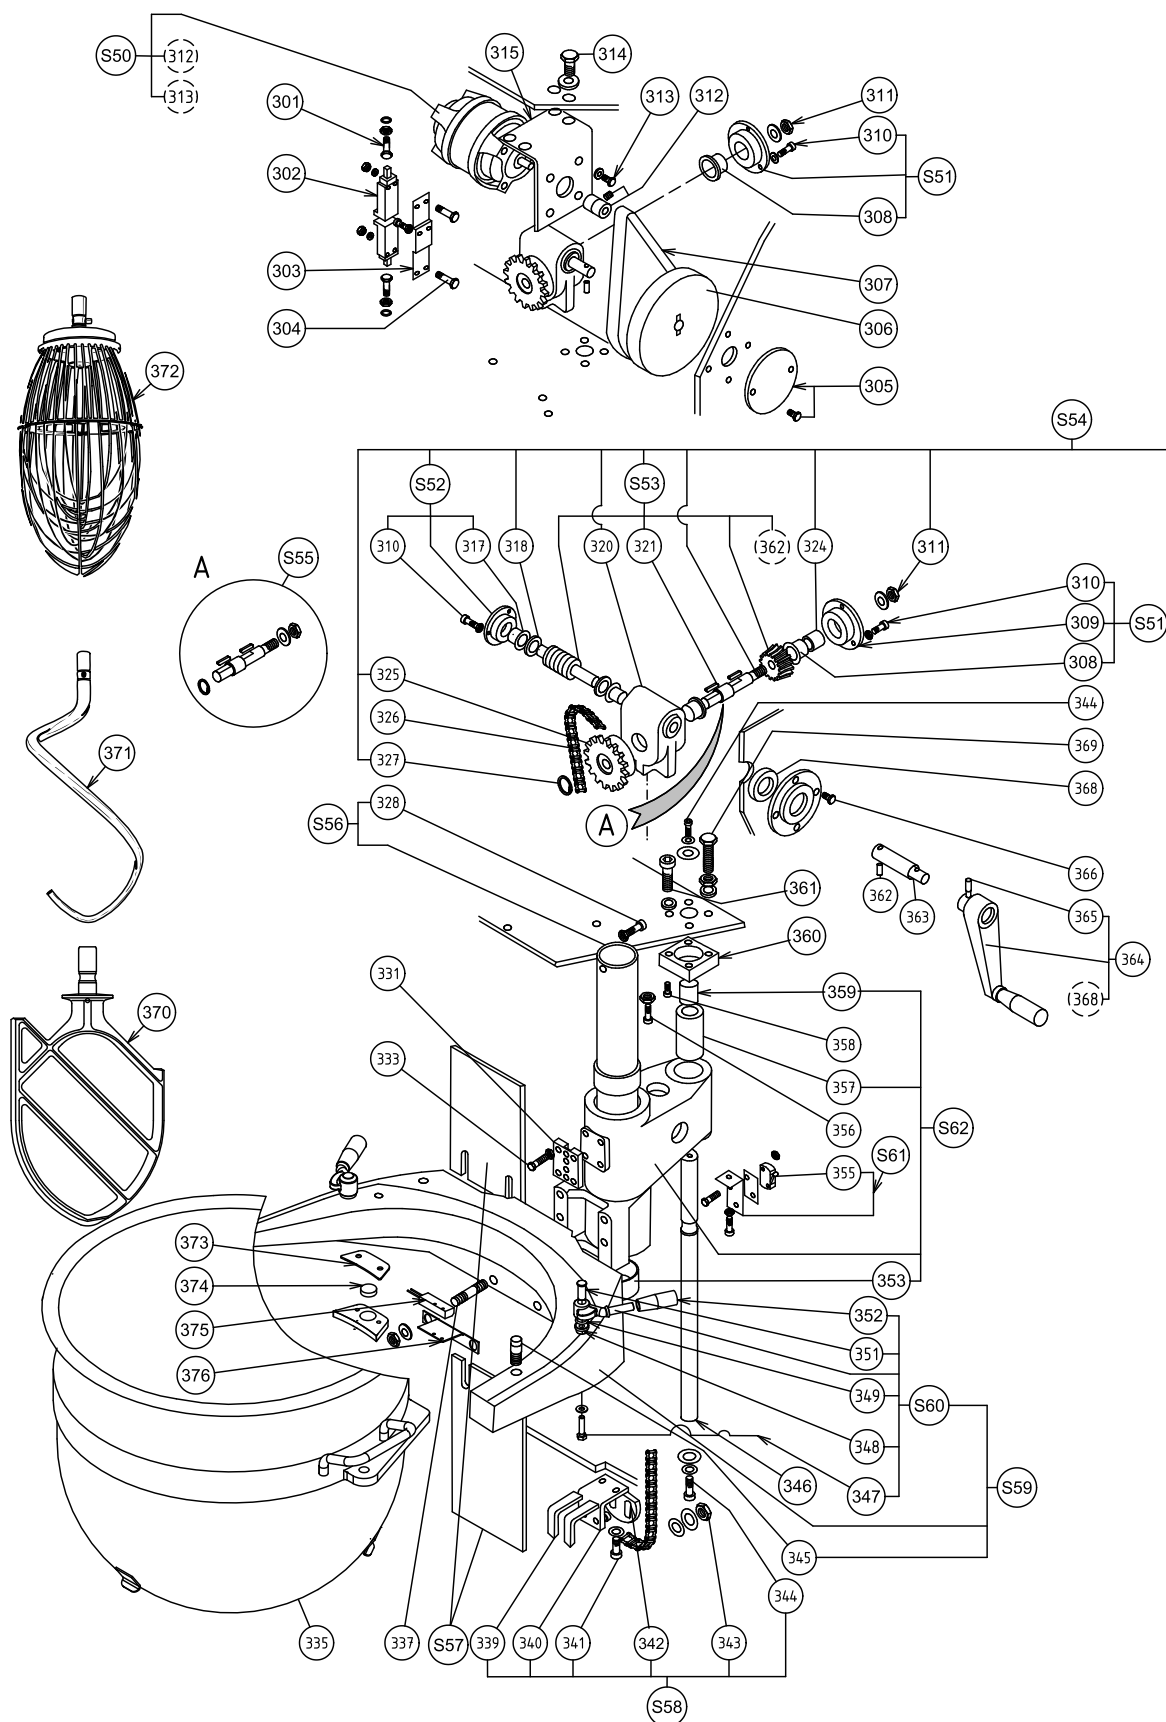

BMX60 / BMXE60 / BMXE80 - Parts list - Raising and lowering of bowl

Pos.	Code	Description	V	W&T	Ref.	Notes	S/N break
301	0D0598	Screw TH M8x50 (set x 10)			L		
302	0KQ206	Position detector	X		L		
303	0D3891	Position detector support			L		
304	0D3399	Screw TCHC M4x40 stainless steel (set x 10)			L		
304	0D0520	Washer toothed 4 (set x 10)			L		
304	0KL159	Nut M4 stainless steel (set x 10)			L		
305	0D5309	Raise and lower cap assembly			L		
306	0D1559	Raise and lower driven pulley		X	L		
307	033106	Drive belt	X	X	L		
308	0D5708	Bearing bushing		X	L		
310	0D0617	Screw TCHC M6x16 (set x 10)					
310	0D2876	Washer W6 (set x 10)					
311	0D0622	Washer M10 (set x 10)					
311	0D2958	Nut M10 HU (set x 10)					
312	0D1558	Raise and lower drive pulley		X	L		
312	0D0545	Retainer Screw SHC M6x8 (set x 10)			L		
313	0KQ494	Screw TH M6x12 stainless steel (set x 10)					
313	0D0624	Washer CS 6 stainless steel (set x 10)					
314	0D2329	Screw TH M8x30 (set x 10)			L		
314	0D3538	Washer L8 CS (set x 10)			L		
315	0D3892	Raise and lower motor support			L		
317	0D6031	Bearing bushing (set x 2)					
318	0D5710	Rectifier washer (set x 2)					
320	0D5711	Reducing gear unit	X				
321	0HD008	Key A 5x5x20 (set x 5)					
324	0D5712	Spacer					
325	0KQ341	Chain sprocket		X			
326	0KQ607	Chain with fastening		X			
327	0KQ557	Circlips 15e (set x 10)					
328	0D0499	Screw TH M6x16 stainless steel (set x 10)					
328	0D0503	Nut M6 stainless steel (set x 10)					
331	0D5714	Chain flange					
333	0D6084	Screw notched H base (set x 10)					


BMX60 / BMXE60 / BMXE80 - Exploded view - Raising and lowering of bowl

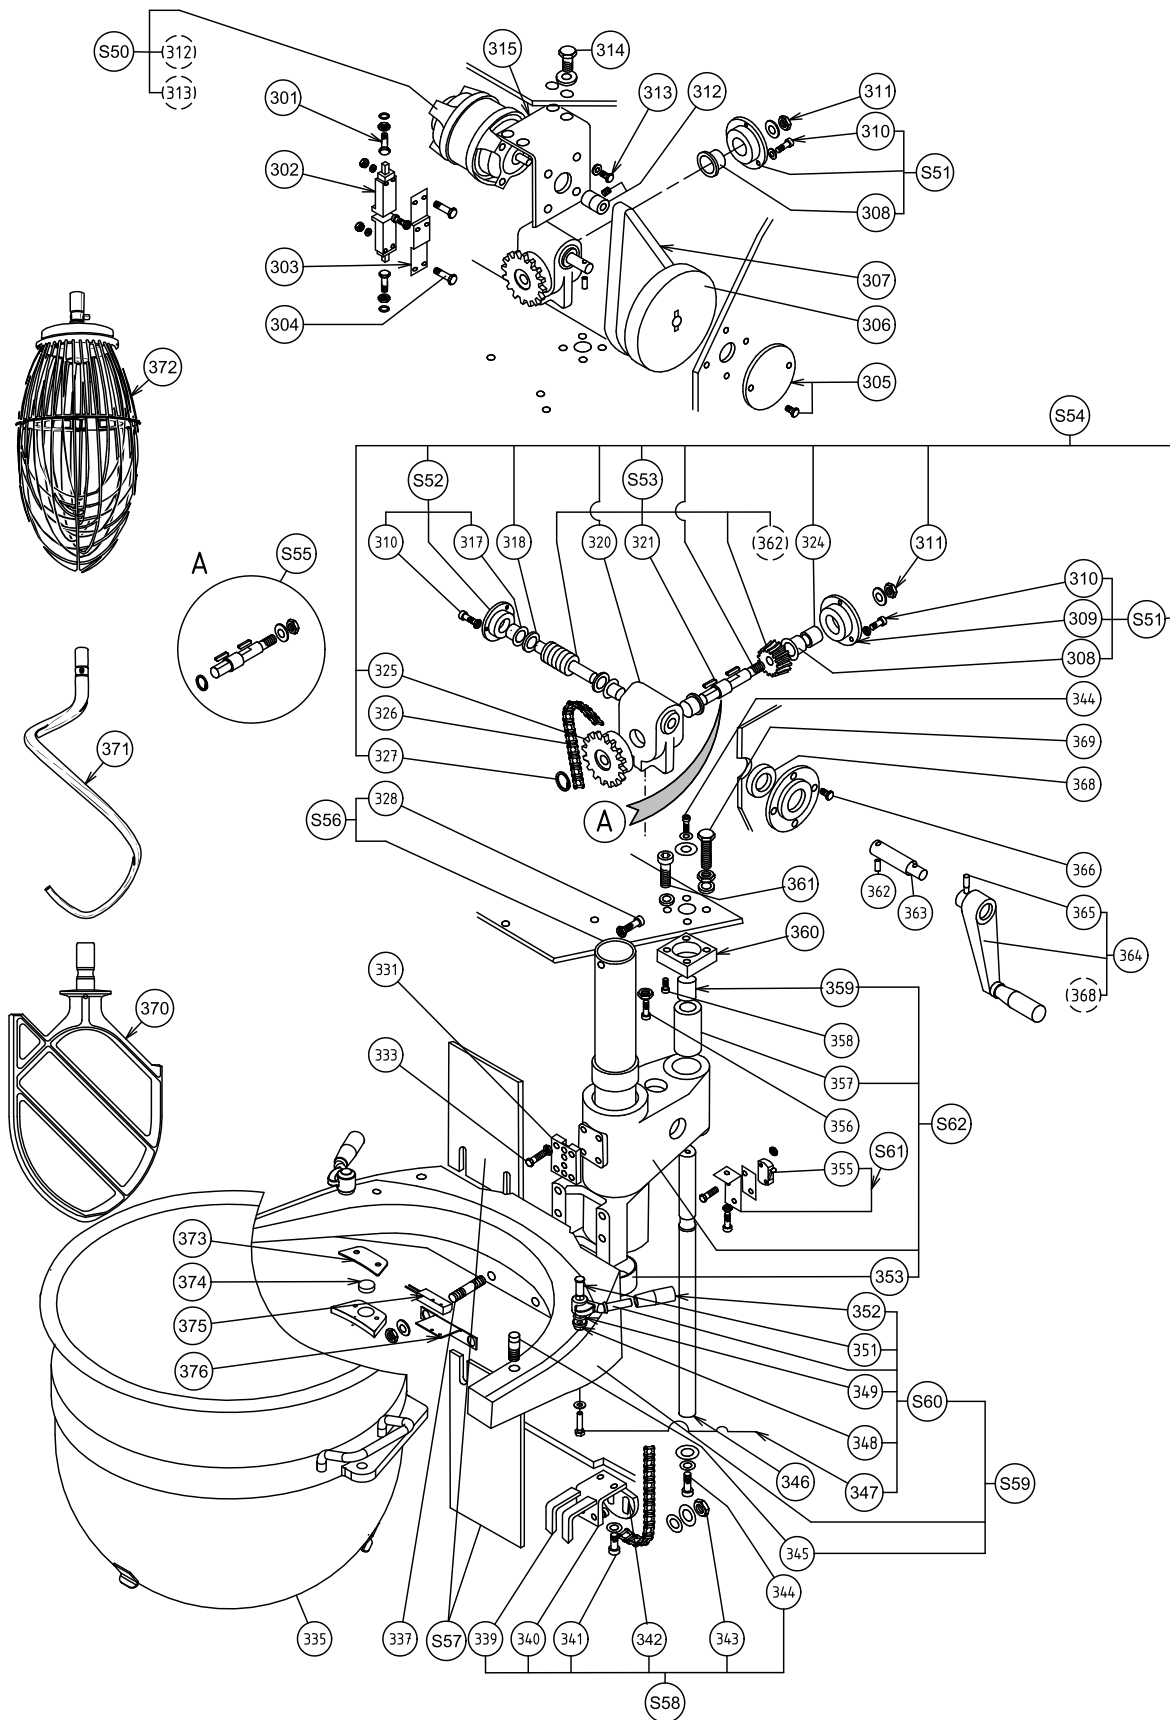

BMX60 / BMXE60 / BMXE80 - Parts list - Raising and lowering of bowl


Pos.	Code	Description	V	W&T	Ref.	Notes	S/N break
335	650129	60L standard bowl		X	I		
335	650130	80L bowl		X	J		
337	0D5716	Pin (set x 6)					
337	0D5700	Washer W12 (set x 6)					
337	0KQ496	Nut M12 HU (set x 10)					
339	0D2702	7x4 band seal					
341	0U0662	Screw TH M10x16 (set x 10)					
341	0D2265	Washer W10 (set x 10)					
342	0D5715	Tensioner pad		X			
343	0D2958	Nut M10 HU (set x 10)					
343	0KQ506	Washer 10x27 (set x 10)					
343	0D3580	Washer 10-tooth toothed					
344	0D0499	Screw TH M6x16 stainless steel (set x 10)					
344	0D3576	Countersunk washer (set x 5)					
345	0D1030	Bowl position lug (set x 2)					
346	0D3637	Raise lower shaft					
347	0D0591	Screw TH M8x35 stainless steel (set x 10)					
347	0D3538	Washer L8 CS (set x 10)					
348	0D5717	Latch spacer					
349	0D2662	O-ring (set x 5)		X			
351	0D6109	Latch spindle (set x 2)		X			
352	0D6125	Handle		X			
353	0U0399	60x65x30 bearing bushing		X			
354	0D5298	Screw TH M4x12 (set x 10)					
354	0D0631	Washer 4 contact (set x 10)					
355	0D6618	Micro-switch	X				
355	0U0268	Isolating plate	X				
355	0KQ511	Screw TC M3x16 stainless steel (set x 10)					
355	033986	Washer M3 (set x 10)					
355	0D2877	Washer AZ3 (set x 10)					
355	033987	Nut M3 HU (set x 10)					
356	0D6064	Screw TH M10x25 H (set x 10)					
356	0D2958	Nut HU M10 (set x 10)					
358	0D5718	Screw TFHC M10x20 (set x 10)					
359	0D5719	Bearing bushing		X			

BMX60 / BMXE60 / BMXE80 - Exploded view - Raising and lowering of bowl

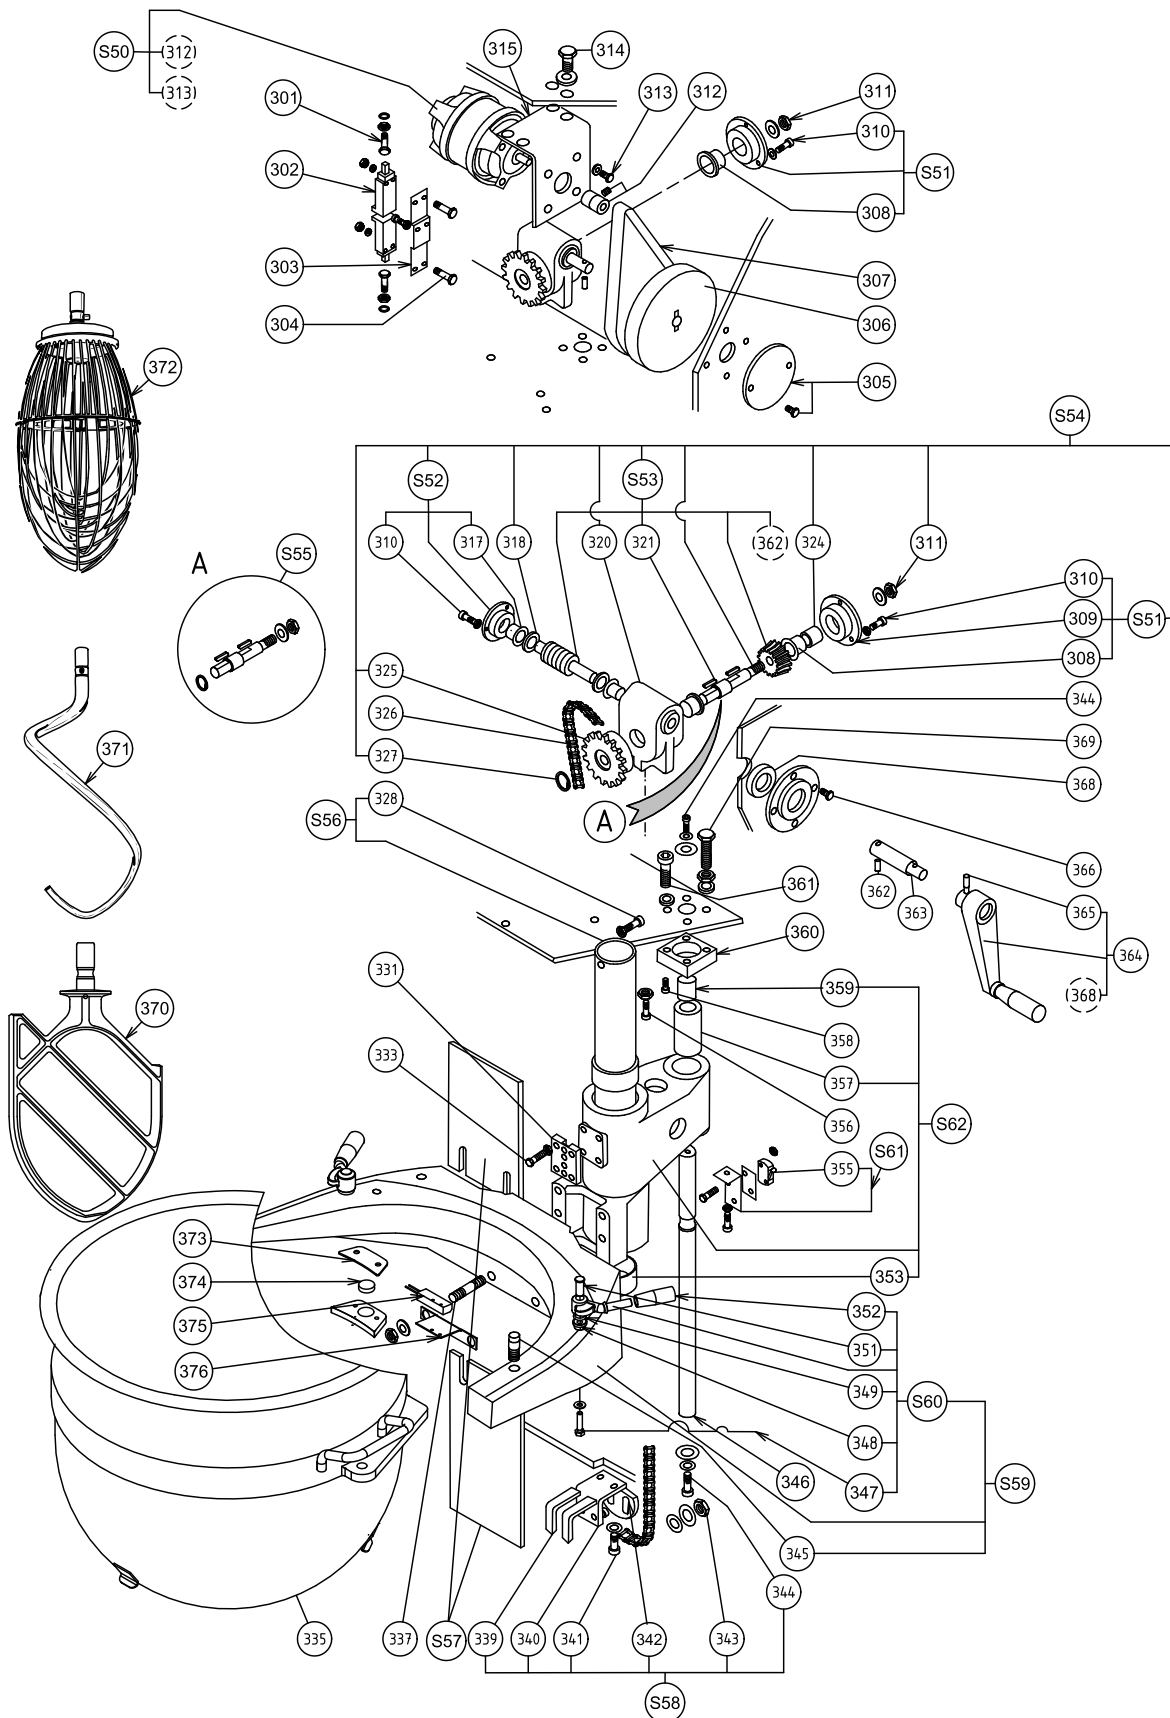


BMX60 / BMXE60 / BMXE80 - Parts list - Raising and lowering of bowl

Pos.	Code	Description	V	W&T	Ref.	Notes	S/N break
360	0D4743	Female centring device					
361	0D2844	Screw TH M10x30 (set x 10)					
361	0D2265	Washer W10 (set x 10)					
362	0D0396	Pin 5x20 G05 (set x 10)					
363	0U0389	Crank handle spindle					
364	0D3959	Raise lower crank handle assembly		X	K		
365	0D6180	Pin 5x30 G01 (set x 10)			K		
366	0D0664	Screw TF M6x16 stainless steel (set x 10)					
368	0D8026	Handle bushing			K		
369	0D5722	Screw TH M10x55 H (set x 10)					
370	653083	60L standard paddle		X	I		
370	653135	80L standard paddle		X	J		
371	653084	60L standard hook		X	I		
371	653133	80L standard hook		X	J		
372	653086	60L standard whisk		X	I		
372	653134	80L standard whisk		X	J		
373	0D7754	Magnet support assembly					
373	0D5276	Screw TC M6x10 (set x 10)					
373	0D2662	O-ring (set x 5)		X			
374	0D5110	Magnet		X			
375	0D7755	Assembly PLA	X				
376	0D7756	Assembly detector support	X				
S50	0KQ668	Raise and lower electric motor	X		L		
S51	0D5723	Reducing gear wheel bearing block assembly		X			
S52	0D5709	Reducing screw bearing block assembly		X			
S53	0U0540	Gear wheel + screw		X			
S54	0U0248	Complete reducing gear unit		X			
S55	0U0247	Gear wheel shaft assembly					
S56	0D5310	Tube assembly					
S57	0D5811	Protective plate					
S58	0U0249	Tensioner assembly		X			
S59	0U0250	Standard cradle assembly					
S60	0D6117	Complete latch		X			

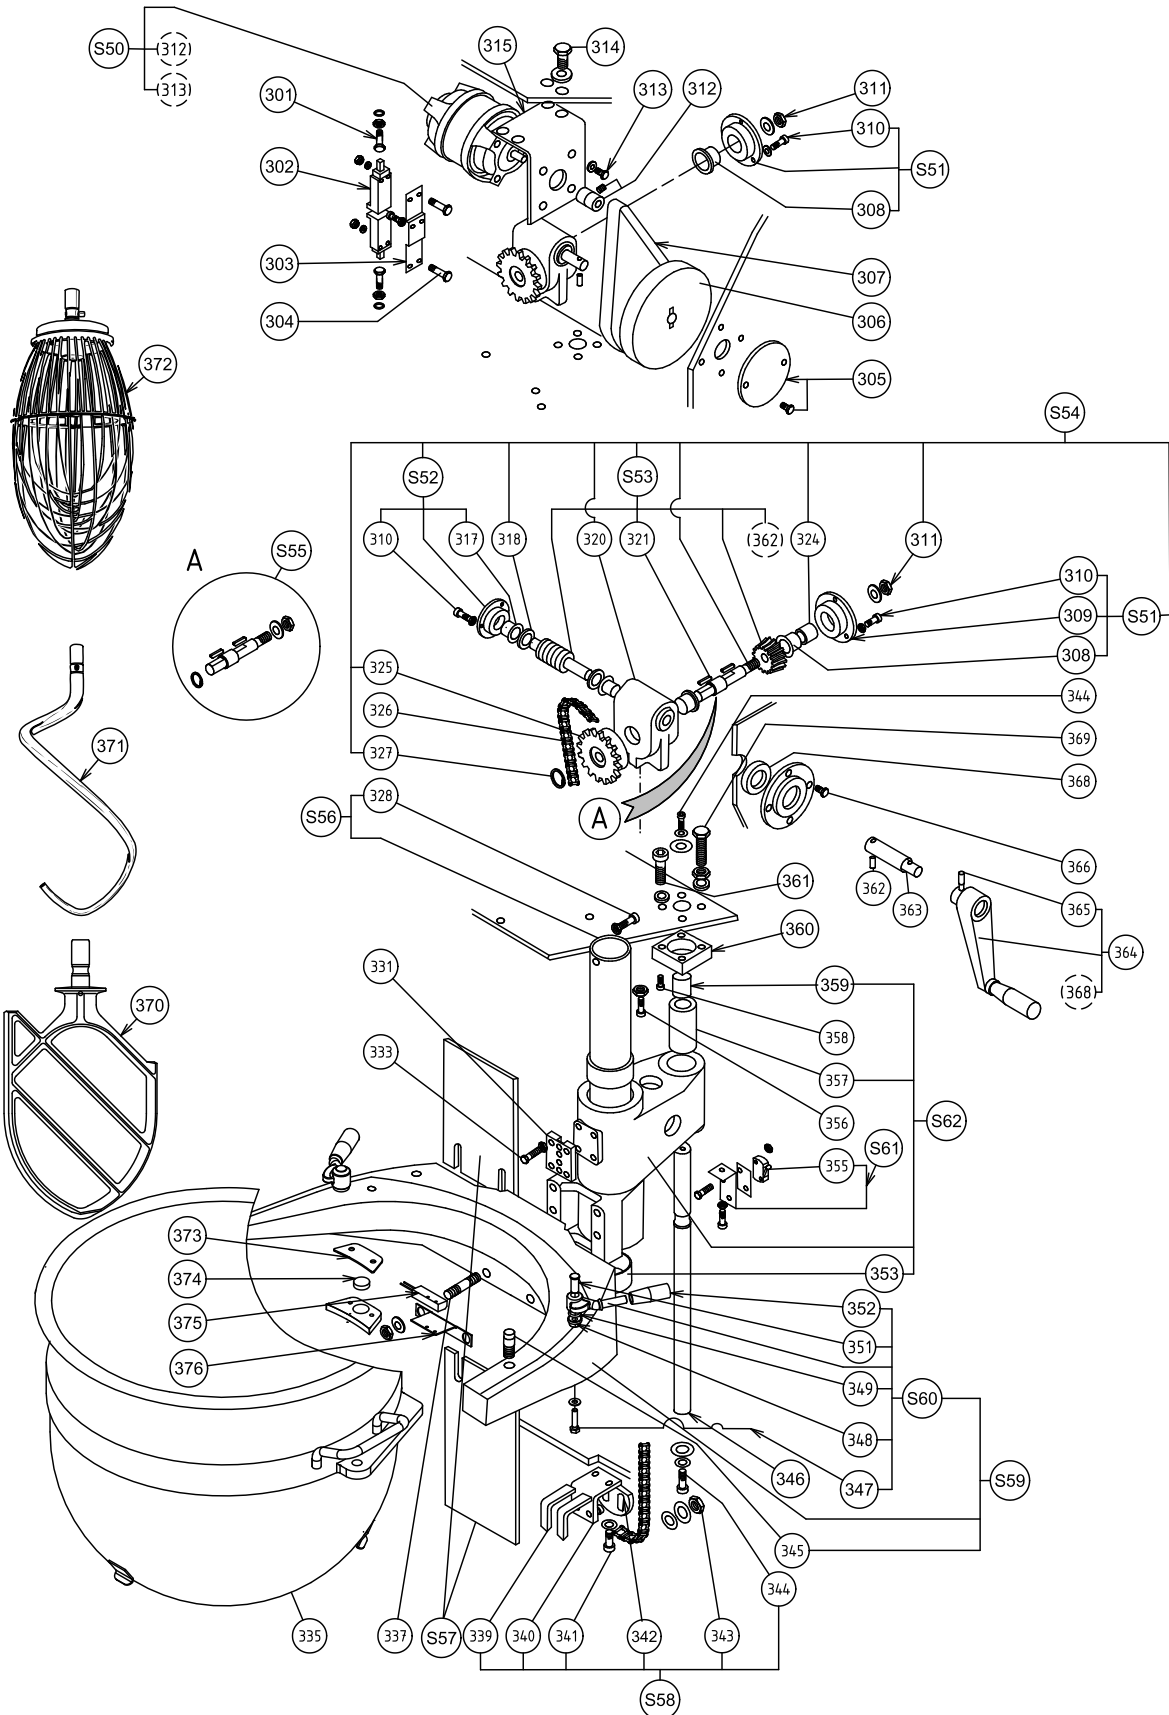


BMX60 / BMXE60 / BMXE80 - Parts list - Raising and lowering of bowl

Pos.	Code	Description	V	W&T	Ref.	Notes	S/N break
S61	0D5724	Micro-switch assembly	X				
S62	0D5713	Cradle support assembly		X			

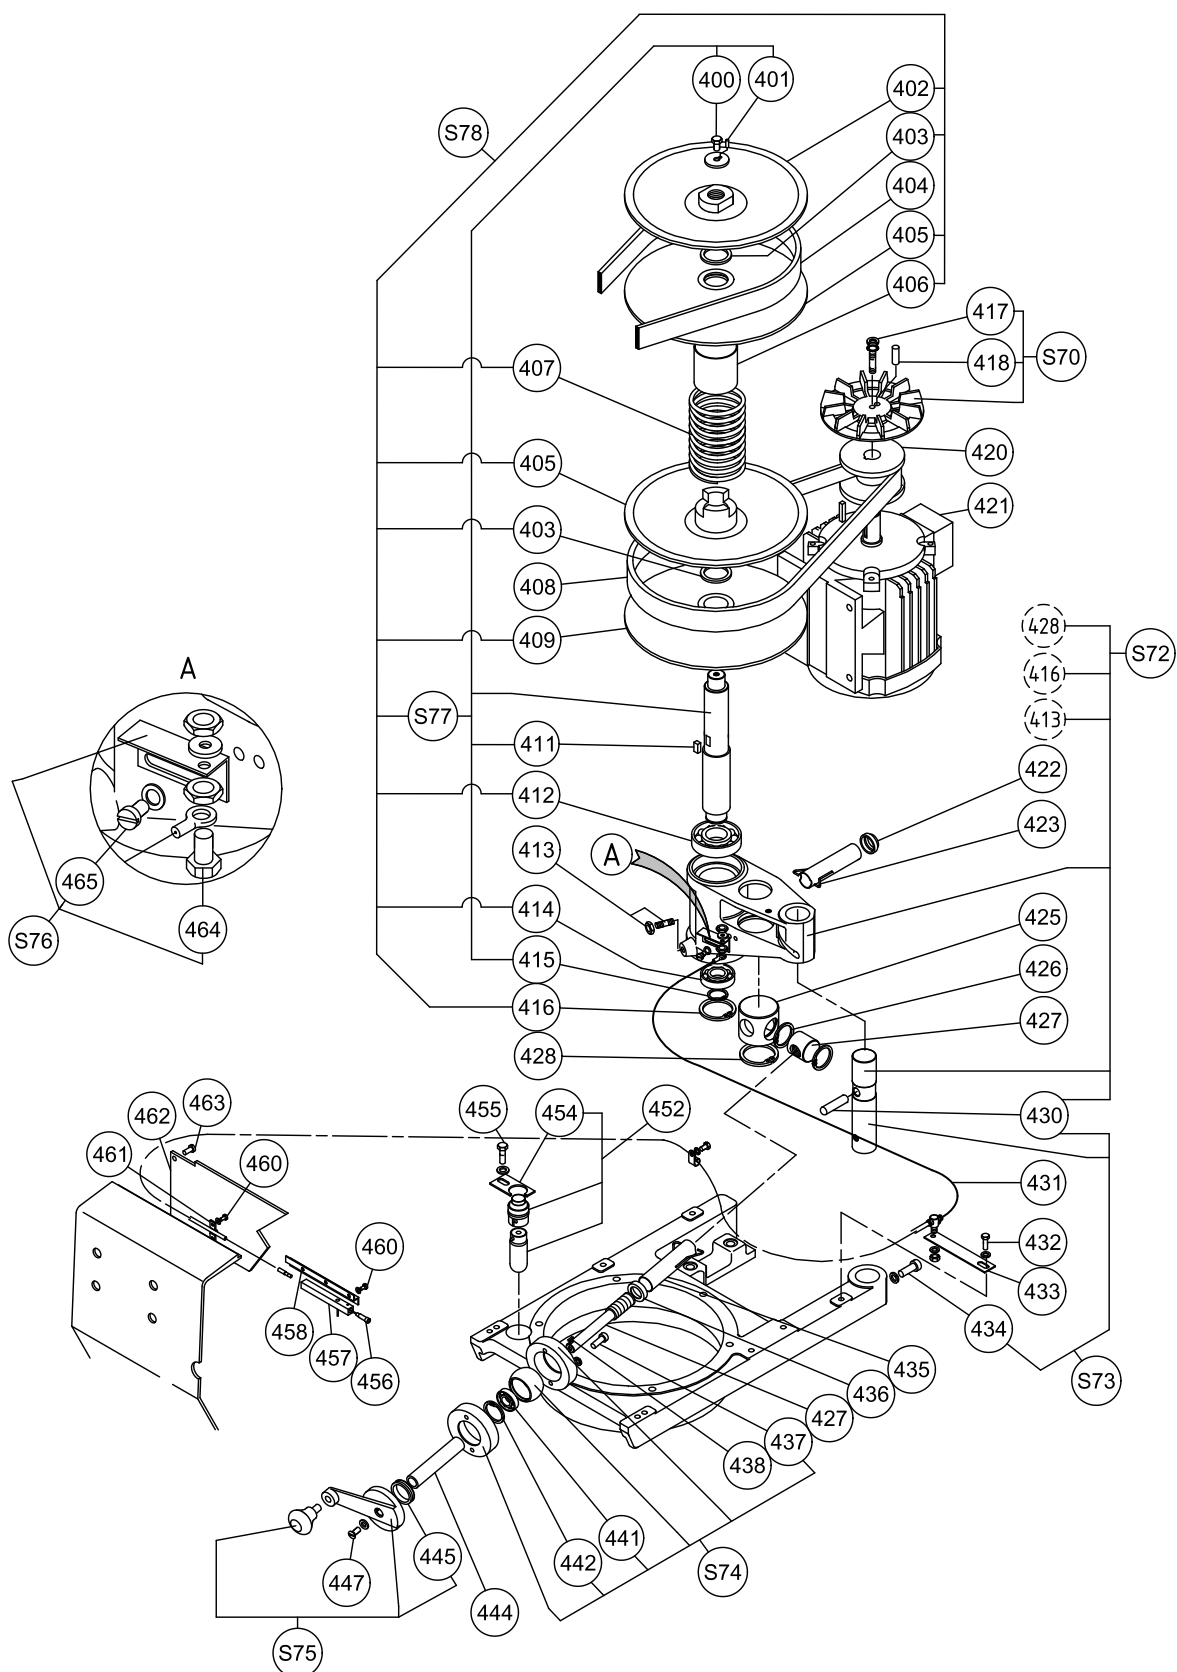


BMX60 / BMXE60 / BMXE80 - Parts list - Mechanical speed control

Pos.	Code	Description	V	W&T	Ref.	Notes	S/N break
400	0D0507	Screw TH M8x20 stainless steel (set x 10)					
400	0D2323	Flange washer (set x 10)					
401	0D3422	Pin GO5 4x10 stainless steel (set x 10)					
402	0D1310	Upper fixed flange		X			
403	0KQ576	Washer 45x35x5 (set x 5)					
404	0H1012	V-Belt W40x13x1365	X	X			
405	0U0381	Intermediary flange		X			
406	0U0382	Protective sleeve					
407	0KQ343	Bmx60 spring		X	I		
407	0D3848	Bmx80 spring		X	J		
408	0KJ740	V-Belt W40x13x875	X	X			
409	0D1311	Lower fixed flange		X			
411	0D5728	Key A 10x8x20 (set x 10)					
412	0D1124	Bearing 6207		X			
413	0D1663	Screw TCHC M8x40 (set x 10)					
413	0D0642	Nut HU M8 stainless steel (set x 10)					
414	0D0006	Bearing 6206		X			
415	0D0654	Circlip 30e (set x 10)					
416	0U0717	Circlip 62i (set x 10)					
417	0D1663	Screw TCHC M8x40 (set x 10)					
417	0D3538	Washer L8 CS washer (set x 10)					
418	0KJ021	Pin GO2 8x16 (set x 5)					
420	0D1312	Standard drive pulley		X			
421	0KQ289	Bmx60 220/380 50 three-phase motor	X		I		
421	0D1599	Bmx80 220/380 50 three-phase motor	X		J		
422	0D0529	GPN250 plug (set x 10)					
423	0U0401	Rear protective sheath					
425	0D0322	Universal joint					
426	0U0618	Circlip 35i (set x 10)					
427	0D1834	Control screw + nut		X	K		
428	0D0578	Circlip 58i (set x 10)					
430	0D0666	Pin GO5 12x40 (set x 5)					
431	0D0121	Speed indicator cable		X			
432	0D0507	Screw TH M8x20 (set x 10)					

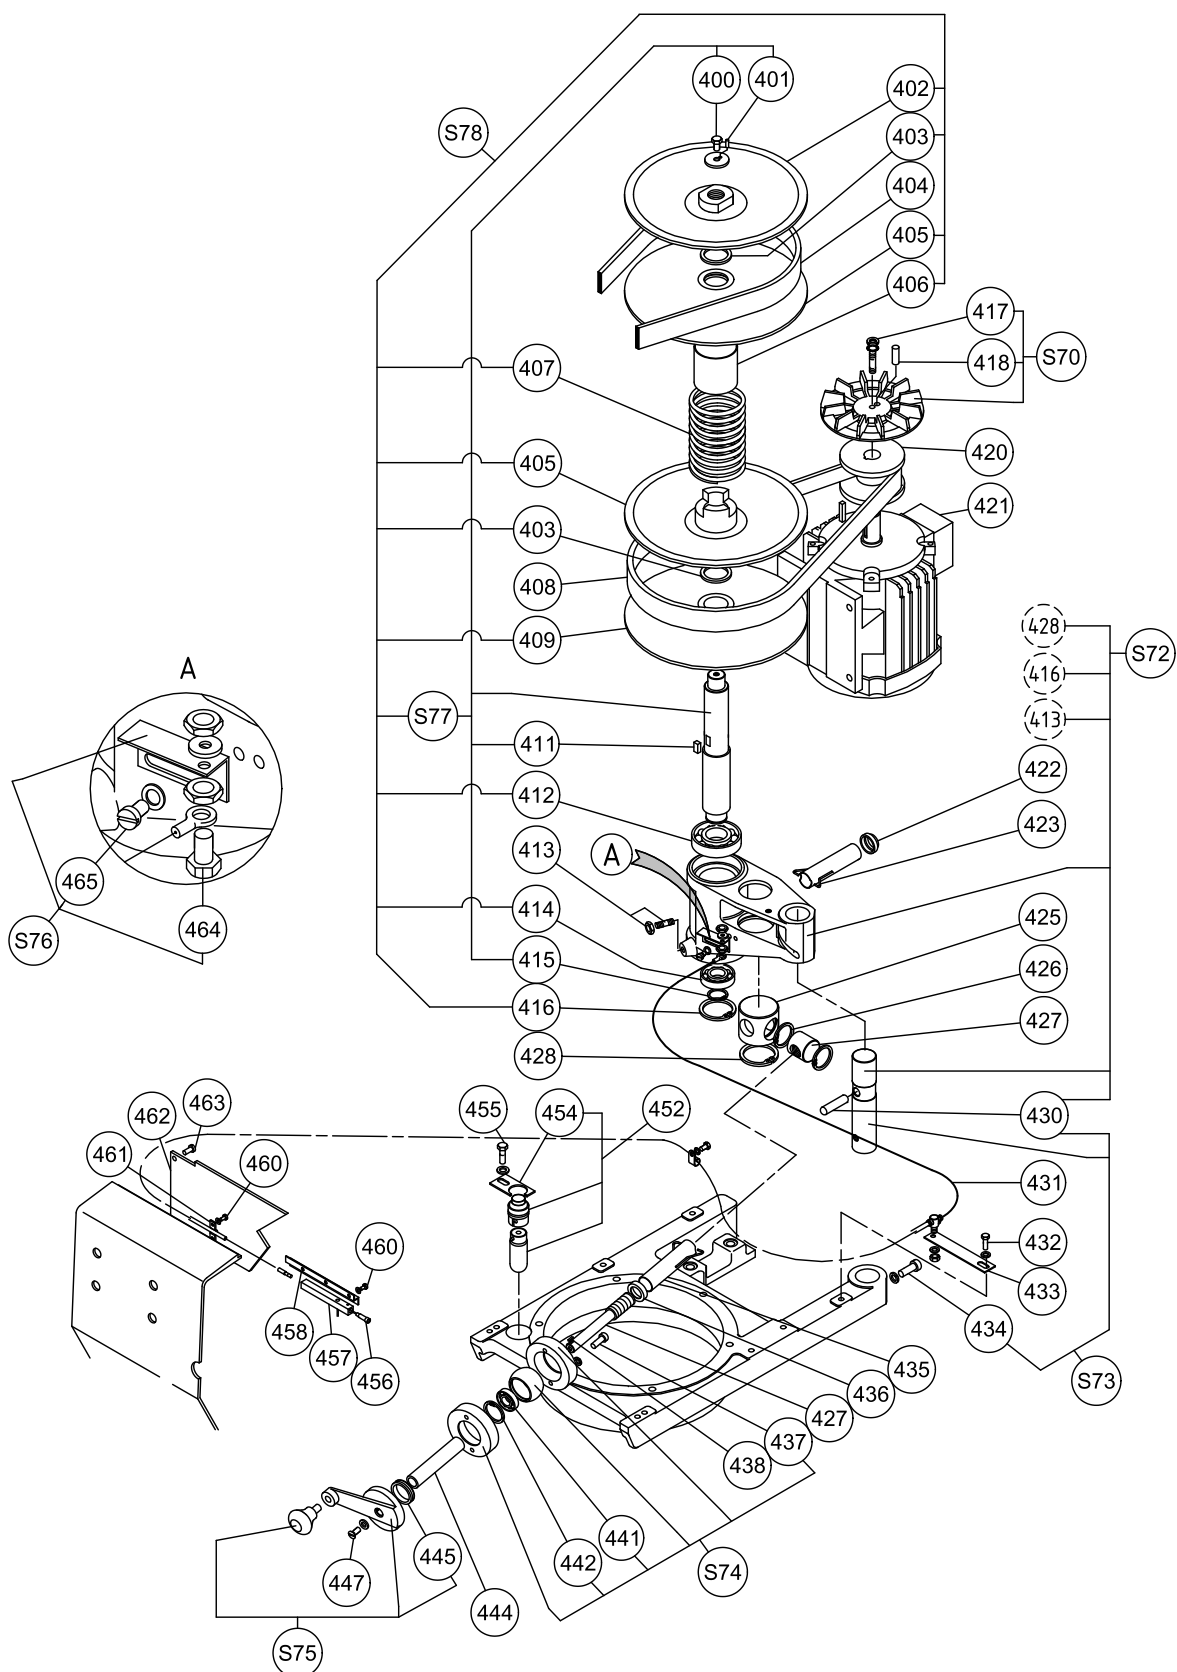


BMX60 / BMXE60 / BMXE80 - Parts list - Mechanical speed control

Pos.	Code	Description	V	W&T	Ref.	Notes	S/N break
432	0D0632	Washer M8 CS (set x 10)					
433	0D5731	Conduit support lug					
434	0D5641	Screw TCHC M10x30 (set x 10)					
434	0D2265	Washer W10 (set x 10)					
435	0D5733	Front protective sheath					
436	0KQ307	Sheath bush			K		
437	0D0599	Screw TH M6x45 stainless steel (set x 10)			K		
437	0D0619	Washer L6 CS washer (set x 10)			K		
438	0D0552	Key 4x4x16 (set x 5)			K		
441	0D2393	Bearing 3202b-2rs		X	K		
442	0U0618	Circlip 35i (set x 10)			K		
444	0D3890	Spacer			K		
444	0D0618	Washer (set x 2)			K		
445	0D1134	V ring seal		X	K		
447	0D0664	Screw TF M6x16 stainless steel (set x 10)			K		
447	0D0020	Washer			K		
452	0KQ375	Lamp	X				
454	0D1557	Socket bracket					
455	0D0507	Screw TH M8x20 stainless steel (set x 10)					
455	0D0626	Washer Z8 CS (set x 10)					
456	0D7487	Indicator	X				
457	0KL039	Indicator support					
458	0KQ624	Indicator slider					
460	0D0610	Screw TC M4x8 stainless steel (set x 10)					
460	0D0631	Washer 4 contact (set x 10)					
461	0D5735	Locking lug (set x 5)					
462	0D5736	Protective plate					
463	0D5276	Screw M6x10 TC (set x 10)					
464	0KQ407	Screw TH M5x16 stainless steel (set x 10)					
464	0KQ491	washer 5 (set x 10)					
464	0D0579	Nut HU M5 stainless steel (set x 10)					
464	0D5737	Nut HM M5 stainless steel (set x 10)					
465	0D0549	Screw TCL M6x12 stainless steel (set x 10)					

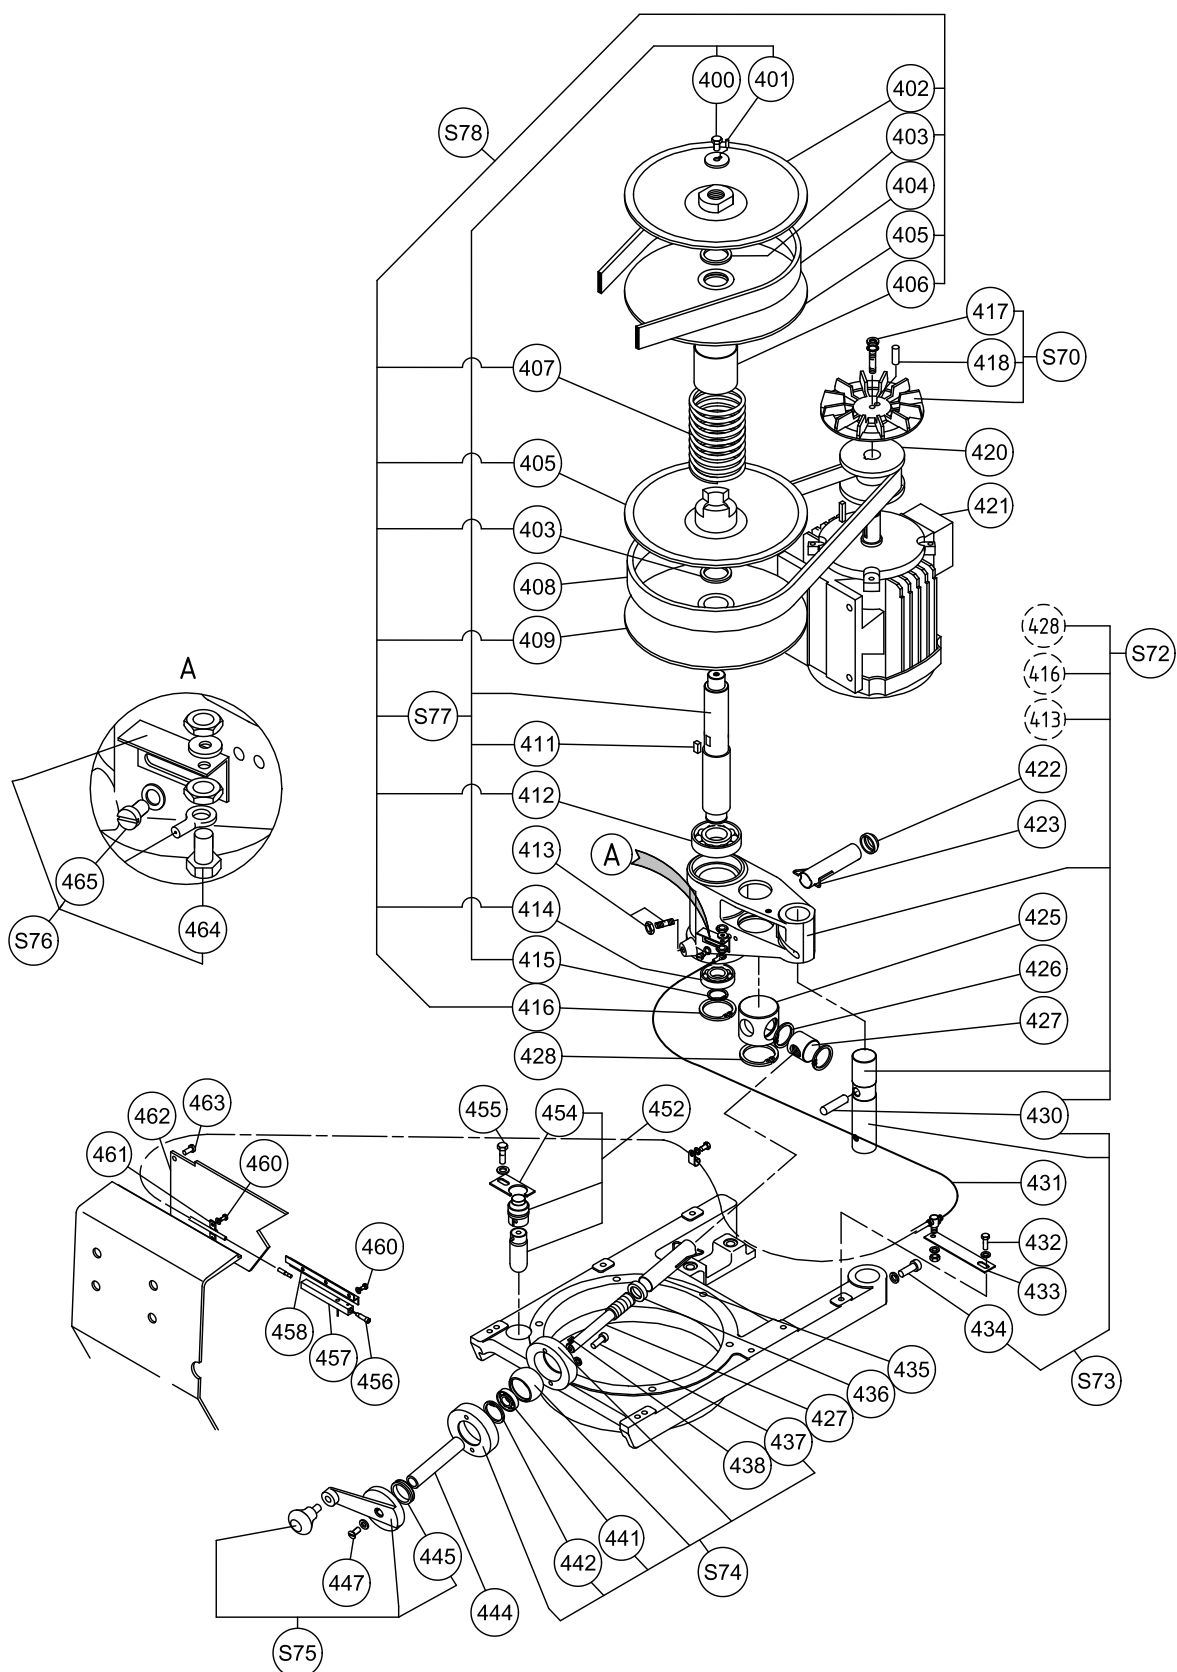


BMX60 / BMXE60 / BMXE80 - Parts list - Mechanical speed control

Pos.	Code	Description	V	W&T	Ref.	Notes	S/N break
465	0D0619	Washer L6 CS (set x 10)					
S70	0U0384	Standard fan assembly					
S72	0D0193	Moving arm assembly					
S73	0U0244	Arm articulation spindle assembly					
S74	0U0257	Ball and socket assembly			K		
S75	0KJ746	Speed change control wheel		X	K		
S76	0D0198	Cable clamp assembly					
S77	0D0182	Variable pulley shaft assembly					
S78	0D0065	Variable shaft + pulleys		X			

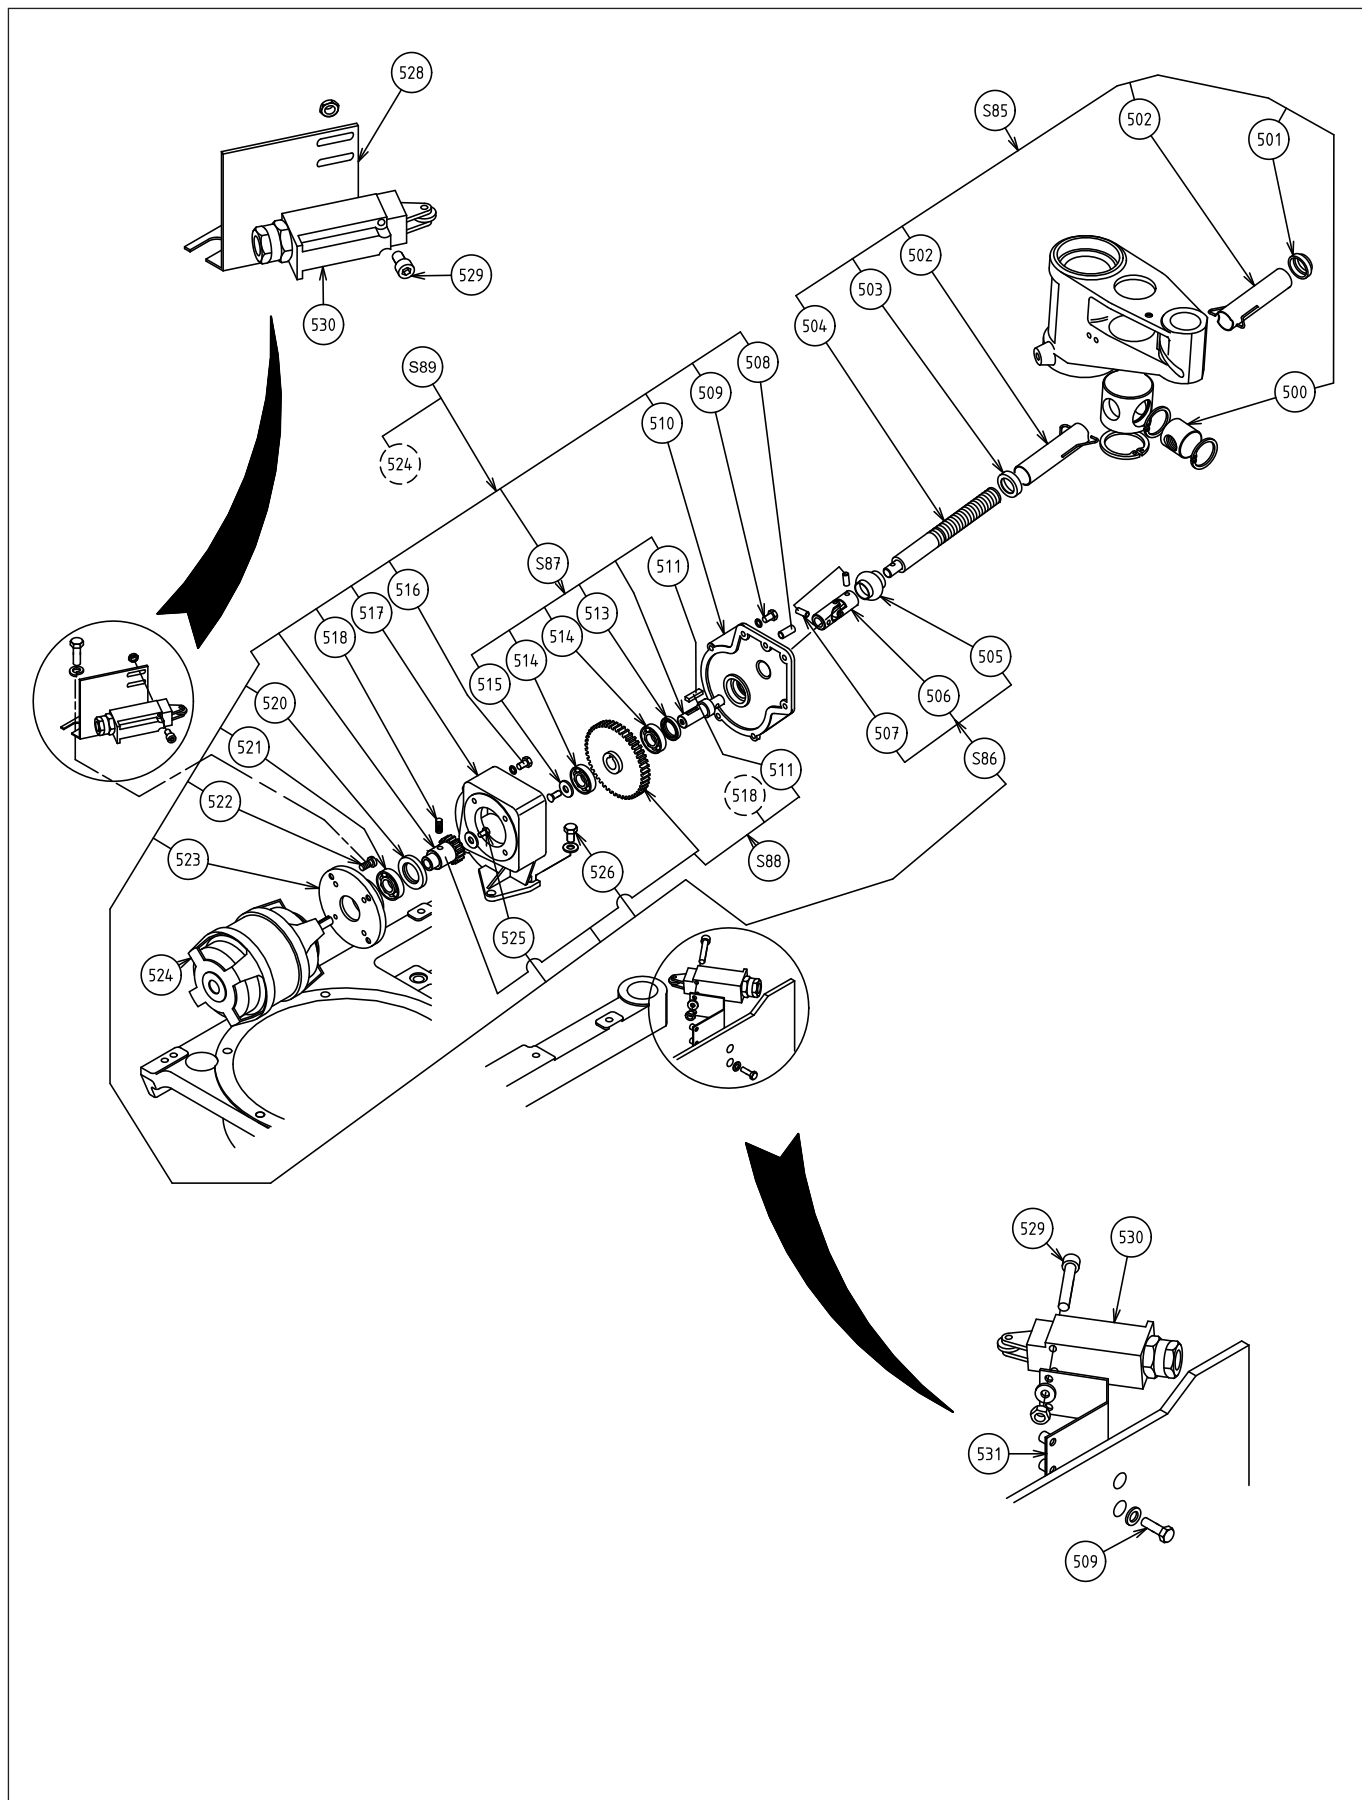

BMX60 / BMXE60 / BMXE80 - Parts list - Electric speed control

Pos.	Code	Description	V	W&T	Ref.	Notes	S/N break
500	0KQ539	Treated nut		X	L		
501	0D0529	Plug GPN250 (set x 10)			L		
502	0U0401	Protective sheath			L		
503	0KQ307	Sheath bush			L		
504	0D5740	Transmission screw		X	L		
505	0G1694	Gimbal sleeve			L		
506	0G1693	Gimbal			L		
507	0U0663	Pin G08 5x20 (set x 10)			L		
508	0KQ500	Rectifier pin 8x20 (set x 10)			L		
509	0D0499	Screw TH M6x16 stainless steel (set x 10)			L		
509	0D0624	Washer CS M6 stainless steel (set x 10)			L		
510	0D5753	Reducing gear cover			L		
511	0D0646	Key A 5x5x16.5 (set x 5)			L		
513	0KI591	Double lip seal 20x28x6		X	L		
514	0U0582	Bearing 6002		X	L		
515	0KQ520	Screw TFHC M6x16 (set x 10)			L		
515	0D0020	Washer			L		
516	0KQ407	Screw TH M5x16 stainless steel (set x 10)			L		
516	0KQ514	Toothed washer 5 sealed (set x 10)			L		
517	0D3466	Speed reducing gear housing			L		
518	0D0545	Screw SHC M6x8 (set x 10)			L		
520	0KQ579	Lip seal 24x40x7 (set x 5)		X	L		
521	0U0282	Bearing 6003		X	L		
522	0D5276	Screw TC M6x10 (set x 10)			L		
523	0D5741	Motor adapter			L		
524	0D7485	230/400 50hz three-phase motor speed change	X		L		
525	0D2879	Screw TCHC M4x30 (set x 10)			L		
525	0D2284	Washer CS L4 (set x 10)			L		
526	0D1660	Screw TCHC M8x25 (set x 10)			L		
526	0U0660	Washer W8 (set x 10)			L		
528	0D5744	Max speed micro bracket			L		
529	0D3399	Screw TCHC M4x40 stainless (set x 10)			L		
529	0D0520	Washer 4 (set x 10)			L		

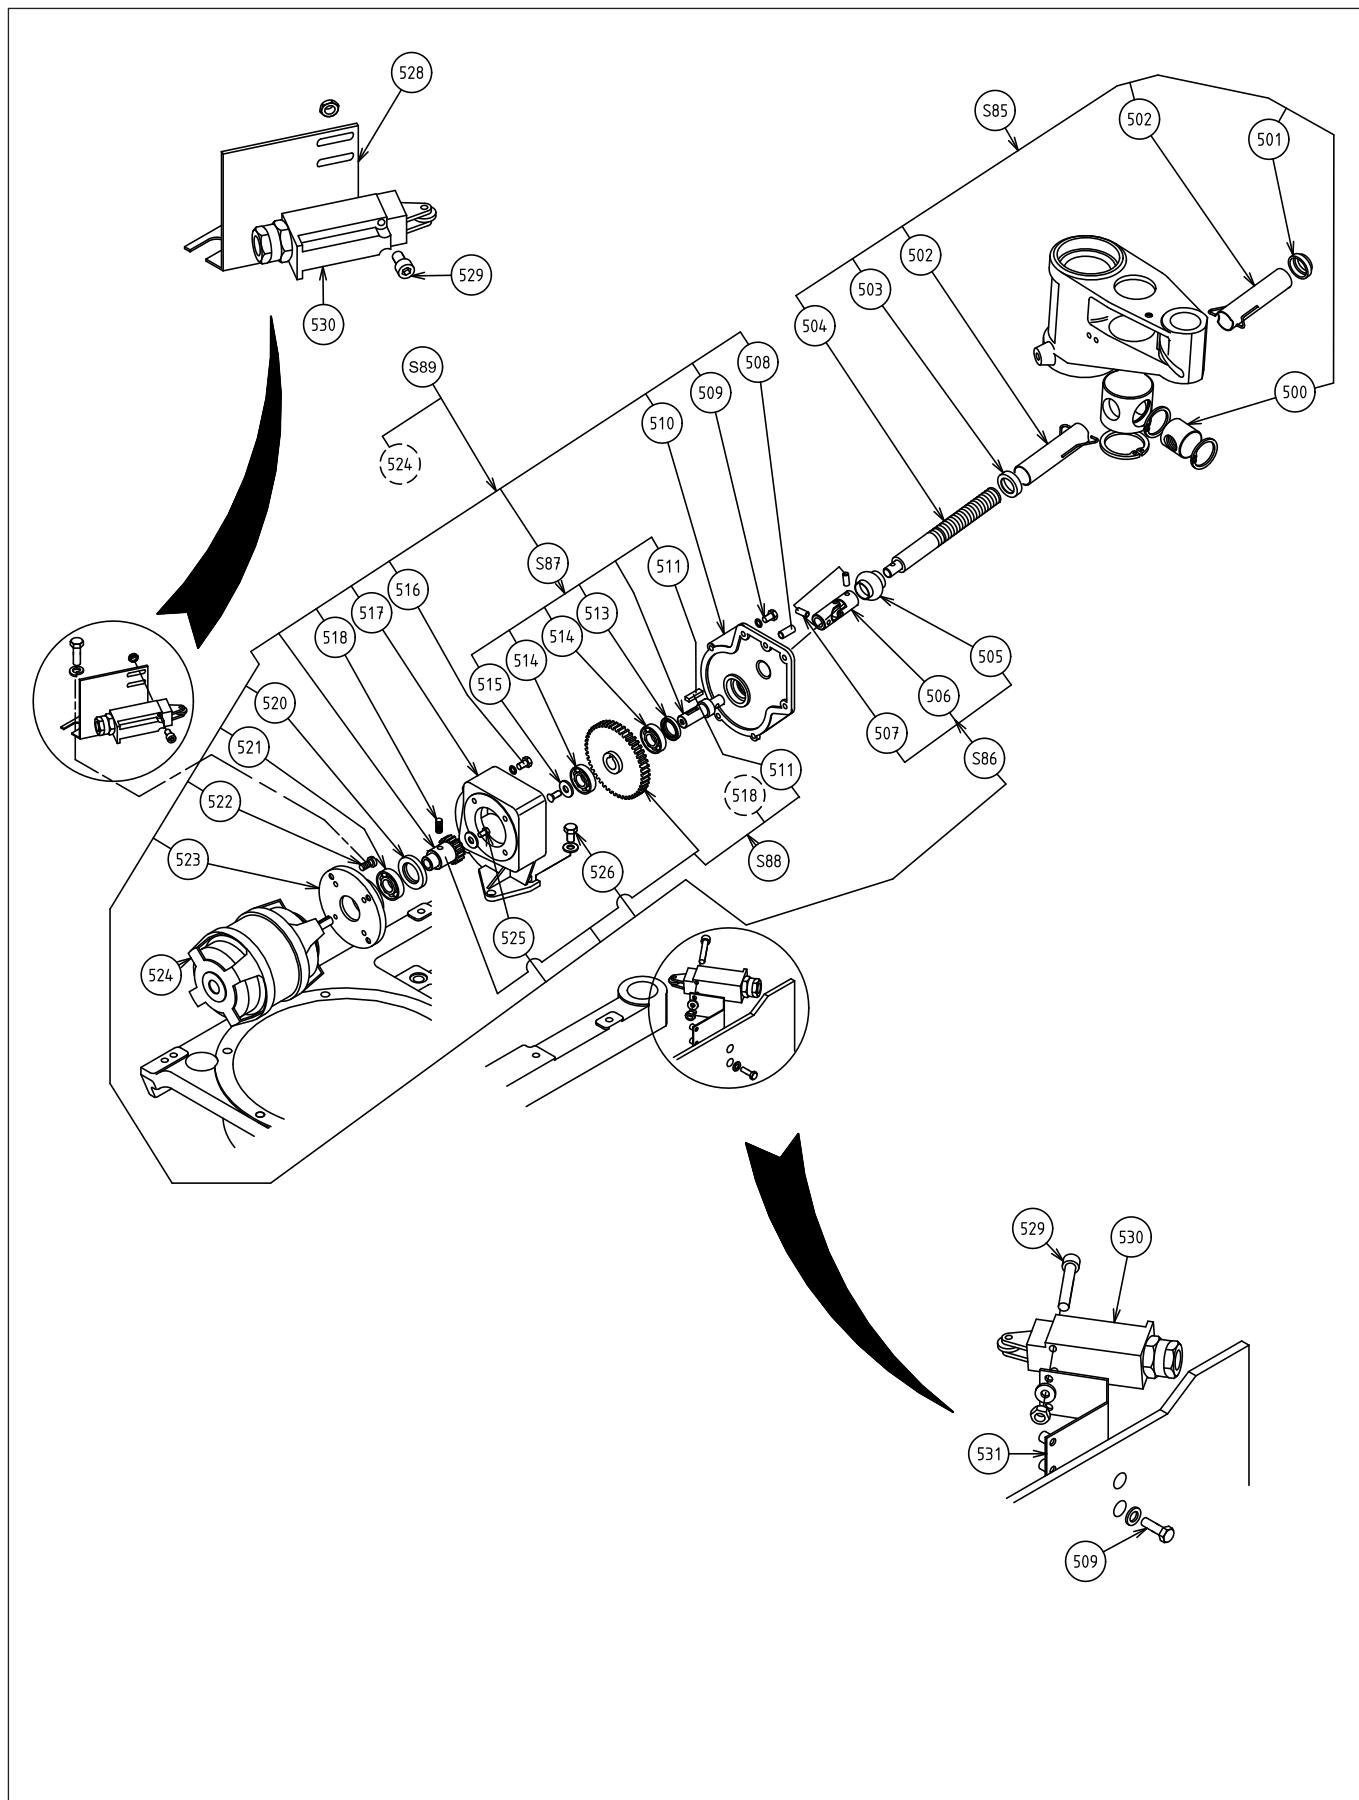

BMX60 / BMXE60 / BMXE80 - Parts list - Electric speed control

Pos.	Code	Description	V	W&T	Ref.	Notes	S/N break
529	0KL159	Nut HU M4 stainless steel (set x 10)			L		
530	0KQ206	Position detector	X		L		
531	0U0485	Min speed micro bracket			L		
S85	0G1692	Control screw assembly		X	L		
S86	0KQ667	Gimbal sleeve assembly			L		
S87	0D2712	Output spindle assembly		X	L		
S88	0D3465	Gear wheel unit		X	L		
S89	0U0585	Motor 230/400/50 reducing gear	X		L		

