



Smart
Smart Variomix,
Smart Promix®

Kokgryta, 600mm tipphöjd
Boiling pan, 600 mm tilting height
Kochkessel, 600mm Neigungshöhe

SE	INNEHÅLLSFÖRTECKNING	Sida
• Högerpelare, Elektronik		4-7
• Frekvensomformare		8-9
• Kärll+ Tippning+ Vänsterpelare		10-13
• Lock komplett		14-21
• Omrörare		22-29
• Uppvärmning,	eluppvärmd	30-33
	ånguppvärmd	34-37
• Ellåda,	eluppvärmd 50-100L	38-41
	ånguppvärmd 50-100L	42-45
	eluppvärmd 150-300L	46-49
	ånguppvärmd 150-300L	50-53
• Vattenanslutning		54-57
• Mantelkylning		58-59
• Isvattenkylning		60-65
• Fotpedal		66-67
• Fästelement		68-69

EN	TABLE OF CONTENTS	Page
• Right column, Electronic		4-7
• Frequency converter		8-9
• Vessel+ Tilting+ Left column		10-13
• Lid complete		14-21
• Agitator		22-29
• Heating,	electrical heated	30-33
	steam heated	34-37
• Electric box,	electrical heated 50-100L	38-41
	steam heated 50-100L	42-45
	electrical heated 150-300L	46-49
	steam heated 150-300L	50-53
• Water connection		54-57
• Sleeve		58-59
• Ice water cooling		60-65
• Foot pedal		66-67
• Attachment element		68-69

• Säule, rechts, Elektronik		4-7
• Frequenzumformer		8-9
• Kessel+ Kippen+ Säule links		10-13
• Deckel komplett		14-21
• Rührwerk		22-29
• Behizung,	El.behiz	30-33
	Dampfbehiz	34-37
• Elektrischebüsche,	El.behiz 50-100L	38-41
	Dampfbehiz 50-100L	42-45
	El.behiz 50-300L	46-49
	Dampfbehiz 50-300L	50-53
• Wasseranschluss		54-57
• Mantelkühlungs		58-59
• Eiswasserkühlung		60-65
• Fossilpedal		66-67
• Befestigungsteile		68-69

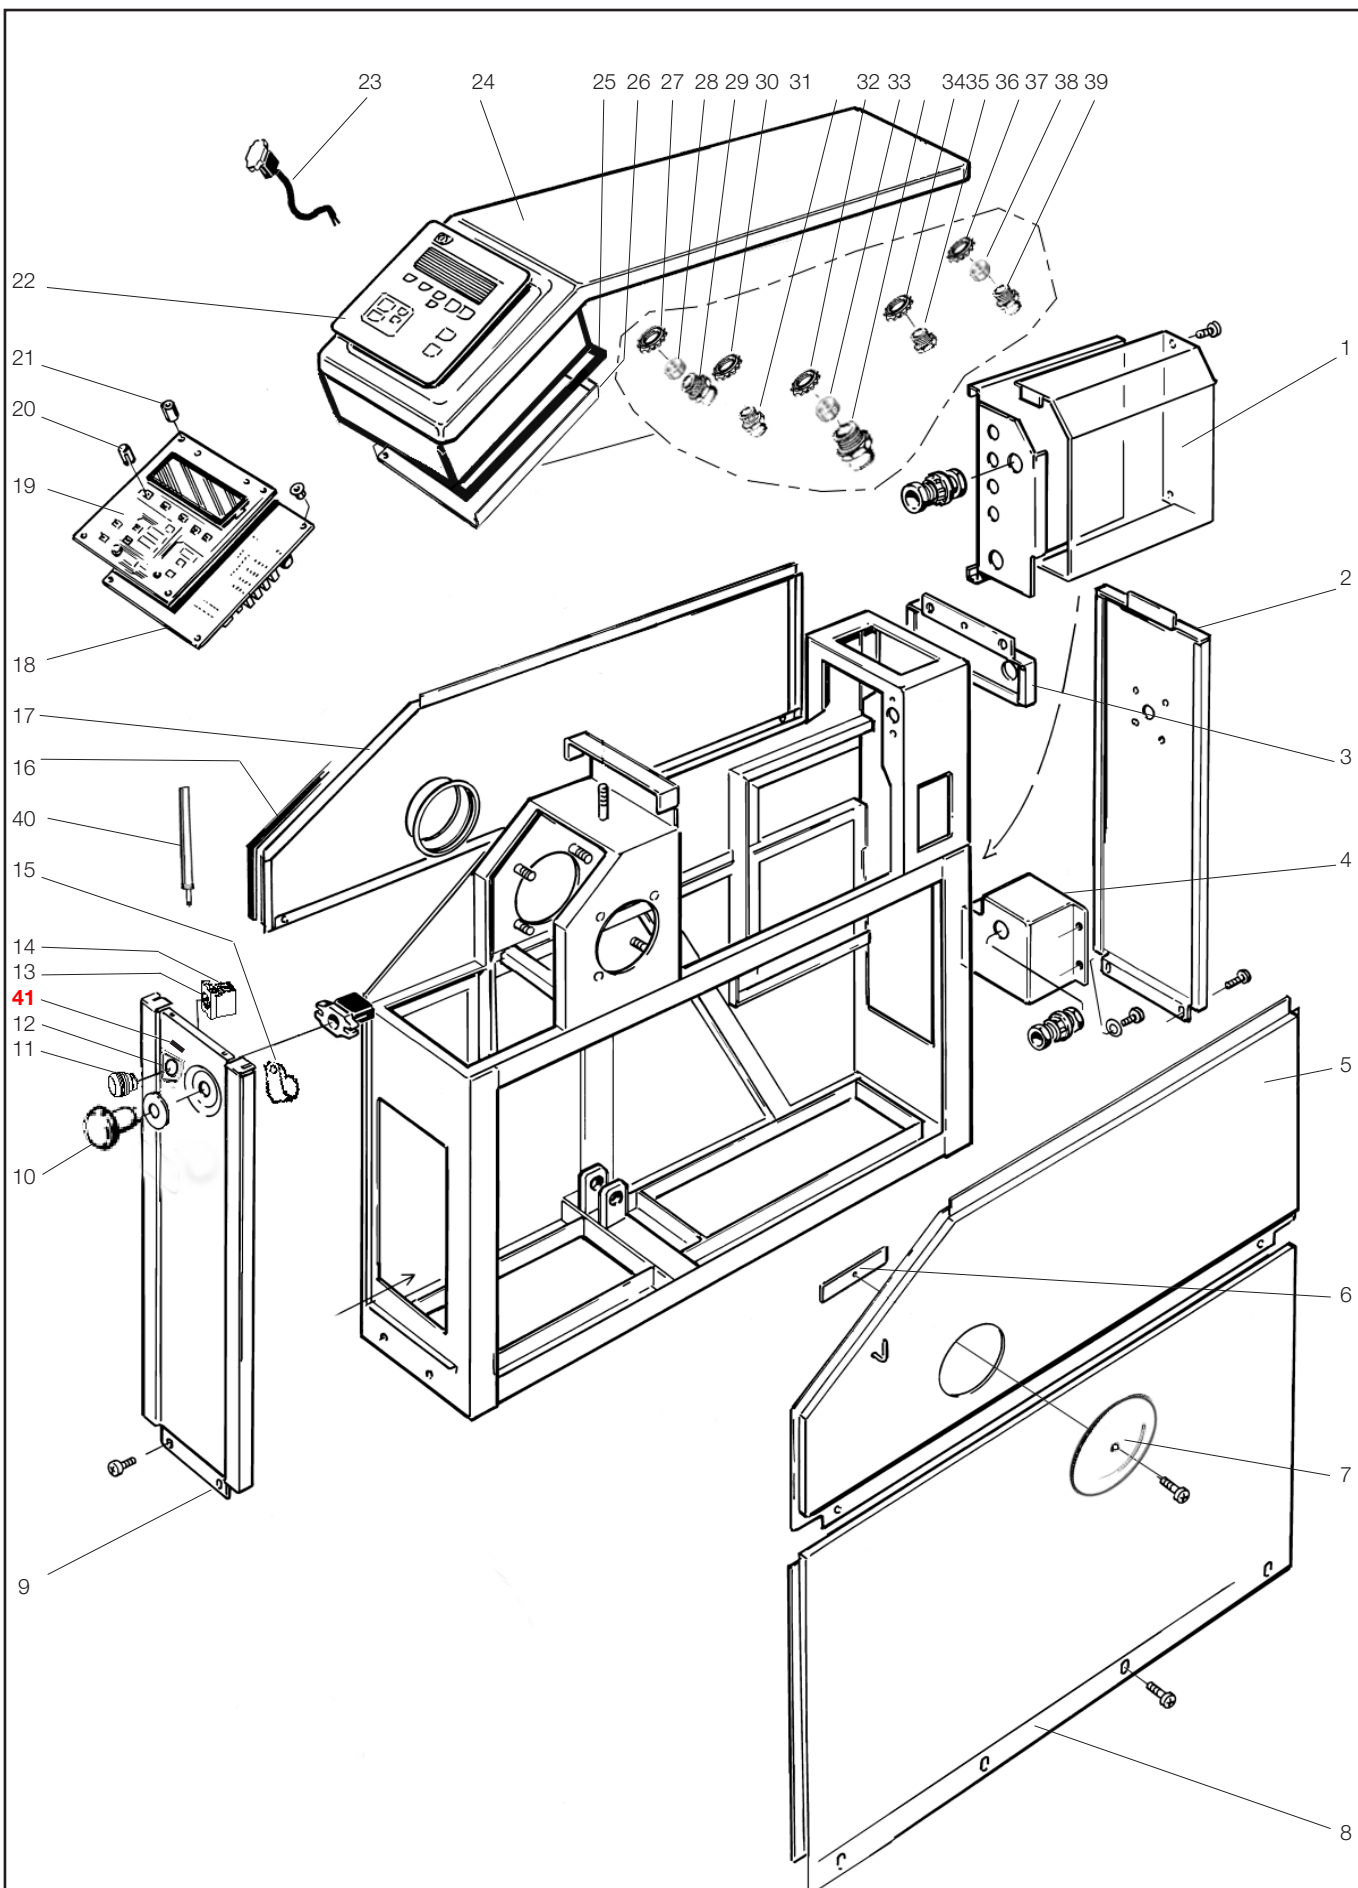


ILLUSTRATION 21800

Höger pelare, Elektronik
Right Column, Electronic
Säule, rechts, Elektronik

Illustration 21800

Utgåva
Edition
Ausgabe
3

Månad
Month
Monat
05

År
Year
Jahr
2017

Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.
	[[[[[[	50L 80L 100L 150L 200L 300L				
1	1 1 1 1 1 1	ST0 92 36-00	Lock, ellåda	Lid, connection box	Deckel, elektr. Schrank	
2	1 1 1 - - - - - - 1 1 1	ST0 94 97-00 ST0 94 98-00	Baksida Baksida	Rear side Rear side	Rückseiten Rückseiten	
3	1 1 1 - - - - - - 1 1 1	ST0 95 29-00 ST0 95 32-00	Baksida Baksida	Rear Rear	Rückseiten Rückseiten	
4	- - - 1 1 1	428 06 34-00	Fäste	Attachment	Befestigung	
5	1 1 1 - - - - - - 1 1 1	ST1 03 43-00 ST1 05 08-00	Sidoplåt Sidoplåt	Side plate Side plate	Seitenplatten Seitenplatten	
6	1 1 1 1 1 1	428 12 04-00	Stag	Support	Stutze	
7	1 1 1 1 1 1	428 12 03-00	Täckbricka	Cover washer	Abdeckscheibe	
8	1 1 1 - - - - - - 1 1 1	428 12 39-00 428 12 40-00	Sidoplåt Sidoplåt	Side plate Side plate	Seitenplatten Seitenplatten	
9	1 1 1 - - - - - - 1 1 1	ST1 06 22-00 ST1 06 23-00	Front Front	Front Front	Vorderseite Vorderseite	
10	1 1 1 1 1 1	428 07 60-01	Nödstopp	Emergency switch	Notstopp	
11	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	ST1 06 76-00 ST0 87 70-00 ST1 29 08-00	Blind propp Tryckknapp svart Tryckknapp svart	Blind plug Pushbutton Black Pushbutton Black	Blindstopfen Drucktaster Schwarz Drucktaster Schwarz	1). 2).3).6). 2).3).7).
12	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	ST0 99 95-00 ST1 28 79-00 ST1 28 79-00	Skylt Skylt Skylt	Label Label Label	Label Label Label	2).3).6). 2).3).7). 2).3).8).
13	1 1 1 1 1 1	ST0 87 71-00	Kontakthållare	Holder, contact block	Kontaktblock halter	2).3).
14	3 3 3 3 3 3	ST0 87 72-00	Kontaktblock	Contact block	Kontaktblock	2).3). NO
15	1 1 1 1 1 1	462 13 06-04	Kabelklämma	Cable clamp	Kabelklemme	
16	x x x - - - - - - x x x	428 13 78-00 428 13 78-00	Kronlist Kronlist	Strip Strip	Leiste Leiste	L=4 m L=5 m
17	1 1 1 - - - - - - 1 1 1	ST1 03 09-00 ST1 05 07-00	Sida,vänster Sida,vänster	Side, left Side, left	Seiten, links Seiten, links	
18	1 1 1 1 1 1 1 1 1 1 1 1	ST1 17 50-00 ST0 99 54-01	Effektkort Effektkort	Effect card Effect card	Effektkarte Effektkarte	5).
19	1 1 1 1 1 1 1 1 1 1 1 1	ST0 37 91-00 ST0 37 91-01	Panelkort Panelkort	Panel card Panel card	Panelkarte Panelkarte	5).
20	13 13 13 13 13 13	482 69 87-00	Knapp	Button	Knopf	

- 1). Smart
2).Smart Variomix
3). Smart Promix®
4). Tillval mattemp.givare eller flödesmätare
Optional food temperature sensor or flow meter
Optionale Temperatursensor oder Durchflusssmesserm
5). Med kyrilliska alfabet
With Cyrillic Alphabet
6). **T.o.m. 2021.49**
To 2021.49
7). **F.o.m. 2021.50**
From 2021.50
8). **Smart TOP**

Fet stil = Ändring
Bold print = Change
Fettdruck = Änderung

Mit Kyrillische Alphabet
Zu 2021.49
Ab. 2021.50

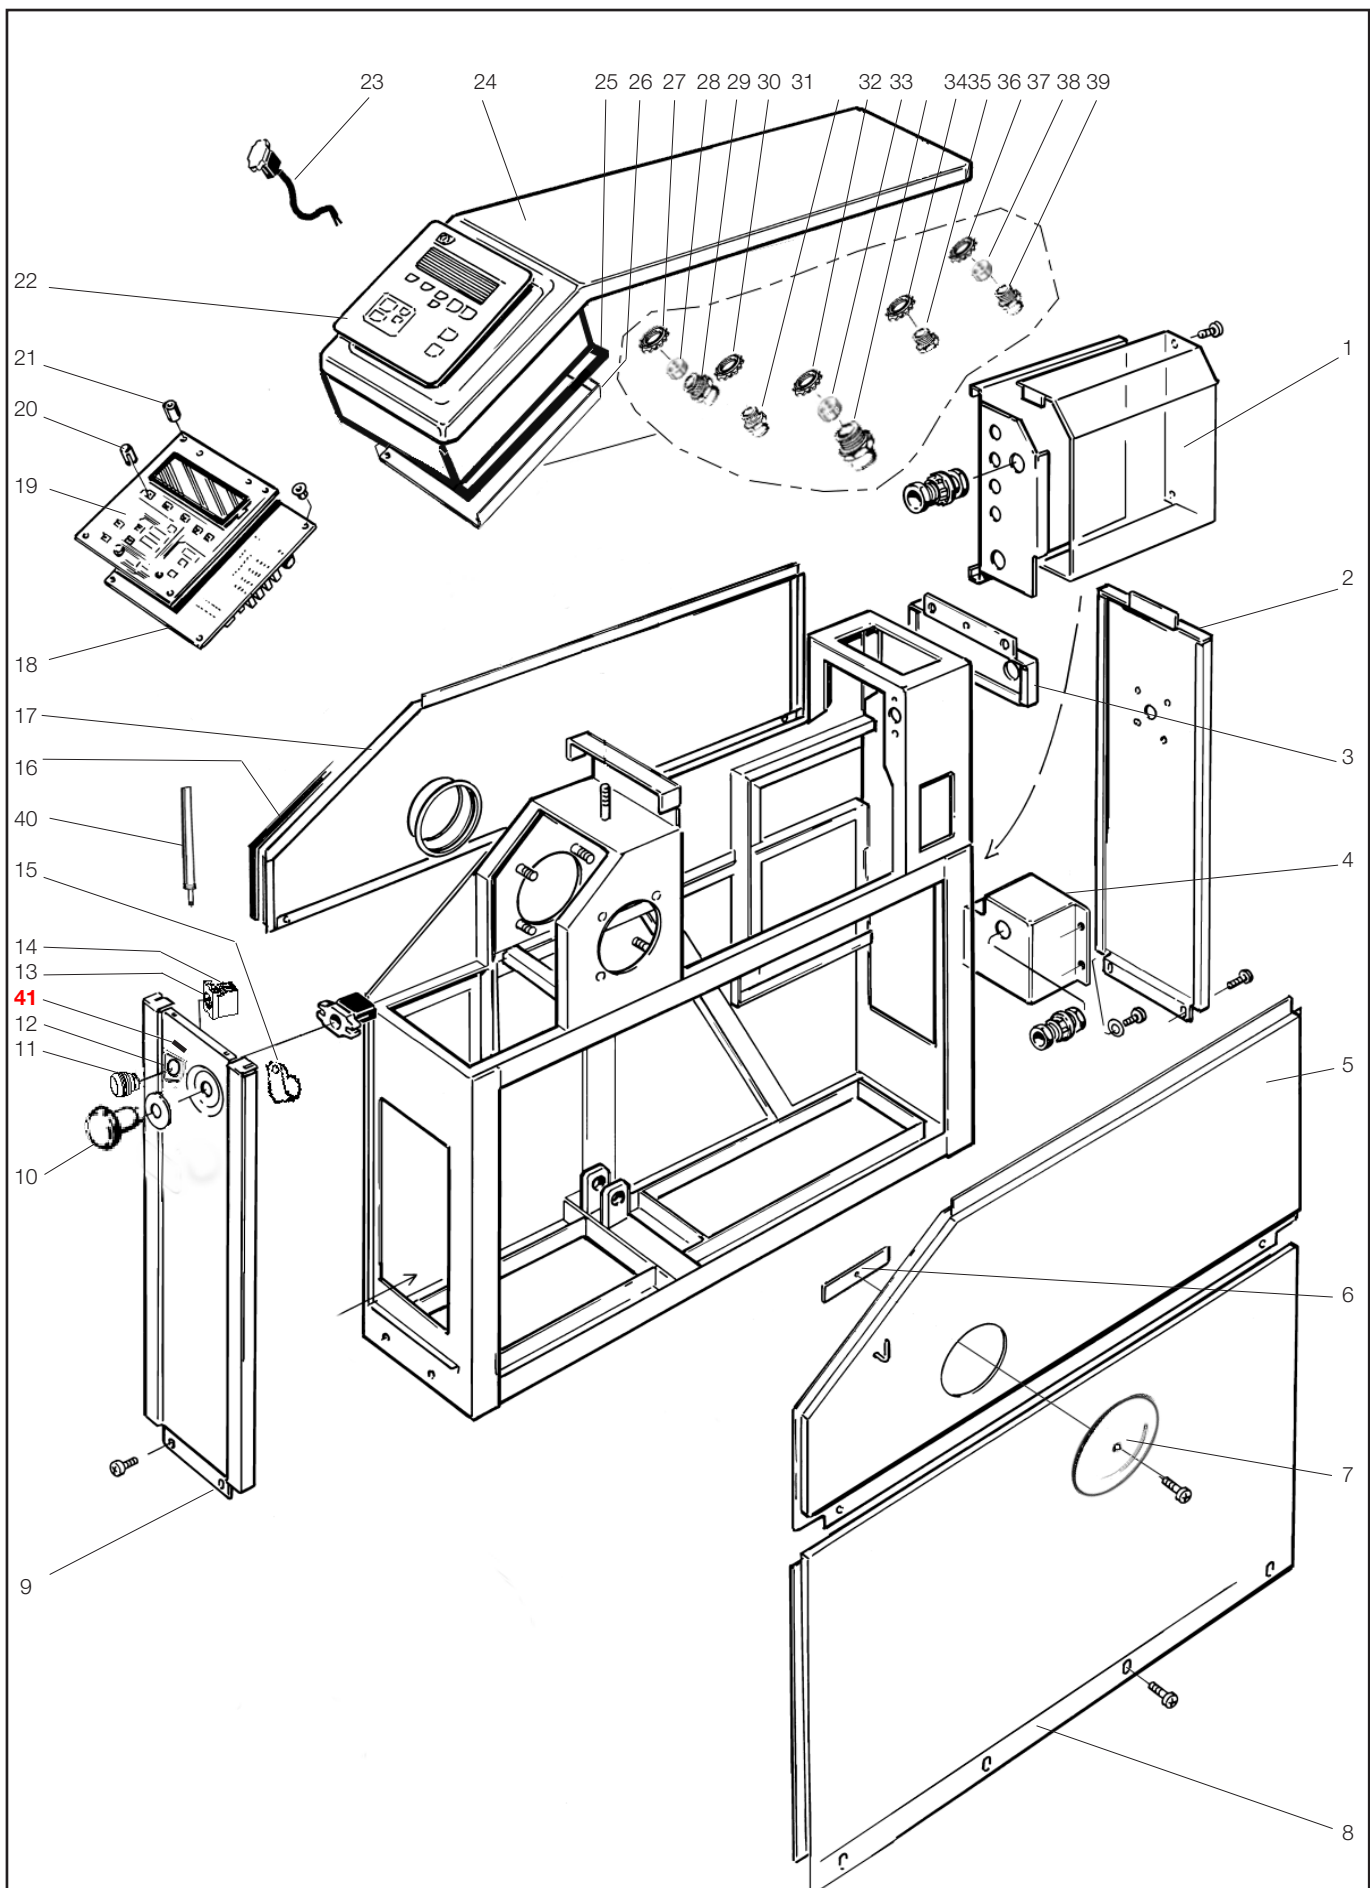


ILLUSTRATION 21800

Höger pelare, Elektronik
Right Column, Electronic
Säule, rechts, Elektronik

Illustration 21800

Utgåva
Edition
Ausgabe
3

Månad
Month
Monat
05

År
Year
Jahr
2017

Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.
	[[[[[[[	50L 80L 100L 150L 200L 300L				
21	10 10 10 10 10 10	428 11 85-00	Distans	Spacer	Distanze	
22	1 1 1 1 1 1 - - 1 - - 1 1 1 1 1 1 1 1 1 1	428 19 60-00 428 19 61-00 ST0 56 98-00 ST1 28 74-00 ST1 28 75-00 ST1 28 76-00 ST1 28 78-00	Panel Panel Panel Panel Panel Panel Panel	Panel Panel Panel Panel Panel Panel Panel	Verkleidung Verkleidung Verkleidung Verkleidung Verkleidung Verkleidung Verkleidung	2). 6). 3). 6). 1). 6). 1). 7). 2). 7). 3). 7). 8).
23	1 1 1 1 1 1	ST0 28 80-00	Kommun.kabel	Communication cable	Kommun. Kabel	2). 3). 4).
24	1 1 1 - - - - - - 1 1 1	428 19 55-00 428 19 56-00	Tak Tak	Top Top	Dach Dach	
25	x x x x x x	87 33 03-240	Självhäftande tejp	Self-adhesive tape	Klebstreifen	L=850
26	1 1 1 1 1 1 1 1 1 1 1 1	ST0 30 31-02 ST0 30 31-01	Täckplåt Täckplåt	Cover plate Cover plate	Deckplatte Deckplatte	1). 2). 3).
27	2 2 2 2 2 2	ST0 28 64-04	Mutter	Nut	Mutter	M25x1.5
28	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	ST0 93 54-10 ST0 93 54-13	Tätning Tätning	Sealing Sealing	Dichtung Dichtung	M25, 2X Ø6,0 4). M25, 3X Ø7,0
29	1 1 1 1 1 1	ST0 31 45-11	Kabelförskr.	Conduit entry	Kabeldurchfür.	M 25x1,5
30	1 1 1 1 1 1	ST0 28 64-02	Mutter	Nut	Mutter	M16x1,5
31	1 1 1 1 1 1 1 1 1 1 1 1	ST0 31 45-09 ST0 32 90-02	Kabelförskr. Avsl.propp	Conduit entry End plugg	Kabeldurchfür. Slussstück	2). M16x1,5 1). M16x1,5
32	1 1 1 1 1 1	ST0 28 64-04	Mutter	Nut	Mutter	M25x1.5
33	1 1 1 1 1 1	ST0 93 54-10	Tätning	Sealing 2X Ø6	Dichtung 2X Ø6	2X Ø6.0
34	1 1 1 1 1 1	ST0 31 45-11	Kabelförskr.	Conduit entry	Kabeldurchfür.	M 25x1,5
35	1 1 1 1 1 1	ST0 26 64-03	Mutter	Nut	Mutter	M20x1.5
36	1 1 1 1 1 1	ST0 31 45-10	Kabelförskr.	Conduit entry	Kabeldurchfür.	M20x1.5
37	2 2 2 2 2 2	ST0 28 64-04	Mutter	Nut	Mutter	M25x1.5
38	1 1 1 1 1 1 1 1 1 1 1 1	ST0 93 54-10 ST0 93 54-13	Tätning Tätning	Sealing Sealing	Dichtung Dichtung	M25, 2X Ø6,0 4). M25, 3X Ø7,0
39	1 1 1 1 1 1	ST0 31 45-11	Kabelförskr.	Conduit entry	Kabeldurchfür.	M 25x1,5
40	1 1 1 1 1 1	ST0 92 25-00	Fäste tak kpl.	Bracket cpl. top	Bügel kpl. Dach	
41	1 1 1 1 1 1 1 1 1 1 1 1	ST1 17 66-00 ST1 18 25-00	USB kontakt USB kabel	USB port USB cable	USB-Anschluss USB-Kabel	

- 1). Smart
4). Tillval mattemp.givare eller flödesmätare
Optional food temperature sensor or flow meter
Optionale Temperatursensor oder Durchflussmesserm
5). Med kyrilliska alfabet
6). T.o.m. 2021.49
7). F.o.m. 2021.50
8). Smart TOP

- 2). Smart Variomix
To 2021.49
From 2021.50

- 3). Smart Promix®
Mit Kyrillische Alphabet
Zu 2021.49
Ab. 2021.50

Fet stil = Ändring
Bold print = Change
Fettdruck = Änderung

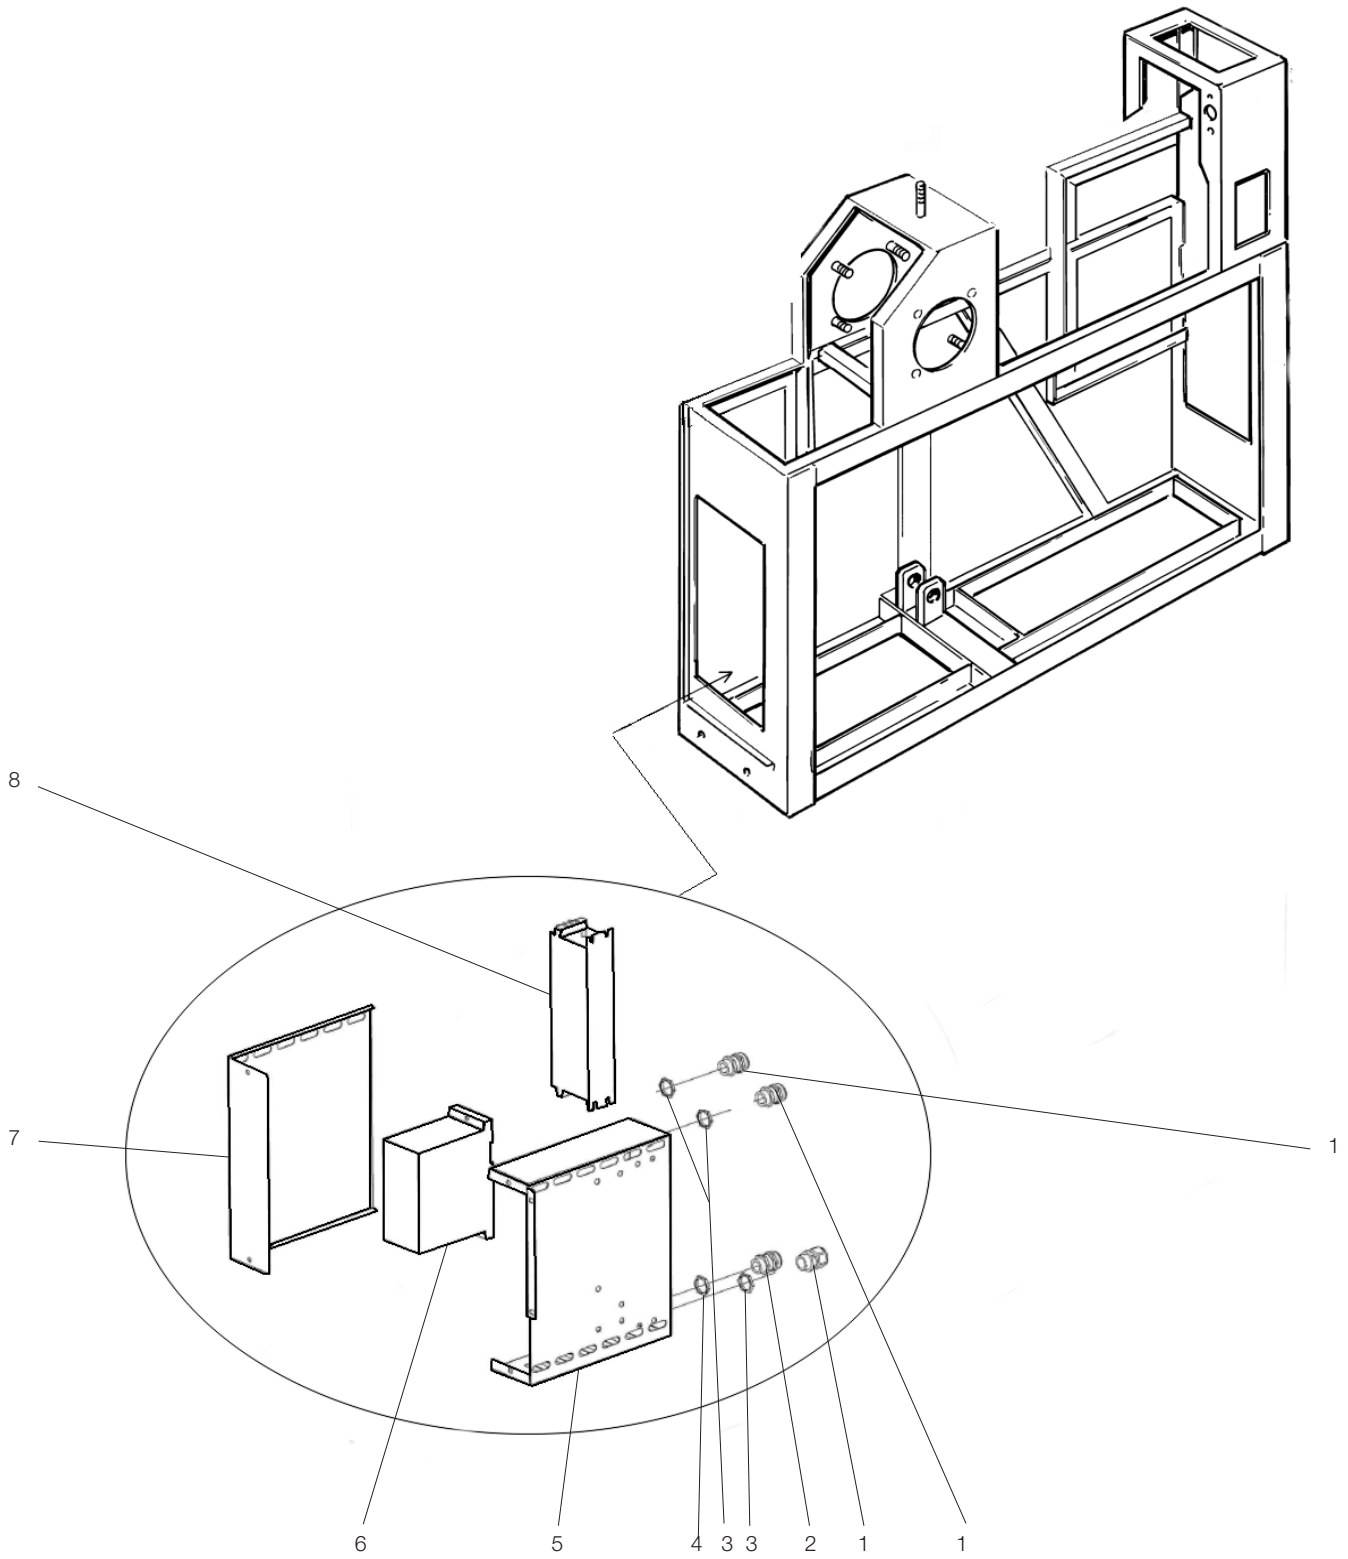


ILLUSTRATION 21786

Frekvensomformare
Frequency converter
Frequenzumformer

Illustration 21786

Utgåva
Edition
Ausgabe
3

Månad
Month
Monat
04

År
Year
Jahr
2022

Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.
	[[[[[[	50L 80L 100L 150L 200L 300L	ABB			
1	3 3 3 3 3 3	ST0 36 56-02	Genomföring	Inlet	Durchführung	M20x1.5 EMC
2	1 1 1 1 1 1	ST0 36 56-03	Genomföring	Inlet	Durchführung	M25x1.5 EMC
3	3 3 3 3 3 3	ST0 28 64-03	Mutter	Nut	Mutter	M20x1.5
4	1 1 1 1 1 1	ST0 28 64-03	Mutter	Nut	Mutter	M20x1.5
5	1 1 1 1 1 1	ST0 67 52-00	Avskärmning	Shield	Abschirmung	1). 2).
6	1 1 - - - -	ST0 99 93-10	Frekvensomformare	Frequency converter	Frequenzumformer	1). 5).
	- - 1 1 - -	ST0 71 27-14	Frekvensomformare	Frequency converter	Frequenzumformer	1). 3).
	- - - - 1 1	ST0 71 27-16	Frekvensomformare	Frequency converter	Frequenzumformer	1). 3).
	- - 1 1 - -	ST0 71 27-15	Frekvensomformare	Frequency converter	Frequenzumformer	2). 3).
	- - - - 1 1	ST0 71 27-17	Frekvensomformare	Frequency converter	Frequenzumformer	2). 5).
	1 1 - - - -	ST1 32 00-10	Frekvensomformare	Frequency converter	Frequenzumformer	1). 6).
	- - 1 1 - -	ST1 32 00-20	Frekvensomformare	Frequency converter	Frequenzumformer	1). 4).
	- - - - 1 1	ST1 32 00-22	Frekvensomformare	Frequency converter	Frequenzumformer	1). 4).
	- - 1 1 - -	ST1 32 00-21	Frekvensomformare	Frequency converter	Frequenzumformer	2). 4).
	- - - - 1 1	ST1 32 00-30	Frekvensomformare	Frequency converter	Frequenzumformer	2). 6).
7	1 1 1 - - -	ST0 68 57-00	Lock	Lid	Deckel	
	- - - 1 1 1	ST0 68 57-01	Lock	Lid	Deckel	
8	1 1 1 1 1 1	ST0 71 28-00	Filter	Filter	Filter	1). 2). 3).5).

Fet stil = Ändring
Bold print = Change
Fettdruck = Änderung

- 1). Smart Variomix
- 2). Smart Promix®
- 3). T.o.m 2022 Vecka 19
- 4). Fr.o.m 2022 Vecka 20
- 5). T.o.m 2022 Vecka 29
- 6). Fr.o.m 2022 Vecka 30

To 2022 Week 19	Zu 2022 vochen 19
From 2022 Week 20	Ab. 2022 vochen 20
To 2022 Week 29	Zu 2022 vochen 29
From 2022 Week 30	Ab. 2022 vochen 30

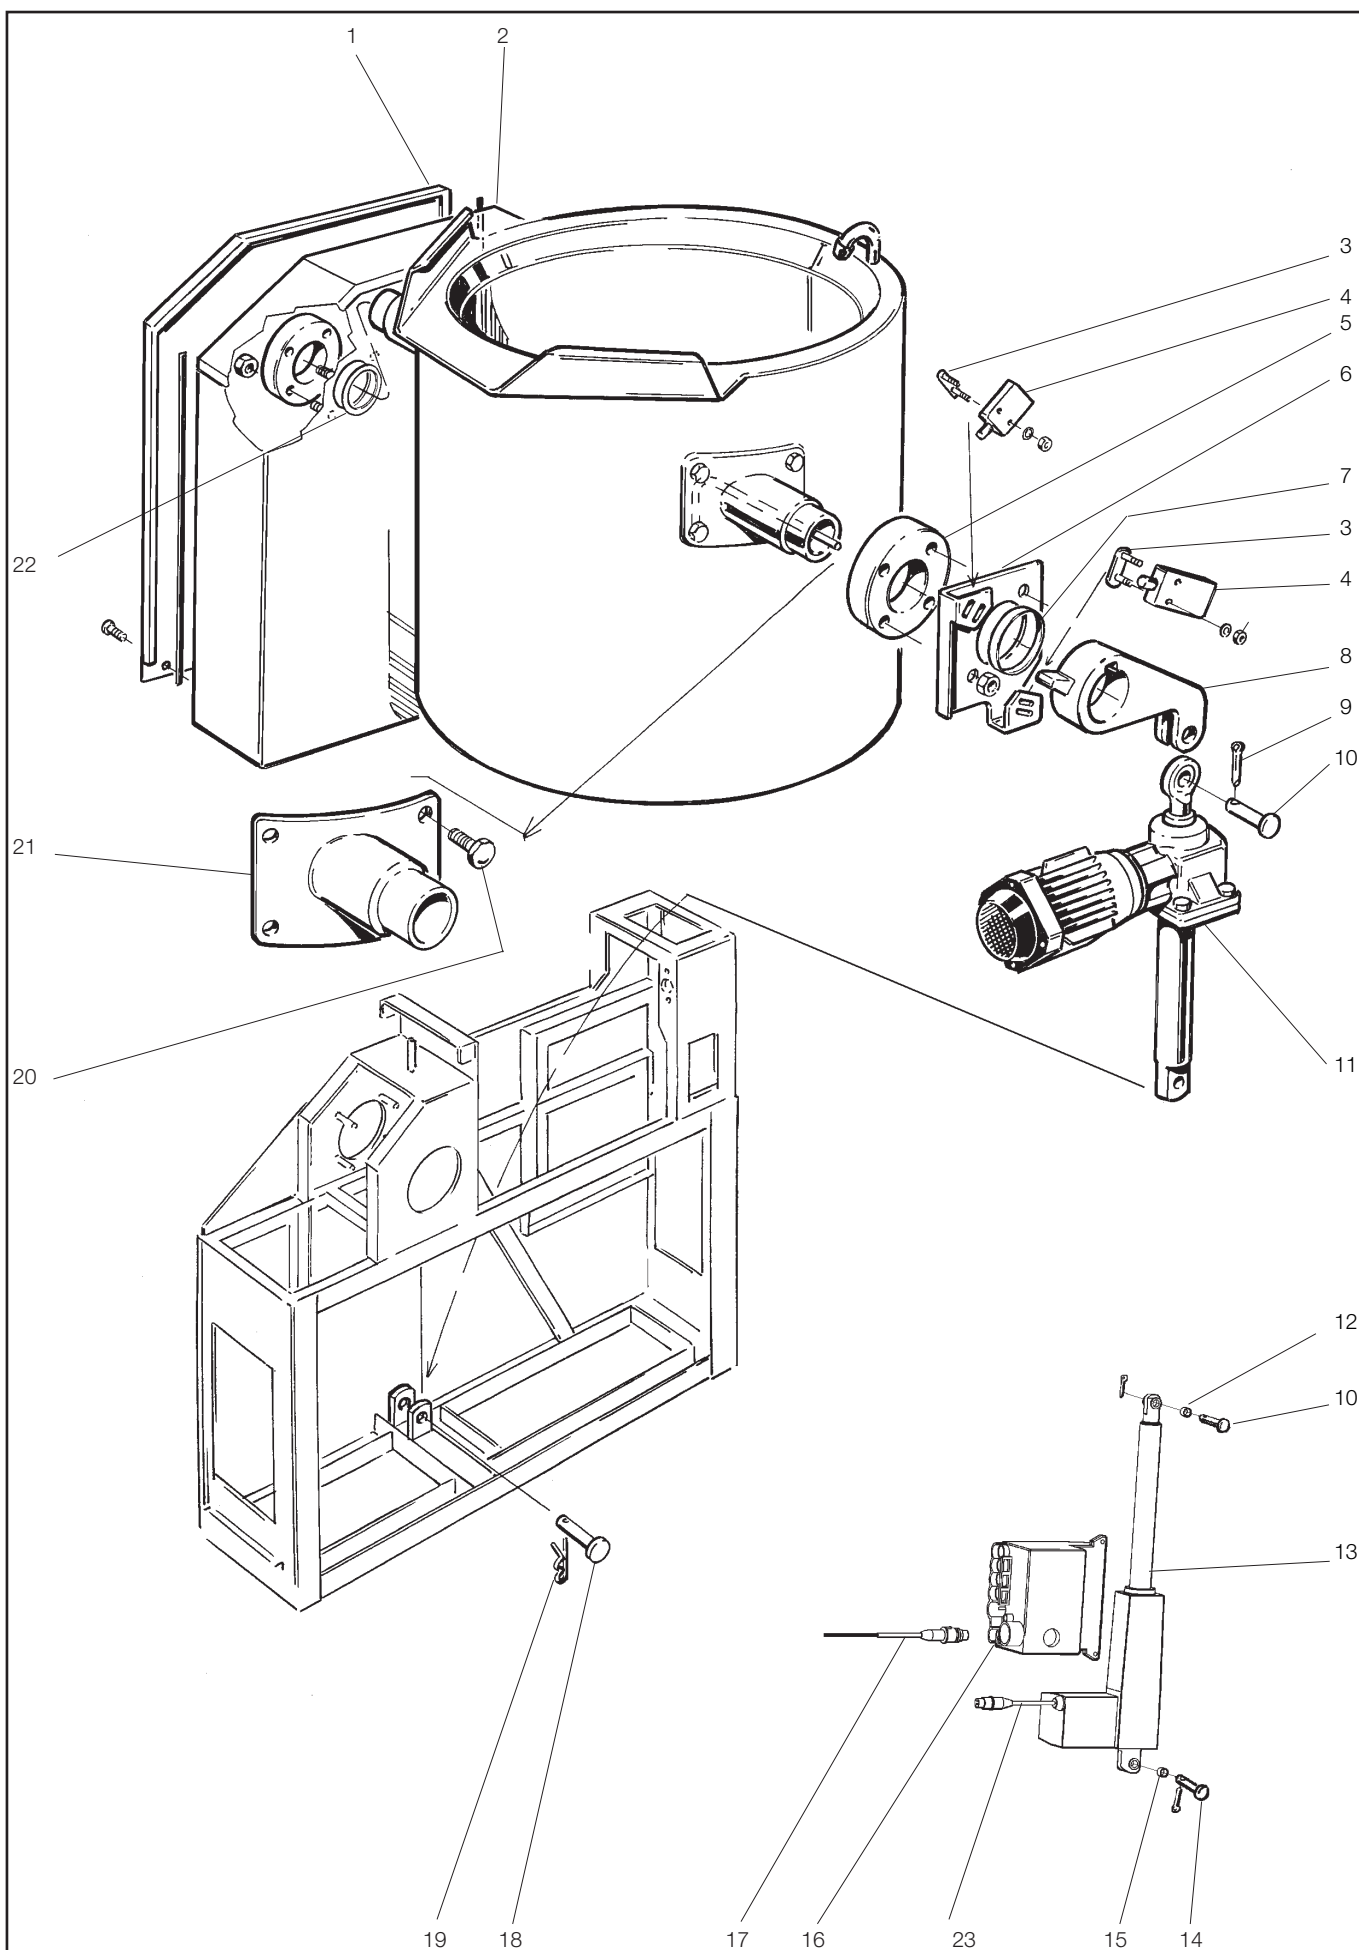


ILLUSTRATION 21801

Kärl+Tippning+Vänsterpelare
Vessel+Tilting +Left column
Kessel+Kippen +Säule links

Illustration 21801

Utgåva
Edition
Ausgabe
3

Månad
Month
Monat
04

År
Year
Jahr
2022

Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.
	[[[[[[[	50L 80L 100L 150L 200L 300L				
1	1 1 1 1 1 1	ST1 03 19-00	Sida, vänster pelare	Side, left column	Seite, links Säule	
2	1 1 1 1 1 1	ST1 03 13-00	Stativ, vänster pelare	Stand, left column	Gestell, links Säule	
3	2 2 2 2 2 2	428 08 00-00	Mutterplatta	Nute plate	Mutterplatte	
4	2 2 2 2 2 2	428 10 96-00	Gränslägesbrytare	End limit switch	Endschalter	
5	2 2 2 2 2 2	ST0 34 62-00	Flänslager	Flange bearing	Flanschlager	
6	1 1 1 - - - - - - 1 1 1	ST1 03 08-00 ST1 07 38-00	Gränslägeskonsol Gränslägeskonsol	Bracket Bracket	Konsole Konsole	
7	1 1 1 1 1 1	428 11 80-00	Distansring	Spacer ring	Distanzring	
8	1 1 1 - - - - - - 1 1 1	ST1 03 12-00 428 13 57-00	Hävarm Hävarm	Lever Lever	Hebel Hebel	
9	2 2 2 - - - - - - 1 1 1	721 61 87-40 721 62 16-40	Saxpinne Saxpinne	Dowel Dowel	Splint Splint	
10	1 1 1 - - - - - - 1 1 1	721 84 60-01 721 86 74-01	Bult Bult	Bolt Bolt	Bolzen Bolzen	
11	- - - 1 1 1	ST1 07 34-00	Domkraft	Lift jack	Schraubwinde	
12	1 1 1 - - -	ST0 93 19-00	Lager	Bearing	Lager	
13	1 1 1 - - - 1 1 1 - - -	ST1 05 17-00 ST1 30 53-00	Ställdon Ställdon	Lift jack Lift jack	Schraubewinde Schraubewinde	1). 2).
14	1 1 1 - - -	721 84 64-01	Bult	Bolt	Bolzen	
15	1 - - - - -	ST0 61 57-00	Lager	Bearing	Lager	
16	1 1 1 - - - 1 1 1 - - - 1 1 1 - - -	ST0 61 54-00 ST1 33 91-00 ST1 30 49-00	Ellåda Ellåda Ellåda	Connection box Connection box Connection box	Elektr. Schrank Elektr. Schrank Elektr. Schrank	1). 2). 3). 2).
17	1 1 1 - - - 1 1 1 - - -	ST0 61 55-00 ST1 32 39-00	Kabel Kabel (till kretskort)	Cable Cable (to effect card)	kabel kabel (zu effektKarte)	1). 2).
18	- - - 1 1 1	721 86 80-01	Bult	Bolt	Bolzen	
19	- - - 1 1 1	721 68 03-53	Hårnnålssprint	Cotter pin	Splint	
20	8 8 8 8 8 8	ST1 05 16-00	Skruv	Screw	Schraube	

1). T.o.m. 2021.49

To 2021.49

Zu 2021.49

2). F.o.m. 2021.50

From 2021.50

Ab. 2021.50

3). Utbytes KIT med Ställdon för ST0 61 54-00

Replacement KIT wiht lift jaket for ST0 61 54-00

Ersatz-KIT mit Schraubewinde zu ST0 61 54-00

Fet stil = Ändring

Bold print = Change

Fettdruck = Änderung

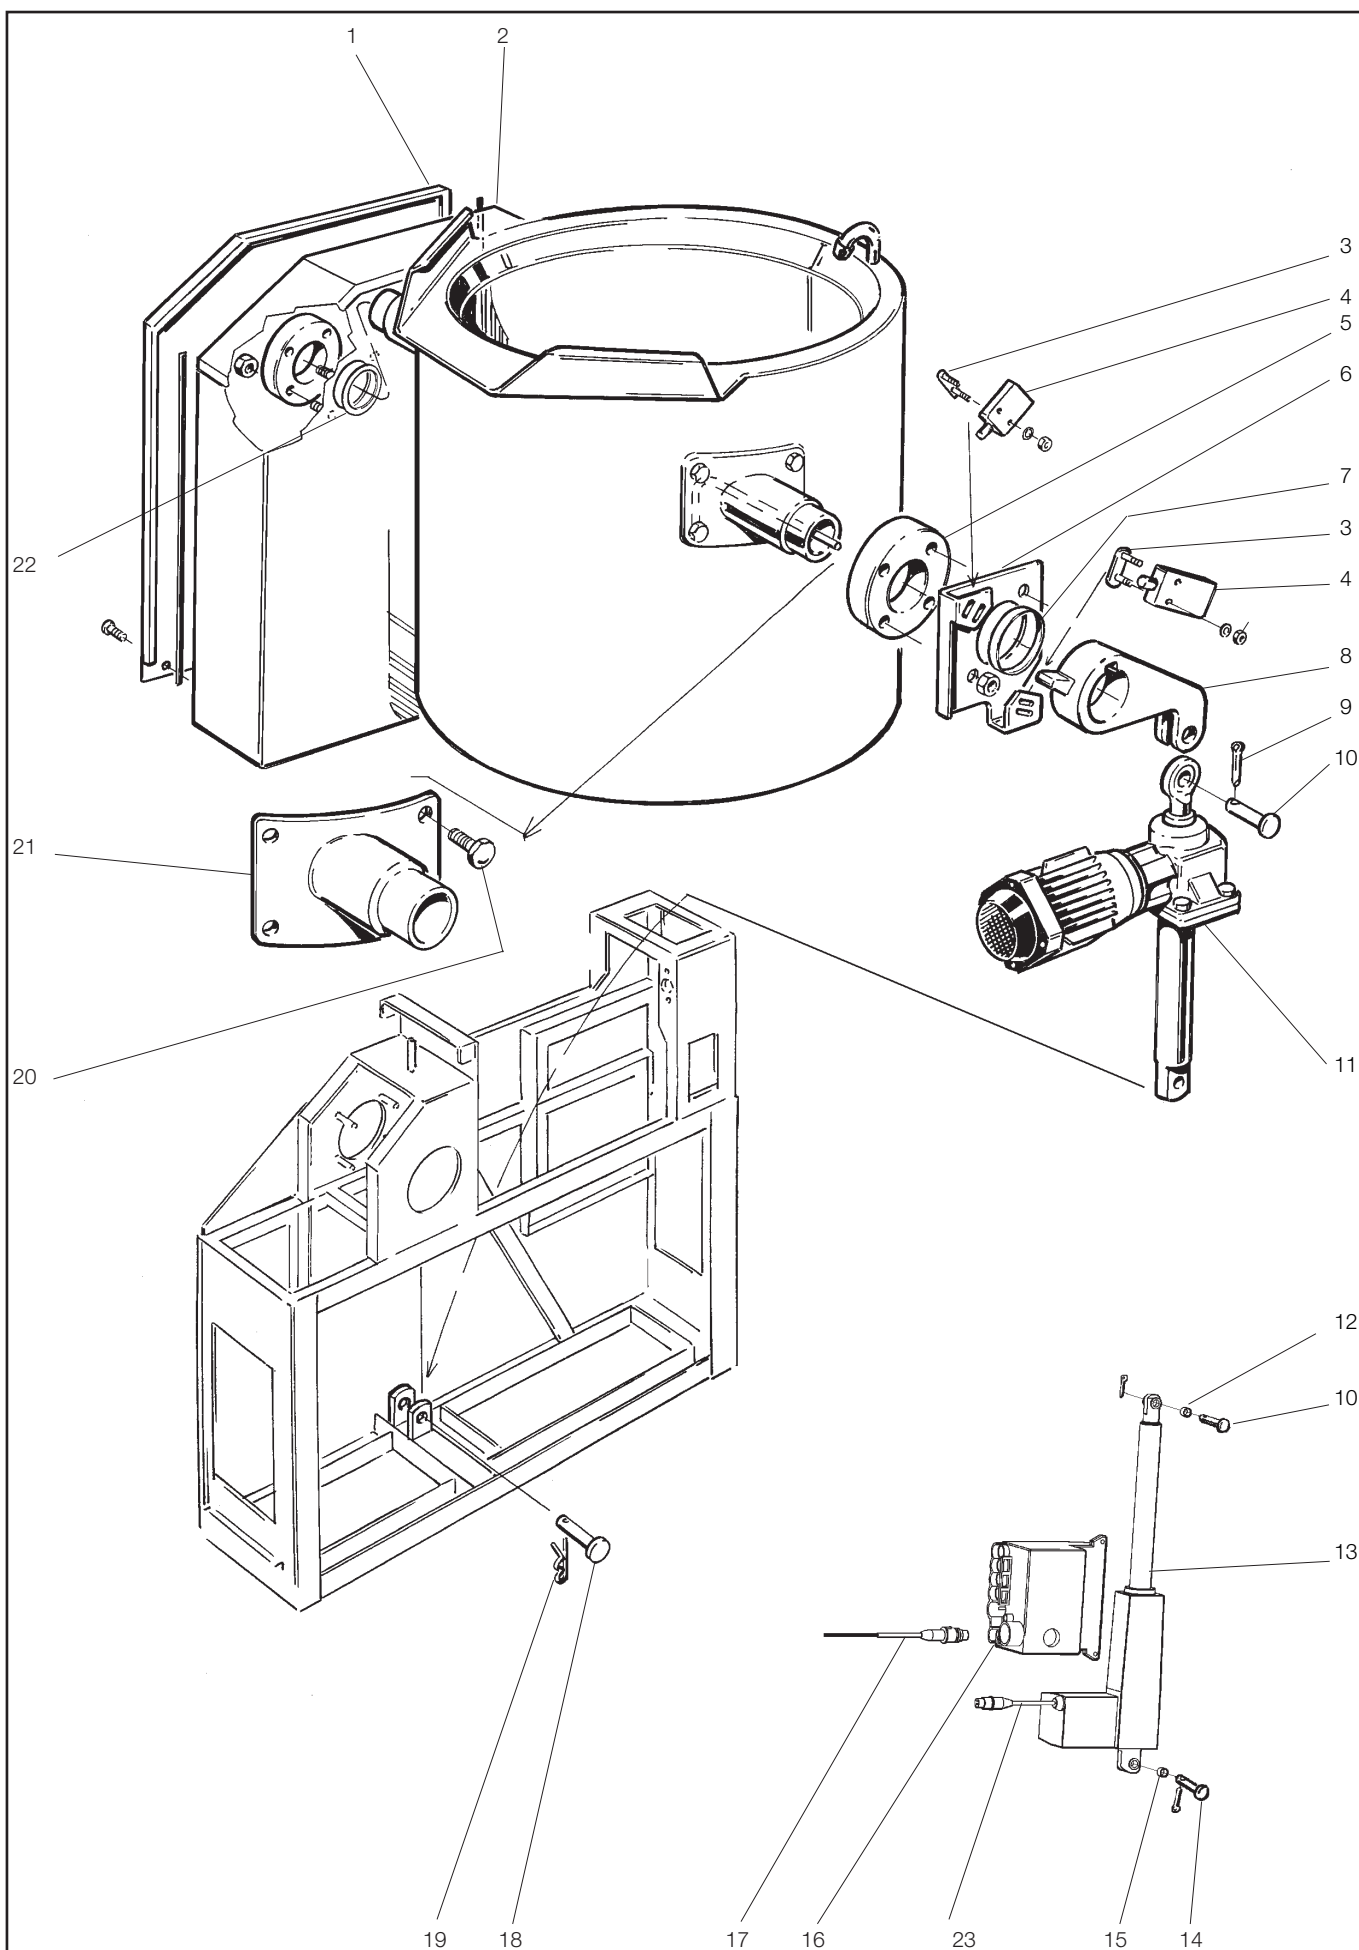


ILLUSTRATION 21801

Kärl+Tippning+Vänsterpelare
Vessel+Tilting +Left column
Kessel+Kippen +Säule links

Illustration 21801

Utgåva
Edition
Ausgabe
3

Månad
Month
Monat
04

År
Year
Jahr
2022

Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.
21	[	50L				
	[	80L				
	[	100L				
	[	150L				
	[	200L				
	[	300L				
	1 - - - -	ST1 03 41-00	Axel, höger	Shaft, right	Asche, recht	
	- 1 1 - - -	ST1 03 41-01	Axel, höger	Shaft, right	Asche, recht	
	- - - 1 - -	ST1 03 41-02	Axel, höger	Shaft, right	Asche, recht	
	- - - - 1 -	ST1 03 41-03	Axel, höger	Shaft, right	Asche, recht	
	- - - - - 1	ST1 03 41-04	Axel, höger	Shaft, right	Asche, recht	
	1 - - - - -	ST1 03 42-00	Axel, vänster	Shaft, left	Asche, links	
	- 1 1 - - -	ST1 03 42-01	Axel, vänster	Shaft, left	Asche, links	
	- - - 1 - -	ST1 03 42-02	Axel, vänster	Shaft, left	Asche, links	
	- - - - 1 -	ST1 03 42-03	Axel, vänster	Shaft, left	Asche, links	
	- - - - - 1	ST1 03 42-04	Axel, vänster	Shaft, left	Asche, links	
22	2 2 2 2 2 2	428 18 09-00	Tätning	Seal	Dichtung	
23	1 1 1 - - -	ST1 32 76-00	Kabel (till styrbox)	Cable (to con.box)	kabel (zu Elektr. Schrank)	2).

1). T.o.m. 2021.49

To 2021.49

Zu 2021.49

2). F.o.m. 2021.50

From 2021.50

Ab. 2021.50

3). Utbytes KIT med Ställdon för ST0 61 54-00

Replacement KIT wiht lift jaket for ST0 61 54-00

Ersatz-KIT mit Schraubewinde zu ST0 61 54-00

Fet stil = Ändring

Bold print = Change

Fettdruck = Änderung

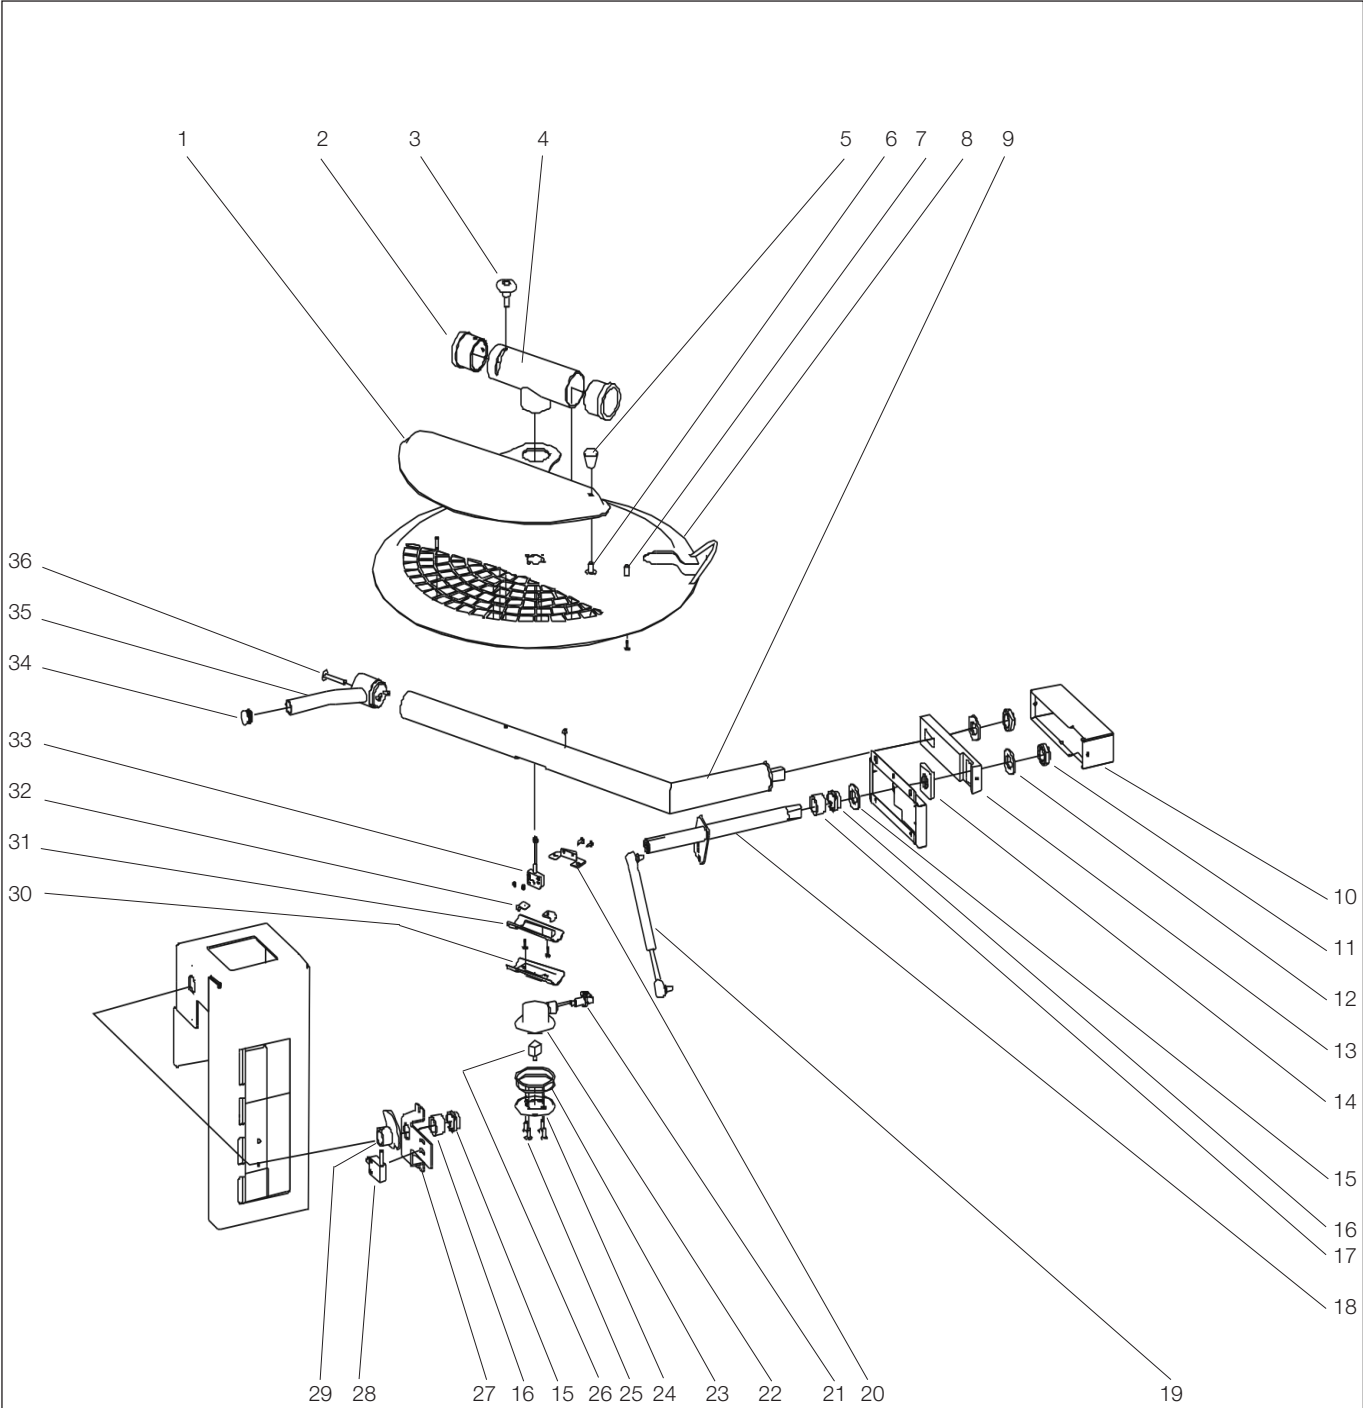


ILLUSTRATION 21787

Illustration 21787						Utgåva	Månad	År
T.o.m. 2017, vecka 39,						Edition	Month	Year
valid to 2017, week 39,						Ausgabe	Monat	Jahr
Gilt zu 2017, Woche 39						4	07	2018
Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.		
	[[[[[[[	50L 80L 100L 150L 200L 300L						
1	1 - - - - - - 1 1 - - - - - - 1 - - - - - - 1 - - - - - - 1	ST0 95 75-00 ST0 95 76-00 ST0 95 77-00 ST0 95 78-00 ST0 95 79-00	Täcklock Täcklock Täcklock Täcklock Täcklock	Cover Cover Cover Cover Cover	Deckel Deckel Deckel Deckel Deckel			
2	2 2 2 2 2 2	ST0 95 52-00	Bussning	Bushing	Buchse			
3	1 1 1 1 1 1	ST0 95 37-00	Stjärnvred	Hand knob	Hand knob			
4	1 1 1 1 1 1	ST0 95 45-00	T-gångjärn	Hinge	Scharniere			
5	1 1 1 1 1 1	ST0 95 36-00	Handtagsknopp	Handle knob	Kurbelknauft			
6	1 1 1 1 1 1	552 30 01-43	Skruv	Screw	Schraube	LSKS M8x16		
7	1 1 1 1 1 1	ST0 98 37-01	Stopp pinne	Stop stud	Stopp Stift			
8	1 - - - - - - 1 1 - - - - - - 1 - - - - - - 1 - - - - - - 1	ST0 93 95-00 ST0 93 96-00 ST0 93 97-00 ST0 93 98-00 ST0 93 99-00	Gallerlock kpl. Gallerlock kpl. Gallerlock kpl. Gallerlock kpl. Gallerlock kpl.	Grid lid compl. Grid lid compl. Grid lid compl. Grid lid compl. Grid lid compl.	Gitterdeckel kompl. Gitterdeckel kompl. Gitterdeckel kompl. Gitterdeckel kompl. Gitterdeckel kompl.			
9	1 - - - - - - 1 1 - - - - - - 1 - - - - - - 1 - - - - - - 1	ST0 95 66-00 ST0 95 67-00 ST0 95 68-00 ST0 95 69-00 ST0 95 70-00	Lockarm Lockarm Lockarm Lockarm Lockarm	Lid arm Lid arm Lid arm Lid arm Lid arm	Deckelarm Deckelarm Deckelarm Deckelarm Deckelarm			
10	1 1 1 - - - - - - 1 1 1	ST0 95 34-00 ST0 95 35-00	Skyddskåpa Skyddskåpa	Protection cap Protection cap	Schutzkappe Schutzkappe	2). 3). 2). 3).		
11	2 2 2 2 2 2	731 43 28-40	Mutter	Nut	Mutter	ML6M 24x1,5 25x44		
12	2 2 2 2 2 2	734 11 98-09	Bricka	Washer	Scheibe			
13	1 1 1 - - - - - - 1 1 1	ST0 95 54-00 ST0 95 54-01	Länk Länk	link link	Verbindung Verbindung			
14	1 1 1 1 1 1	ST0 95 56-00	Bricka vertikal	washer vertical	washer vertikale	D10 T9		
15	1 1 1 1 1 1	ST0 18 56-00	Packning	Gasket	Dichtung			
16	2 2 2 2 2 2	428 10 58-00	Glidlagerhus	Plain bearing housing	Gleitlagerhausa			
17	2 2 2 2 2 2	428 11 19-00	Glidlager	Plain bearing	Gleitlager			
18	1 1 1 - - - - - - 1 1 1	ST0 95 13-00 ST0 95 12-00	Vridaxel Vridaxel	Torsion shaft Torsion shaft	Drehashe Drehashe			
1). Smart 2). Smart Variomix 3). Smart Promix® 4). T.o.m. 2015 vecka 23 To 2015 week 23 Zu 2015 , vochen 23 5). Fr.o.m. 2015 vecka 24 From 2015 week 24 Ab. 2015 , vochen 24 6). T.o.m. 2018 vecka 22 To 2018 week 22 Zu 2018 , vochen 22 7). Fr.o.m. 2018 vecka 23 From 2018 week 23 Ab. 2018 , vochen 23								
Fet stil = Ändring Bold print = Change Fettdruck = Änderung								

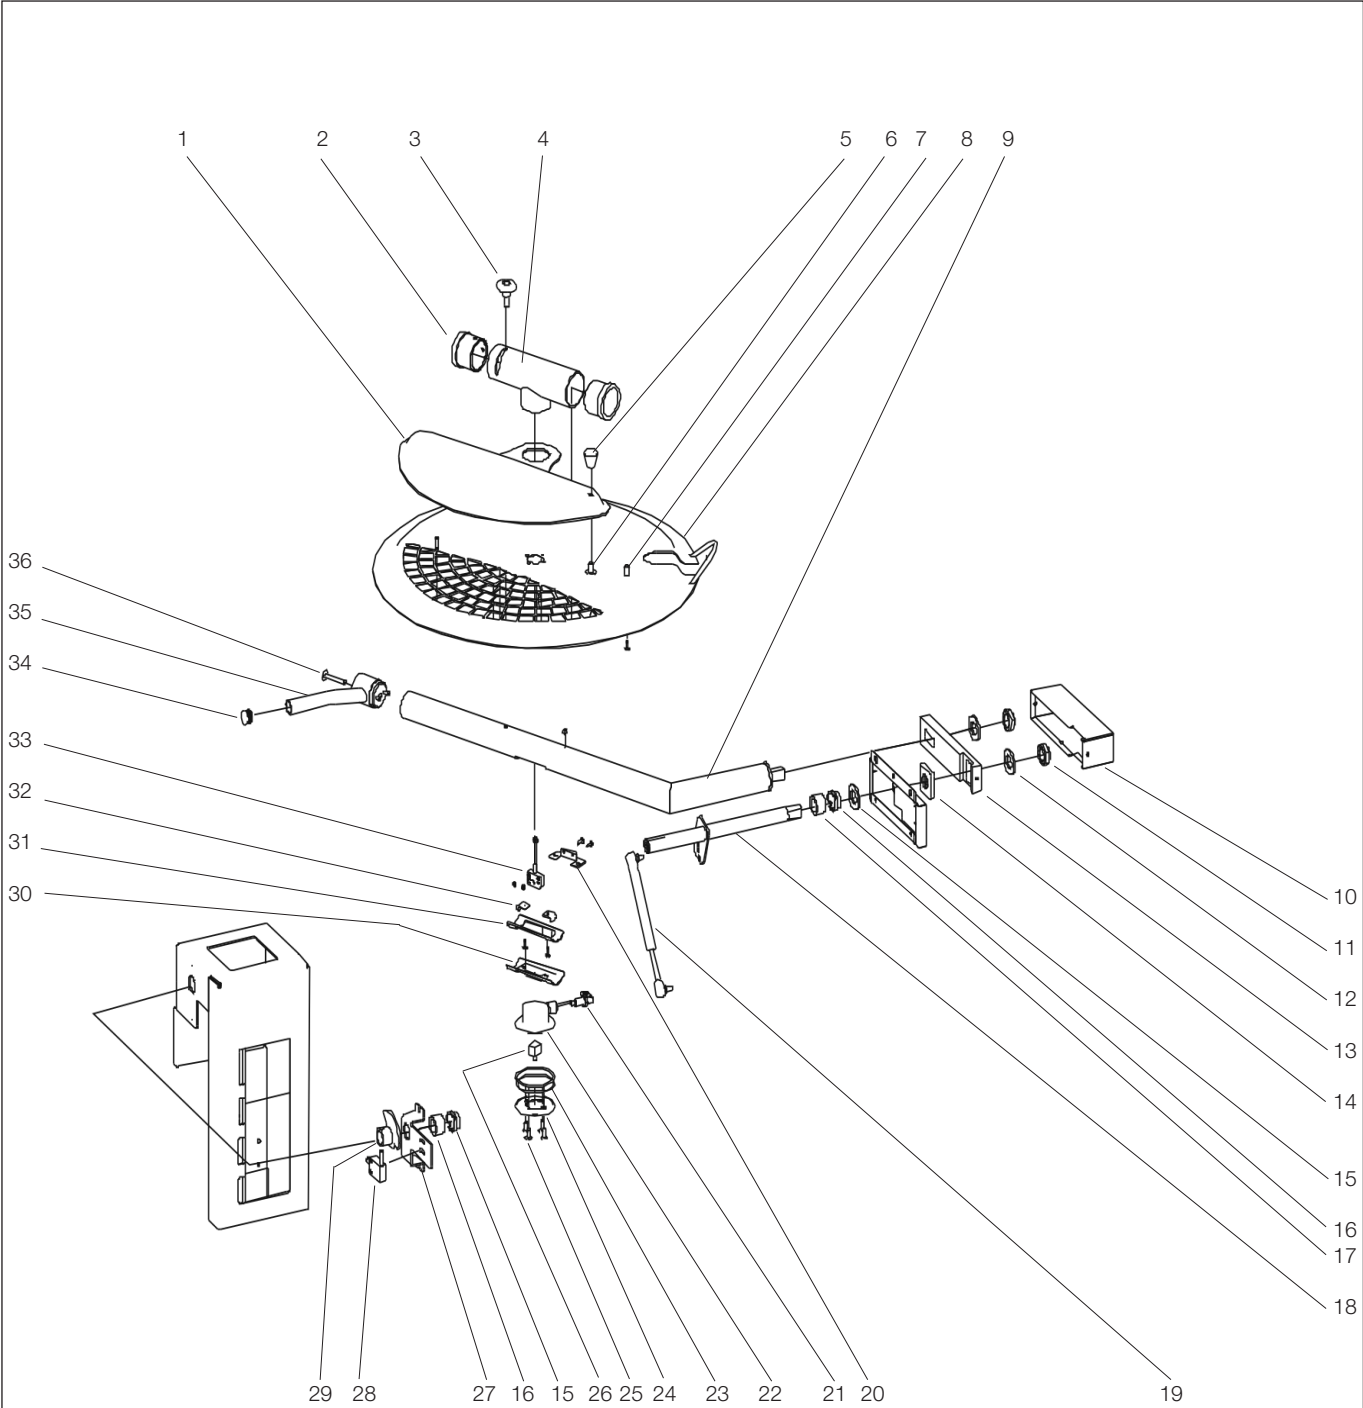


ILLUSTRATION 21787

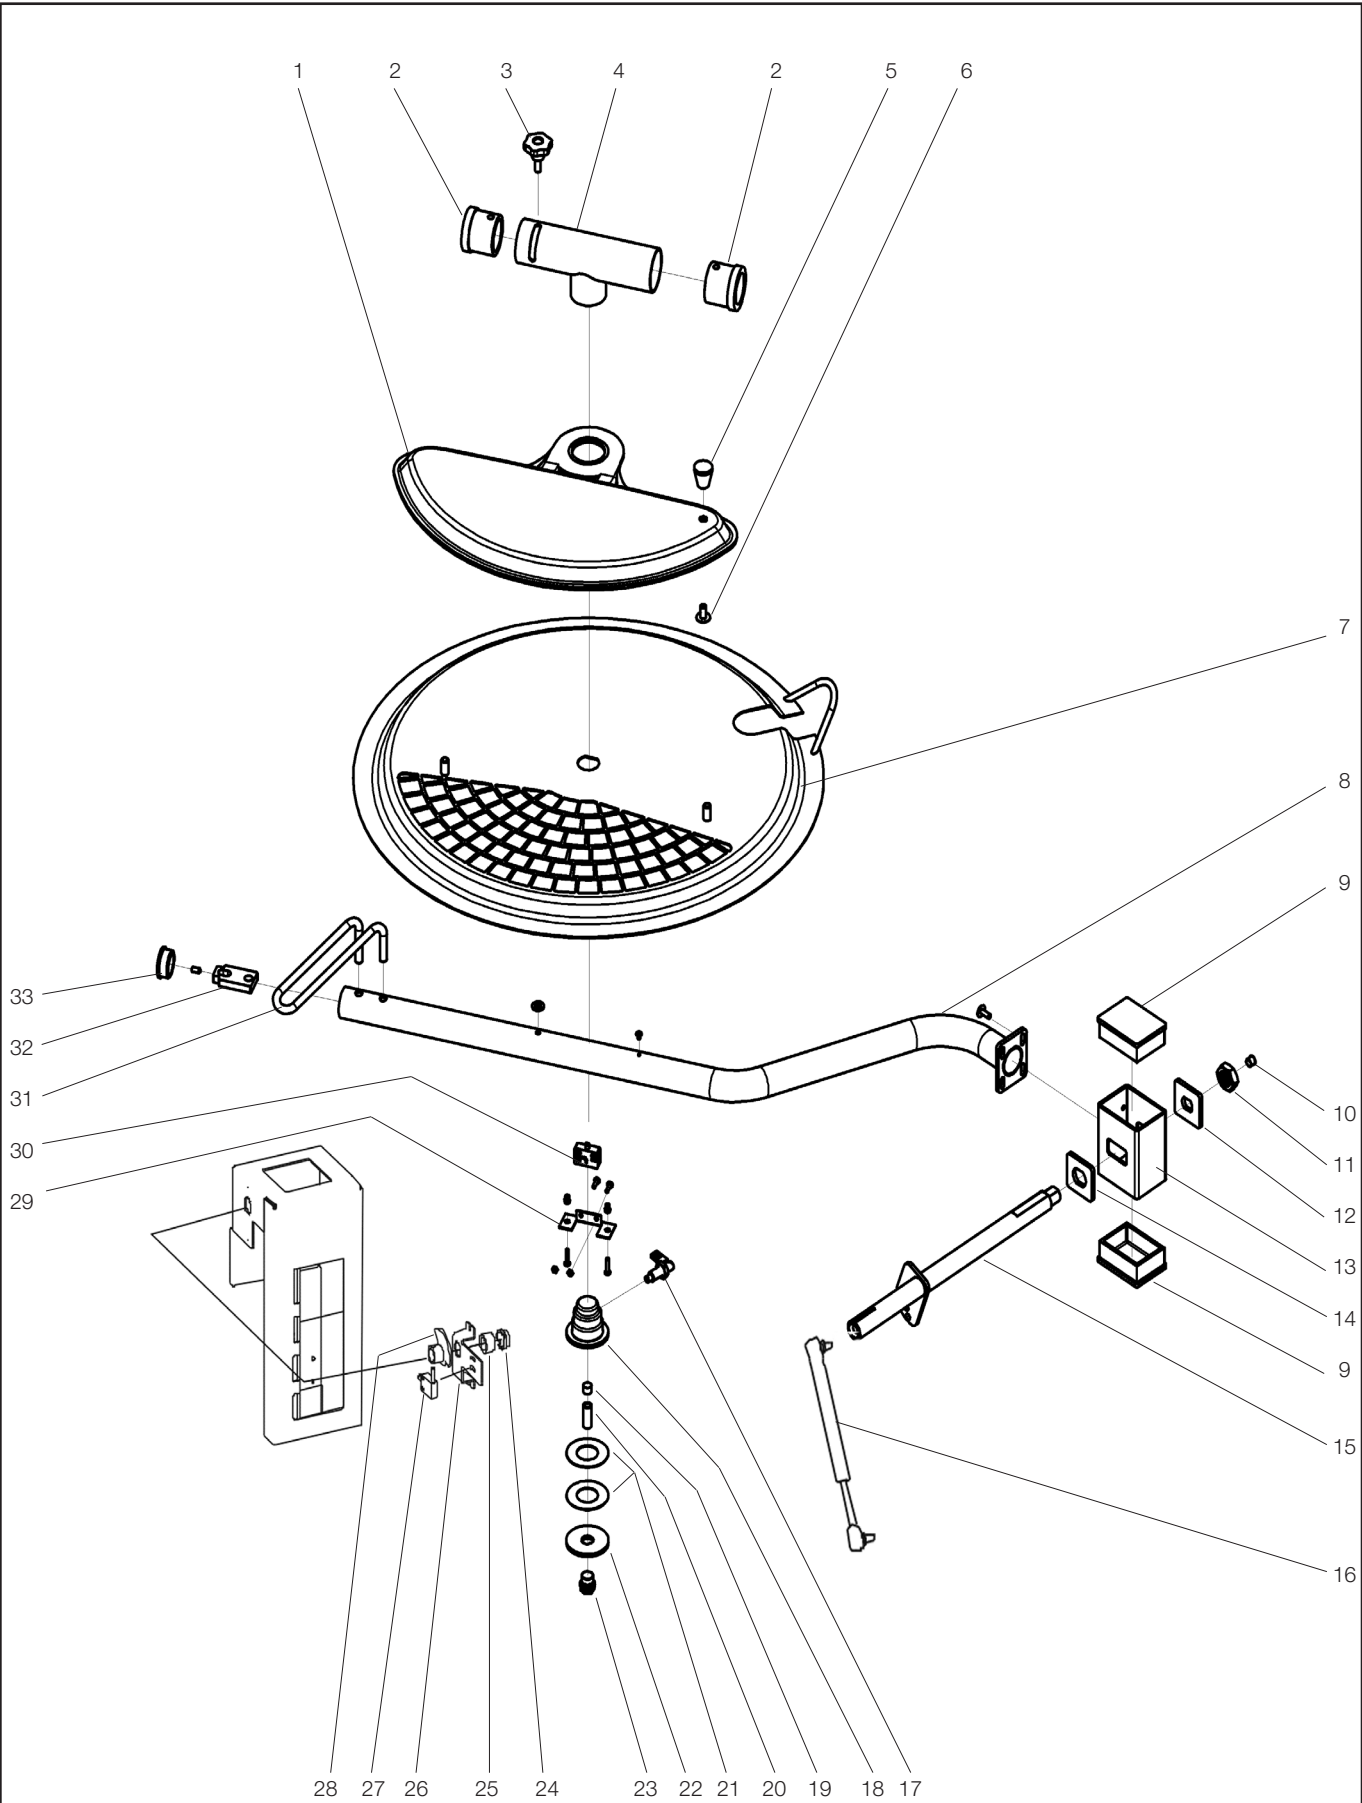


ILLUSTRATION 21820

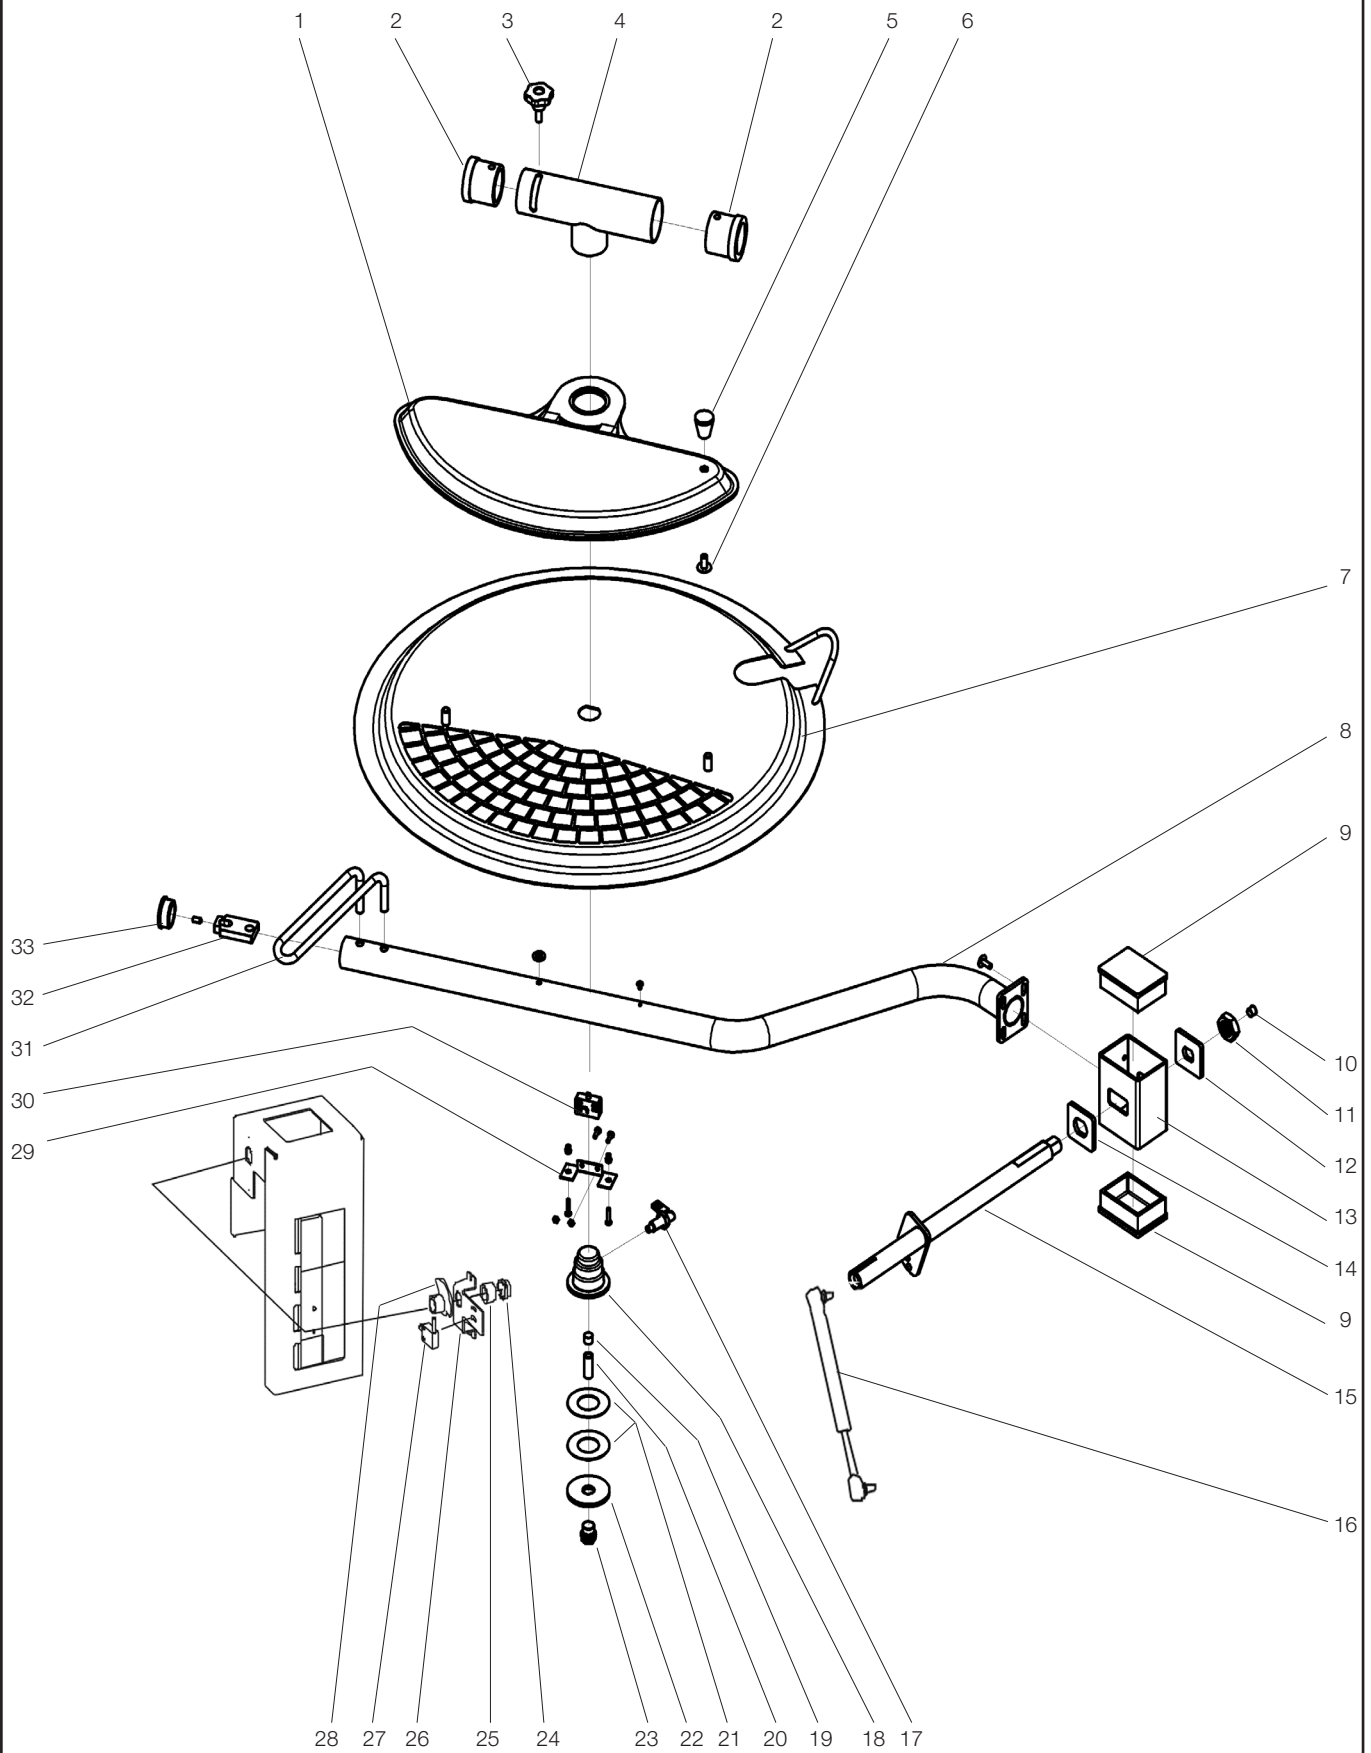


ILLUSTRATION 21820

Lock kpl Lid compl. Deckel kompl. Illustration 21820 Fr.o.m. 2017, vecka 40, valid from 2017, week 40, Gilt vom 2017, Woche 40 Utgåva Edition Ausgabe 3 Månad Month Monat 04 År Year Jahr 2022						
Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.
	[[[[[[	50L 80L 100L 150L 200L 300L				
17	1 1 1 1 1 1	ST0 95 38-01	Inställningsbult	Adjusting bolt	Einstellungsbolzen	M12x1.5
18	1 1 1 1 1 1	ST1 16 02-00	Nav, övre del	Hub, upper part	Nabe, Oberteil	
19	1 1 1 1 1 1	ST0 41 99-00	Magnet	Magnet	Magnet	Neodyn Ø12
20	1 1 1 1 1 1	ST1 16 05-00	Distans	Distance	Distanz	Ø12, L=30 7).
	1 1 1 1 1 1	ST1 16 05-00	Fjäder	Spring	Druckfeder	5).
21	2 2 2 2 2 2	ST1 16 04-00	Packning, Nav	Adjusting bolt	Stellbolzen	M12
22	1 1 1 1 1 1	ST1 16 03-00	Fästplatta, Nav	Mounting plate, hub	Montageplatte, Nabe	
23	1 1 1 1 1 1	ST1 19 39-00	Plugg	Plug	Pfropf	M16
24	1 1 1 1 1 1	ST0 18 56-00	Packning	Gasket	Dichtung	D10 T9
25	1 1 1 1 1 1	428 10 58-00	Glidlagerhus	Plain bearing housing	Gleitlagerhause	
26	1 1 1 1 1 1	ST0 68 19-00	Fäste	Attachment	Befestigung	2). 3).
27	1 1 1 1 1 1	ST0 99 53-00	Gränslägesbrytare	End limit switch	Endschalter	2). 3). L=2m
28	1 1 1 1 1 1	ST0 67 68-10	Nock, Halvmåne	Plate Cam	Führungsnocken	2). 3).
29	1 1 1 1 1 1	ST1 16 08-00	Fäste, magnet	Attachment, magnet	Befestigung, magnet	
30	1 1 1 1 1 1	ST0 95 39-00	Magnetbrytare	Magnetic switch	Magnetschalter	2). 3).
31	1 1 1 - - - - - - 1 1 - - - - - - 1	ST1 19 45-00 ST1 18 40-00 ST1 18 40-01	Handtag kpl. Handtag kpl. Handtag kpl.	Handle cpl. Handle cpl. Handle cpl.	Griff Kpl. Griff Kpl. Griff Kpl.	
32	1 1 1 - - - - - - 1 1 1	ST1 21 02-00 ST1 20 92-00	Spännbricka Spännbricka	Retaining plate Retaining plate	Spannscheibe Spannscheibe	

1). Smart

2). Smart Variomix

3). Smart Promix®

4). T.o.m. 2018 vecka 22

To 2018 week 22

Zu 2018 , vochen 22

5). Fr.o.m. 2018 vecka 23

From 2018 week 23

Ab. 2018 , vochen 23

6). Smart TOP

4). T.o.m. 2021 vecka 49

To 2021 week 49

Zu 2021 , vochen 49

5). Fr.o.m. 2021 vecka 50

From 2021 week 50

Ab. 2021 , vochen 50

Fet stil = Ändring

Bold print = Change

Fettdruck = Änderung

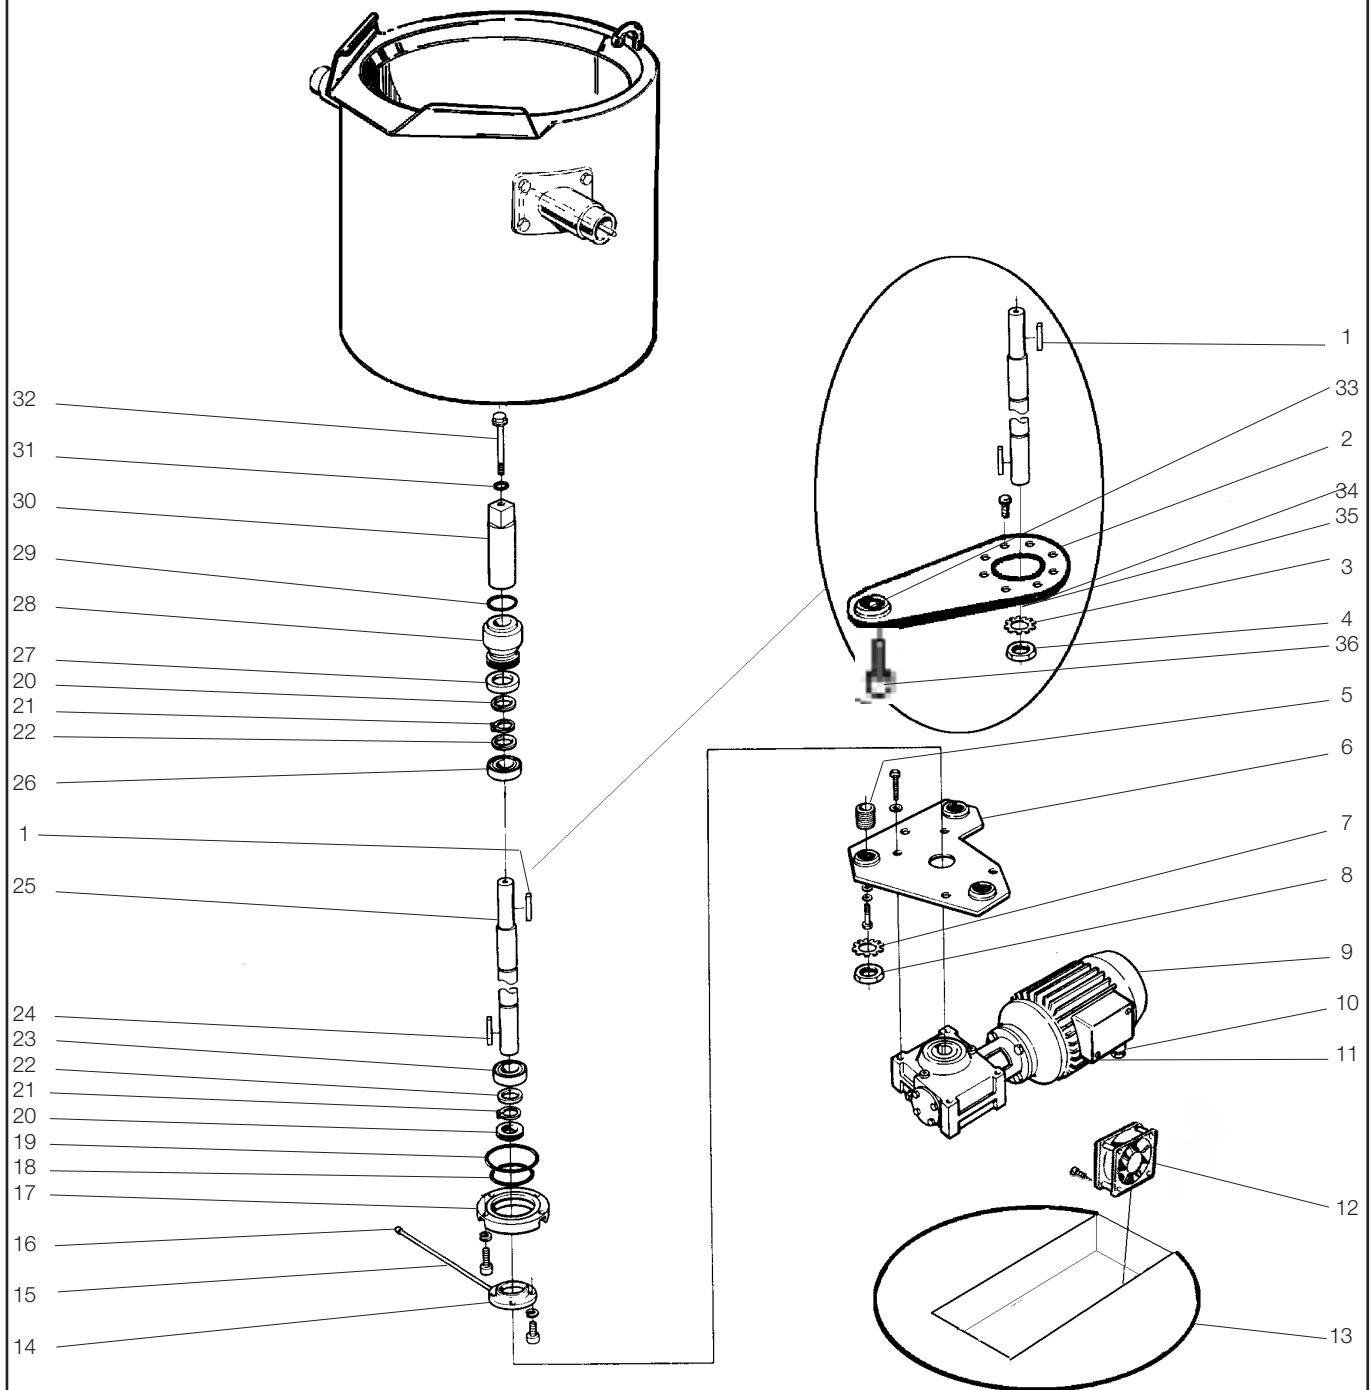


ILLUSTRATION 21788

Omrörare, motor och axel Agitator, motor and shaft Rührwerk, Motor und Achse			Illustration 21788			Utgåva Edition Ausgabe 5	Månad Month Monat 04	År Year Jahr 2022
Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.		
	[[[[[[	50L 80L 100L 150L 200L 300L						
1	1 1 1 1 - - - - - - 1 1	735 92 37-40 735 93 02-40	Kil Kil	Wedge Wedge	Keil Keil	1). 2). 1). 2).		
2	1 - - - - - - 1 1 1 - - - 1 1 1 - -	428 12 21-00 428 12 22-00 428 12 22-00	Momentstag Momentstag Momentstag	Moment support Moment support Moment support	Momentstutze Momentstutze Momentstutze	1). 1). 2). 5). 1). 2). 4).		
3	1 1 1 1 - -	735 21 18-90	Låsbricka	Locking washer	Sicherungsblech	1). 2).		
4	- - - - 1 1	732 51 18-30	Mutter	Nut	Mutter	1). 2).		
5	- - - - 3 3 - - - - 3 3	481 70 13-00 481 70 14-00	Bussning Muff	Bush Sleeve	Buchse Stutze	1). 2). 1). 2).		
6	- - - - 1 1	428 08 15-00	Motorfäste	Motor attachment	Motorbefestigung	1). 2).		
7	- - - - 3 3	735 21 23-90	Låsbricka	Locking washer	Sicherungsblech	1). 2).		
8	- - - - 3 3	732 51 23-30	Rundmutter	Round nut	Rundmutter	1). 2).		
9	1 - - - - - - 1 1 1 - - - 1 1 1 - - - - - - 1 1 - - - - 1 1	428 06 73-00 428 18 31-00 428 06 75-00 428 18 32-00 STO 94 89-00	Snäckväxel Snäckväxel Snäckväxel Snäckväxel Snäckväxel	Worm gear Worm gear Worm gear Worm gear Worm gear	Schneckengetriebe Schneckengetriebe Schneckengetriebe Schneckengetriebe Schneckengetriebe	1). 1). 2). 1). 2).		
10	- - - - 1 - - - - - - 1	428 13 01-05 428 13 01-05	Genomföring Genomföring	Inlet Inlet	Durchführung Durchführung	1). 2). 1). 2).		
11	1 1 1 1 1 1	428 12 74-00	Hylsa	Sleeve	Hülse	1). 2).		
12	- 1 1 1 1 1	STO 27 43-00	Fläkt	Fan	Gebläse	2).		
13	1 - - - - - - 1 1 - - - - 1 1 - - - - - - 1 - - - - - 1 - - - - - - 1 - - - - - 1 - - - - - 1 - - - - - - 1 - - - - - 1	428 09 57-00 428 09 53-00 428 09 58-00 428 09 54-00 428 09 59-00 428 09 55-00 428 09 60-00 428 09 56-00 428 09 61-00	Botten Botten Botten Botten Botten Botten Botten Botten Botten	Bottom Bottom Bottom Bottom Bottom Bottom Bottom Bottom Bottom	Boden Boden Boden Boden Boden Boden Boden Boden Boden	1). 3). 3). 1). 2). 3). 1). 2). 3). 1). 2). 3). 1). 2).		
14	1 1 1 1 - - - - - - 1 1	428 10 69-00 481 70 08-00	Lock Lock	Lid Lid	Deckel Deckel	1). 2). 1). 2).		
15	1 1 1 1 1 1	481 69 96-00	Rör	Pipe	Rohr	1). 2).		
16	1 1 1 1 1 1	63 50 44 07	Smörjnippel	Nipple	Nippel	1). 2).		
17	1 1 1 1 - - - - - - 1 1	491 41 74-00 481 67 05-00	Styrring Styrring	Guide Guide	Führung Führung	1). 2). 1). 2).		
18	1 1 1 1 - - - - - - 1 1	740 44 26-10 740 44 30-10	O-ring O-ring	O-ring O-ring	O-Ring O-Ring	1). 2). 1). 2).		
Fet stil = Ändring Bold print = Change Fettdruck = Änderung			1). Smart Variomix 4). Fr.o.m 2021 v41 5). T.o.m 2221 v40	2). Smart Promix® From 2021 Week 41 T0 2021 Week 40	3). Smart Ab.2021 Vochen 41 Zu. 2021 Vochen 40			

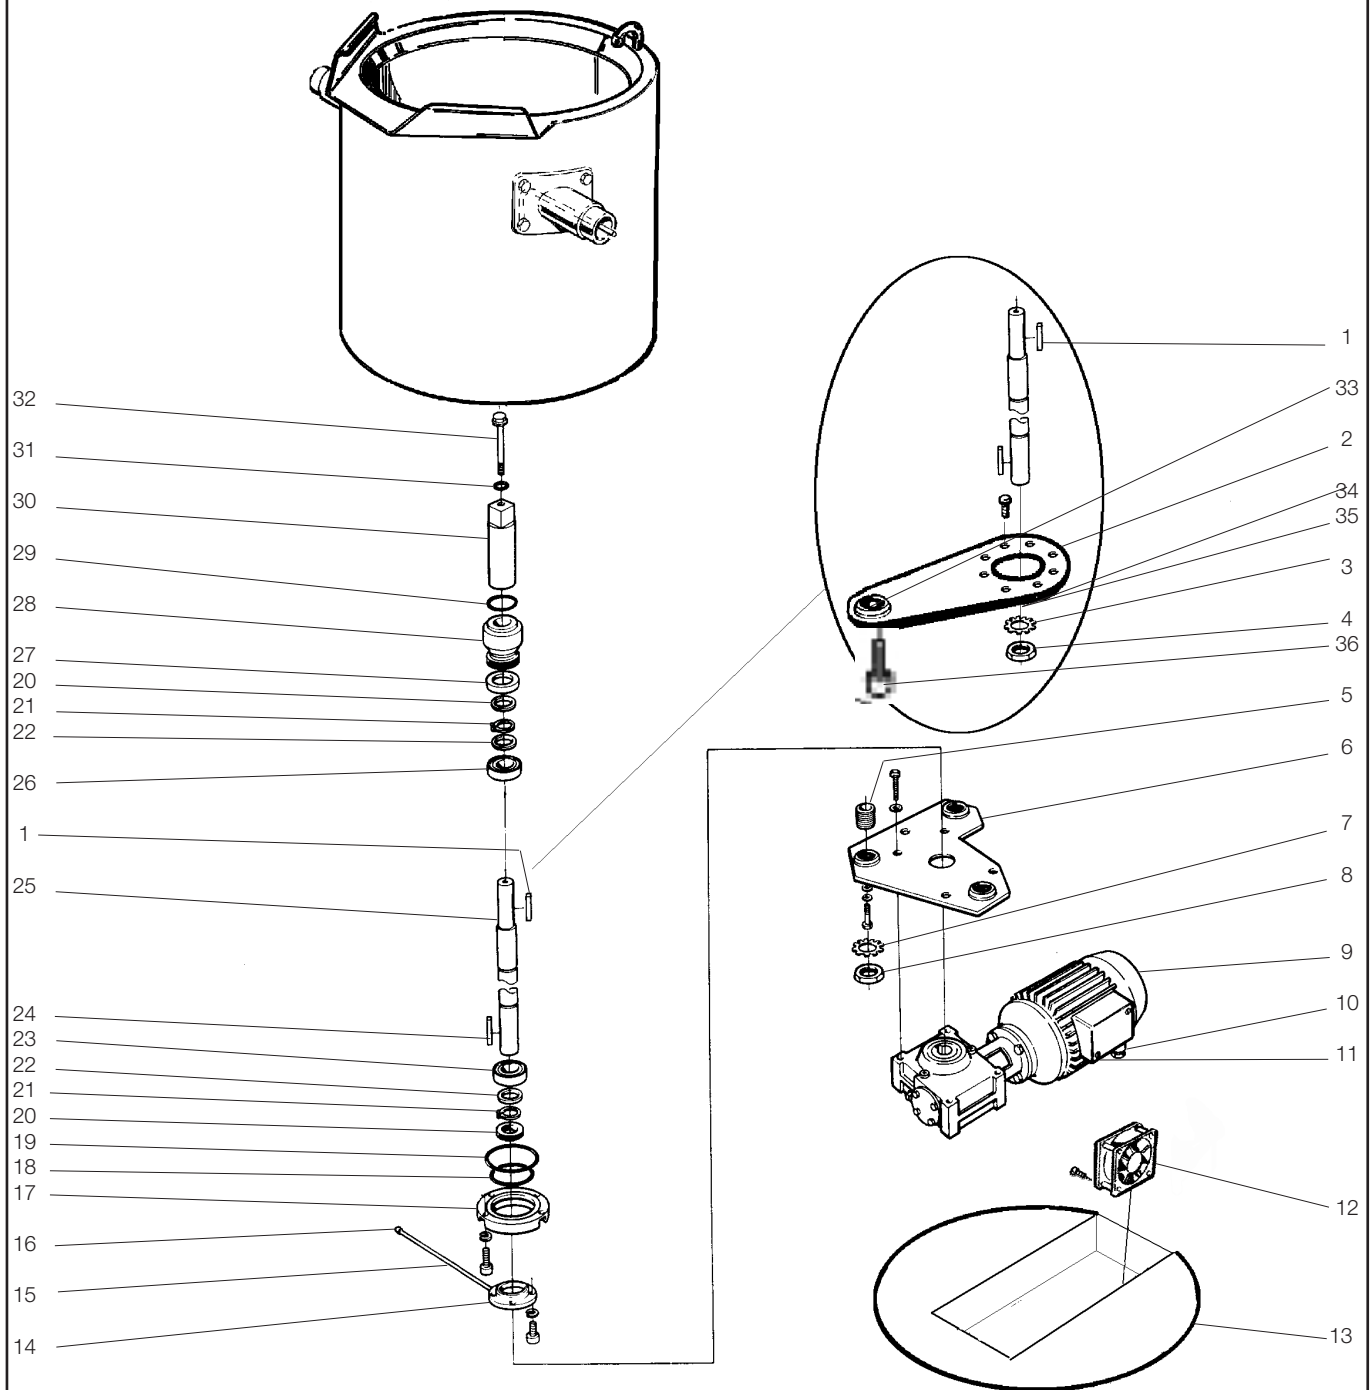


ILLUSTRATION 21788

Omrörare, motor och axel Agitator, motor and shaft Rührwerk, Motor und Achse			Illustration 21788			Utgåva Edition Ausgabe 5	Månad Month Monat 04	År Year Jahr 2022
Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.		
	[[[[[[	50L 80L 100L 150L 200L 300L						
19	1 1 1 1 - - - - - - 1 1	740 44 28-10 740 44 31-10	O-ring O-ring	O-ring O-ring	O-Ring O-Ring	1). 2). 1). 2).		
20	2 2 2 2 - - - - - - 2 2	740 51 56-04 740 51 69-04	Tättring Tättring	Sealing ring Sealing ring	Dichtungsring Dichtungsring	1). 2). 1). 2).		
21	1 1 1 1 - - - - - - 1 1	735 31 26-07 735 31 30-07	Spärring Spärring	Locking ring Locking ring	Führungsring Führungsring	1). 2). 1). 2).		
22	1 1 1 - - - - - - - 1 1	491 42 28-00 481 70 11-00	Distsansring Distsansring	Spacer ring Spacer ring	Distanzring Distanzring	1). 2). 1). 2).		
23	1 1 1 1 - - - - - - 1 1	552 22 65-01 738 22 06-15	Kullager Kullager	Ball bearing Ball bearing	Kugellager Kugellager	1). 2). 1). 2).		
24	1 1 1 1 - - - - - - 1 1	735 92 37-40 735 93 02-40	Kil Kil	Wedge Wedge	Keil Keil	1). 2). 1). 2).		
25	1 - - - - - - 1 1 1 - - - - - - 1 1 - - - - 1 1	ST0 93 42-00 ST0 93 45-00 ST0 93 43-00 ST0 93 44-00	Axel Axel Axel Axel	Shaft Shaft Shaft Shaft	Ashe Ashe Ashe Ashe	1). 1). 2). 1). 2).		
26	1 1 1 1 - - - - - - 1 1	552 22 65-00 738 21 06-00	Kullager Kullager	Ball bearing Ball bearing	Kugellager Kugellager	1). 2). 1). 2).		
27	1 1 1 1 - - - - - - 1 1	491 42 22-00 481 70 04-00	Hållare Hållare	Holder Holder	Halter Halter	1). 2). 1). 2).		
28	1 1 1 1 - - - - - - 1 1	491 45 71-00 481 69 31-00	Tätning Tätning	Seal Seal	Dichtung Dichtung	1). 2). 1). 2).		
29	1 1 1 - - - - - - - 1 1	552 20 27-07 552 20 27-00	O-ring O-ring	O-ring O-ring	O-Ring O-Ring	1). 2). 1). 2).		
30	1 - 1 1 - - - 1 - - - - - - - - 1 1 - - 1 - - - - - - 1 - - - - - - 1 - - - - - 1 - - - - - 1	491 42 23-00 ST1 20 56-00 481 69 88-00 428 09 63-00 428 09 64-00 481 89 39-00 481 89 32-00	Medbringaraxel Medbringaraxel Medbringaraxel Medbringaraxel Medbringaraxel Medbringaraxel Medbringaraxel	Carrier shaft Carrier shaft Carrier shaft Carrier shaft Carrier shaft Carrier shaft Carrier shaft	Mitnehmerwelle Mitnehmerwelle Mitnehmerwelle Mitnehmerwelle Mitnehmerwelle Mitnehmerwelle Mitnehmerwelle	1). 1). 1). 2). 2). 2). 2).		
31	1 1 1 1 1 1	740 43 14-10	O-ring	O-ring	O-Ring	1). 2).		
32	1 1 1 1 1 1 - - 1 - - - - - - 1 - - - - - - 1 - - - - - - 1	428 16 19-04 428 16 19-00 428 16 19-02 428 16 19-01 428 16 19-03	Medbringarskruv Medbringarskruv Medbringarskruv Medbringarskruv Medbringarskruv	Carrier screw Carrier screw Carrier screw Carrier screw Carrier screw	Mitnehmerschraube Mitnehmerschraube Mitnehmerschraube Mitnehmerschraube Mitnehmerschraube	1). 2). 2). 2). 2).		
33	1 1 1 1 - -	ST1 36 68-00	Bussning	Bush	Buchse	1). 2).		
34	1 1 1 1 - -	ST1 36 10-00	Axel	Shaft	Ashe	1). 2). 4).		
35	1 1 1 1 - -	ST1 36 06-00	Distsansring	Spacer ring	Distanzring	1). 2). 4).		
36	1 1 1 1 - -	735 31 26-07	Spärring	Locking ring	Führungsring	1). 2). 4).		
Fet stil = Ändring Bold print = Change Fettdruck = Änderung			1). Smart Variomix 4). Fr.o.m 2021 v41 5). T.o.m 2221 v40	2). Smart Promix® From 2021 Week 41 T0 2021 Week 40	3). Smart Ab.2021 Vochen 41 Zu. 2021 Vochen 40			


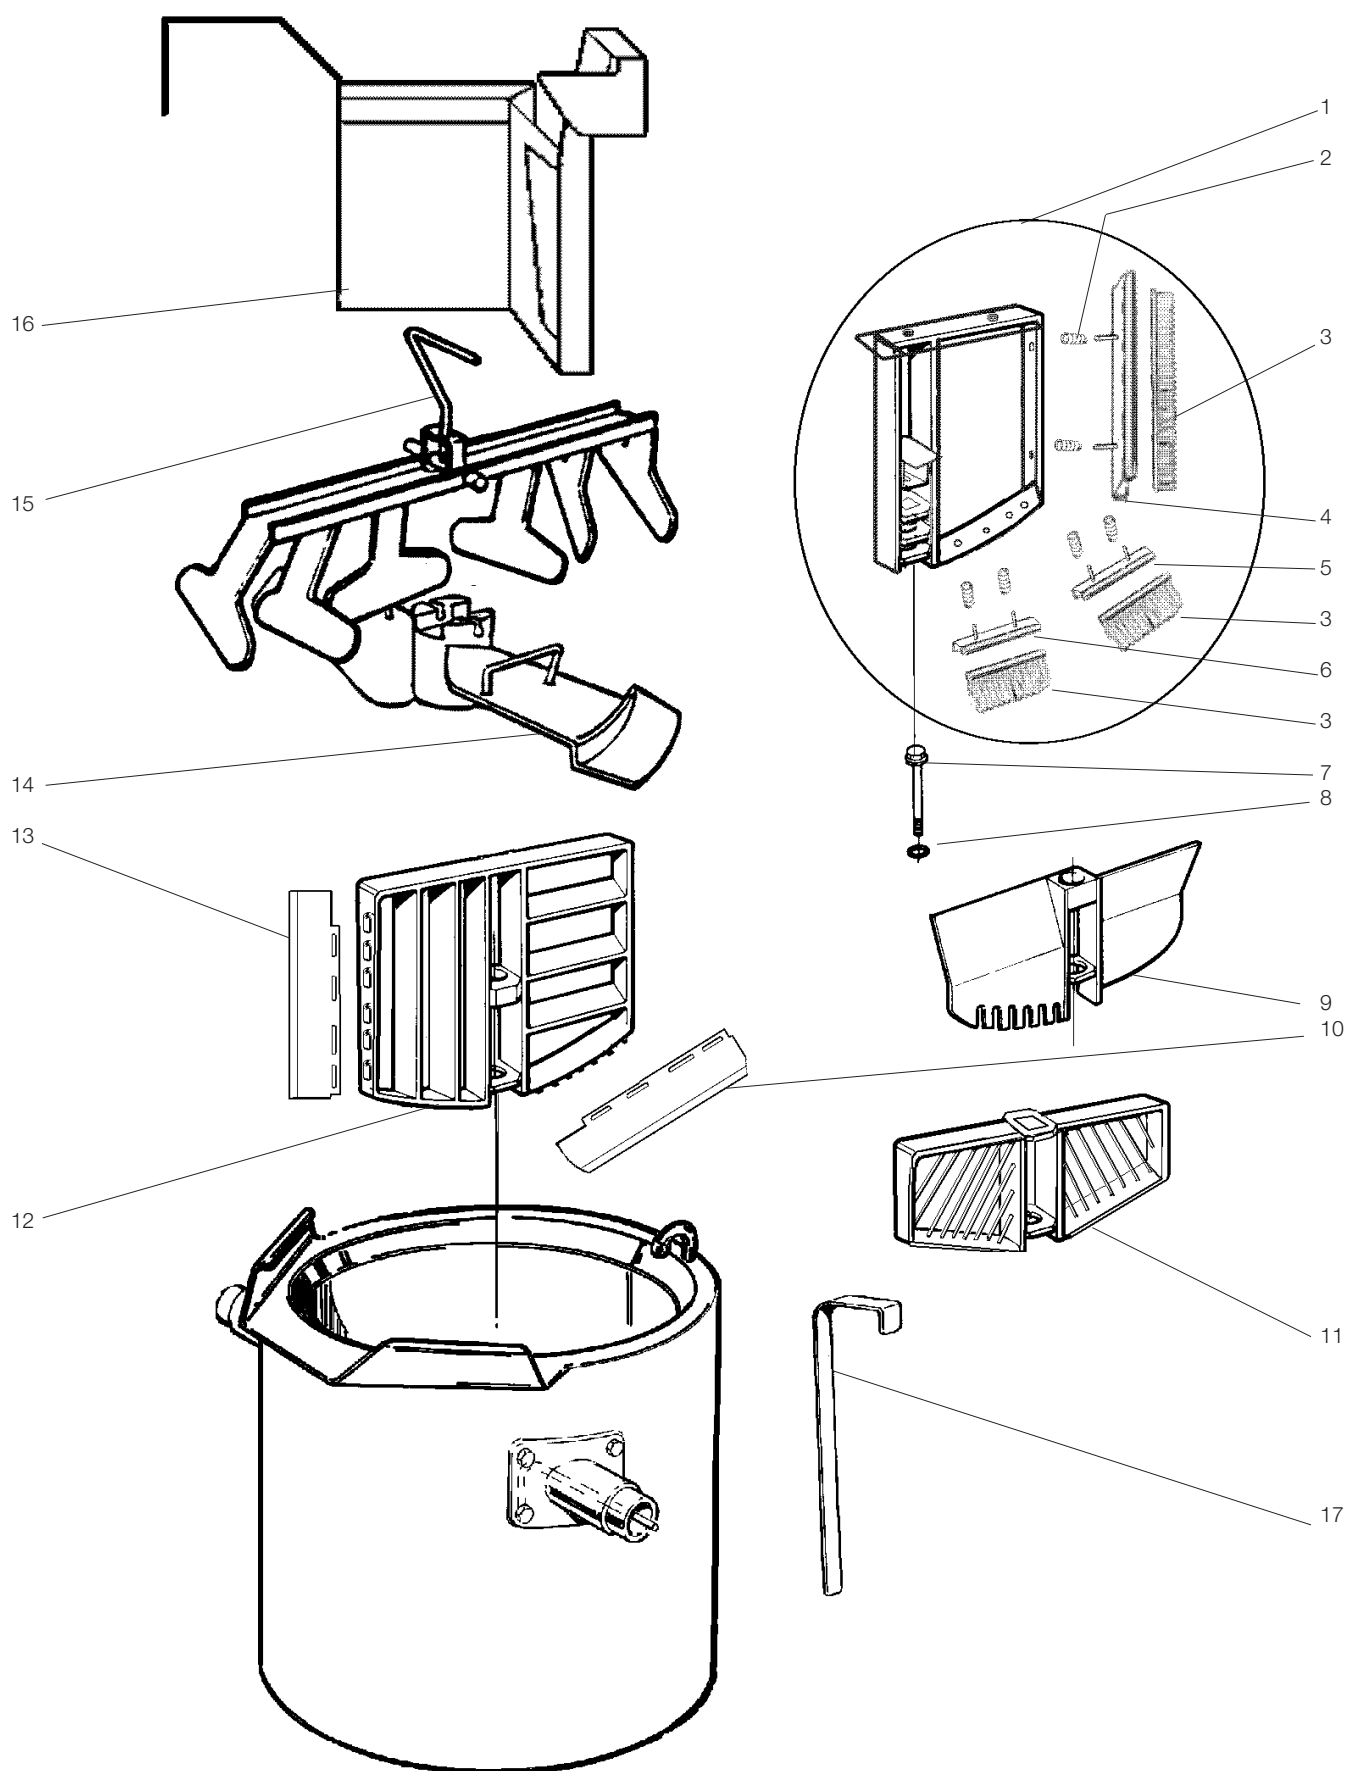


ILLUSTRATION 21771

Omrörare, Verktyg Agitator, tools Rührwerk, Werkzeug			Illustration 21771			Utgåva Edition Ausgabe 5	Månad Month Monat 03	År Year Jahr 2018
Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.		
	[[[[[[	50L 80L 100L 150L 200L 300L						
1	1 - - - - - - 1 - - - - - - - 1 - - - - - - - 1 - - - - - - - 1 - - - - - - - 1	9F92811900 9F92816500 9F92812000 9F92812100 9F92812200 9F92812300	Regöringsverktyg Regöringsverktyg Regöringsverktyg Regöringsverktyg Regöringsverktyg Regöringsverktyg	Cleaning tool Cleaning tool Cleaning tool Cleaning tool Cleaning tool Cleaning tool	Reinigungs werkzeug Reinigungs werkzeug Reinigungs werkzeug Reinigungs werkzeug Reinigungs werkzeug Reinigungs werkzeug	1). 1). 1). 1). 1). 1).		
	- - 1 - - - - - - - 1 - - - - - - - 1 - - - - - - - 1	9F92812400 9F92812500 9F92812600 9F92812900	Regöringsverktyg Regöringsverktyg Regöringsverktyg Regöringsverktyg	Cleaning tool Cleaning tool Cleaning tool Cleaning tool	Reinigungs werkzeug Reinigungs werkzeug Reinigungs werkzeug Reinigungs werkzeug	2). 2). 2). 2).		
2	4 6 6 6 6 6	428 16 18-00	Fjäder	Spring	Feder			
3	1 1 1 1 1 1	428 16 04-00	Borst list	Brush	Bürsten			
4	1 - - - - - - 1 - - - - - - - 1 - - - - - - - 1 - - - - - - - 1 - - - - - - - 1	428 16 09-01 428 16 09-02 428 16 09-05 428 16 09-09 428 16 09-13 428 16 09-16	Borstfäste kpl. Borstfäste kpl. Borstfäste kpl. Borstfäste kpl. Borstfäste kpl. Borstfäste kpl.	Brushn attachment cpl. Brushn attachment cpl. Brushn attachment cpl. Brushn attachment cpl. Brushn attachment cpl. Brushn attachment cpl.	Bürstebefestigung kpl. Bürstebefestigung kpl. Bürstebefestigung kpl. Bürstebefestigung kpl. Bürstebefestigung kpl. Bürstebefestigung kpl.			
5	1 - - - - - - 1 1 - - - - - - - 1 - - - - - - - 1 - - - - - - - 1	428 16 09-00 428 16 09-03 428 16 09-08 428 16 09-12 428 16 09-15	Borstfäste kpl. Borstfäste kpl. Borstfäste kpl. Borstfäste kpl. Borstfäste kpl.	Brushn attachment cpl. Brushn attachment cpl. Brushn attachment cpl. Brushn attachment cpl. Brushn attachment cpl.	Bürstebefestigung kpl. Bürstebefestigung kpl. Bürstebefestigung kpl. Bürstebefestigung kpl. Bürstebefestigung kpl.			
6	- 1 1 - - - - - - - 1 - - - - - - - 1 - - - - - - - 1	428 16 09-03 428 16 09-07 428 16 09-11 428 16 09-15	Borstfäste kpl. Borstfäste kpl. Borstfäste kpl. Borstfäste kpl.	Brushn attachment cpl. Brushn attachment cpl. Brushn attachment cpl. Brushn attachment cpl.	Bürstebefestigung kpl. Bürstebefestigung kpl. Bürstebefestigung kpl. Bürstebefestigung kpl.			
7	1 1 1 1 1 1 - - 1 - - - - - - - 1 - - - - - - - 1 - - - - - - - 1	9F92806600 9F92806700 9F92806800 9F92806900 9F92807000	Medbringarskruv Medbringarskruv Medbringarskruv Medbringarskruv Medbringarskruv	Carrier screw Carrier screw Carrier screw Carrier screw Carrier screw	Mitnehmerschraube Mitnehmerschraube Mitnehmerschraube Mitnehmerschraube Mitnehmerschraube	1). 2). 2). 2). 2).		
8	1 1 1 1 - - - - - - 1 1	740 43 14-00 740 43 14-10	O-ring O-ring	O-ring O-ring	O-Ring O-Ring	1). 2). 1). 2).		
9	1 - - - - - - - 1 - - - - - - - 1 - - - - - - - 1 - - - - - - - 1	9F92806100 9F92806200 9F92806300 9F92806400 9F92806500	Propelleromrörare Propelleromrörare Propelleromrörare Propelleromrörare Propelleromrörare	Agitator Agitator Agitator Agitator Agitator	Rührwerk Rührwerk Rührwerk Rührwerk Rührwerk	1). 1). 1). 1). 1).		

Fet stil = Ändring
 Bold print = Change
 Fettdruck = Änderung

- 1). Smart Variomix
 2). Smart Promix®

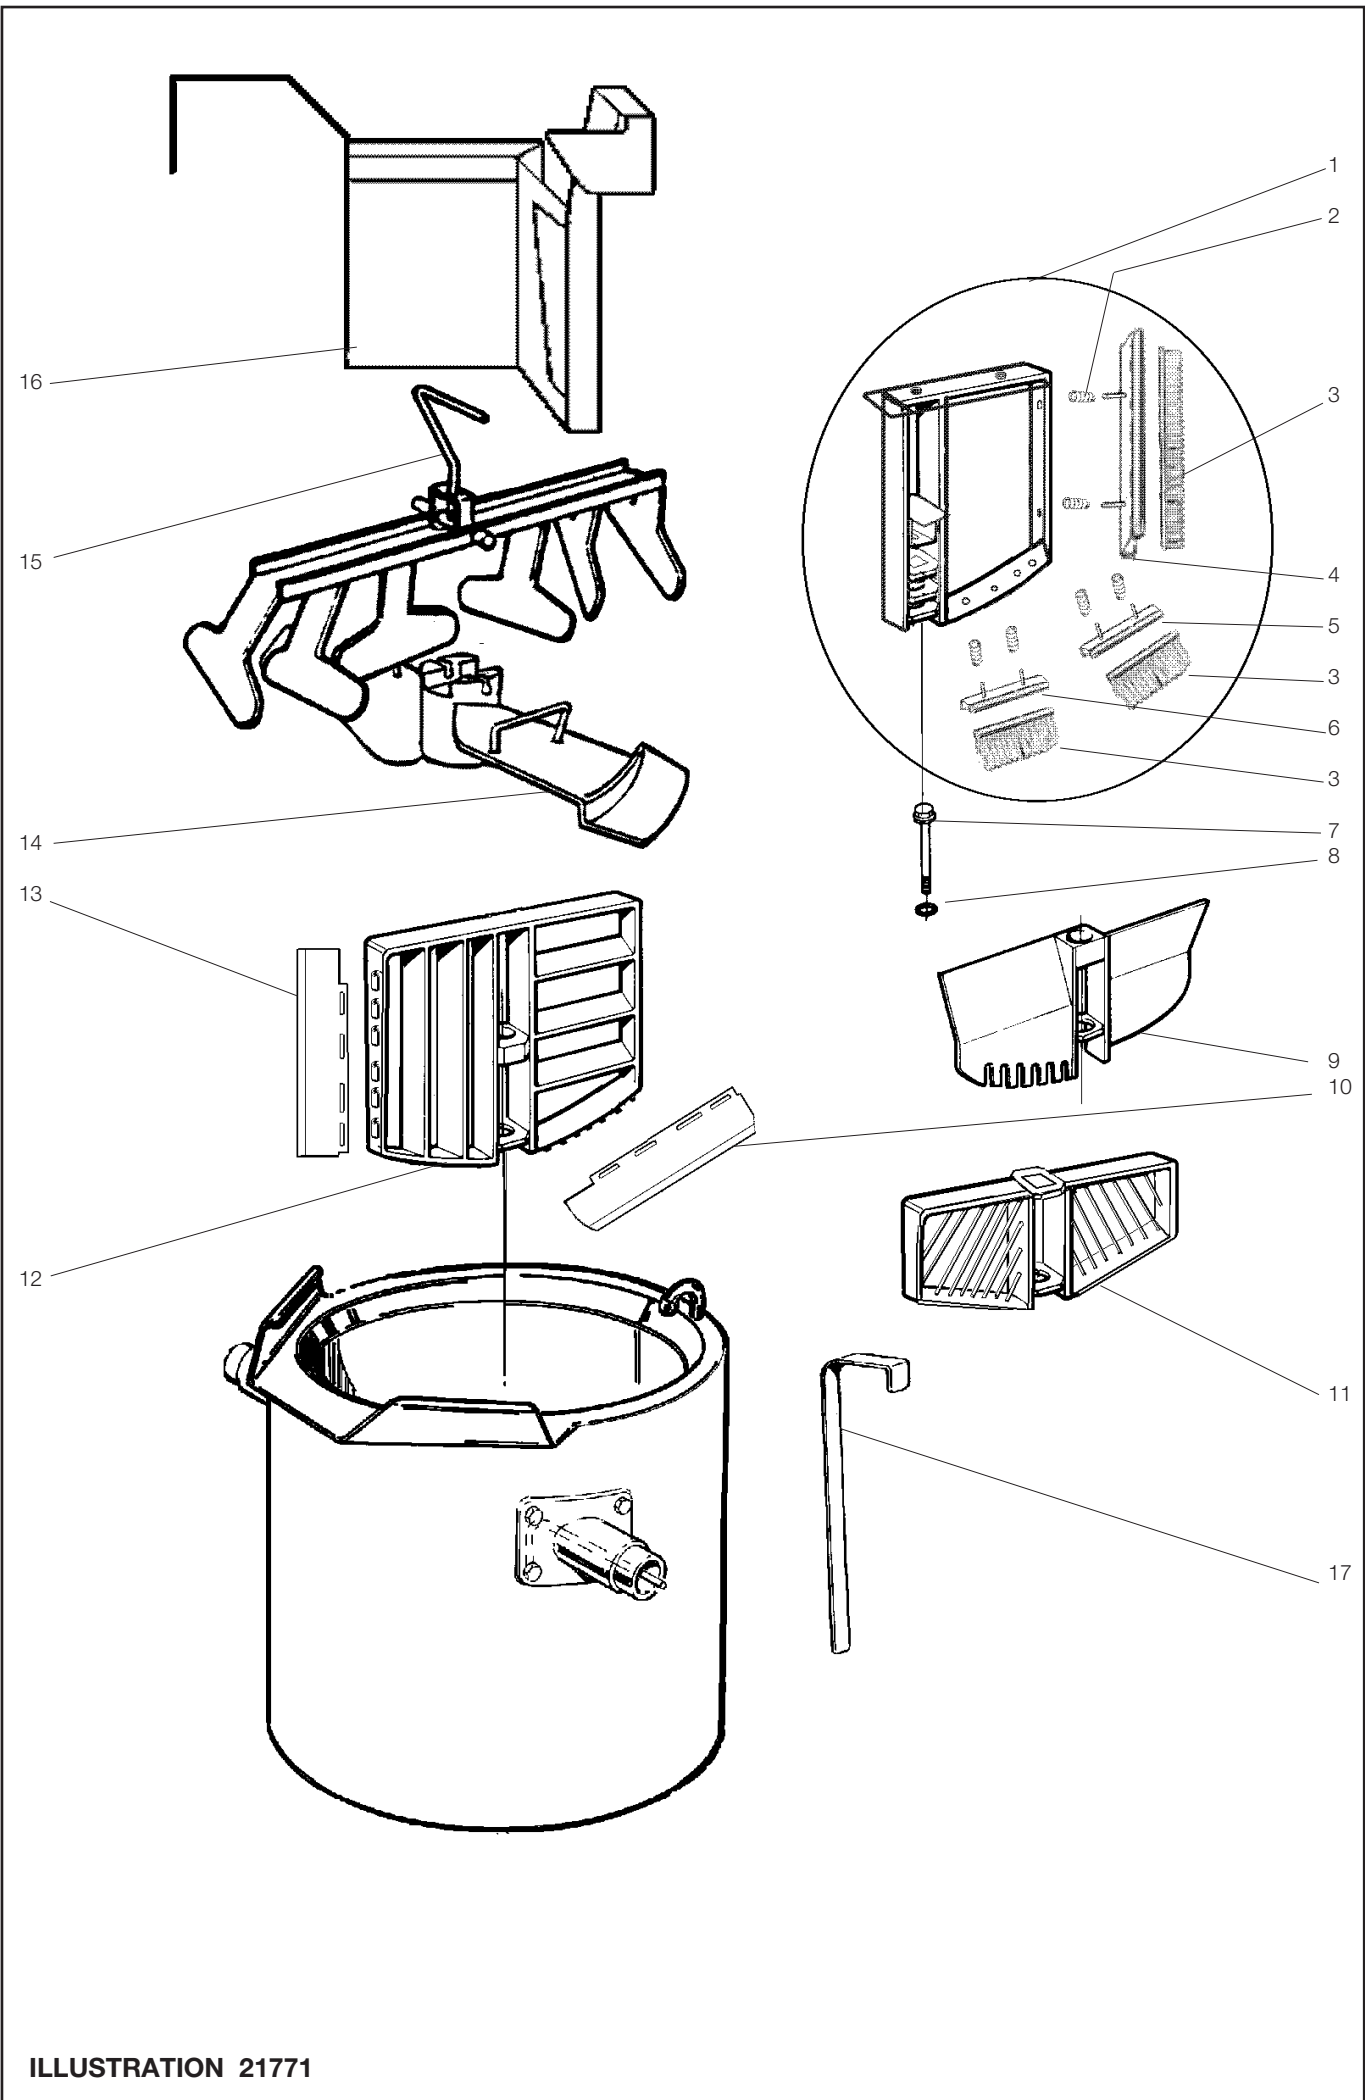

Omrörare, Verktyg Agitator, tools Rührwerk, Werkzeug			Illustration 21771			Utgåva Edition Ausgabe 5	Månad Month Monat 03	År Year Jahr 2018
Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.		
	[[[[[[	50 L 80 L 100 L 150 L 200 L 300 L						
10	1 - - - - - - 1 1 - - - - - - 1 - - - - - - 1 - - - - - - 1	428 14 30-00 428 14 32-00 428 14 34-00 428 14 36-00 428 14 38-00	Bottenskrapa Bottenskrapa Bottenskrapa Bottenskrapa Bottenskrapa	Bottom scraper Bottom scraper Bottom scraper Bottom scraper Bottom scraper	Bodenabstreifer Bodenabstreifer Bodenabstreifer Bodenabstreifer Bodenabstreifer	1). 1). 1). 1). 1).		
11	1 - - - - - - - 1 - - - - - - 1 - - - - - - 1 - - - - - - 1	9F92807100 9F92807200 9F92807300 9F92807400 9F92807500	Vispverktyg Vispverktyg Vispverktyg Vispverktyg Vispverktyg	Whip tool Whip tool Whip tool Whip tool Whip tool	Rühren Werkzeug Rühren Werkzeug Rühren Werkzeug Rühren Werkzeug Rühren Werkzeug	1). 1). 1). 1). 1).		
12	1 - - - - - - 1 - - - - - - 1 - - - - - - 1 - - - - - - 1 - - - - - - 1	428 14 02-00 ST1 17 04-00 428 14 03-00 428 14 04-00 428 14 05-00 428 14 06-00	Grindomrörare Grindomrörare Grindomrörare Grindomrörare Grindomrörare Grindomrörare	Paddel agitator Paddel agitator Paddel agitator Paddel agitator Paddel agitator Paddel agitator	Flügelrührwerk Flügelrührwerk Flügelrührwerk Flügelrührwerk Flügelrührwerk Flügelrührwerk	1). 1). 1). 1). 1). 1).		
13	1 - - - - - - 1 - - - - - - 1 - - - - - - 1 - - - - - - 1 - - - - - - 1	428 14 31-00 ST1 17 43-00 428 14 33-00 428 14 35-00 428 14 37-00 428 14 39-00	Sidoskrapa Sidoskrapa Sidoskrapa Sidoskrapa Sidoskrapa Sidoskrapa	Side scraper Side scraper Side scraper Side scraper Side scraper Side scraper	Seitenabstreifer Seitenabstreifer Seitenabstreifer Seitenabstreifer Seitenabstreifer Seitenabstreifer	1). 1). 1). 1). 1). 1).		
14	- - 1 - - - - - - 1 - - - - - - 1 - - - - - - 1	428 09 26-00 428 09 27-00 428 09 28-00 428 08 07-00	Propelleromrörare Propelleromrörare Propelleromrörare Propelleromrörare	Agitator Agitator Agitator Agitator	Rührwerk Rührwerk Rührwerk Rührwerk	2). 2). 2). 2).		
15	- - 1 - - - - - 1 - - - - - - - 1 - - - - - - 1	481 96 80-00 428 13 61-00 481 96 81-00 481 96 82-00	Bottenomrörare Bottenomrörare Bottenomrörare Bottenomrörare	Bottom agitator Bottom agitator Bottom agitator Bottom agitator	Rührwerk Rührwerk Rührwerk Rührwerk	2). 2). 2). 2).		
16	- - 1 - - - - - - 1 - - - - - - 1 - - - - - - 1	ST1 09 04-00 ST1 09 05-00 ST1 09 06-00 ST1 09 07-00	Baffel Baffel Baffel Baffel	Agitator plate Agitator plate Agitator plate Agitator plate	Baffel Baffel Baffel Baffel	2). 2). 2). 2).		
17	1 - - - - - - 1 - - - - - - 1 - - - - - - 1 - - - - - - 1 - - - - - - 1	ST1 17 63-00 ST1 17 63-01 ST1 17 63-02 ST1 17 63-03 ST1 17 63-04 ST1 17 63-05	Mätsticka Mätsticka Mätsticka Mätsticka Mätsticka Mätsticka	Indicator rod Indicator rod Indicator rod Indicator rod Indicator rod Indicator rod	Messtab Messtab Messtab Messtab Messtab Messtab			

Fet stil = Ändring
 Bold print = Change
 Fettdruck = Änderung

- 1). Smart Variomix
 2). Smart Promix®

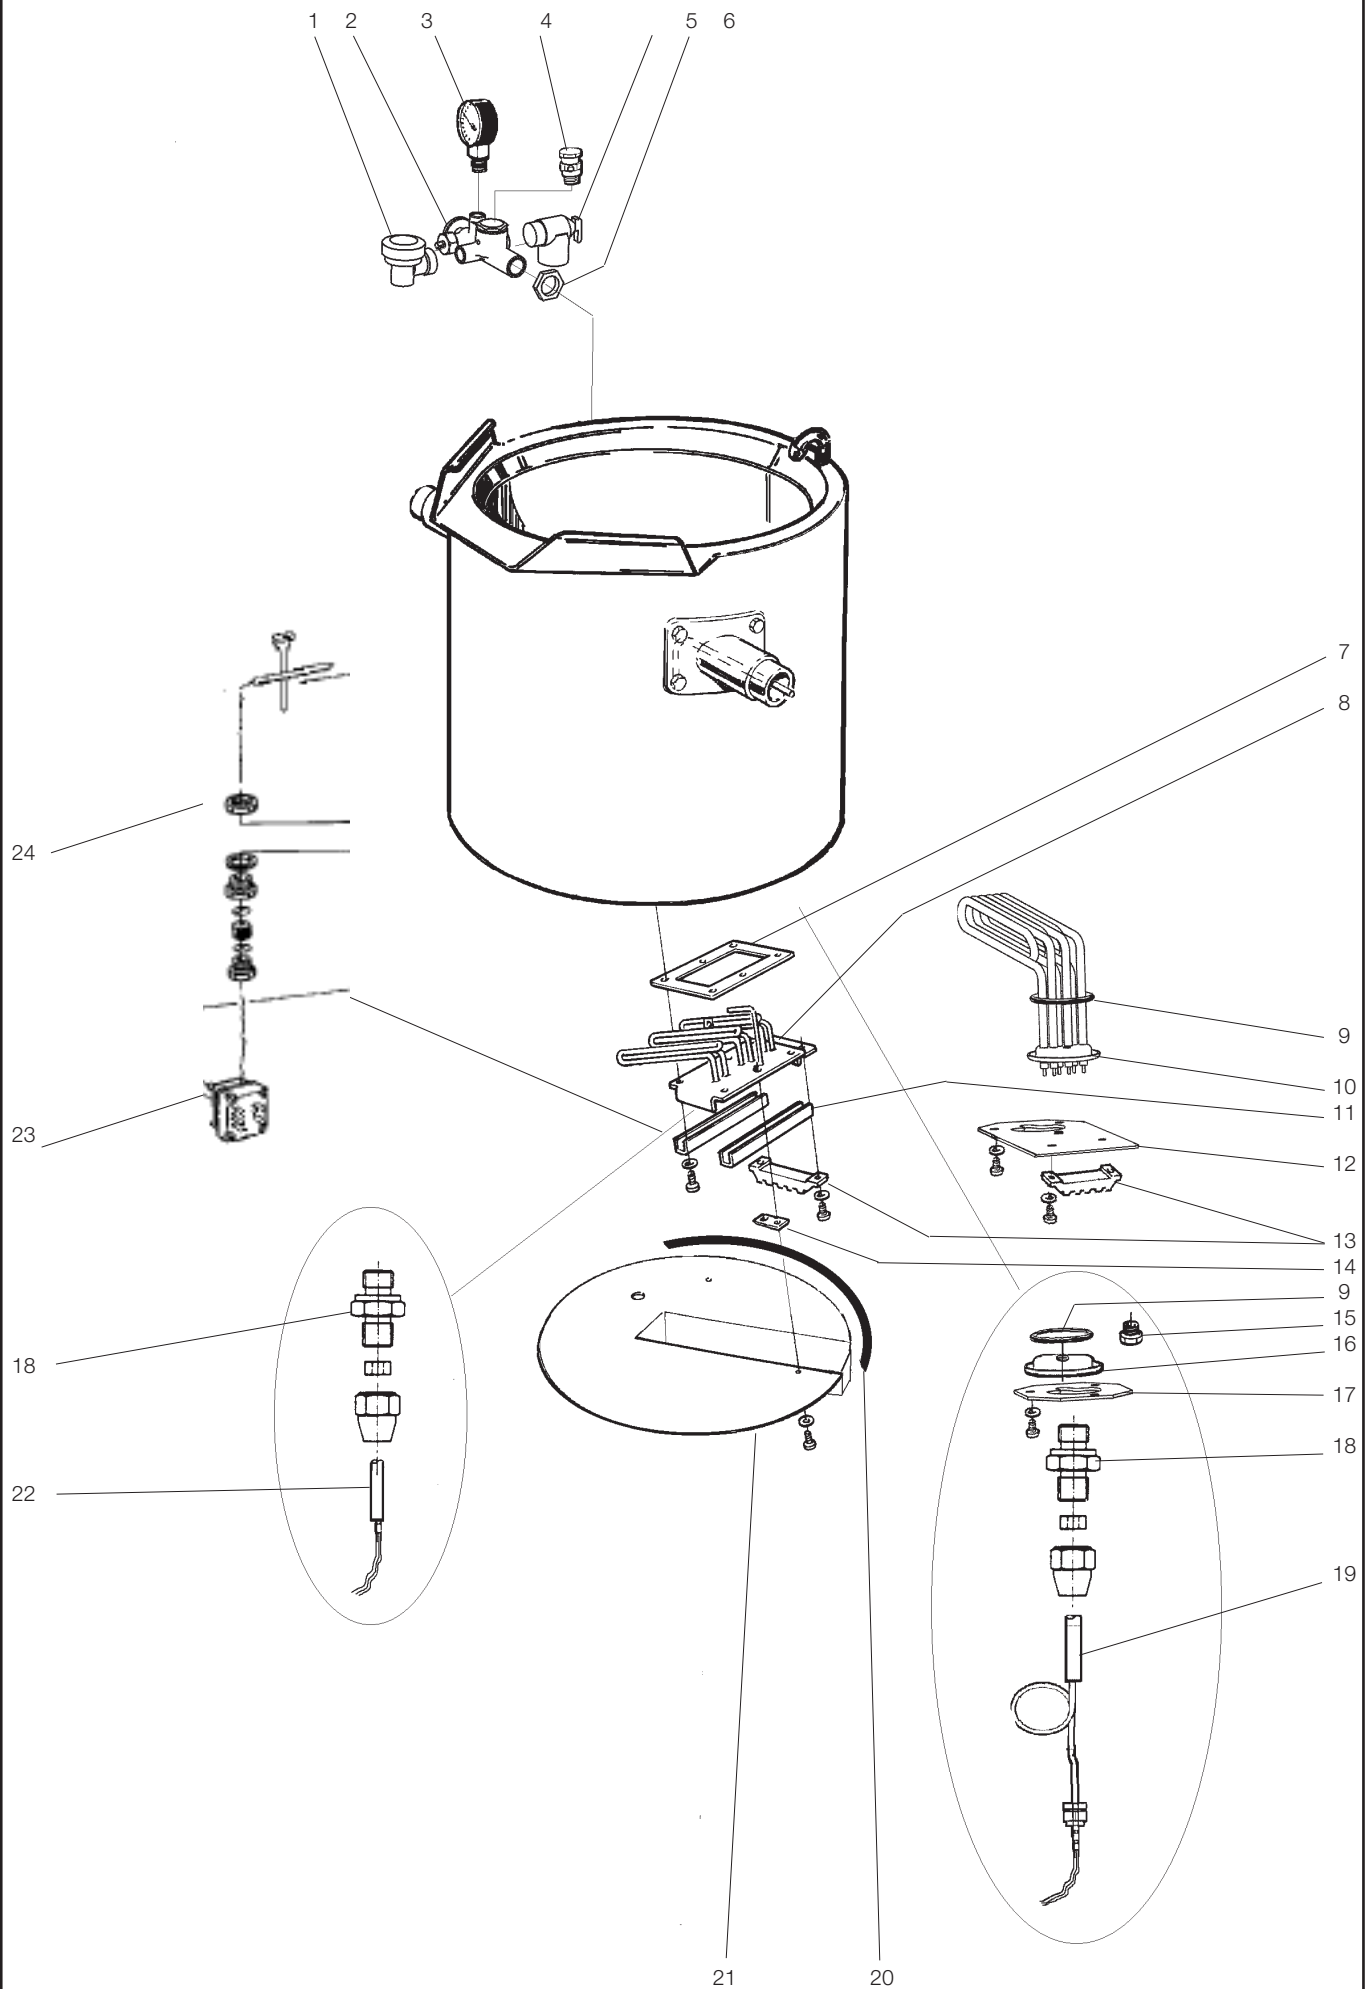


ILLUSTRATION 21810

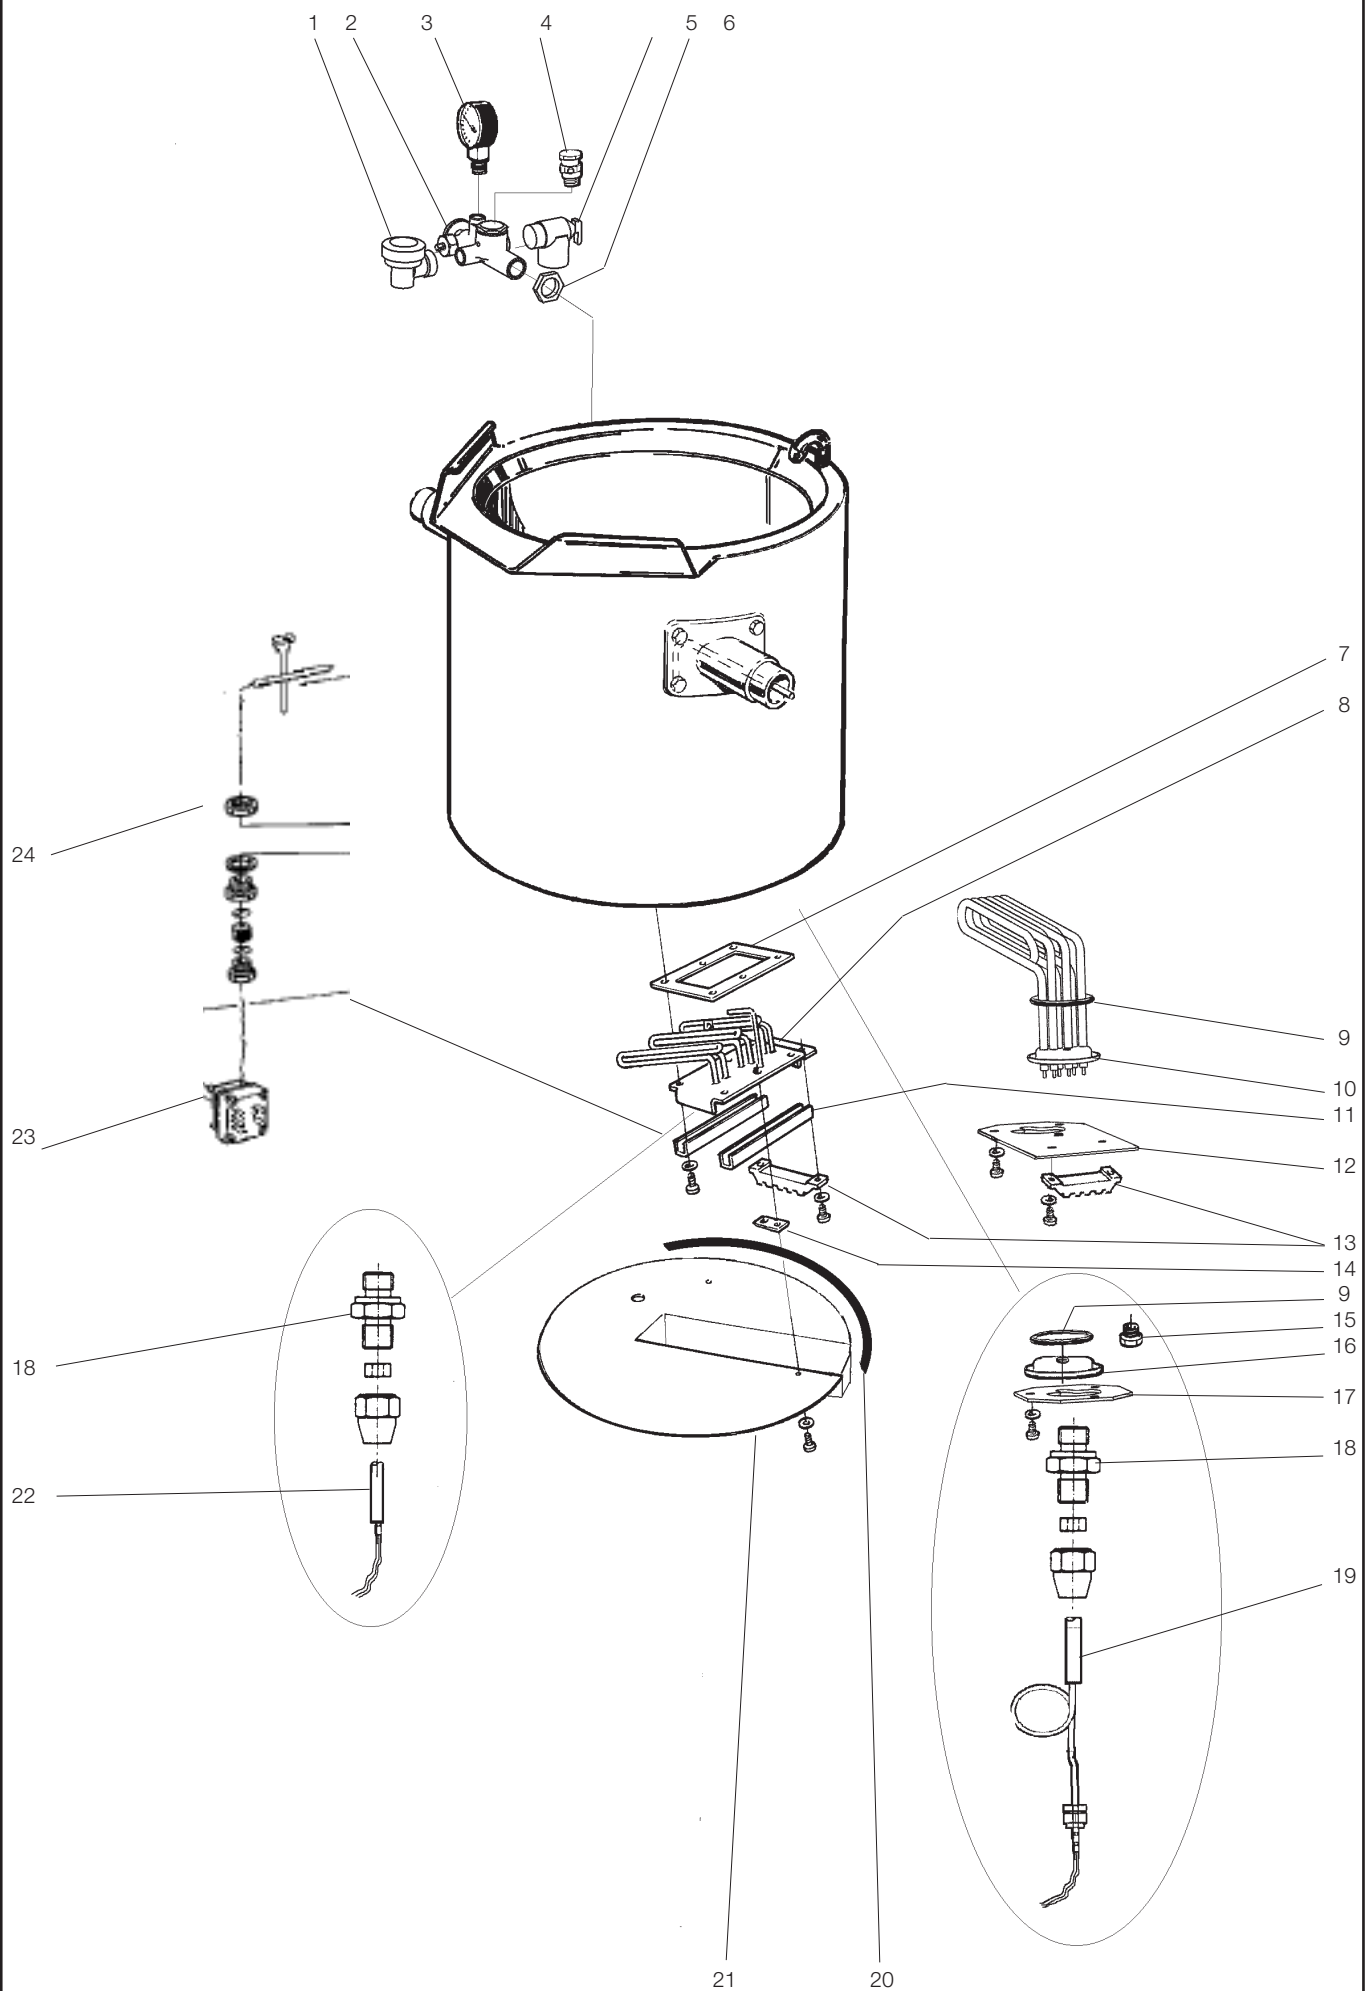


ILLUSTRATION 21810

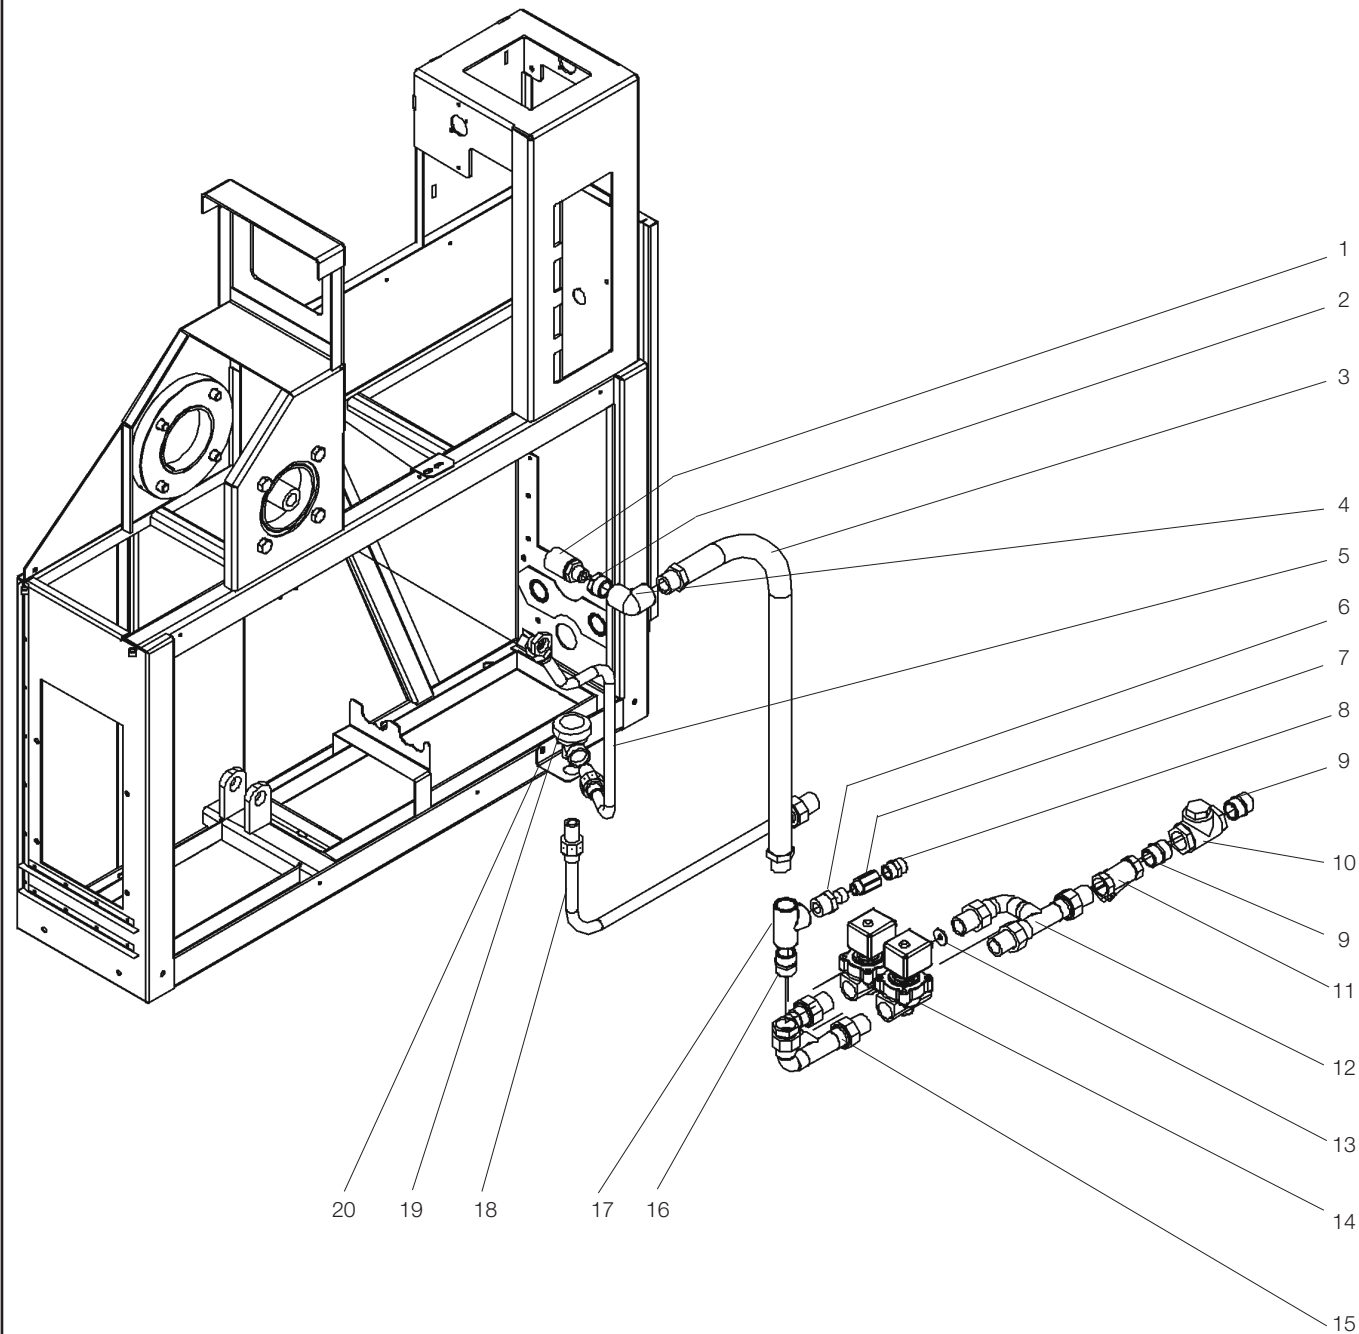


ILLUSTRATION 21811

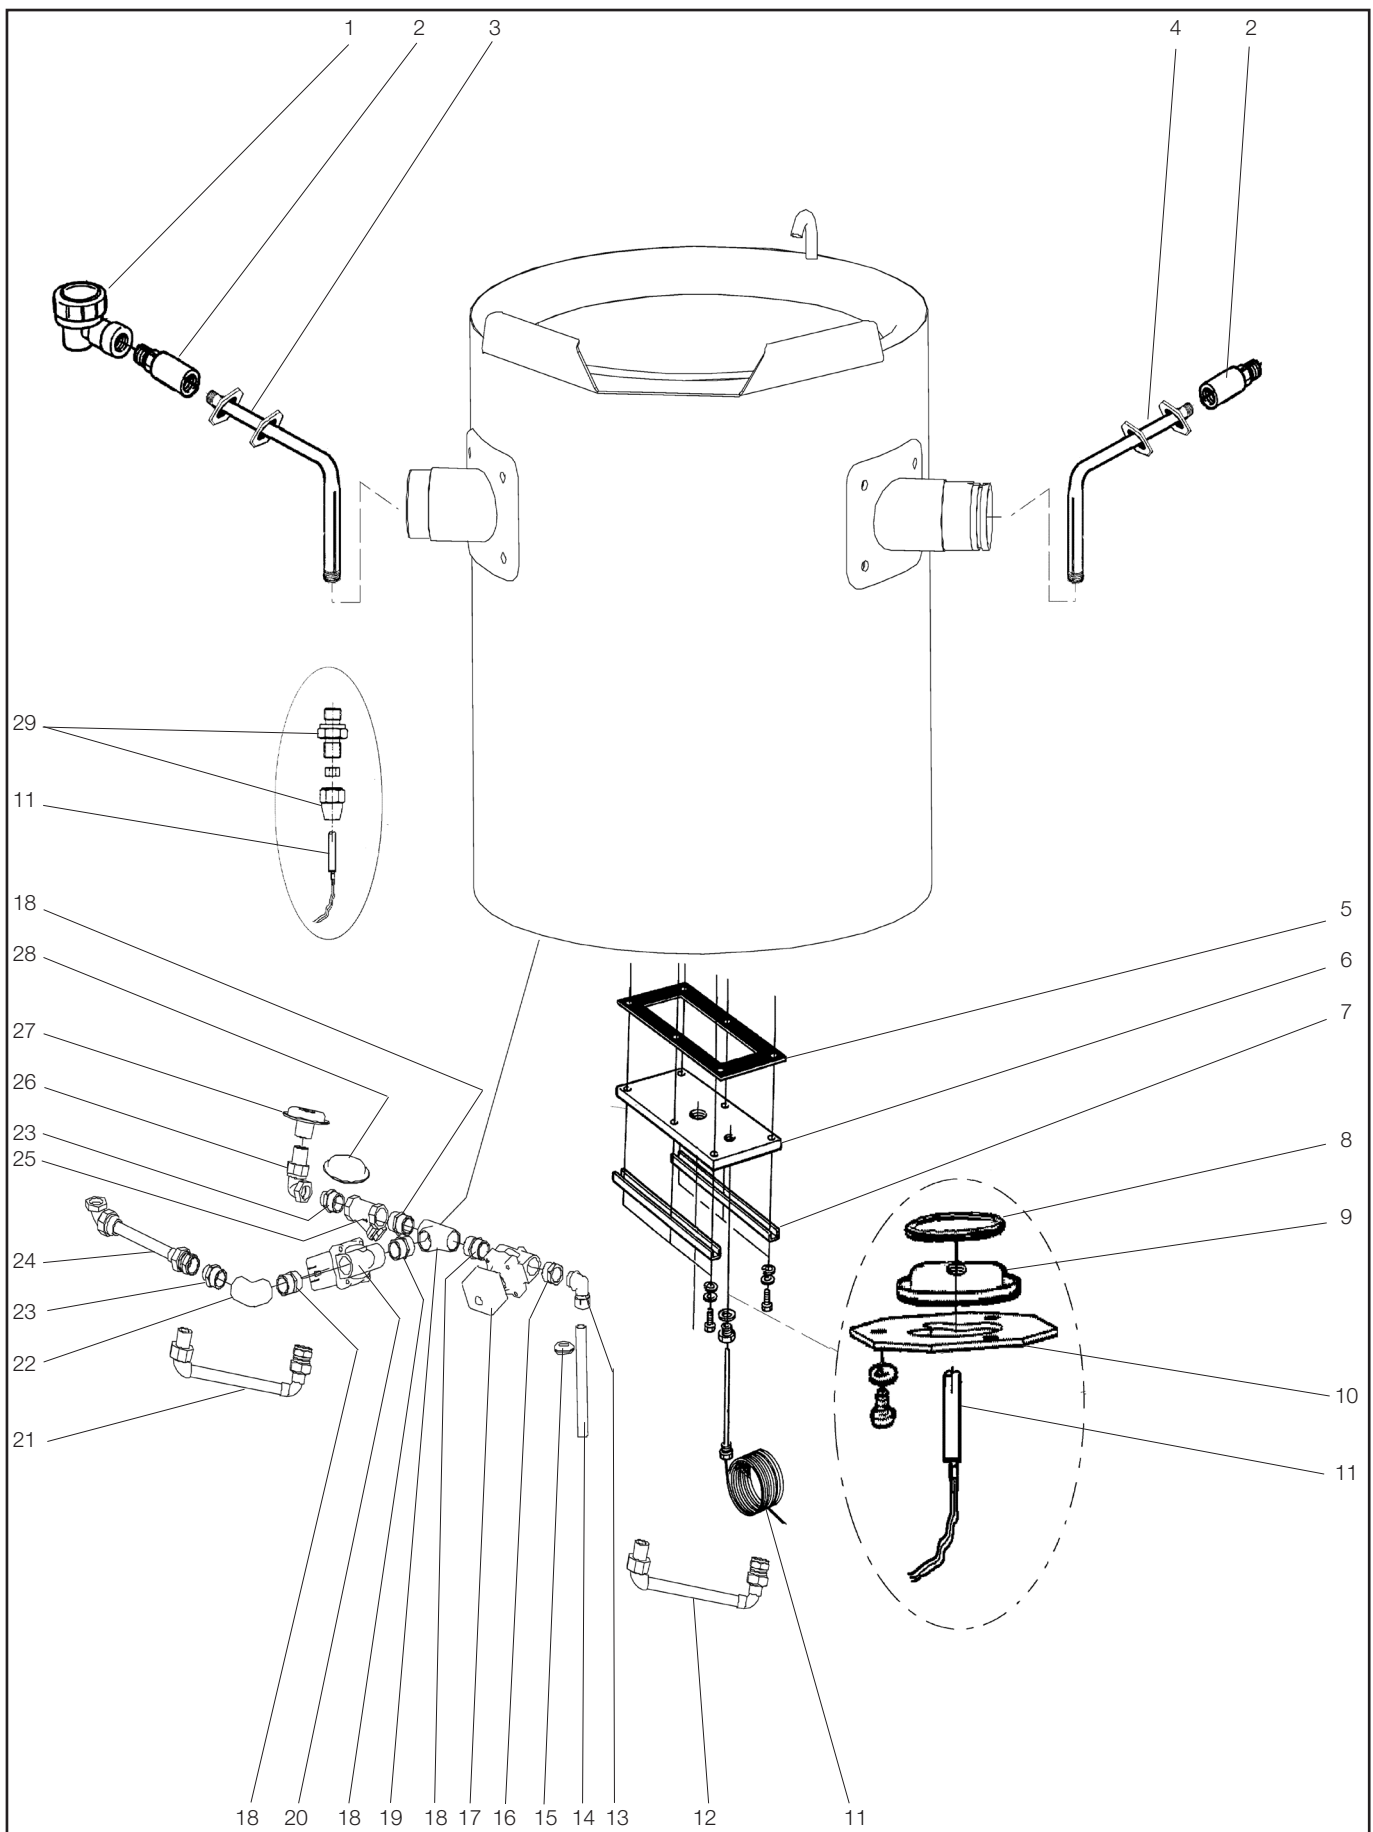


ILLUSTRATION 21802

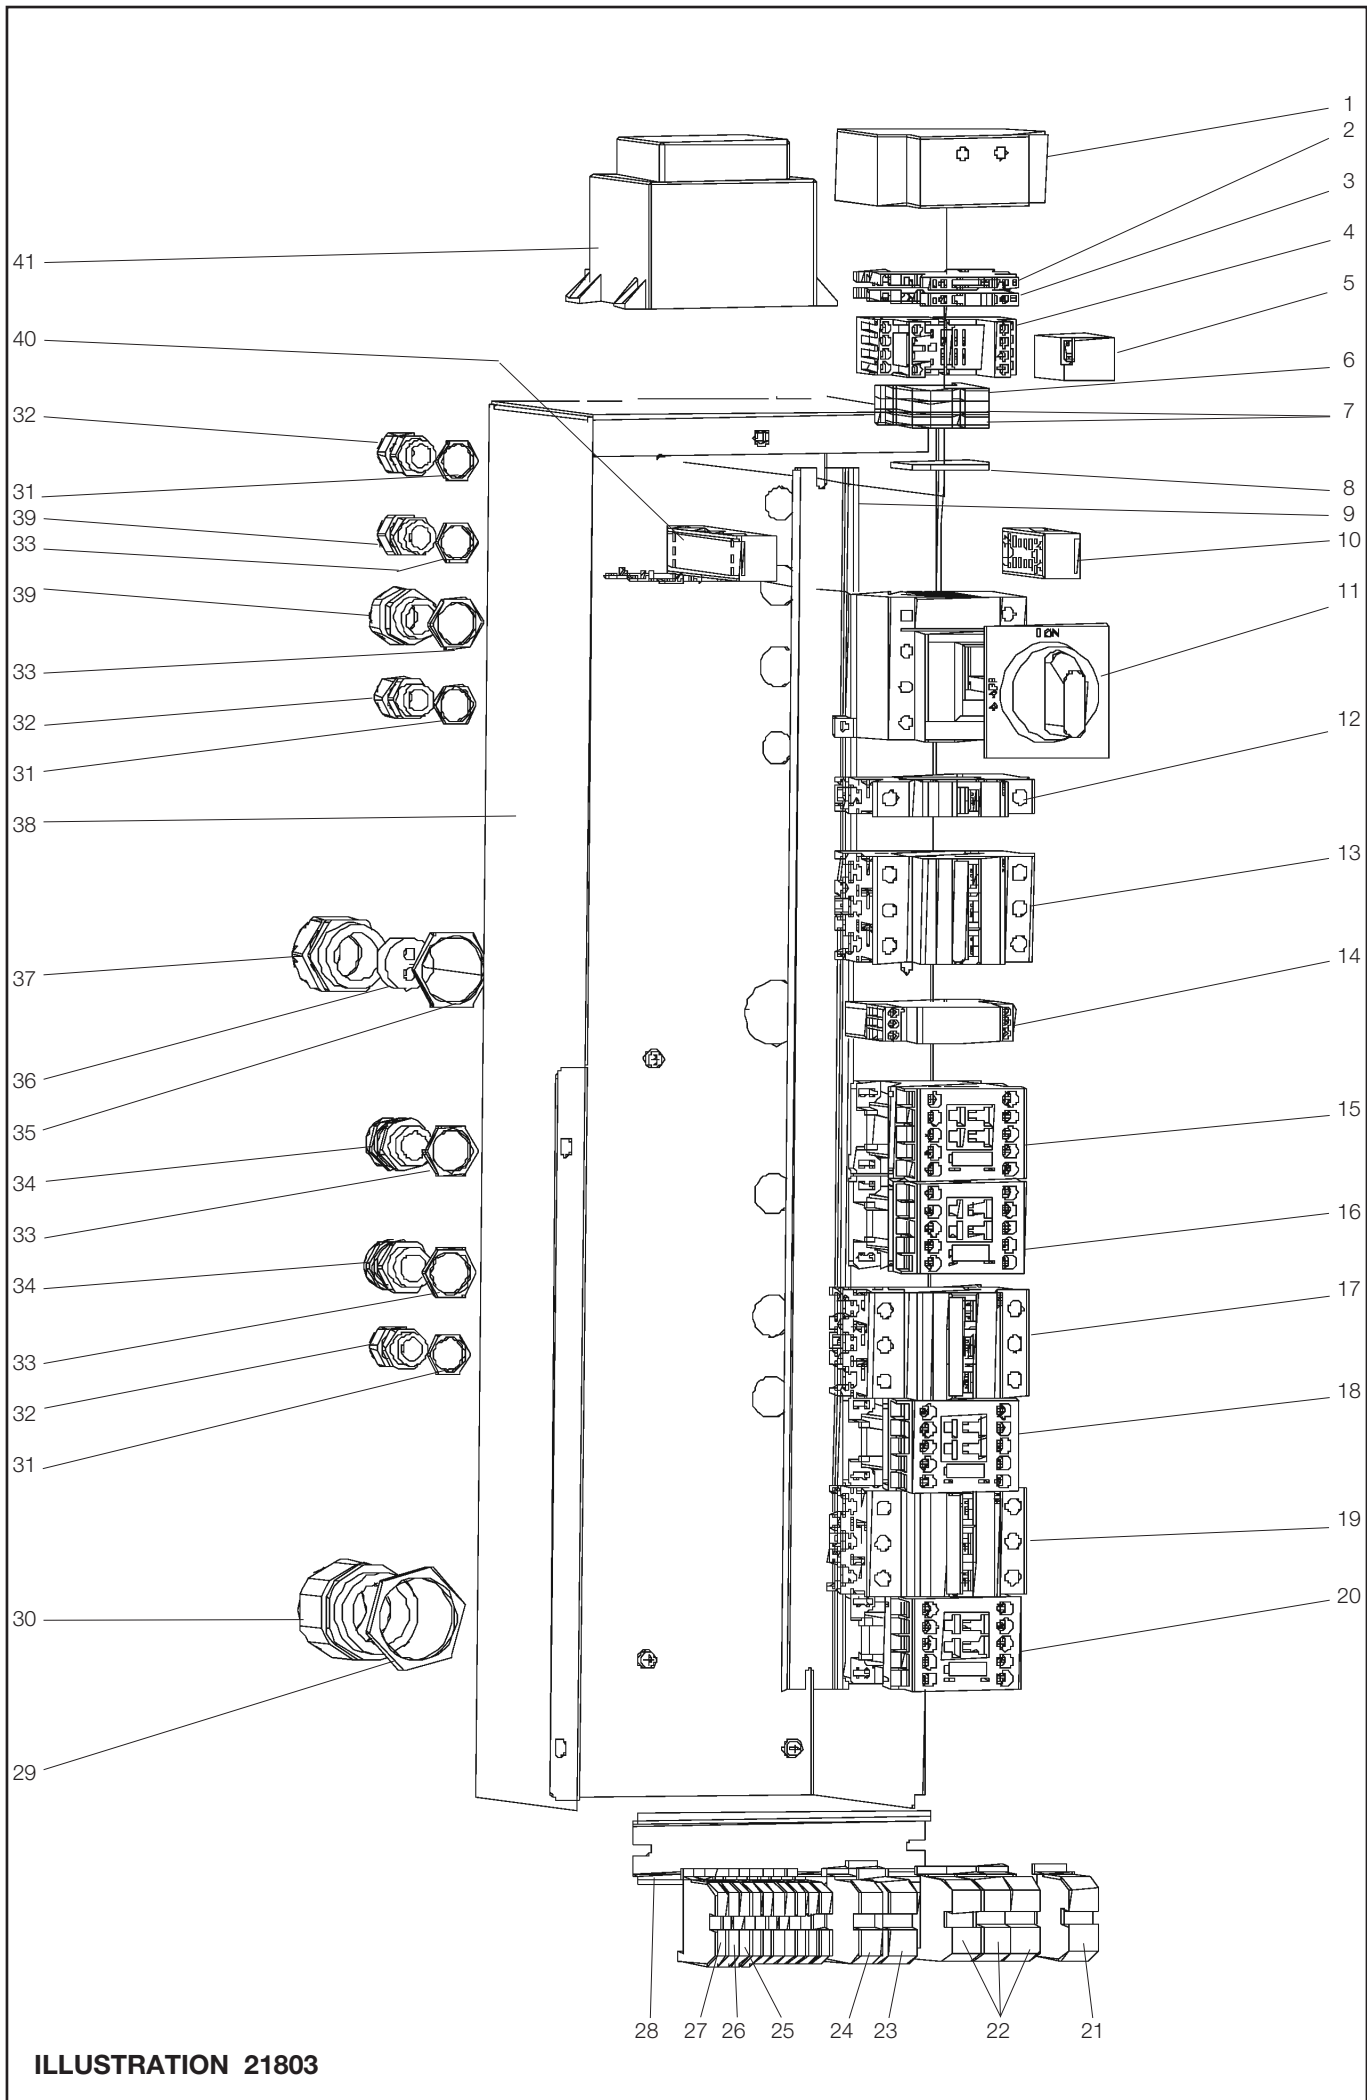


ILLUSTRATION 21803

Ellåda, eluppvärmd 50, 80L, 100L
Electric box, electrical heated 50, 80L, 100L
Eletrischebüsche, El. beheiz 50, 80L, 100L

Illustration 21803

Utgåva
Edition
Ausgabe
3

Månad
Month
Monat
09

År
Year
Jahr
2017

Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.
	[		SMB,SMV, SMP SVI			
1	1 1	ST1 01 78-00	Relä, vattennivå kontroll	Relay, water level control	Relais, Wasserstandsregelung	24VAC
2	1 1	ST1 07 59-00	Interface relä	Interface relay	Interface-Relais	2). 24VUC
3	1 1	ST1 07 59-00	Interface relä	Interface relay	Interface-Relais	1). 24VUC
	1 1	ST1 06 68-51	Hjälpkontakt	Auxiliary contact	Hilfsschalter	1). 1NC
4	1 1	ST1 06 68-51	Sockel	Mounting slide	Montagescheine	
5	1 1	ST1 06 70-00	Relä	Relay	Relais	4CO 24VAC
6	1 1	552 22 52-02	Kopplingsplint G/G 4	Block terminal Y/G 4	Klemmenbrett G/G 4	
7	2 2	552 22 51-02	Kopplingsplint Blå 4	Block terminal Blue 4	Klemmenbrett Blau 4	
8	1 1	552 22 54-00	Ändplatta	End plte	Endplatte	2,5-10
9	1 1	475 93 46-26	Monteringsskena	Mounting slide	Montagescheine	L=600
10	1 1	ST0 93 66-00	BK6 - plintlist	BK6 - Terminal	BK6 - Plintlist	1). 2).
11	1 1	ST1 06 74-00	Allpolig huvudbrytare	Switch	Schalter	64A
	1 1	ST1 06 74-61	Axel	Shaft	Achse	
	1 1	ST1 06 74-50	Vred	Knob	Drehknopf	
12	1 1	ST1 06 71-03	Säkringsautomat 13F2	Automatic fuse 13F2	Automatsicherung 13F2	3A
13	1 1	ST1 06 73-10	Säkringsautomat 10F6	Automatic fuse 10F6	Automatsicherung 10F6	1). 2). 3P, 10A
14	1 1	ST1 06 67-00	Tidrelä	Time relay	Zeitrelais	1). 2). 1CO 24V
15	1 1	ST1 06 68-00	Kontaktor 15K6	Contactor 15K6	Kontaktor 15K6	1). 2). 4kW, 24VAC
16	1 1	ST1 06 68-00	Kontaktor 14K4	Contactor 14K4	Kontaktor 14K4	1). 2). 4kW, 24VAC
17	1 1	ST1 06 73-25	Säkringsautomat	Automatic fuse	Automatsicherung	1). 2). 3P, 25A
18	1 1	ST1 06 68-03	Kontaktor 18K2	Contactor 18K2	Kontaktor 18K2	1). 2). 7,5kW, 24VAC
19	1 1	ST1 06 73-16	Säkringsautomat 11F3	Automatic fuse 11F3	Automatsicherung 11F3	1). 2). 3P, 16A
20	1 1	ST1 06 68-01	Kontaktor 18K2	Contactor 18K2	Kontaktor 18K2	1). 2). 4kW, 24VAC
21	1 1	552 22 51-06	Kopplingsplint Blå35	Block terminal Blue 35	Klemmenbrett Blau 35	
22	3 3	552 22 50-06	KopplingsplintGrå35	Block terminal Grey 35	Klemmenbrett Grau 35	
23	1 1	552 22 52-06	Kopplingsplint G/G 35	Block terminal Y/G 35	Klemmenbrett G/G 35	
24	1 1	552 22 52-05	Kopplingsplint G/G 16	Block terminal Y/G 16	Klemmenbrett G/G 16	
25	x x	552 22 50-02	Kopplingsplint Grå 4	Block terminal Grey 4	Klemmenbrett Grau 4	4).
26	1 1	552 22 51-02	Kopplingsplint Blå 4	Block terminal Blue 4	Klemmenbrett Blau 4	4).
27	1 1	552 22 50-02	Kopplingsplint Grå 4	Block terminal Grey 4	Klemmenbrett Grau 4	4).
28	1 1	475 93 46-09	Monteringsskena	Mounting slide	Montagescheine	L=155
29	1 1	ST0 28 64-06	Mutter	Nut	Mutter	M40x1,5
30	1 1	ST0 31 45-13	Kabelförskruvning	Conduit entry	Verschraubung	M40x1,5
31	3 3	ST0 28 64-02	Mutter	Nut	Mutter	M16x1,5
32	3 3	ST0 31 45-09	Kabelförskruvning	Conduit entry	Verschraubung	M16x1,5
33	2 2	ST0 28 64-03	Mutter	Nut	Mutter	M20x1,5

Fet stil = Ändring
Bold print = Change
Fettdruck = Änderung

- 1). Smart Promix
- 2). Smart Variomix
- 3). Smart
- 4). EPC (Energy Peak Control)

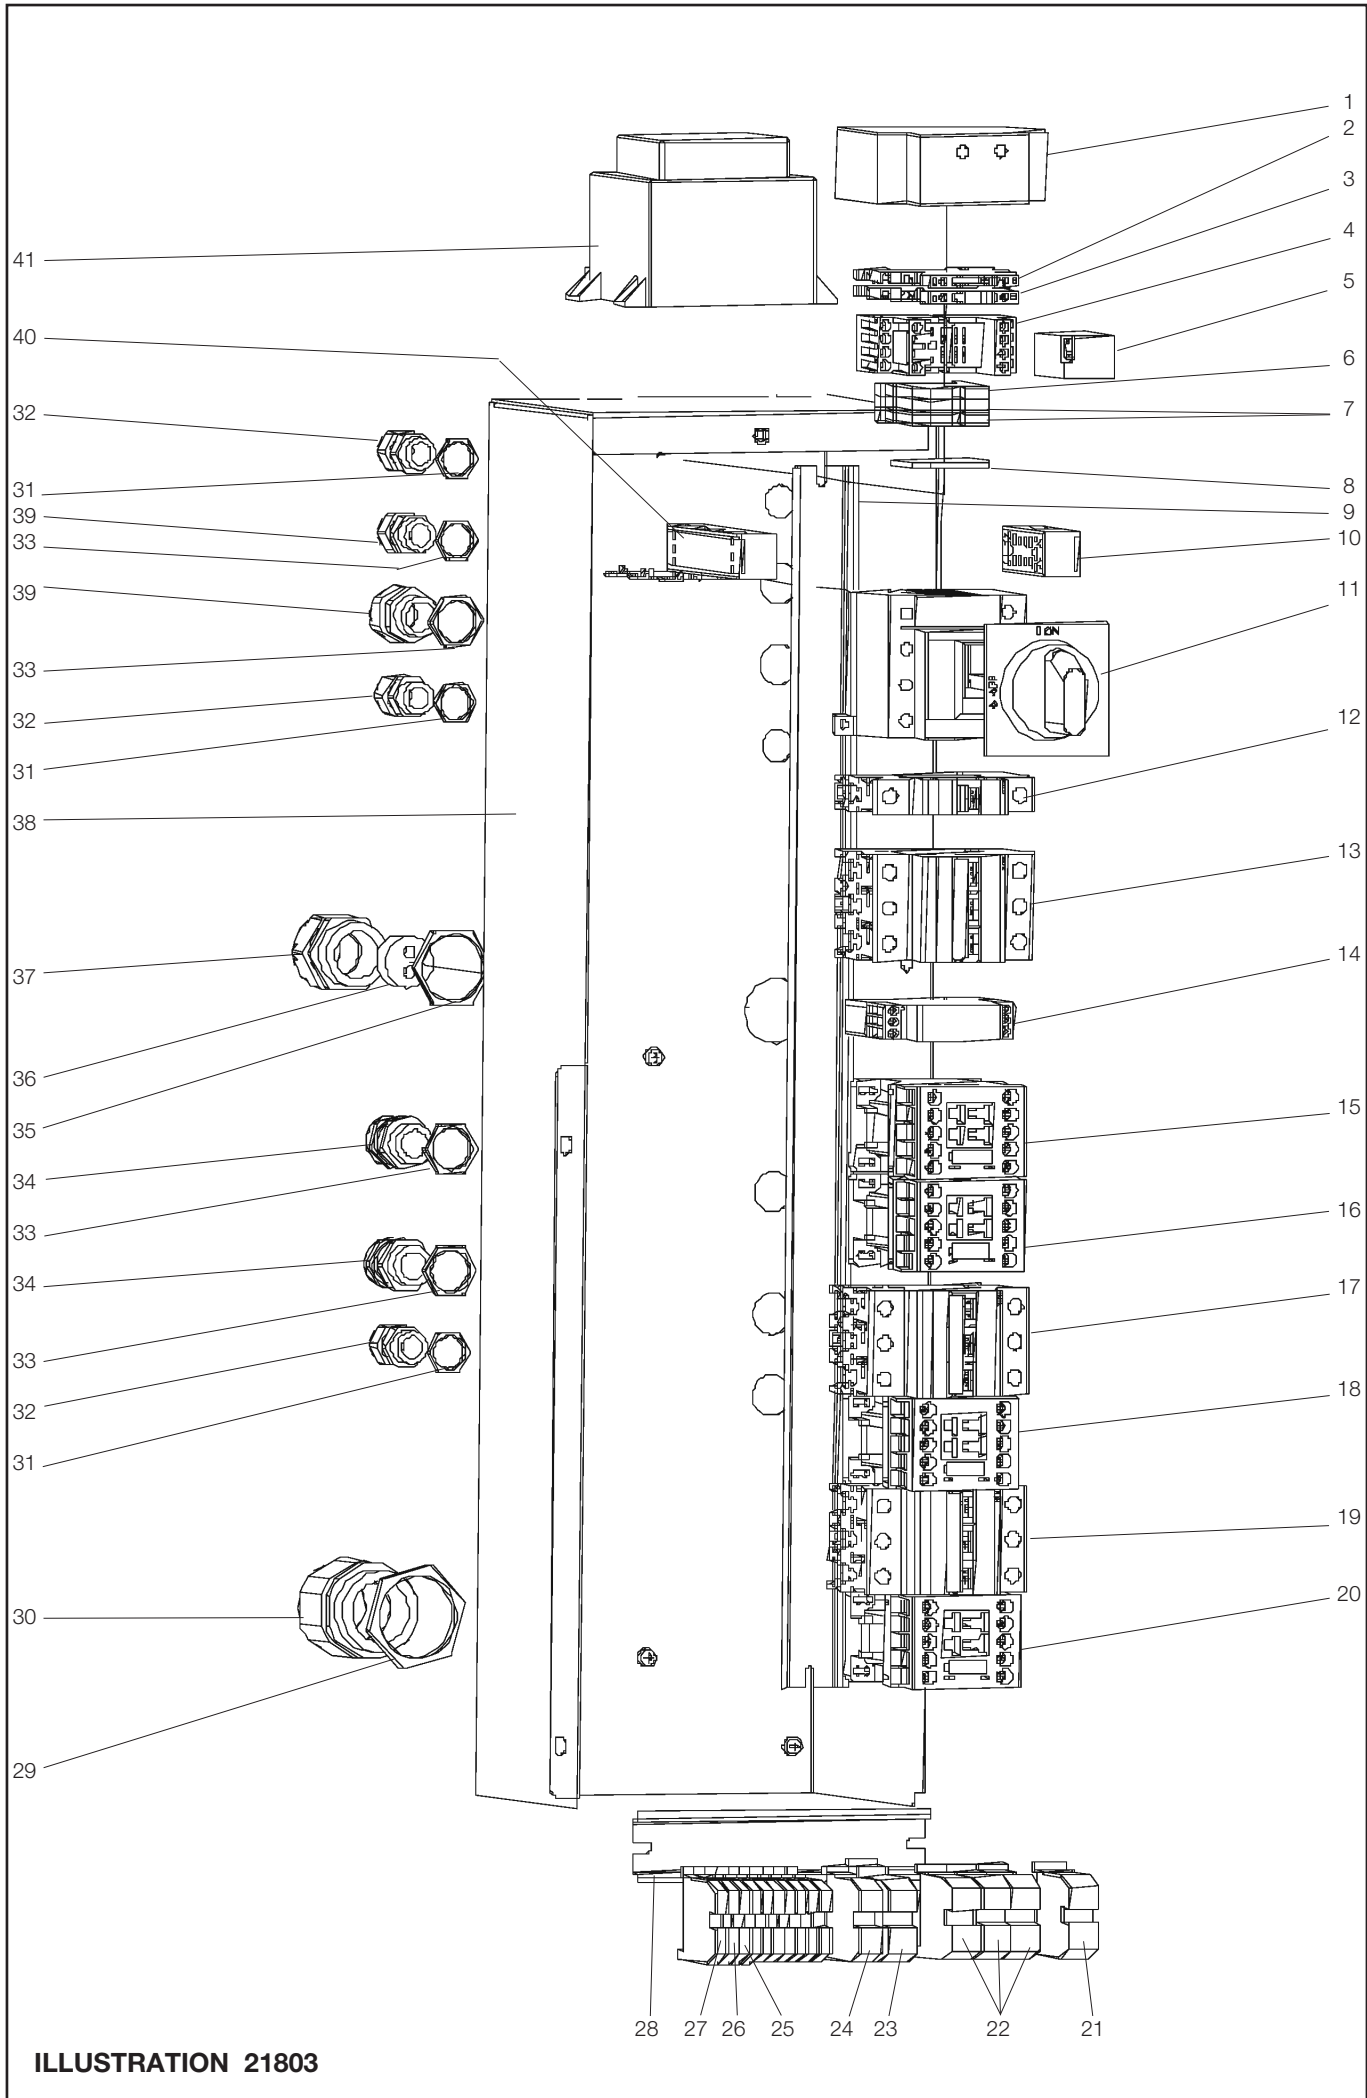


ILLUSTRATION 21803

Ellåda, eluppvärmd 50, 80L, 100L
 Electric box, electrical heated 50, 80L, 100L
 Elektrischebüsche, El. beheiz 50, 80L, 100L

Illustration 21803

Utgåva
Edition
Ausgabe
3

Månad
Month
Monat
09

År
Year
Jahr
2017

Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.
	[		SMB,SMV, SMP SVI			
34	2	ST0 36 56-02	Kabelförskruvning	Conduit entry	Verschraubung	1). 2). M20x1,5
35	1	ST0 28 64-05	Mutter	Nut	Mutter	M32x1,5
36	1	ST0 32 90-05	Blindpropp	Blind plug	Blindstopfen	3). M32
37	1	ST0 31 45-12	Kabelförskruvning	Conduit entry	Verschraubung	1). 2). M32
38	1	ST0 99 91-00	Ellåda	Electric box	Elektrischebüsche	
39	1	ST0 31 45-10	Kabelförskruvning	Conduit entry	Verschraubung	M20
40	1	ST0 93 66-02	BK12 - plintlist	BK12 - Terminal	BK12 - Plintlist	1). 2).
41	1	ST0 99 56-00	Transformator	Transformer	Transformator	230-24V/10V AC

Fet stil = Ändring
 Bold print = Change
 Fettdruck = Änderung

- 1). Smart Promix
- 2). Smart Variomix
- 3). Smart
- 4). EPC (Energy Peak Control)

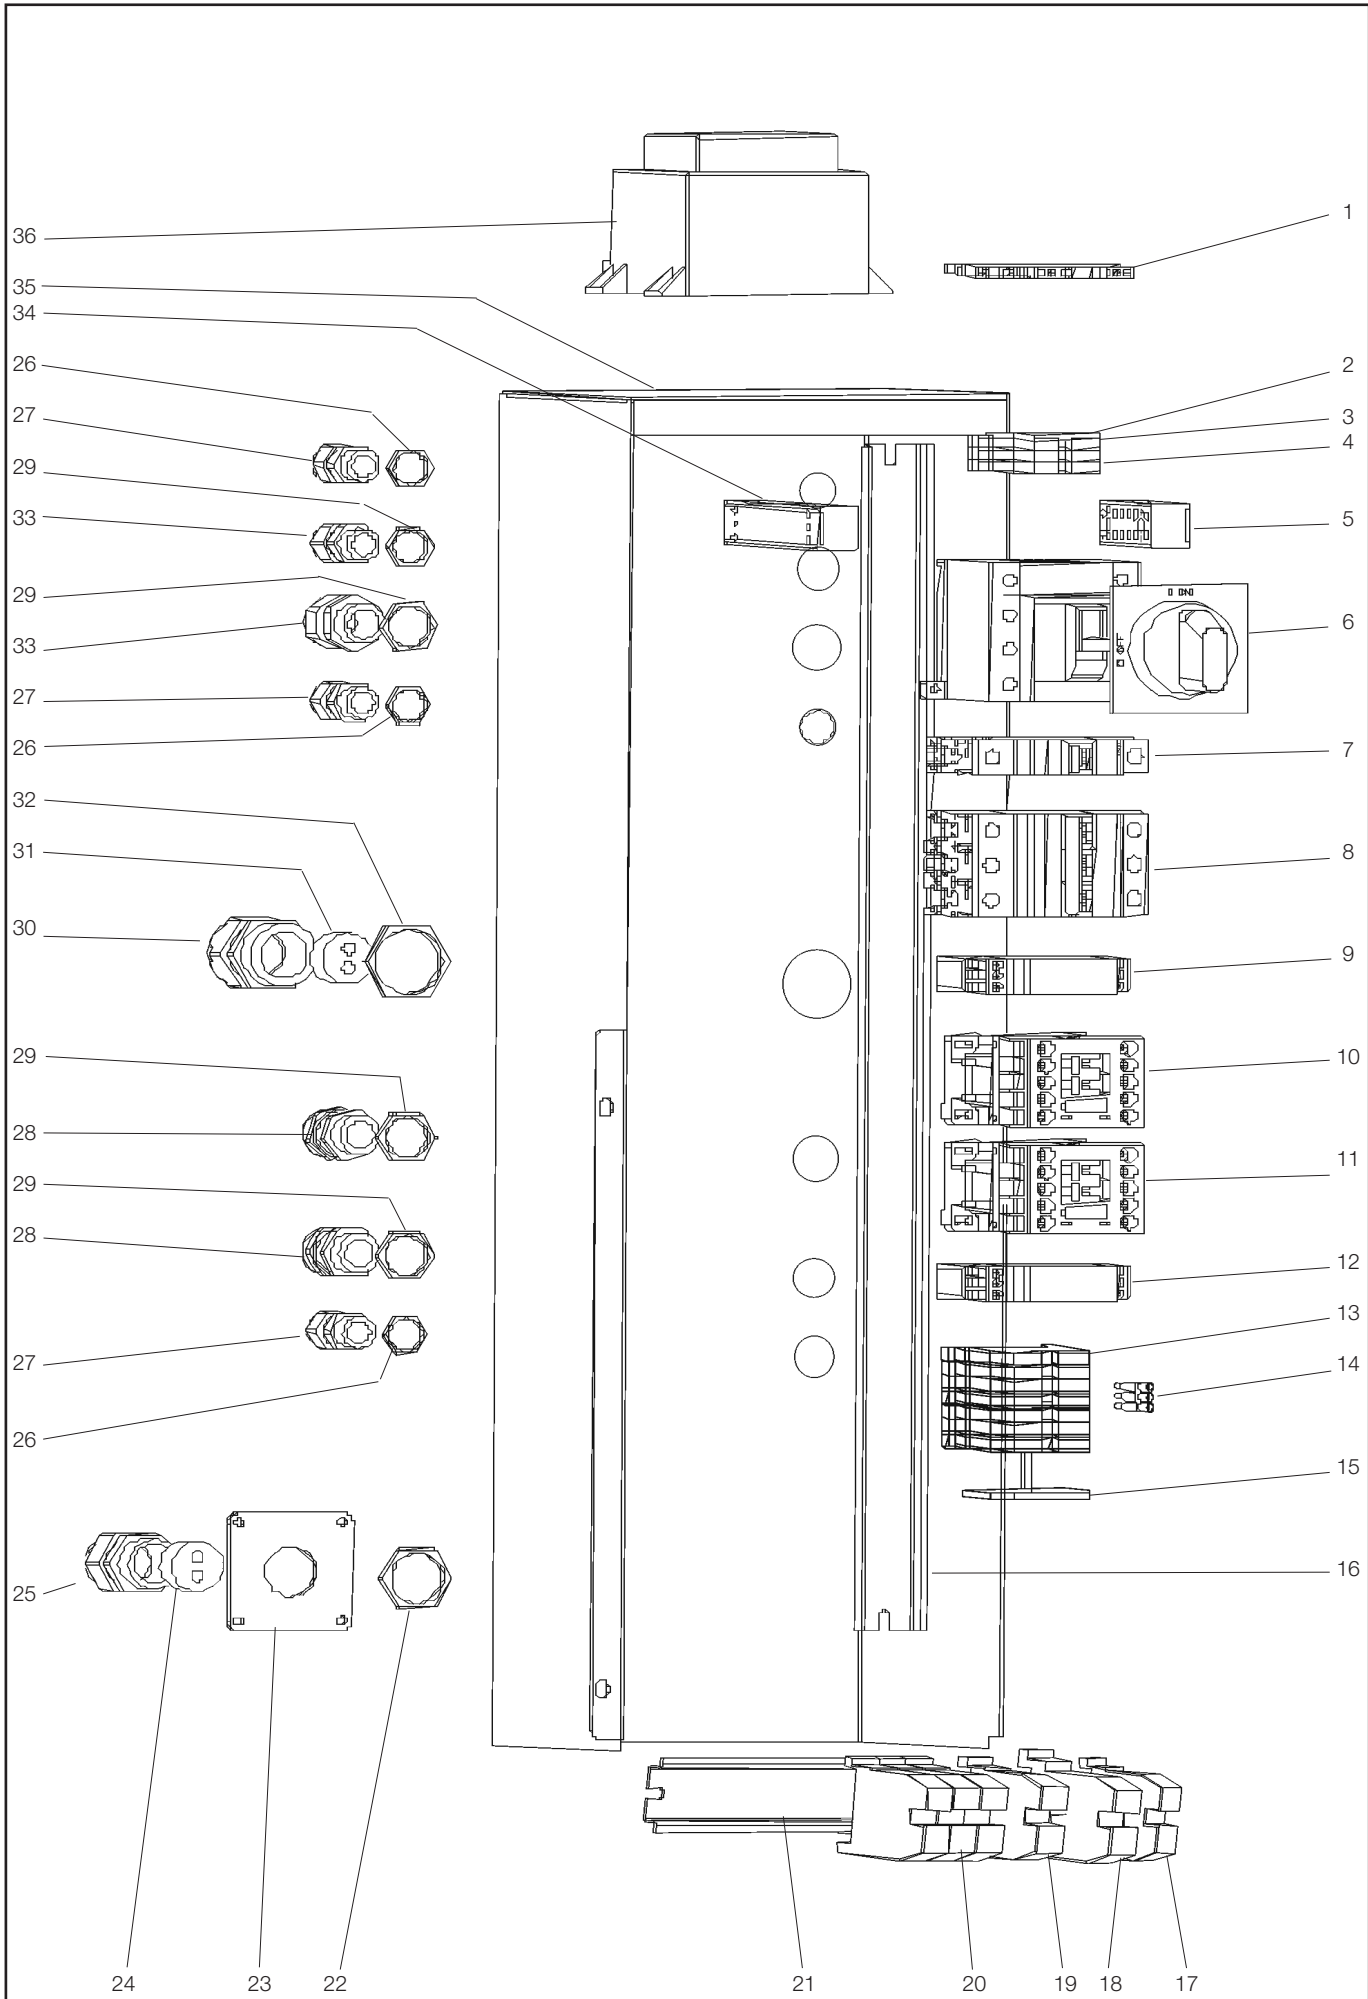


ILLUSTRATION 21804

Ellåda, Ånguppvärmd 50-100L
Electric box, Steam heated 50-100L
Eletrischebüsche, Dampfbeheiz 50-100L

Illustration 21804

Utgåva
Edition
Ausgabe
2

Månad
Month
Monat
09

År
Year
Jahr
2017

Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.
	[		SMB,SMV, SMP SVI			
1	1 1	ST0 88 76-01	Interface relä	Interface relay	Interface-Relais	1). 2). 24VUC
2	1 1 2 -	552 22 54-00 552 22 54-00	Ändplatta Ändplatta	End plte End plte	Endplatte Endplatte	1). 2). 2,5-10 3).2, 5-10
3	3 3	552 22 51-02	Kopplingsplint Blå 4	Block terminal Blue 4	Klemmenbrett Blau 4	
4	4 5	552 22 52-02	Kopplingsplint G/G 4	Block terminal Y/G 4	Klemmenbrett G/G 4	
5	1 1	ST0 93 66-00	BK6 - plintlist	BK6 - Terminal	BK6 - Plintlist	1). 2).
6	1 1 1 1 1 1	ST1 06 74-00 ST1 06 74-61 ST1 06 74-50	Allpolig huvudbrytare Axel Vred	Switch Shaft Knob	Schalter Achse Drehknopf	64A
7	1 1	ST1 06 71-03	Säkringsautomat 13F2	Automatic fuse 13F2	Automatsicherung 13F2	3A
8	1 1	ST1 06 73-10	Säkringsautomat 12F2	Automatic fuse 12F2	Automatsicherung 12F2	1). 2). 3P,10A
9	1 1	ST1 06 67-00	Tidrelä	Time relay	Zeitrelais	1). 2). 1CO 24V
10	1 1	ST1 06 68-00	Kontaktor 15K6	Contactor 15K6	Kontaktor 15K6	1).2). 4kW, 24VAC
11	1 1	ST1 06 68-00	Kontaktor 14K4	Contactor 14K4	Kontaktor 14K4	1).2). 4kW, 24VAC
12	1 1 1 1	ST1 06 70-00 ST1 06 68-51	Relä Sockel	Relay Mounting slide	Relais Montagescheine	4CO 24VAC
13	x x	552 22 50-02	Kopplingsplint Grå 4	Block terminal Grey 4	Klemmenbrett Grau 4	
14	1 1	552 22 56-06	Överkopplingsbrygga 3/4	Bridge 3/4	Überbrückung 3/4	
15	1 1	552 22 54-00	Ändplatta	End plte	Endplatte	2,5-10
16	1 1	475 93 46-26	Monteringsskena	Mounting slide	Montagescheine	L=600
17	1 1	552 22 52-05	Kopplingsplint G/G 16	Block terminal Y/G 16	Klemmenbrett G/G 16	
18	1 1	552 22 52-06	Kopplingsplint G/G 35	Block terminal Y/G 35	Klemmenbrett G/G 35	
19	1 1	552 22 51-06	Kopplingsplint Blå35	Block terminal Blue 35	Klemmenbrett Blau 35	
20	3 3 1 1	552 22 50-06 552 22 50-06	KopplingsplintGrå35 KopplingsplintGrå35	Block terminal Grey 35 Block terminal Grey 35	Klemmenbrett Grau 35 Klemmenbrett Grau 35	1). 2). 3).
21	1 1	475 93 46-09	Monteringsskena	Mounting slide	Montagescheine	L=155
22	1 1 1 1	ST0 28 64-06 ST0 28 64-04	Mutter Mutter	Nut Nut	Mutter Mutter	3). M40x1,5 1). 2). M25x1,5
23	1 1	ST0 93 90-00	Täckbricka	Cover plate	Deckplatte	
24	1 1	ST0 93 54-10	Tätning	Seal	Dichtung	1). 2). M25x1,5
25	1 - - 1 1 -	ST0 32 90-06 ST0 31 45-13 ST0 31 45-11	Blindpropp Kabelförskruvning Kabelförskruvning	Blind plug Conduit entry Conduit entry	Blindstopfen Verschraubung Verschraubung	3). M40x1,5 1). 2). M40x1,5 1). 2). M25x1,5
26	3 3	ST0 28 64-02	Mutter	Nut	Mutter	M16x1,5
27	3 3	ST0 31 45-09	Kabelförskruvning	Conduit entry	Verschraubung	M16x1,5

Fet stil = Ändring
Bold print = Change
Fettdruck = Änderung

1). Smart Promix
2). Smart Variomix
3). Smart

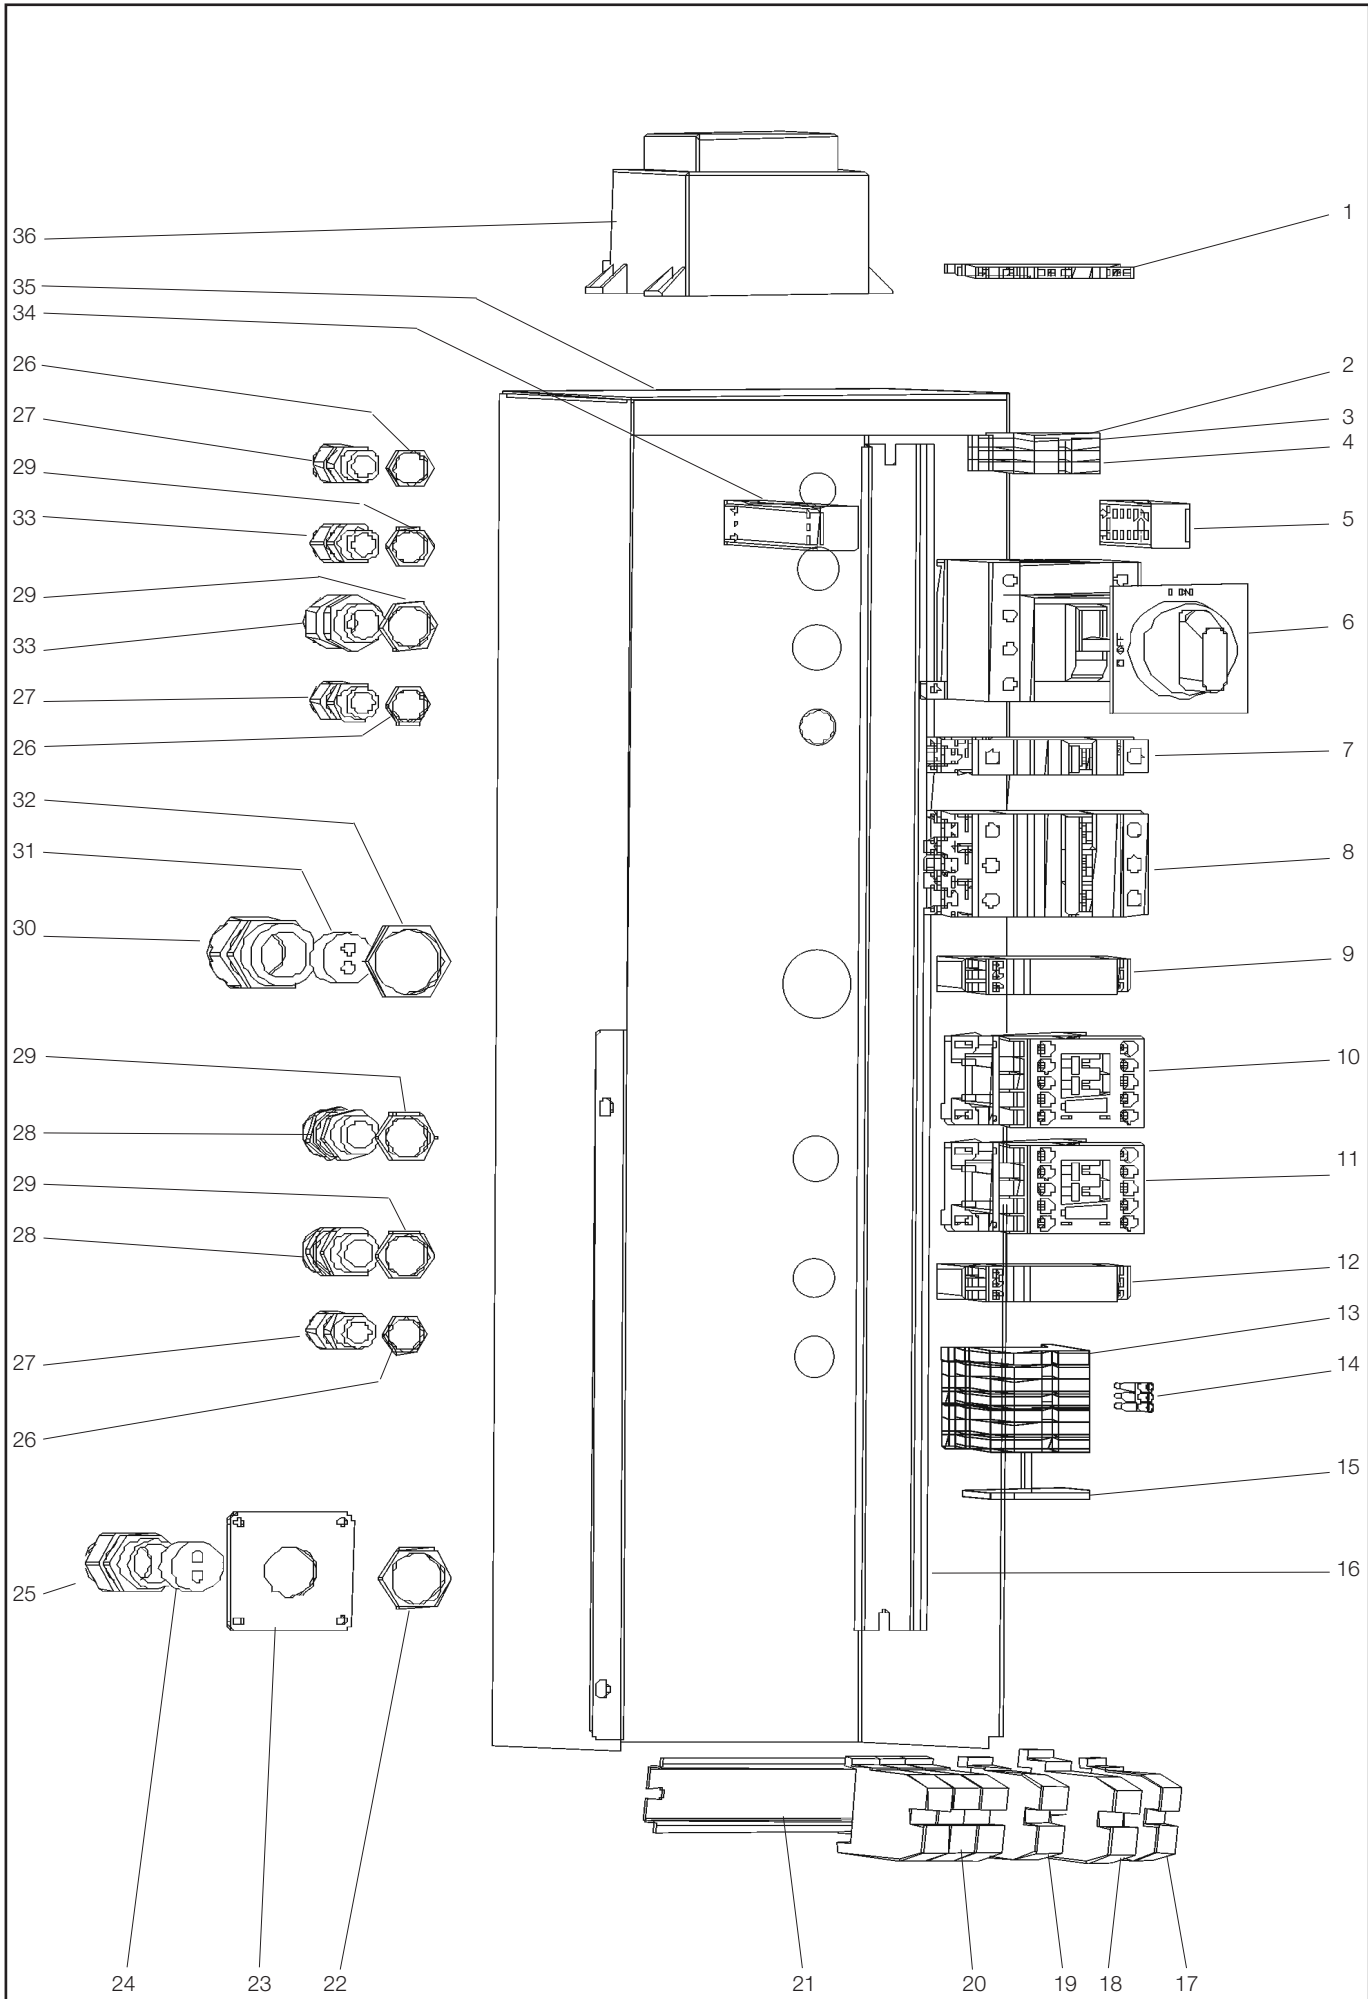


ILLUSTRATION 21804

Ellåda, Ånguppvärmd 50-100L
 Electric box, Steam heated 50-100L
 Elektrischebüsche, Dampfbeheiz 50-100L

Illustration 21804

Utgåva
Edition
Ausgabe
2

Månad
Month
Monat
09

År
Year
Jahr
2017

Pos.	Antal Quantity Anzahl		Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.
	[			SMB,SMV, SMP SVI			
28	2	2	ST0 36 56-02	Kabelförskruvning	Conduit entry	Verschraubung	M20x1,5
29	3	3	ST0 28 64-03	Mutter	Nut	Mutter	M20x1,5
30	1	1	ST0 31 45-12	Kabelförskruvning	Conduit entry	Verschraubung	1). 2). M32
31	1	-	ST0 93 54-18	Tätning	Seal	Dichtung	3). M32x1,5
	1	1	ST0 93 54-10	Tätning	Seal	Dichtung	1). 2). M25x2x6,0
32	1	1	ST0 28 64-05	Mutter	Nut	Mutter	M32x1,5
33	2	2	ST0 31 45 -10	Kabelförskruvning	Conduit entry	Verschraubung	M20x1,5
34	1	1	ST0 93 66-02	BK12 - plintlist	BK12 - Terminal	BK12 - Plintlist	1). 2).
35	1	1	ST0 99 91-00	Ellåda	Electric box	Electrischebüsche	
36	1	1	ST0 99 56-00	Transformator	Transformer	Transformator	5). 230-24V/10V AC

Fet stil = Ändring
 Bold print = Change
 Fettdruck = Änderung

1). Smart Promix
 2). Smart Variomix
 3). Smart

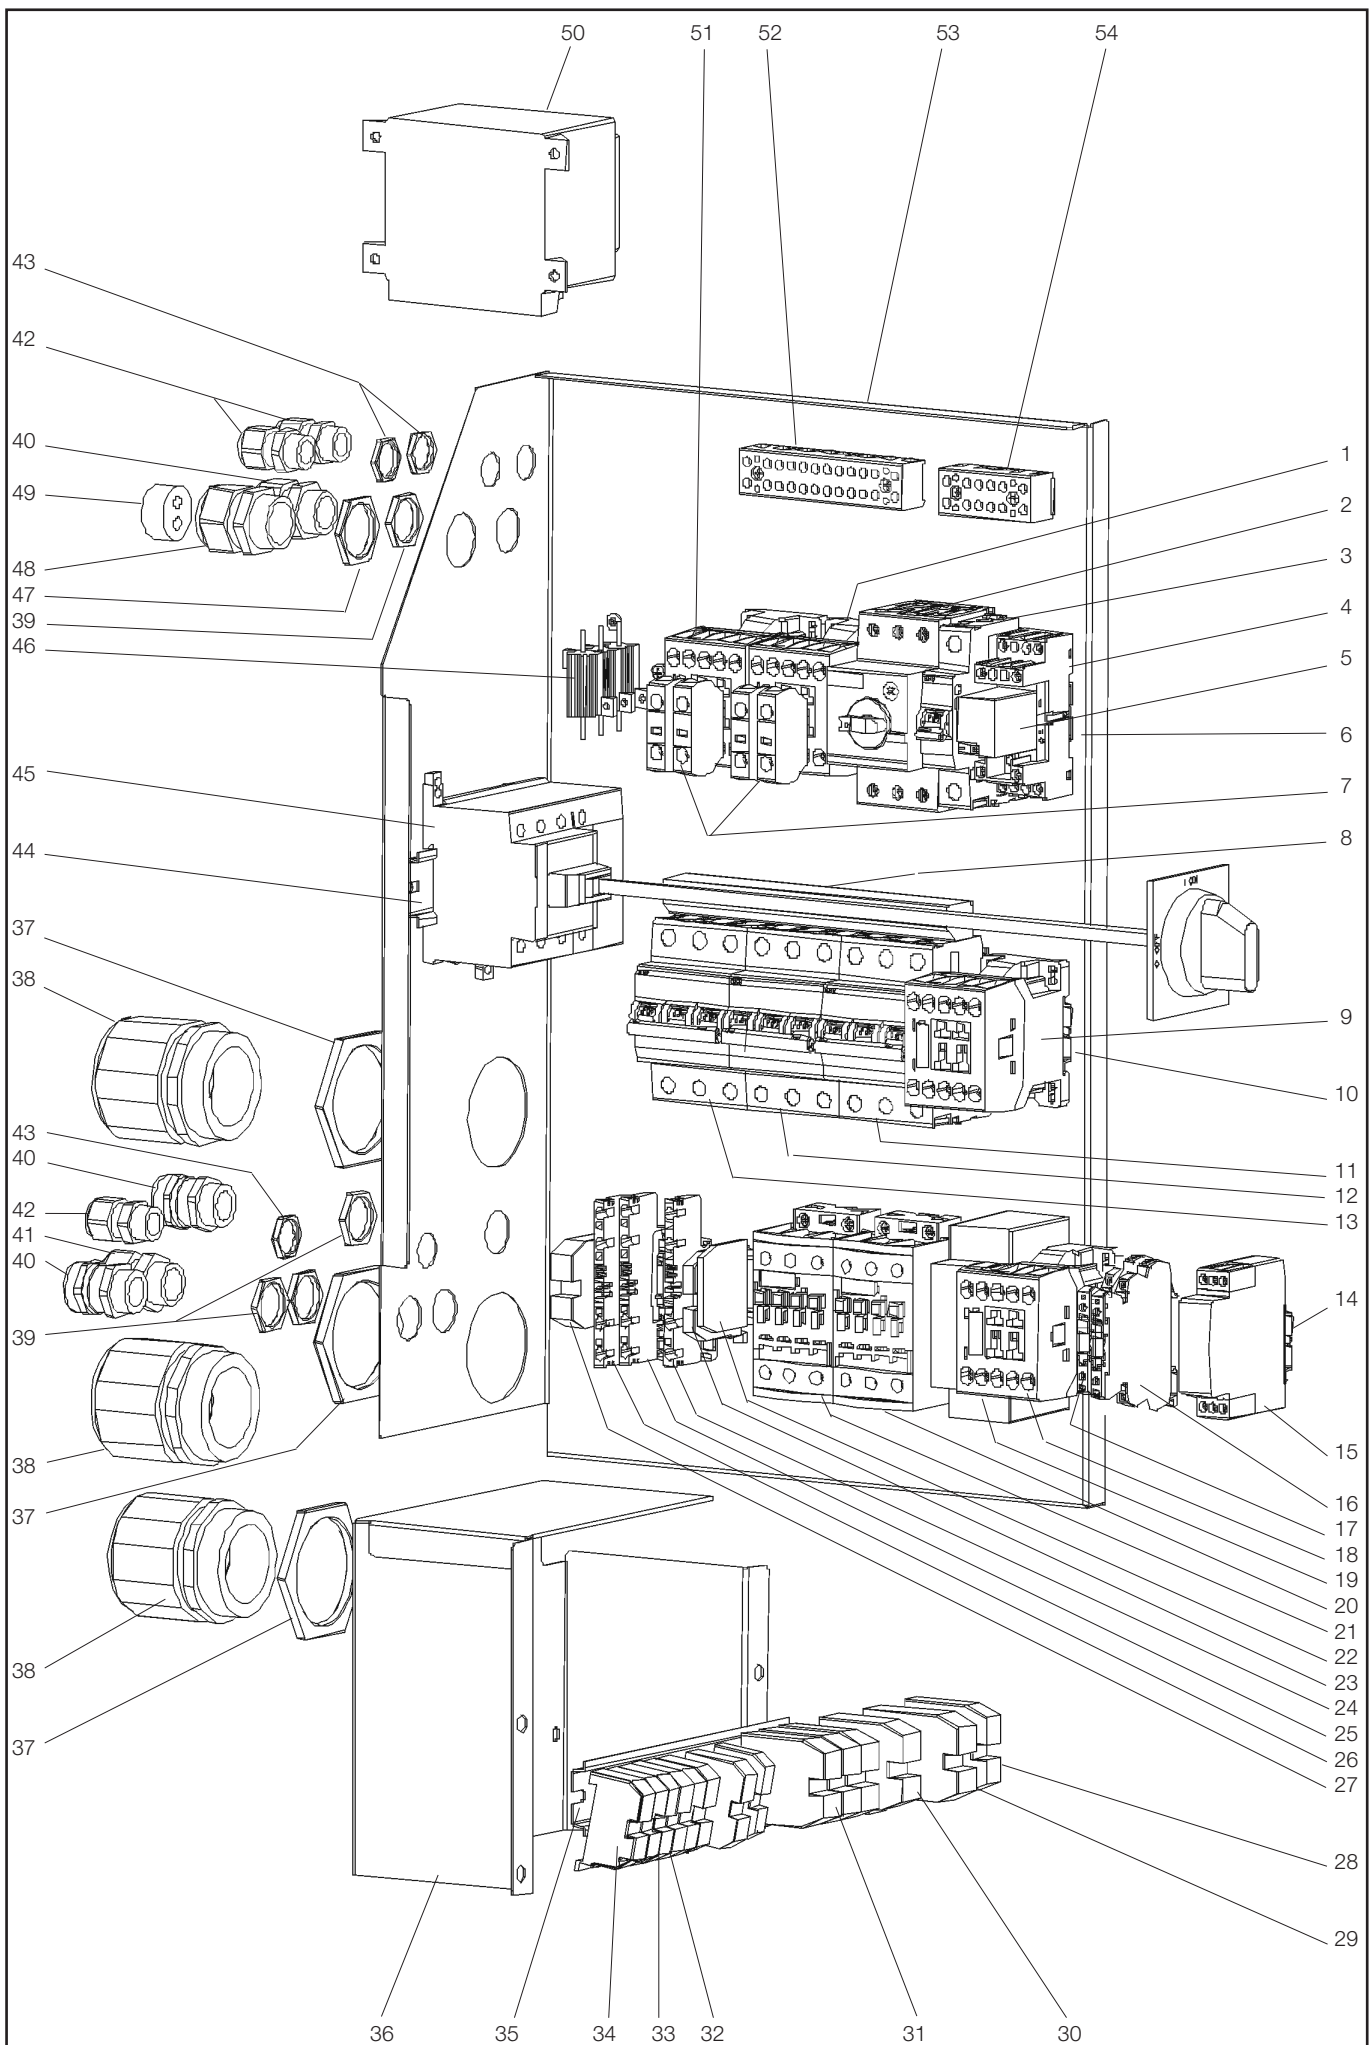


ILLUSTRATION 21805

Ellåda,eluppvärmd 150-300L Electric box, electrical heated150-300L Eletrischebüsche, El. beheiz 150-300L					Illustration 21805		Utgåva Edition Ausgabe 3	Månad Month Monat 09	År Year Jahr 2017
Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.			
	[[[	150 L 200 L 300 L							
1	1 1 1	ST1 06 68-00	Kontaktor 18K5	Contactor 18K5	Kontaktor 18K5	1).2). 4kW, 24VAC 1,6-2,5 A			
2	1 1 1	ST1 07 58-07	Motorskydds brytare	Motor protection switch	Motorschuttschalter				
3	1 1 1	ST1 06 71-03	Säkringsautomat	Automatic fuse	Automatsicherung	3A			
4	1 1 1	ST1 06 70-50	Sockel	Mounting slide	Montagescheine				
5	1 1 1	ST1 06 70-01	Relä	Relay	Relais	1). 2). 2CO 24VAC L=180			
6	1 1 1	475 93 46-07	Monteringsskena	Mounting slide	Montageschiene				
7	4 4 4	ST1 06 68-51	Hjälpkontaktblock(röd)	Support contact plate(red)	Hilfskontaktblech(Rot)	1NC			
8	1 1 1 1 1 1	552 55 08-02 552 55 08-03	3_fasskena 2grup. 3_fasskena 3grup.	3-fase rail 2grup 3-fase rail 3grup	3-fase Schiene 2grup 3-fase Schiene 3grup	3). 5). 1). 2).			
9	1 1 1	ST1 06 68-00	Kontaktor 14K4	Contactor 14K4	Kontaktor 14K4	1).2). 4kW, 24VAC L=210			
10	1 1 1	475 93 46-20	Monteringsskena	Mounting slide	Montageschiene				
11	- 1 1 1 - -	ST1 06 73-16 ST1 06 73-10	Säkringsautomat Säkringsautomat	Automatic fuse Automatic fuse	Automatsicherung Automatsicherung	1). 2). 4). 3P,16A 1). 2). 4). 3P,10A			
12	- 1 1 1 - -	ST1 06 73-40 ST1 06 73-25	Säkringsautomat Säkringsautomat	Automatic fuse Automatic fuse	Automatsicherung Automatsicherung	3P,40A 3P,25A			
13	1 1 1	ST1 06 73-40	Säkringsautomat	Automatic fuse	Automatsicherung	3P,40A L=280			
14	1 1 1	475 93 46-04	Monteringsskena	Mounting slide	Montageschiene				
15	1 1 1	ST1 01 78-00	Relä, vattennivå kontroll	Relay, water level control	Relais, Wasserstandsregelung	1). HNM 24VAC 1). 24VUC			
16	1 1 1	ST1 07 59-00	Interface relä	Interface relay	Interface-Relais				
17	1 1 1	ST1 07 59-00	Interface relä	Interface relay	Interface-Relais	1). 2). 24VUC 1).2). 4kW, 24VAC			
18	1 1 1	ST1 06 68-00	Kontaktor 15K6	Contactor 15K6	Kontaktor 15K6				
19	1 1 1	ST1 06 67-00	Tidrelä	Time relay	Zeitrelais	1). 2). 1CO 24V			
20	- 1 1 1 - -	ST1 06 69-03 ST1 06 68-03	Kontaktor 18K3 Kontaktor 18K3	Contactor 18K3 Contactor 18K3	Kontaktor 18K3 Kontaktor 18K3	1).2). 11kW, 24VAC 1).2). 4kW, 24VAC			
21	- 1 1 1 - -	ST1 06 69-03 ST1 06 68-03	Kontaktor 18K2 Kontaktor 18K3	Contactor 18K2 Contactor 18K3	Kontaktor 18K2 Kontaktor 18K3	1).2). 11kW, 24VAC 1).2). 4kW, 24VAC			
22	1 1 1	552 22 55-00	Ändplatta	End pte	Endplatte	1). 2). 2,5-70			
23	2 2 2	552 22 51-02	Kopplingsplint Blå 4	Block terminal Blue 4	Klemmenbrett Blau 4				
24	1 1 1	ST1 07 56-00	Plint N	Block N	Klemme N				
25	1 1 1	ST1 07 57-00	Plint PE	Block PE	Klemme PE				
26	1 1 1	ST1 07 57-00	Plint PE	Block PE	Klemme PE				
27	1 1 1	552 22 52-06	Kopplingsplint G/G 35	Block terminal Y/G 35	Klemmenbrett G/G 35				
28	1 1 1	552 22 52-05	Kopplingsplint G/G 16	Block terminal Y/G 16	Klemmenbrett G/G 16	6).			
			1). Smart Promix 2). Smart Variomix 3). Smart 4). Kokgryta med tillval isvattenkylning Boiling pans with option ice water cooling Kochtöpfe mit ICE Option Eiswasser-Kühlung 5). Kokgryta med tillval dubbelmatad anslutning Boiling pans with option dual electrical connection cable Kochtöpfe mit doppelter elektrischer Verbindung 6). EPC (Energy Peak Control)						
Fet stil = Ändring Bold print = Change Fettdruck = Änderung									

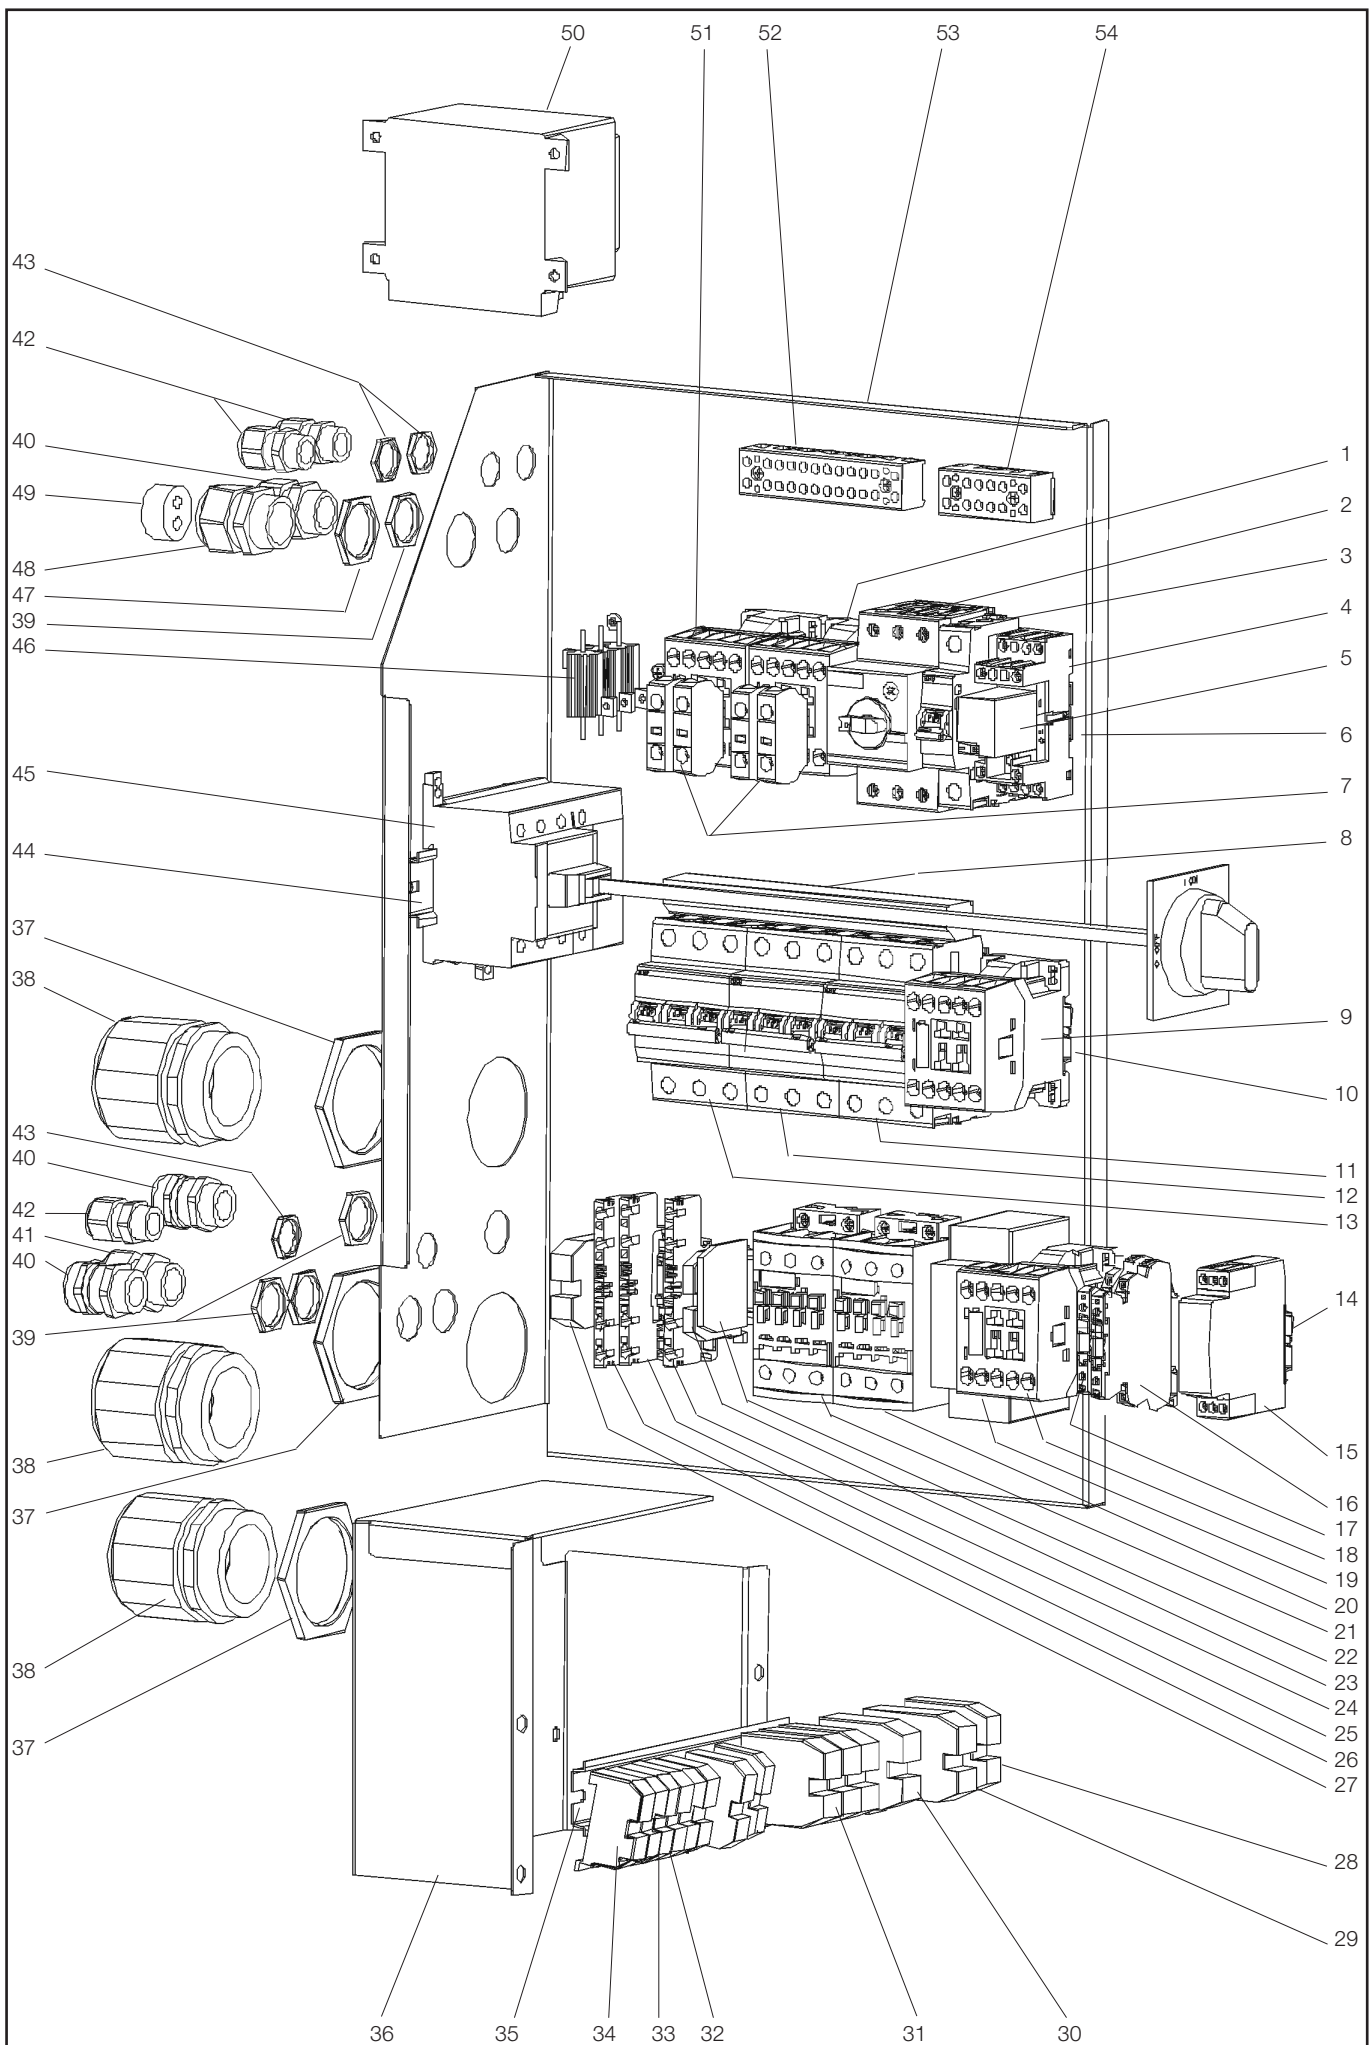


ILLUSTRATION 21805

Ellåda, eluppvärmd 150-300L Electric box, electrical heated150-300L Eletrischebüsche, El. beheiz 150-300L					Illustration 21805		Utgåva Edition Ausgabe 3	Månad Month Monat 09	År Year Jahr 2017
Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.			
	[[[	150 L 200 L 300 L							
29	1 1 1	552 22 52-06	Kopplingsplint G/G 35	Block terminal Y/G 35	Klemmenbrett G/G 35				
30	1 1 1	552 22 51-06	Kopplingsplint Blå 35	Block terminal Blue 35	Klemmenbrett Blau 35				
31	3 3 3	552 22 50-06	Kopplingsplint Grå 35	Block terminal Grey 35	Klemmenbrett Grau 35				
32	6 6 6	552 22 50-02	Kopplingsplint Grå 4	Block terminal Grey 4	Klemmenbrett Grau 4	6).			
33	1 1 1	552 22 51-02	Kopplingsplint Blå 4	Block terminal Blue 4	Klemmenbrett Blau 4	6).			
34	1 1 1	552 22 50-02	Kopplingsplint Grå 4	Block terminal Grey 4	Klemmenbrett Grau 4	6).			
35	1 1 1	475 93 46-23	Monteringsskena	Mounting slide	Montageschiene	L=175			
36	1 1 1	428 06 34-00	Fäste	Attachment	Befestigung				
37	3 3 3	ST0 28 64-07	Mutter	Nut	Mutter	M50x1,5			
38	3 3 3	ST0 31 45-14	Kabelförskruvning	Pipe nipple and nut	Verschraubung	M50x1,5			
39	4 4 4	ST0 28 64-03	Mutter	Nut	Mutter	M20x1,5			
40	1 1 1	ST0 31 45-10	Kabelförskruvning	Conduit entry	Verschraubung	1). 2). M20			
41	2 2 2	ST0 36 56-02	Kabelförskruvning	Conduit entry	Verschraubung	1). 2). M20x1,5			
42	2 2 2	ST0 31 45-09	Kabelförskruvning	Conduit entry	Verschraubung	M16x1,5			
43	2 2 2	ST0 28 64-02	Mutter	Nut	Mutter	M16x1,5			
44	1 1 1	475 93 46-08	Monteringsskena	Mounting slide	Montageschiene	L=110			
45	1 1 1	ST1 06 74-00	Allpolig brytare	Main switch	Hauptschalter	1). 2). 3). 4P. 64A			
	1 1 1	ST1 06 74-61	Axel	Shaft	Achse				
	1 1 1	ST1 06 74-50	Vred	Knob	Drehknopf				
	- 1 1	ST1 06 74-02	Allpolig dubbelbrytare	Doubel switch	Doppelschalter	5).			
	- 1 1	ST1 06 74-63	Axel	Shaft	Achse	8P. 64A			
	- 1 1	ST1 06 74-51	Vred	Knob	Drehknopf				
46	3 3 3	428 02 03-00	Effektmotstånd	Power resistance	Leistungswiderstand	25kW			
47	1 1 1	ST0 28 64-04	Mutter	Nut	Mutter	M25x2			
48	1 1 1	ST0 31 45-11	Kabelförskruvning	Conduit entry	Verschraubung	1). 2). M25x1,5			
49	1 1 1	ST0 32 90-04	Blindpropp	Blind plug	Blindstopfen	3).			
	1 1 1	ST0 93 54-10	Tätning	Seal	Dichtung	1). 2). M25x1,5			
50	1 1 1	ST0 99 56-00	Transformator	Transformer	Transformator	230-24V/10V AC			
51	1 1 1	ST1 06 68-00	Kontaktor 18K6	Contactor 18K6	Kontaktor 18K6	1). 2). 4kW, 24VAC			
52	1 1 1	ST0 93 66-02	BK12 - plintlist	BK12 - terminal	BK12 - Plintlist	1). 2).			
53	1 1 1	ST0 99 90-00	Ellåda	Electric box	Elektrischebüsche				
54	1 1 1	ST0 93 66-00	BK6 - plintlist	BK6 - terminal	BK6 - Plintlist				
			1). Smart Promix						
			2). Smart Variomix						
			3). Smart						
			4). Kokgryta med tillval isvattenkylning						
			Boiling pans with option ice water cooling						
			Kochtöpfe mit ICE Option Eiswasser-Kühlung						
			5). Kokgryta med tillval dubbelmatad anslutning						
			Boiling pans with option dual electrical connection cable						
			Kochtöpfe mit doppelter elektrischer Verbindung						
			6). EPC (Energy Peak Control)						
Fet stil = Ändring									
Bold print = Change									
Fettdruck = Änderung									

ILLUSTRATION 21806

Ellåda,ånguppvärmd 150-300L Electric box, Steam heated150-300L Eletrischebüsche, Dampfbeheiz 150-300L					Illustration 21806		Utgåva Edition Ausgabe 2	Månad Month Monat 09	År Year Jahr 2017
Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.			
	[[[	150 L 200 L 300 L							
1	1 1 1	ST0 93 66-02	BK12 - plintlist	BK12 - terminal	BK12 - Plintlist	1). 2).			
2	1 1 1	ST0 93 66-00	BK6 - plintlist	BK6 - terminal	BK6 - Plintlist				
4	1 1 1	ST1 06 68-00	Kontaktor 18K5	Contactor 18K5	Kontaktor 18K5	1).2). 4kW, 24VAC			
3	1 1 1	ST1 06 68-00	Kontaktor 18K6	Contactor 18K6	Kontaktor 18K6	1).2). 4kW, 24VAC			
5	1 1 1	ST1 07 58-07	Motorskyddsbrytare	Motor protection switch	Motorschuttschalter	1,6-2,5 A			
6	1 1 1	ST1 06 71-03	Säkringsautomat	Automatic fuse	Automatsicherung	3A			
7	1 1 1	475 93 46-07	Monteringsskena	Mounting slide	Montageschiene	L=180			
8	1 1 1	ST1 06 70-01	Relä	Relay	Relais	1). 2). 2CO 24VAC			
9	1 1 1	ST1 06 70-50	Sockel	Mounting slide	Montagescheine	1NC			
10	4 4 4	ST1 06 68-51	Hjälpkontaktblock(röd)	Support contact plate(red)	Hilfskontaktblech(Rot)				
11	1 1 1	475 93 46-20	Monteringsskena	Mounting slide	Montageschiene	L=210			
12	1 1 1	ST1 06 68-00	Kontaktor 14K4	Contactor 14K4	Kontaktor 14K4	1).2). 4kW, 24VAC			
13	1 1 1	ST1 06 73-16	Säkringsautomat	Automatic fuse	Automatsicherung	1). 2). 4). 3P,16A			
14	7 7 7	552 22 50-02	Kopplingsplint Grå 4	Block terminal Grey 4	Klemmenbrett Grau 4	1). 2). 3).			
15	1 1 1	552 22 56-05	Överkopplingsbrygga	Bridge 4/2	Überbrückung 4/2	1). 2).			
16	1 1 1	475 93 46-04	Monteringsskena	Mounting slide	Montageschiene	L=280			
17	1 1 1	ST1 07 59-00	Interface relä	Interface relay	Interface-Relais	1). 24VUC			
18	1 1 1	ST1 06 67-00	Tidrelä	Time relay	Zeitrelais	1). 2). 1CO 24V			
19	1 1 1	ST1 06 68-00	Kontaktor 15K6	Contactor 15K6	Kontaktor 15K6	1).2). 4kW, 24VAC			
20	1 1 1	552 22 55-00	Ändplatta	End pte	Endplatte	1). 2). 4). 2,5-70			
21	2 2 2	552 22 51-02	Kopplingsplint Blå 4	Block terminal Blue 4	Klemmenbrett Blau 4				
22	1 1 1	ST1 07 56-00	Plint N	Block N	Klemme N				
23	2 2 2	ST1 07 57-00	Plint PE	Block PE	Klemme PE				
24	2 2 2	552 22 52-06	Kopplingsplint G/G 35	Block terminal Y/G 35	Klemmenbrett G/G 35				
25	1 1 1	552 22 52-05	Kopplingsplint G/G 16	Block terminal Y/G 16	Klemmenbrett G/G 16	6).			
26	1 1 1	552 22 51-06	Kopplingsplint Blå 35	Block terminal Blue 35	Klemmenbrett Blau 35				
27	3 3 3	552 22 50-06	Kopplingsplint Grå 35	Block terminal Grey 35	Klemmenbrett Grau 35	L=175			
28	1 1 1	475 93 46-23	Monteringsskena	Mounting slide	Montageschiene				
29	1 1 1	428 06 34-00	Fäste	Attachment	Befestigung				
30	1 1 1	ST0 28 64-07	Mutter	Nut	Mutter	3). M50x1,5			
31	2 2 2	ST0 93 90-00	Täckbricka	Cover plate	Deckplatte				
32	1 1 1	ST0 31 45-14	Kabelförskruvning	Conduit entry	Verschraubung	M50x1,5			
33	4 4 4	ST0 28 64-03	Mutter	Nut	Mutter	M20x1,5			
			1). Smart Promix						
			2). Smart Variomix						
			3). Smart						
			4). Kokgryta med tillval isvattenkylning						
			Boiling pans with option ice water cooling						
			Kochtöpfe mit ICE Option Eiswasser-Kühlung						
			5). Kokgryta med tillval dubbelmatad anslutning						
			Boiling pans with option dual electrical connection cable						
			Kochtöpfe mit doppelter elektrischer Verbindung						
Fet stil = Ändring									
Bold print = Change									
Fettdruck = Änderung									

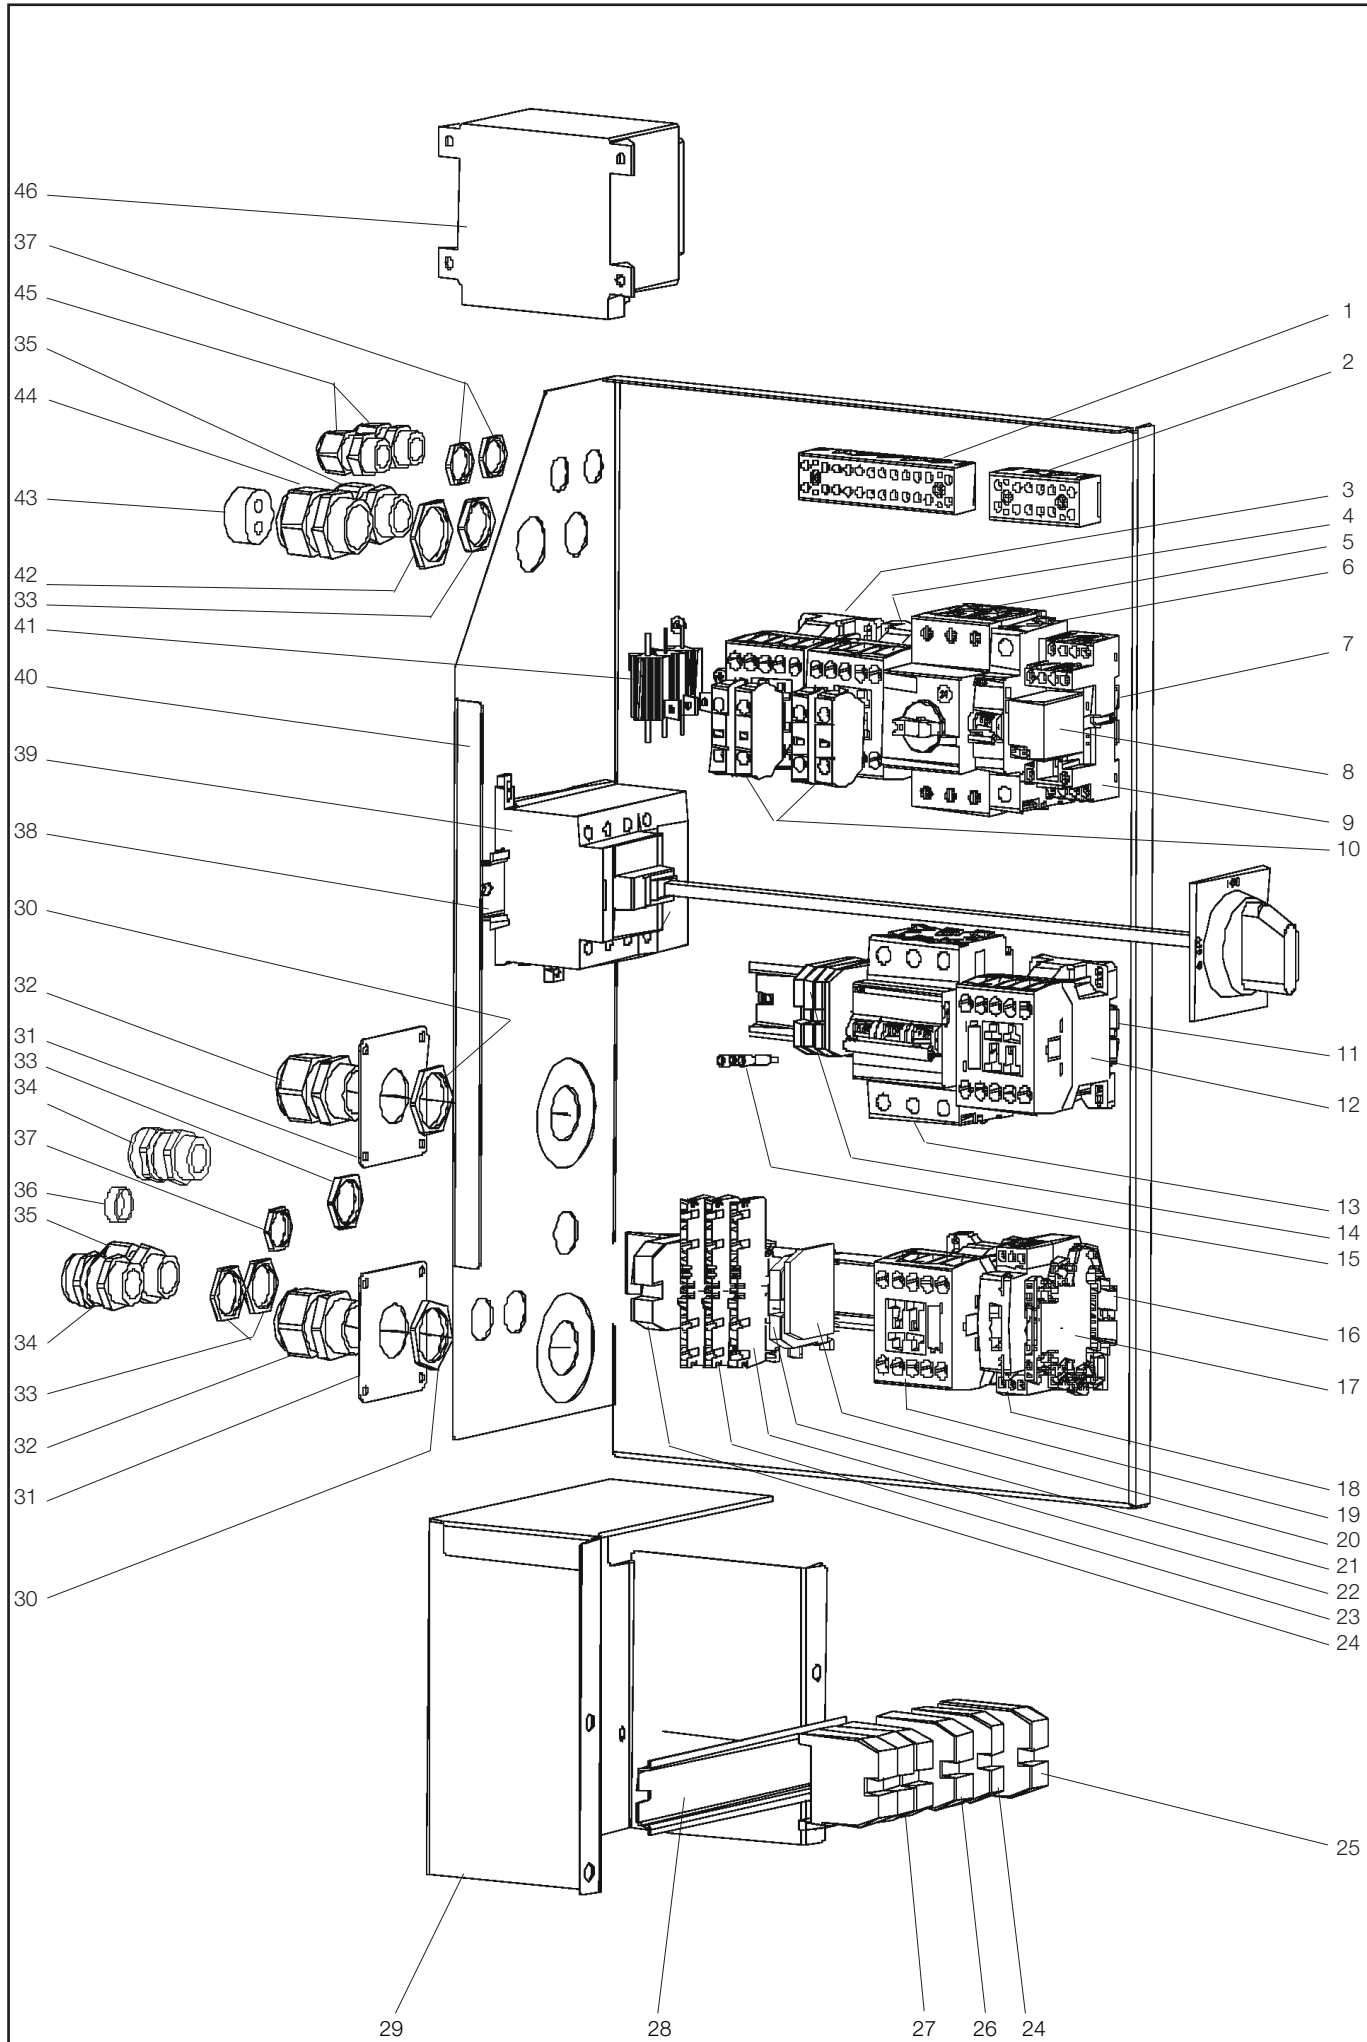


ILLUSTRATION 21806

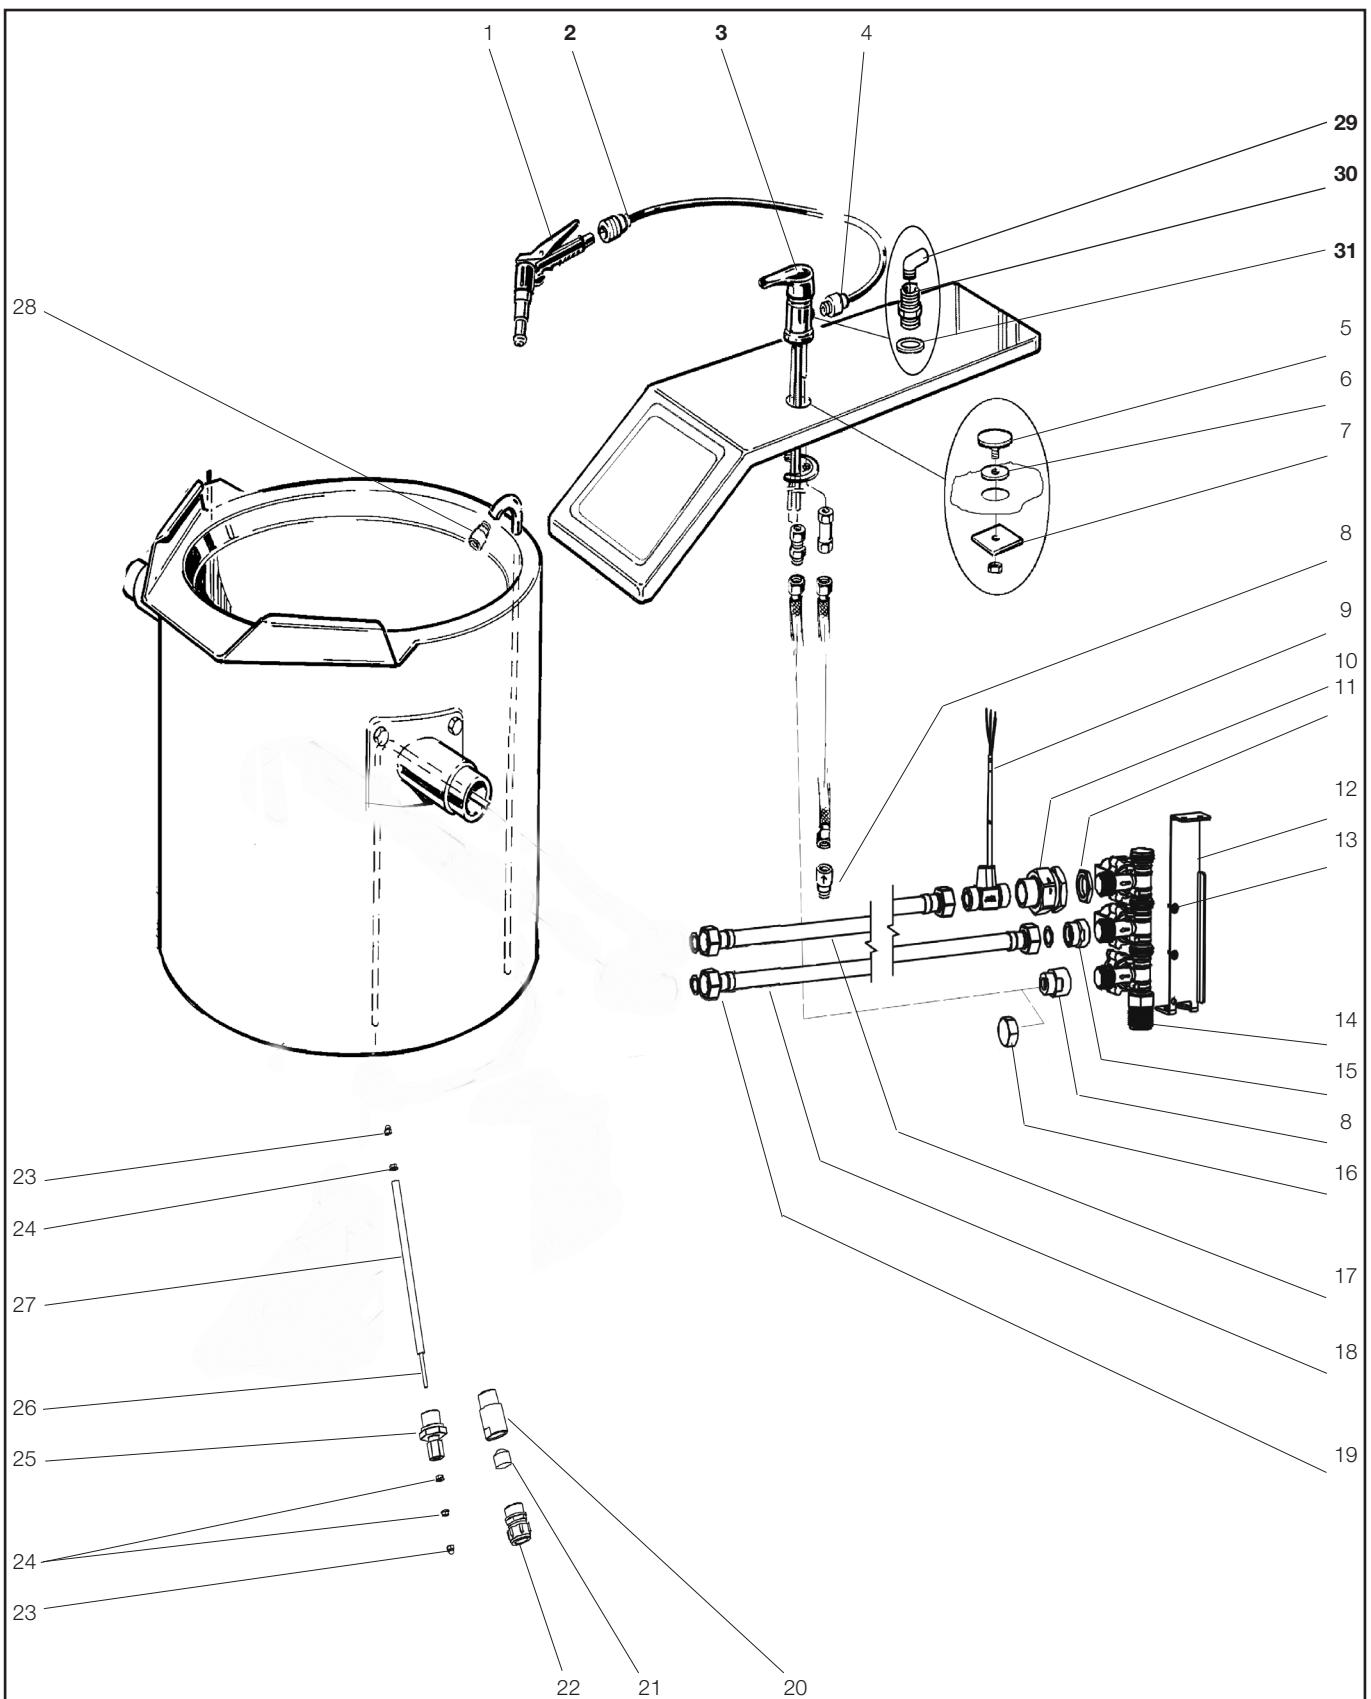


ILLUSTRATION 21807

Vattenanslutning Water connection Wasseranschluss					Illustration 21807		Utgåva Edition Ausgabe 3	Månad Month Monat 09	År Year Jahr 2017
Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.			
	[[[[[[	50L 80L 100L 150L 200L 300L							
1	1 1 1 1 1 1	428 09 33-00	Handdusch	Spary unit	Handdusch	1).			
2	1 1 1 1 1 1	ST1 16 82-00	Slang	Hose	Schlauch	1).			
3	1 1 1 1 1 1 1 1 1 1 1 1	428 09 32-00 ST1 16 81-00	Blandare Blandare	Tap Tap	Wasserhahn Wasserhahn	1). 6). 1). 7).			
4	1 1 1 1 1 1	428 09 32-90	Utloppsnyppel	Outlet nipple	Anslusnyppel	3/8"-M12x1			
5	1 1 1 1 1 1	482 46 76-00	Täckbricka	Cover plate	Deckelplatte	2).			
6	1 1 1 1 1 1	482 46 77-00	Packning	Gasket	Dichtung	2).			
7	1 1 1 1 1 1	482 46 78-00	Bricka	Washer	Scheibe	2).			
8	2 2 2 2 2 2	428 14 71-00	Backventil	Non return valve	Rückschlagventil	3).			
9	1 1 1 1 1 1	ST0 98 29-00	Flödesmätare	Flow meter	Flussmesser	1/2"	495p/l		
10	1 1 1 1 1 1	ST0 94 72-00	Koppling	Coupling	Kupplung				
11	1 1 1 1 1 1	741 11 13-24	Rörmutter	Pipe nut	Rohrmutter	1/2"			
12	1 1 1 1 1 1	ST0 94 73-00	Fäste	Attachment	Befestigung				
13	2 2 2 2 2 2	552 30 00-04	Skruv	Screw	Schrauben	PT-SKX 40x12			
14	1 1 1 1 1 1	ST0 94 70-00	Vattenstam	Water Strain	Wasser Stamm				
15	1 1 1 - - - - - - 1 - - - - - - 1 1	ST0 94 71-01 ST0 94 71-02 ST0 94 71-03	Strypning,Vit Strypning, Orange Strypning, Grå	Reducer, white Reducer, Orange Reducer, Grey	Drosselung, Weiss Drosselung, Orange Drosselung, Grau	50-100L 150L 200-300L			
16	2 2 2 2 2 2	741 61 13-24	Lock	Coupling	Kupplung	1/2"			
17	1 1 1 - - - - - - 1 1 1	ST1 03 49-00 ST1 03 48-00	Slang Slang	Hose Hose	Schlauch Schlauch	3). 3).	1/2"-1/2" 1/2"-1/2"		
18	1 1 1 1 1 1	ST1 03 49-00	Slang	Hose	Schlauch	3).	1/2"-1/2"		
19	1 1 1 1 1 1	ST0 99 97-00	Planpackning	Gasket	Dichtung	3).	1/2"		
20	1 1 1 1 1 1	ST1 03 47-00	Nippel	Nipple	Nippel	3).	1/2"-1/2"		
21	1 1 1 1 1 1	428 10 29-00	Backventil	Non return valve	Rückschlagventil	3).			
			1). Med Handdusch	With Spray unit	Mit Handdusch				
			2). Utan Handdusch	Without Spray unit	Ohne Handdusch				
			3). Tillval mantelkyllning	Option Auto.cooling	Option Mantelkühlung				
			4). Smart Variomix						
			5). Smart Promix						
			6). T.o.m. 2017 vecka 24	To 2017 week 24	Zu 2017 , vochen 24				
			7). Fr.o.m. 2017 vecka 25	From 2017 week 25	Ab. 2017 , vochen 25				
Fet stil = Ändring Bold print = Change Fettdruck = Änderung									

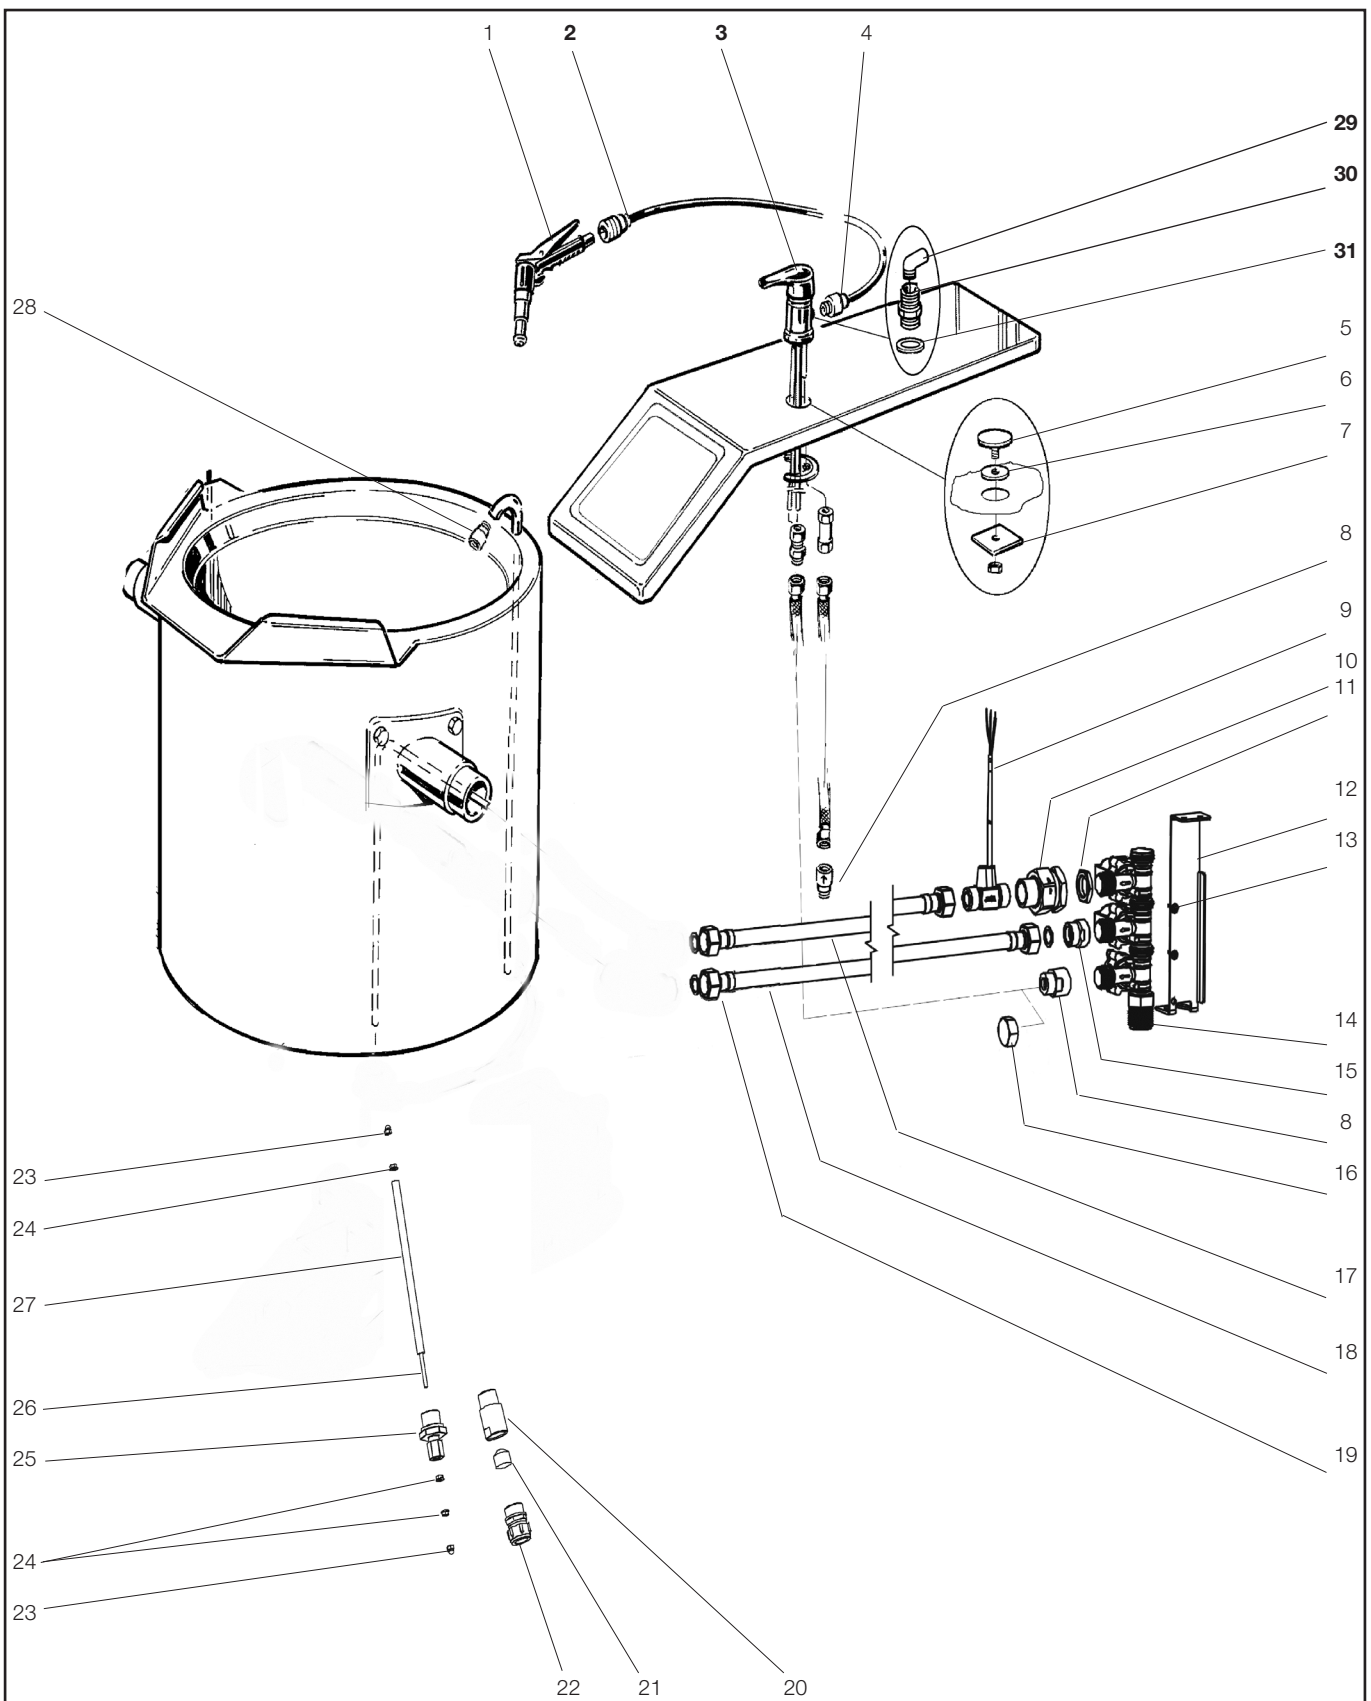


ILLUSTRATION 21807

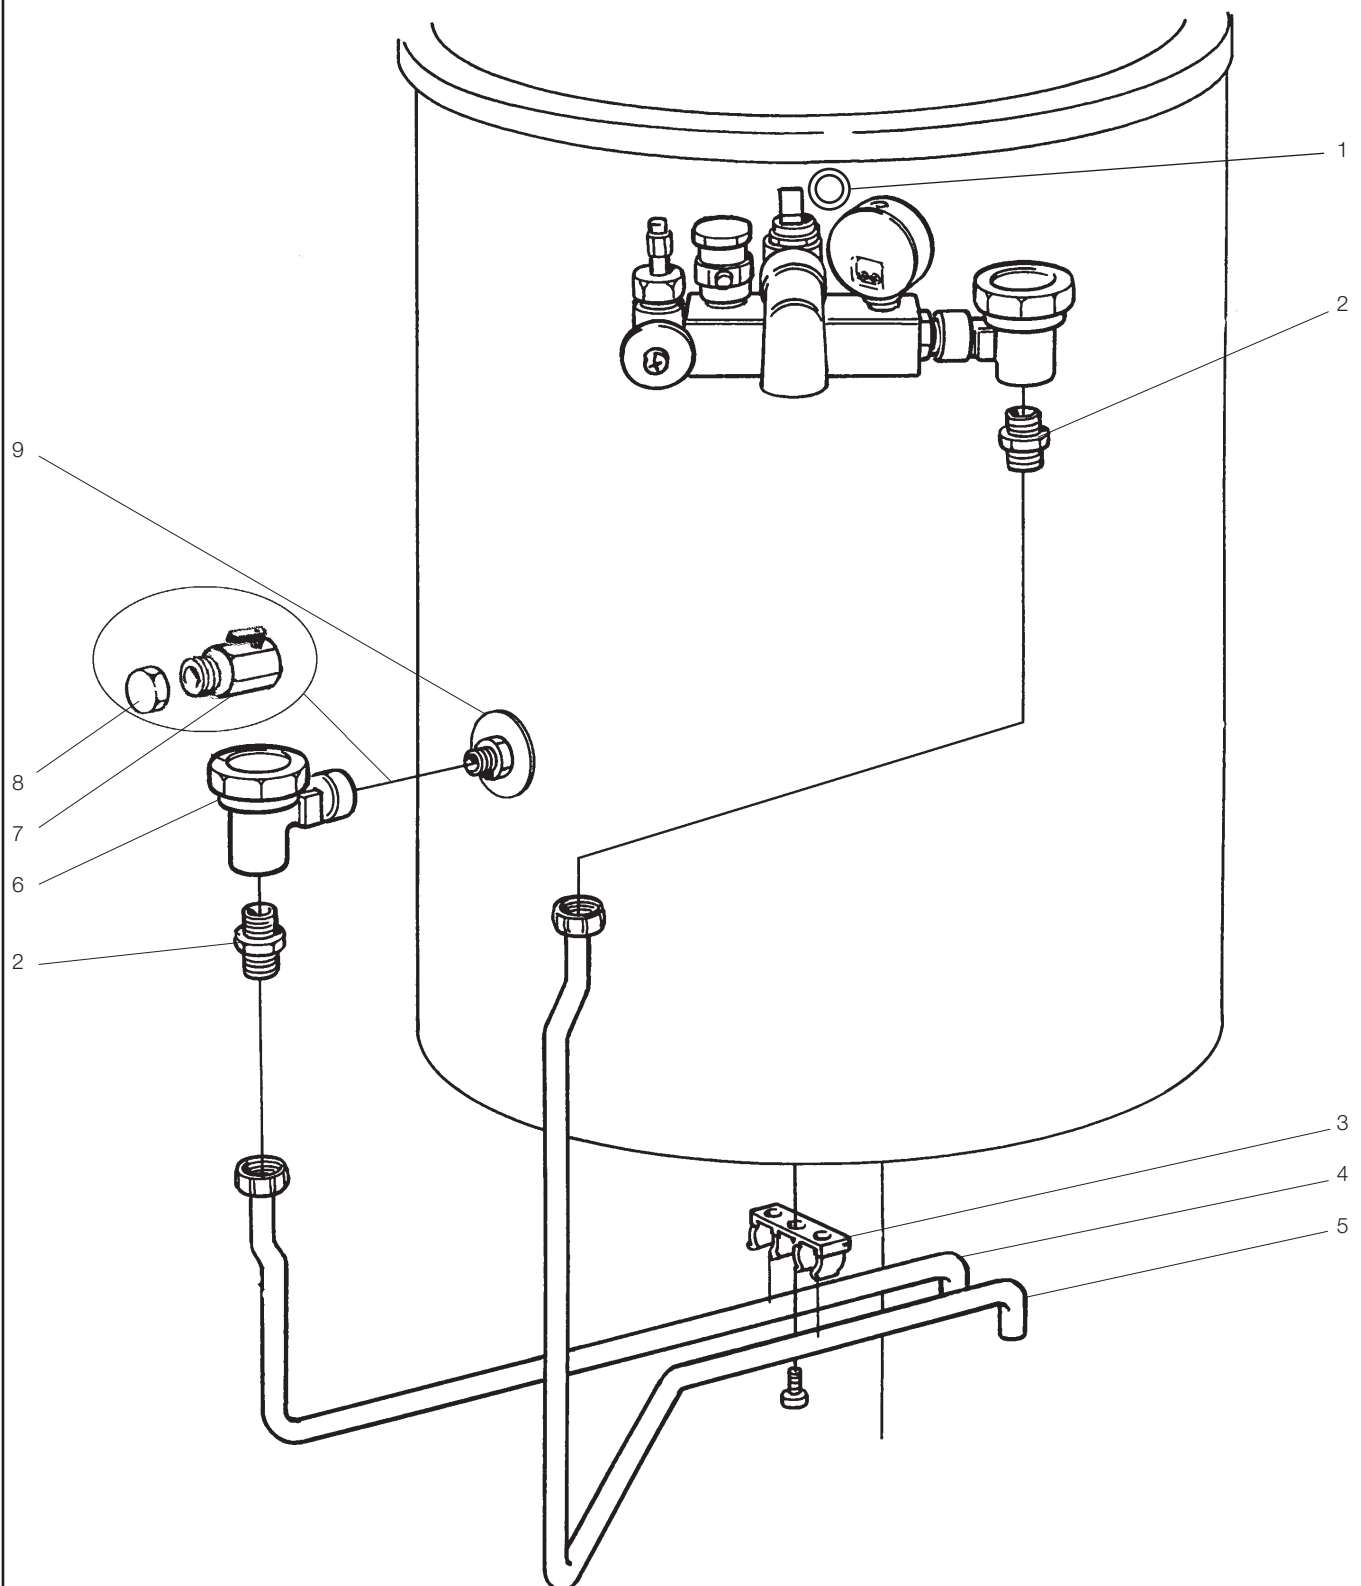


ILLUSTRATION 21812

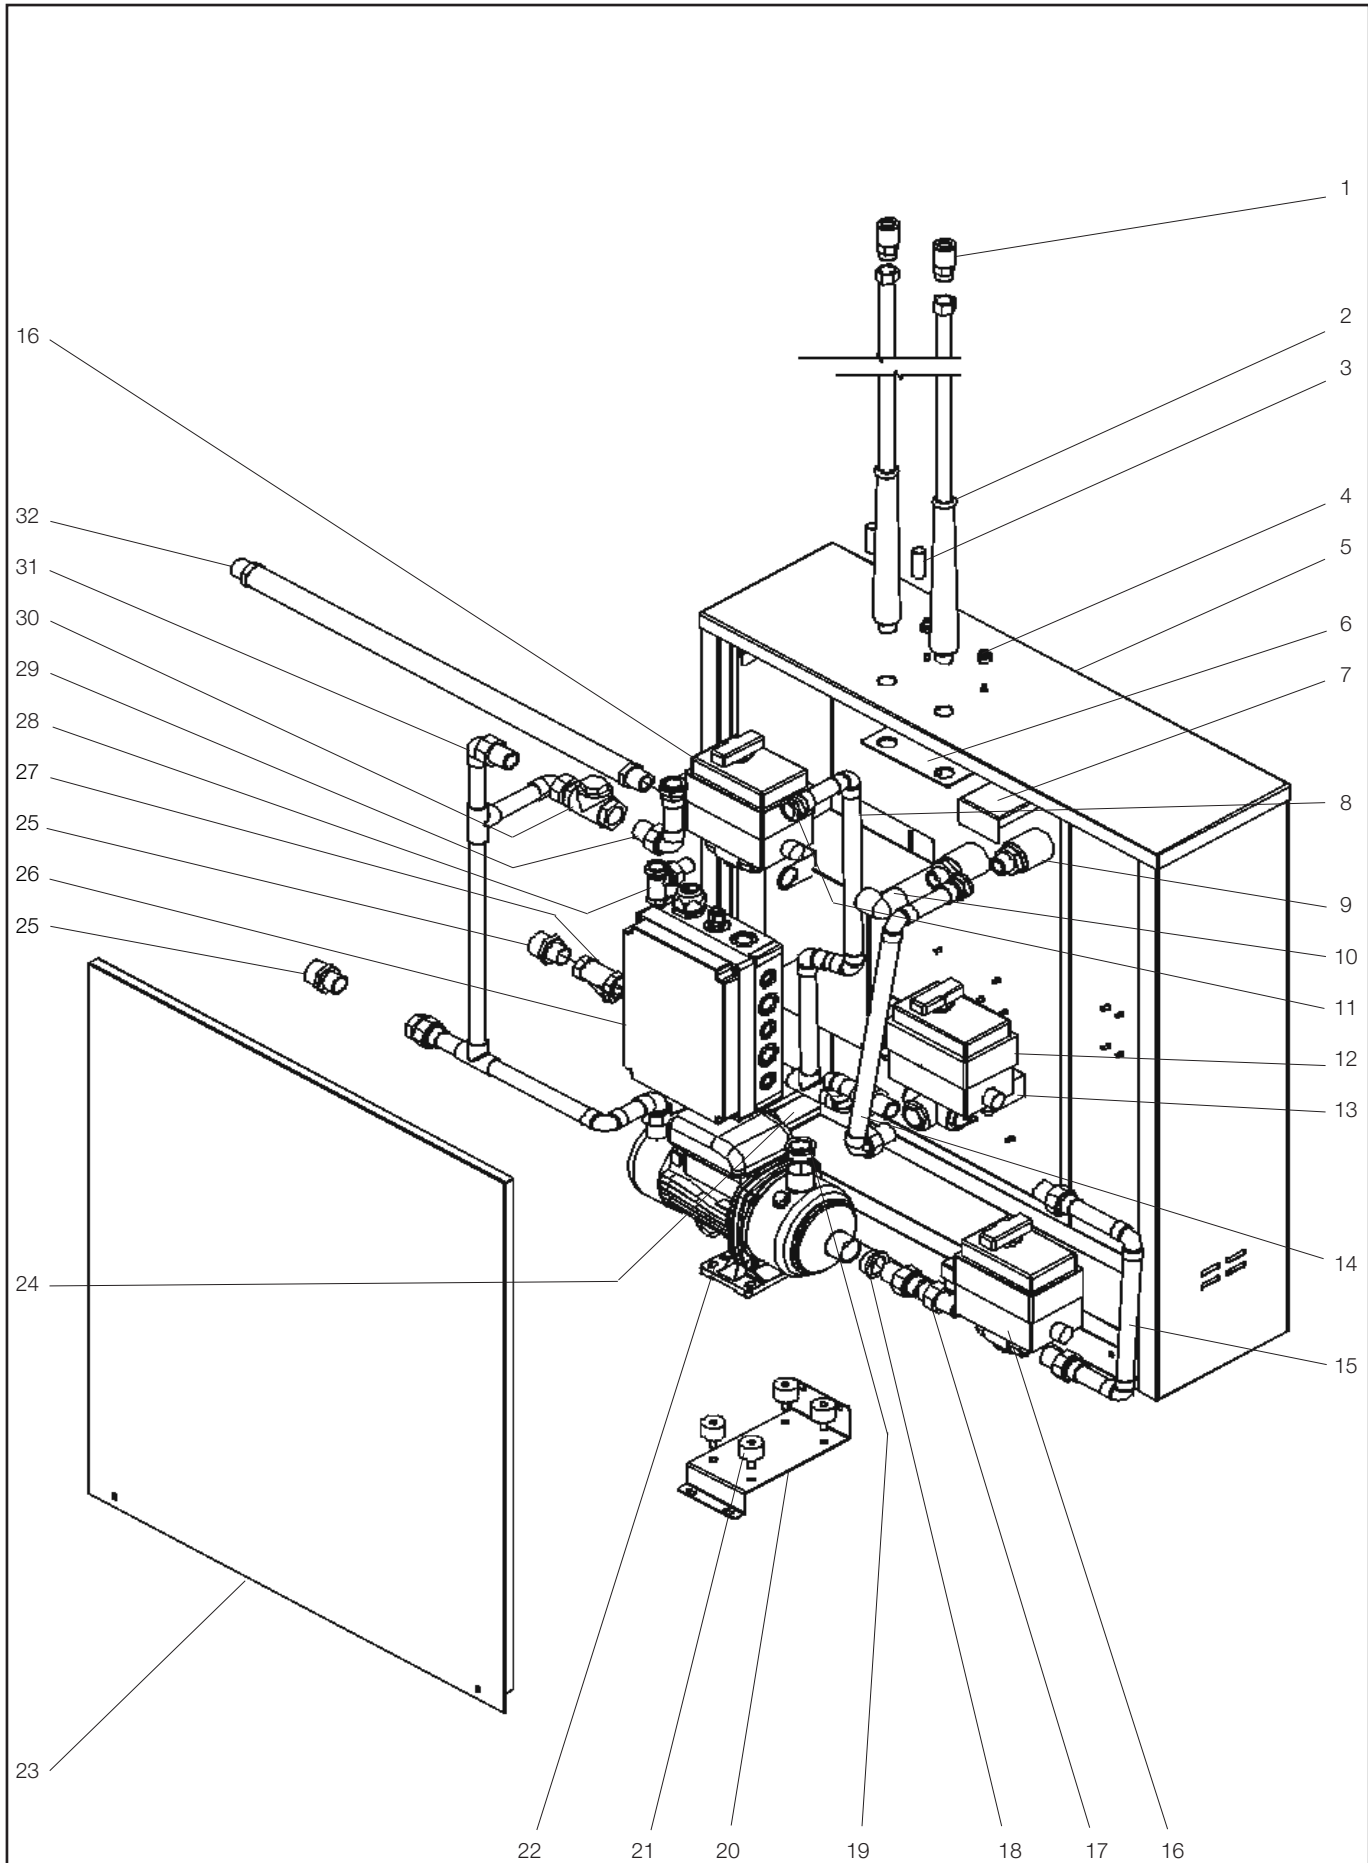


ILLUSTRATION 21808

Vänsterpelare eluppvärmd, med isvattenkylning Left column electrical heated, with ice water cooling Säule links El.beheizung, mit Eiswasserkühlung				Illustration 21808		Utgåva Edition Ausgabe 3	Månad Month Monat 09	År Year Jahr 2017
Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.		
	[[[[[[	50L 80L 100L 150L 200L 300L						
1	2 2 2 2 2 2	ST0 98 18-00	Snabbkoppling	Bayonet coupling	Bajonettverschluss	1).	1/2"	
2	2 2 2 2 2 2	ST0 62 54-00	Slang	Hose	Schlauch	1).	1/2"	
3	2 2 2 2 2 2	ST0 98 38-00	Fäste	Attachment	Befestigung	1).		
4	2 2 2 2 2 2	ST0 98 21-00	Fäste	Attachment	Befestigung	1).		
5	1 1 1 1 1 1	ST1 03 21-00	Vänster pelare	Left column	Links Säule	1).		
6	1 1 1 1 1 1	ST0 98 44-00	Förstärkningsplåt	Reinforcement plate	Verstärkungsblech	1).		
7	1 1 1 1 1 1	ST0 68 98-00	FästeVänster	Left Attachment	Links Befestigung			
8	1 1 1 1 1 1 1 1 1 1 1 1	ST1 10 57-00 ST1 10 56-00	Rör Rör	Pipe Pipe	Rohr Rohr	1).		
9	2 2 2 2 2 2	ST0 62 32-01	Swivel	Swivel	Drehbolzen		3/4"	
10	1 1 1 1 1 1	742 11 15-20	Vinkel	Coupling	Kupplung		3/4"	
11	1 1 1 1 1 1	ST2 31 21-09	Fäste 2-väggs ventil	Attachment	Befestigung			
12	1 1 1 1 1 1	ST0 62 30-01	Kulventil, 3-väggs	Ball valve, 3-way	Kugelventil, 3-Wege-		3/4"	
13	1 1 1 1 1 1	ST0 62 37-00	Fäste 3-väggs ventil	Attachment	Befestigung			
14	1 1 1 1 1 1	ST1 03 25-00	Rör kpl.	Pipe cpl.	Rohr kpl.			
15	1 1 1 1 1 1	ST1 10 64-00	Rör	Pipe	Rohr			
16	2 2 2 2 2 2	ST0 62 31-00	Kulventil, 2-väggs	Ball valve, 2-way	Kugelventil, 2-Wege-		3/4"	
17	1 1 1 1 1 1	ST1 10 66-00	Rör	Pipe	Rohr			
18	1 1 1 1 1 1	741 38 25-24	Nippel	Nipple	Nippel		1 1/4"-3/4"	
19	1 1 1 1 1 1	741 41 26-20	Bussning	Busch	Buchse		1"-3/4"	
20	1 1 1 1 1 1	ST1 10 65-00	Pumpkonsol	Pump bucket	Pumpenkonsole			
21	4 4 4 4 4 4	ST0 45 21-00	Dämpare	Vibration absorber	Vibrationsdämpfer	D=30, H=20, M8		
22	1 1 1 1 1 1	ST1 10 63-00	Pump	Pump	Pumpe	230V		
23	1 1 1 1 1 1	ST1 03 33-00	Sida, Vänster	Side, Left	Seiten, Links			
24	1 1 1 1 1 1	ST1 03 32-00	Distansbygel	Spacer Bracket	Distanzhalterung			
25	2 2 2 2 2 2	ST0 62 36-00	Förminskningsnippel	Reduction nipple	Reduziernippel		1"-3/4"	
26	1 1 1 1 1 1	ST0 97 25-00	Ellåda	Electric cabinet	Elektr. Schrank			
27	1 1 1 1 1 1	428 16 20-00	Smutsfilter	Filter	Filter			
28	1 1 1 1 1 1	460 81 61-02	Radiatorkoppling	Radiator filler neck	Radiatoranschluss	1).	1/2"	
29	1 1 1 1 1 1	ST0 92 14-00	Rör	Pipe	Rohr	1).		
30	1 1 1 1 1 1	428 15 79-00	Backventil	Non return valve	Rückschlagventil	1).	3/4"	
31	1 1 1 1 1 1	ST1 03 29-00	Rör utgående	Pipe	Rohr	1).		
32	1 1 1 1 1 1	ST0 62 53-00	Slang	Hose	Schlauch		3/4"	
Fet stil = Ändring Bold print = Change Fettdruck = Änderung								
			1).	Kylomröraren	Cooling tool	Kältewerkzeug		

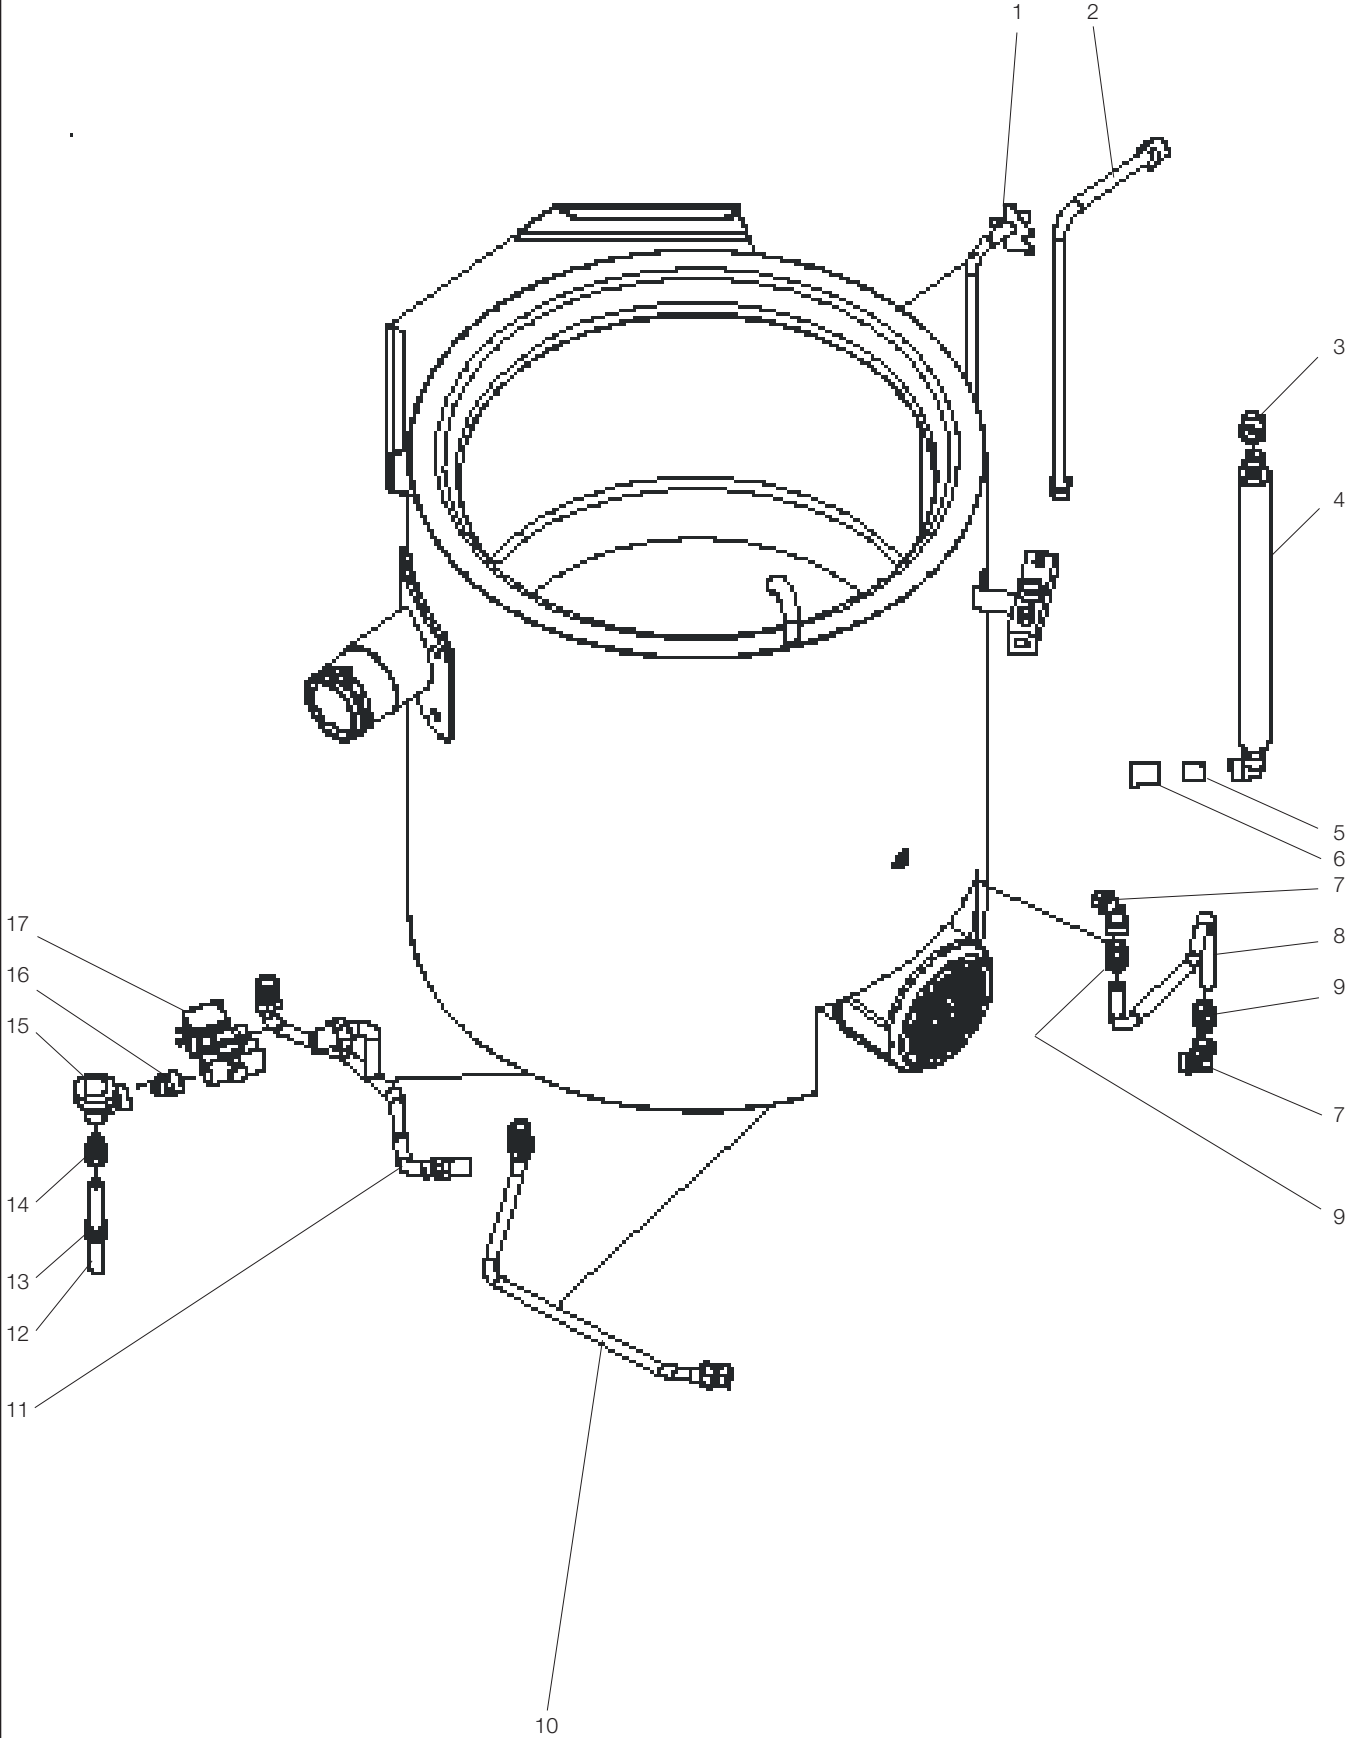


ILLUSTRATION 21809

Kärl, eluppvärmd, med isvattenkylning Vessel, electrical heated, with ice water cooling Kessel, El.beheizung, mit Eiswasserkühlung			Illustration 21809			Utgåva Edition Ausgabe 2	Månad Month Monat 09	År Year Jahr 2017
Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Anm. Bezeichnung	Notes Anm.		
	[[[[[	50 L 100 L 150 L 200 L 300 L						
1	1 - - - - - 1 - - - - - 1 - - - - - 1 - - - - - 1	ST1 06 07-00 ST1 06 07-01 ST1 06 07-02 ST1 06 07-03 ST1 06 07-04	Rör Rör Rör Rör Rör	Pipe Pipe Pipe Pipe Pipe	Rohr Rohr Rohr Rohr Rohr			
2	1 - - - - - 1 - - - - - 1 - - - - - 1 - - - - - 1	ST1 06 07-05 ST1 06 07-06 ST1 06 07-07 ST1 06 07-08 ST1 06 07-09	Rör Rör Rör Rör Rör	Pipe Pipe Pipe Pipe Pipe	Rohr Rohr Rohr Rohr Rohr			
3	1 1 1 1 1	742 11 13-32	Vinkelkoppling	Coupling	Kupplung	1/2"		
4	1 1 1 1 1	ST2 33 10-00	Avluftningsrör	Vent tube	Entlüftungsrohr			
5	1 1 1 1 1	741 31 13-20	Nippel	Nipple	Nippel	1/2"		
6	1 1 1 1 1	741 21 13-32	Muff	Sleeve	Stutzen	1/2"		
7	2 2 2 2 2	742 11 13-25	Vinkelkoppling	Coupling	Kupplung	1/2"		
8	1 - - - - - 1 - - - - - 1 - - - - - 1 - - - - - 1	ST0 97 45-00 ST0 97 45-01 ST0 97 45-02 ST0 97 45-03 ST0 97 45-04	Nivårör Nivårör Nivårör Nivårör Nivårör	Level tube Level tube Level tube Level tube Level tube	Niveauröhr Niveauröhr Niveauröhr Niveauröhr Niveauröhr			
9	2 2 2 2 2	743 46 35-07	Koppling, Rak	Coupling	Kupplung	1/2"-15		
10	1 - - - - - 1 - - - - - 1 - - - - - 1 - - - - - 1	ST1 06 10-00 ST1 06 10-01 ST1 06 10-02 ST1 06 10-03 ST1 06 10-04	Rör Rör Rör Rör Rör	Pipe Pipe Pipe Pipe Pipe	Rohr Rohr Rohr Rohr Rohr			
11	1 - - - - - 1 - - - - - 1 - - - - - 1 - - - - - 1	ST1 06 09-00 ST1 06 09-01 ST1 06 09-02 ST1 06 09-03 ST1 06 09-04	Rör Rör Rör Rör Rör	Pipe Pipe Pipe Pipe Pipe	Rohr Rohr Rohr Rohr Rohr			
12	1 1 1 1 1	ST8 00 17-00	Rör	Pipe	Rohr			
13	1 1 1 1 1	742 12 32-00	Genomföring	Inlet	Durchführung	D=15		
14	1 1 1 1 1	743 46 35-05	Koppling, Rak	Coupling	Kupplung	1/2"-15		
15	1 1 1 1 1	428 15 12-00	Avluftare	Dearator	Entlüftungshahn			
16	1 1 1 1 1	741 38 14-24	Nippel	Nipple	Nippel	3/4"-1/2"		
17	1 1 1 1 1	428 09 02-01	Magnetventil	Solenoid valve	Magnetventil	24V	3/4"	

Fet stil = Ändring
 Bold print = Change
 Fettdruck = Änderung

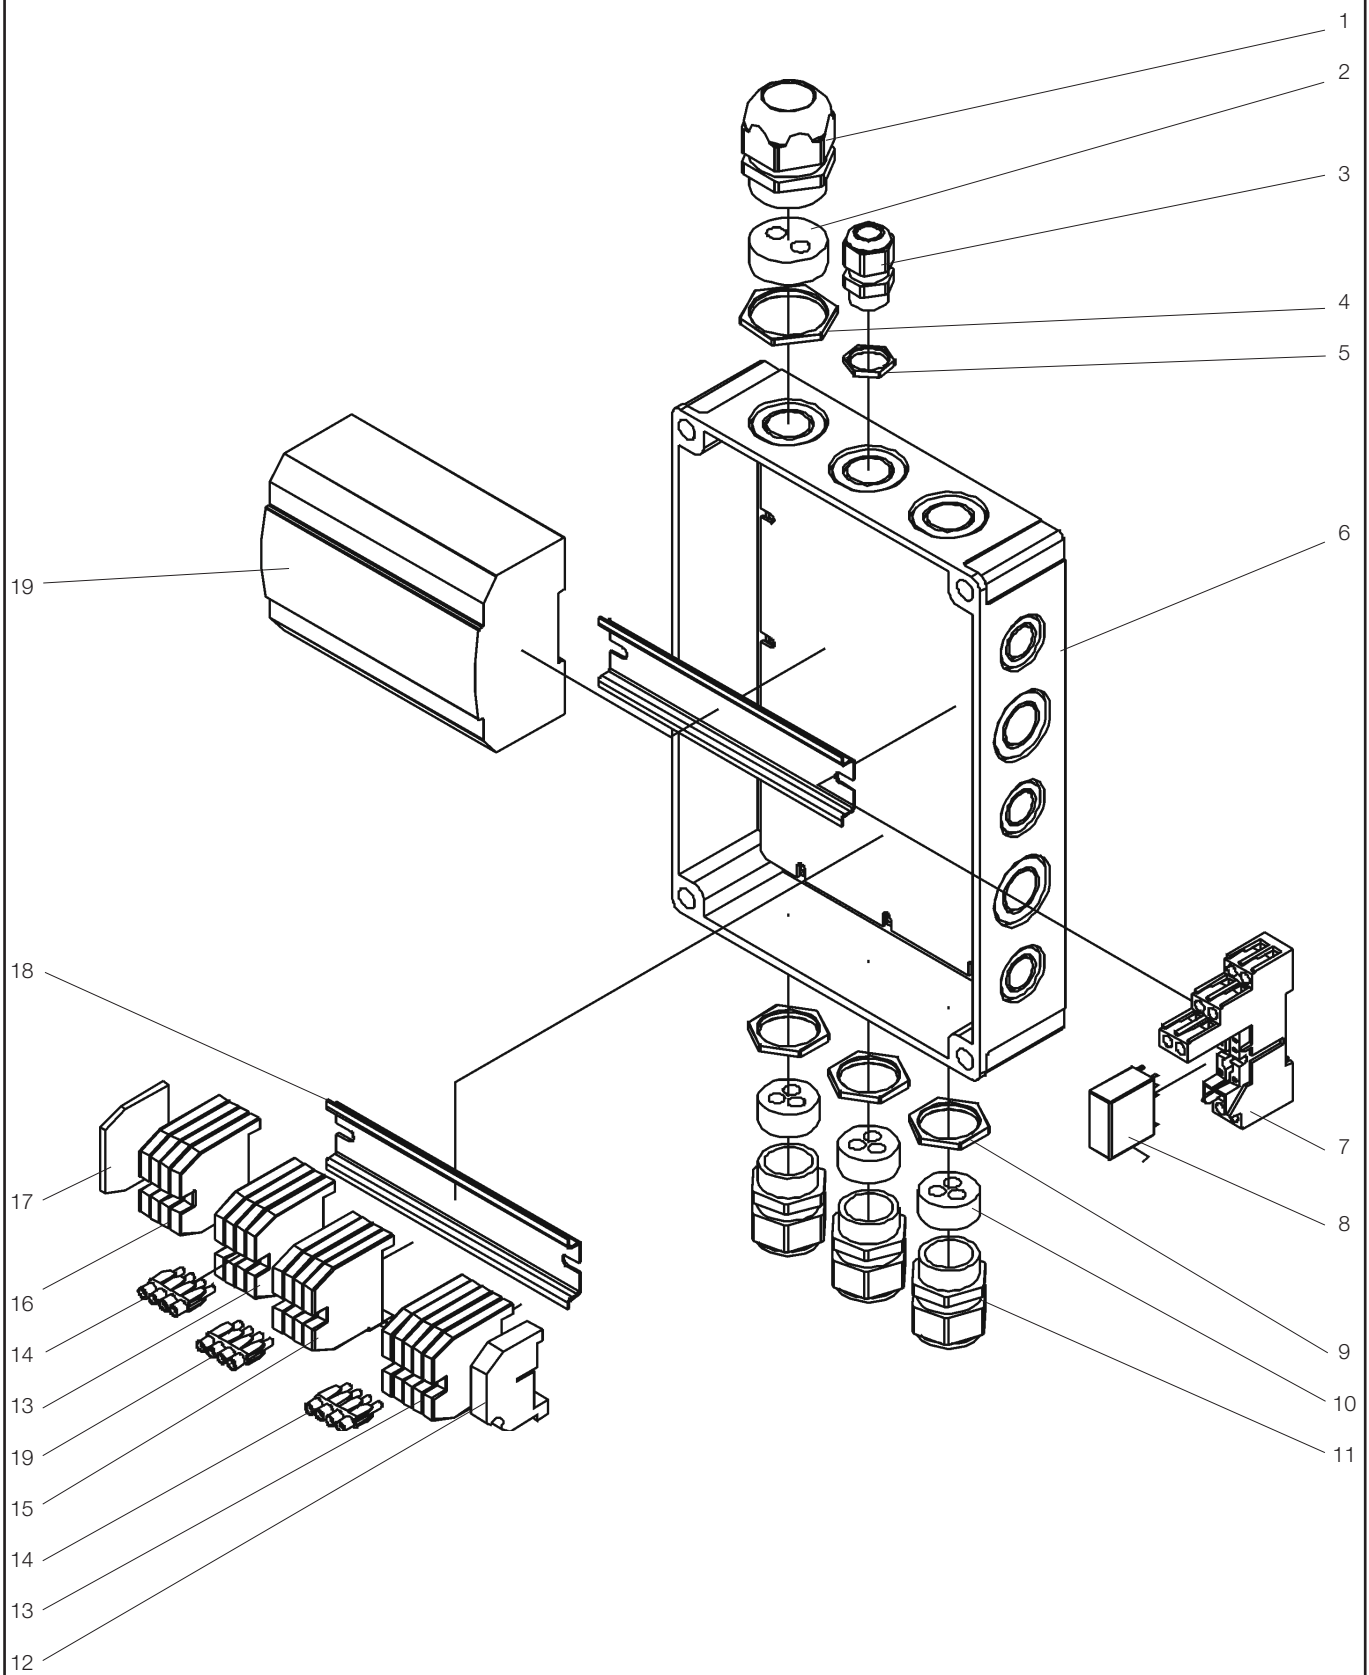


ILLUSTRATION 21813

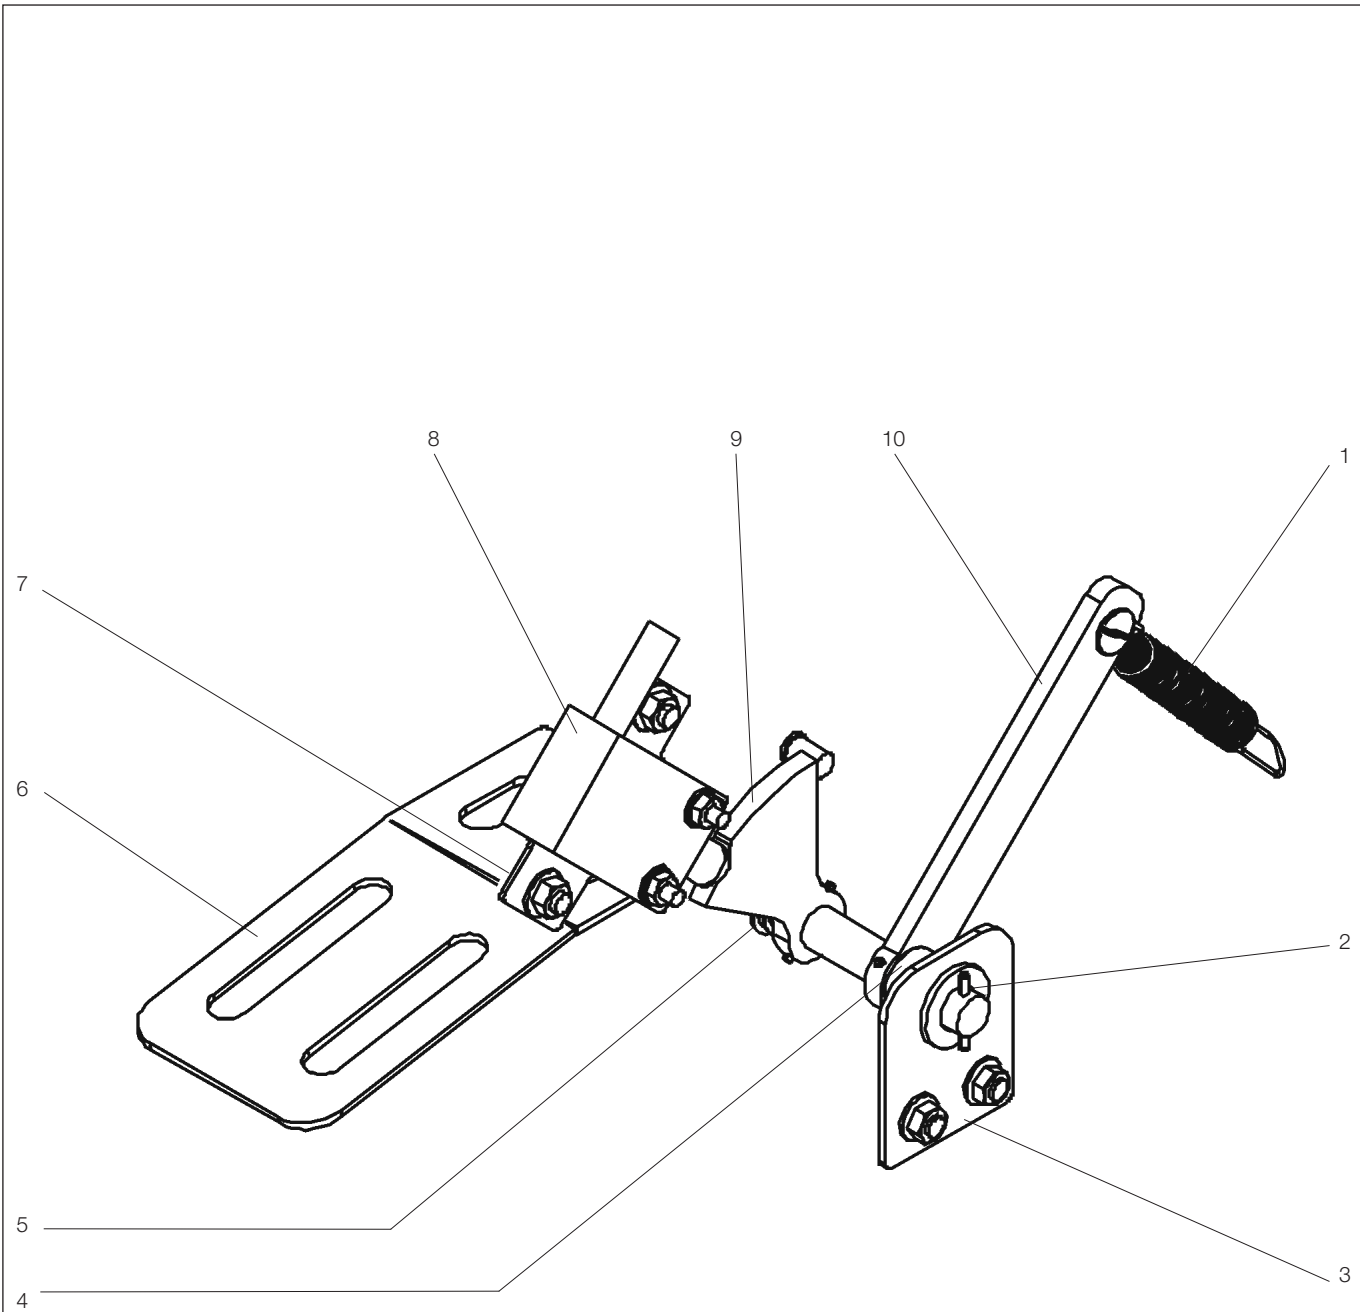


Illustration 21815

Option Fotpedal
Option Foot pedal
Option Fußpedal

Illustration 21815

Utgåva
Edition
Ausgabe
2

Månad
Month
Monat
09

År
Year
Jahr
2017

Pos.	Antal Quantity Anzahl	Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.
1	1	477 62 76-01	Dragfjäder	Tension spring	Zugfeder	
2	3	721 41 70-40	Fjädrande rörpinne	Coil pin	Spiralstift	2x20 Rfr(Stainless steel)
3	1	ST1 14 61-00	Fäste pedalaxel	Bracket, pedal shaft	Halterung, Pedalwelle	
4	1	ST1 14 70-00	Glidlager	Sleeve bearing	Hülsenlager	di=10, dy= 16, L=10
5	2	ST1 07 61-01	Glidlager	Sleeve bearing	Hülsenlager	10x11,7, 7x15, 1,2-2,0
6	1	ST1 14 59-00	Fotplatta kpl.	Pedal plate cpl.	Pedalplatte kpl.	
7	1	ST1 14 71-00	Fäste gränslägesgivare kpl.	Bracket, limit sensor	Halterung, Grenzwertgeber	
8	1	428 10 96-02	Microbrytare	Microswitch	Mikroschalter	L=2m
9	1	ST1 14 66-00	Gränslägeskiva	Limit sensor plate	Grenzwertgeber platte	
10	1	ST1 14 68-00	Hävarm	Lever	Hebel	

Fet stil = Ändring
Bold print = Change
Fettdruck = Änderung

Fästelement GS14_600 Attachment element GS14_600 Befestigungsteile GS14_600				Utgåva Edition Ausgabe 2	Månad Month Monat 09	År Year Jahr 2017
Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.		
552 20 25-00 552 21 21-02	Korgmutter Flänsmutter	Cage nut Flange nut	Korbmutter Flanschmutter	M5 M5		
53 92 88-32 53 92 88-51	Bricka Bricka	Washer Washer	Scheibe Scheibe	BRB 6,4x38 RFR BRB 8,5x38 RFR		
722 78 43-02 732 31 14-40	Popnit Kupolmutter	Blind rivet Dome nut	Popnieta Kappenmutter	4x10,3 MHM 5 RFR		
732 31 16-40 736 28 28-51	Mutter Slangklämma	Nut Hose clamp	Mutter Schlauchklemme	MHM 6 RFR Ø 38		
736 28 43-90 736 28 55-90	Slangklämma Slangklämma	Hose clip Hose clip	Schlauchschelle Schlauchschelle	Ø 75 Ø 138		
478 56 64-03 725 53 29-40	Skruv Skruv	Screw Screw	Schraube Schraube	LKCS 5x10 RFR MC6S 5x16 RFR		
725 54 51-40 728 83 21-09	Skruv Skruv	Screw Screw	Schraube Schraube	MC6S 8x20 RFR SK6SS 5x6 RFR		
728 84 47-09 734 11 24-09	Skruv Bricka	Screw Washer	Schraube Scheibe	SK6SS 8x12 RFR BRB 3,2x7 RFR		
734 11 36-09 734 48 84-40	Bricka Bricka	Washer Washer	Scheibe Scheibe	BRB 4,3x9 RFR BRB 5,2x15 RFR		
734 11 46-09 734 49 17-40	Bricka Bricka	Washer Washer	Scheibe Scheibe	BRB 5,3x10 RFR BRB 6,5x16 RFR		
734 11 64-09 734 11 73-09	Bricka Bricka	Washer Washer	Scheibe Scheibe	BRB 8,4x25 RFR BRB 10,5x21 RFR		
734 11 78-09 724 12 28-40	Bricka Skruv	Washer Screw	Scheibe Schraube	BRB 13x24 RFR MRX 3x16 RFR		
724 12 89-40 724 12 92-40	Skruv Skruv	Screw Screw	Schraube Schraube	MRX 4x10 RFR MRX 4x14 RFR		
724 13 23-40 724 13 31-40	Skruv Skruv	Screw Screw	Schraube Schraube	MRX 5x8 RFR MRX 5x20 RFR		
725 23 27-40 725 23 31-40	Skruv Skruv	Screw Screw	Schraube Schraube	M6S 5x12 RFR M6S 5x20 RFR		
725 23 66-40 725 23 70-40	Skruv Skruv	Screw Screw	Schraube Schraube	M6S 6x12 RFR M6S 6x20 RFR		
725 23 78-40	Skruv	Screw	Schraube	M6S 6x40 RFR		
725 24 49-40 725 24 53-40	Skruv Skruv	Screw Screw	Schraube Schraube	M6S 8x16 RFR M6S 8x25 RFR		
725 24 69-40 725 24 95-40	Skruv Skruv	Screw Screw	Schraube Schraube	M6S 8x90 RFR M6S 10x30 RFR		
725 25 11-40 731 23 10-40	Skruv Mutter	Screw Nut	Schraube Mutter	M6S 10x100 RFR M6M 3 RFR		
731 23 12-40 731 23 16-40	Mutter Mutter	Nut Nut	Mutter Mutter	M6M 4 RFR M6M 6 RFR		
731 23 18-40 731 23 20-40	Mutter Mutter	Nut Nut	Mutter Mutter	M6M 8 RFR M6M 10 RFR		

Fet stil = Ändring
 Bold print = Change
 Fettdruck = Änderung

Fästelement GS14_600 Attachment element GS14_600 Befestigungsteile GS14_600				Utgåva Edition Ausgabe 2	Månad Month Monat 09	År Year Jahr 2017
Art.nr Art. no Art. Nr	Benämning	Description	Bezeichnung	Anm. Notes Anm.		
735 11 36-40	Fjäderbricka	Elastic washer	Federscheibe	FBB 4,1 RFR		
735 11 46-40	Fjäderbricka	Elastic washer	Federscheibe	FBB 5,1 RFR		
735 11 53-40	Fjäderbricka	Elastic washer	Federscheibe	FBB 6,1 RFR		
735 11 64-40	Fjäderbricka	Elastic washer	Federscheibe	FBB 8,2 RFR		
735 11 73-40	Fjäderbricka	Elastic washer	Federscheibe	FBB 10.2 RFR		
724 32 87-40	Skruv	Screw	Schraube	MFX 4x8 RFR		
724 32 93-40	Skruv	Screw	Schraube	MFX 4x16 RFR		
724 33 31-40	Skruv	Screw	Schraube	MFX 5x12 RFR		
724 33 35-40	Skruv	Screw	Schraube	MFX 5x30 RFR		
724 33 64-40	Skruv	Screw	Schraube	MFX 6x10 RFR		
477 62 69-00	Stripshållare	Strips holder	Strips Halter			

Fet stil = Ändring
 Bold print = Change
 Fettdruck = Änderung

Dataskylt
Rating plate
Kennschild

Product no.



Model:							
V	~	Hz	Tot.	KW		KW	
V	~	Hz	Tot.	KW		KW	
Max phaseload:				A		A	

Water pressure:		Steam pressure:	
Int. Code:		Wiring diagram:	
Prod.Nr		 	
Ser.No.			

Notes:

[illegible]